



Slow Masticating Juicer

Instruction Manual



Item No. 31119, 32119, 33119

SAFETY INSTRUCTIONS



IMPORTANT: Read these instructions carefully before using this appliance and keep them for future reference.



 
 
 
 
Warning! Read all safety warnings and instructions. Failure to follow these may result in electric shock, fire and/or injury.

- The intended use of this appliance is explained in this instruction manual. The use of accessories other than those recommended may present a risk of personal injury.
- **Always** check the mains voltage corresponds to the voltage on the rating plate.
- This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have received supervision or instruction concerning its use by a person responsible for their safety.
- Children **must** be supervised to ensure they do not play with the appliance.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge providing they have been given supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- Children **must not** play with this appliance or carry out cleaning and maintenance.
- Always switch off the appliance and disconnect from the power source if left unattended and before assembling, disassembling, or cleaning.
- **Never** disconnect the appliance by pulling on the power cord.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- This appliance is **not** intended to be used with a separate timer or remote-control system.
- **WARNING:** When positioning the appliance, ensure the power cord is not trapped or damaged.
- **WARNING:** Do **not** locate multiple portable socket outlets or portable power supplies at the rear of the appliance.







ADDITIONAL SAFETY INFORMATION:

- Make sure the appliance is correctly assembled before switching it on.
- Improper use can cause personal injury or damage to the appliance.
- **Never** immerse the appliance, power cord or plug in water or in any other liquid. If the appliance gets wet, shut off the power supply immediately.
- This appliance should be placed on a flat, stable surface out of the reach of children.
- Do **not** use if the appliance or power cord are damaged or malfunctioning. Consult a qualified electrician for repairs. Regularly check the appliance for damages.
- **Never** attempt to carry out repairs yourself.
- **Never** insert your hands into the appliance when switched on.
- Do **not** use any object other than the Pusher Tool provided to push food into the appliance.
- **Only** use accessories supplied by the manufacturer.
- Always store the appliance out of the reach of children.
- Keep all packaging away from children.
- Do **not** place on or near a hot gas or electric burner or in a heated oven.
- Keep the appliance away from flammable or explosive objects.
- **Never** leave the appliance unattended when in use.
- **Never** let the power cord hang over the edge of a table or touch heated surfaces.
- Do **not** bend the power cord.
- **Never** touch the appliance, power cord, or plug with wet hands.
- Do **not** use the appliance outdoors, in wet areas or near water.
- **Only** use this appliance for its intended purpose.
- This appliance is **only** intended for personal, household use and similar applications.

COMPONENTS

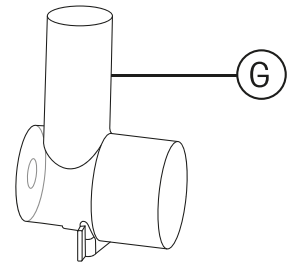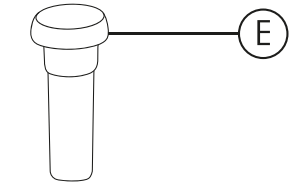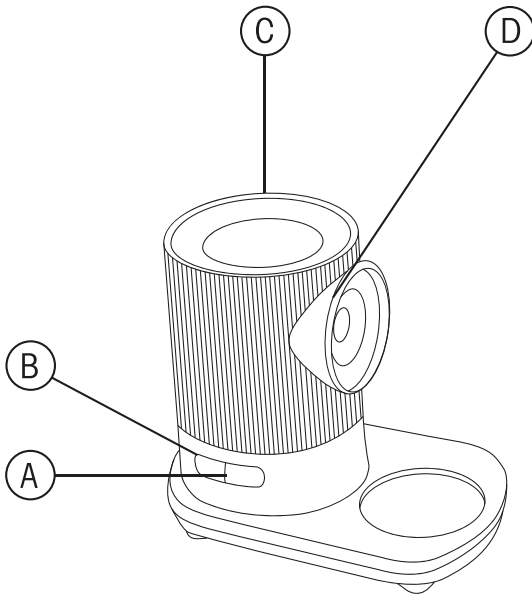

      - A ON/OFF Button
- B Reverse Button
- C Main Body
- D Lock Button
- E Pusher Tool
- F Hopper
- G Juicing Body
- H Auger
- I Strainer
- J Sealer
- K End Cap
- L Juice Container
- M Pulp Container

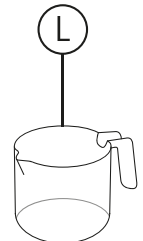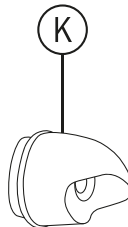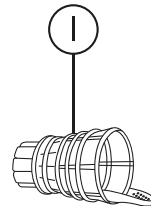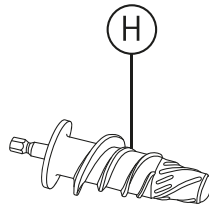

ASSEMBLY

Please note: Clean all components thoroughly before assembling this appliance.

- Connect the Juicing Body to the Main Body. To do so, align the Juicing Body with the unlocked symbol. Then rotate it anticlockwise until you hear a clicking sound.
- Insert the Auger into the Juicing Body so it connects. If needed, twist slightly to align the Auger.
- Place the wider end of the Strainer over the Auger. Check they are securely connected.
- If not already installed, place the Sealer on the inside of the End Cap.
- Place the End Cap over the Strainer at an angle. Rotate it anticlockwise to connect. The End Cap should be facing down.
- Place the Juice Container beneath the opening of the Juicing Body.
- Place the Pulp Container beneath the opening of the End Cap.
- Attach the Hopper to the top section of the Juicing Body.

USING THE APPLIANCE

Please note: The appliance will automatically switch off after 20 minutes of use to avoid overheating. If this occurs, allow the appliance to cool for 20–30 minutes before using again.

- Prepare any food ahead of time (see Food Preparation).
- Ensure the appliance is switched off. Then connect to a suitable wall outlet.
- Turn on the appliance by pressing the ON/OFF Button once.
- Slowly add your chosen food to the Juicing Body, using the Pusher Tool to feed it into the moving components.
- Do not put your fingers or other objects into the opening of the Juicing Body.
- If food becomes stuck within the appliance, press the Reverse Button for 3 seconds. Then switch off and unplug the appliance before disassembling and removing the food.
- Once ready, pour the juice into a cup and enjoy.

FOOD PREPARATION

Please note: You should prepare any fruit and vegetables before switching on the appliance.

- Wash any food in clean water **without** detergent.
- Cut the food into chunks small enough to fit inside the Juicing Body.
- Remove any kernels, hard seeds, or shells before juicing.
- Avoid using very tough foods.

GENERAL TIPS

- Use fresh fruits and vegetables that contain lots of juice. We recommend pineapple, apples, melon, oranges, grapes, tomatoes, celery, cucumbers, and spinach.
- Remove any seeds in citrus fruits before blending to avoid a bitter taste in the juice.
- Freshly squeezed apple juice can quickly turn brown. Add a few drops of lemon juice to slow this process.

CLEANING

Please note: Do **not** use abrasive sponges, ammonia, or strong household detergents when cleaning. Regular cleaning will help prolong the life of this appliance.

Follow these steps to disassemble before cleaning:

- Remove the Pusher Tool and Hopper.
- Press and hold the Lock Button near the Juicing Body. Then twist clockwise to remove.
- Remove the remaining components from the Juicing Body.

COMPONENT	✓	✗
Main Body	Wipe with a clean, dry cloth.	Do not immerse in water or pour water onto it.
All removeable components	Wash in warm, soapy water. Rinse thoroughly before storage.	Do not clean any components in water that is above 80°C.

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
The appliance is not working after being plugged in and switched on.	The plug is not connected properly.	Reinsert the plug into the wall outlet.
A smell is produced after first use.	This is normal and does not affect the safety of the appliance.	None
The appliance is excessively loud.	Either the Auger or Strainer is not fully installed.	Switch off and unplug the appliance. Disassemble. Then reassemble the components correctly.
The appliance is stained after prolonged use.	This is normal when juicing fruit and does not affect the quality of the juice.	None
The appliance switched off during use.	It will automatically switch off after 20 minutes of continuous use to avoid overheating.	Wait 20–30 minutes for the appliance to cool before using again.
	Too much food in the Juicing Body or the food is too tough.	Switch off and unplug the appliance. Disassemble and remove the food before continuing (see General Tips).
	Food is stuck in the Juicing Body.	Select the Reverse Button for 3 seconds. Unplug the appliance and remove any blocked food.

TECHNICAL SPECIFICATIONS

Product Name: Slow Masticating Juicer

Item Number: 31119, 32119, 33119

Model Number: SD90-1

Rated power: 150W

Voltage: 220–240V~50Hz

CLASS I EARTHED APPLIANCES (3 CORE) PLUG:

- This appliance has been fitted with a BS UK compliant plug which **must not** be replaced or removed.
- The plug is fitted with a BS UK compliant fuse suitable for this type of appliance and **must only** be replaced by a fuse link of the same rating.
- If access to the fuse link is only possible by removing the plug cover, this **must only** be done by a suitably qualified person.
- If the plug or power cord of this appliance is damaged, do **not** use.
- Dispose of the appliance responsibly.
- This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ
Importer EU: Benross Marketing Ltd, Italeiei 1-2000 Antwerp Belgium.
Consumer Services: E: afterservice@benross.com. T: +441518327600.

Made in P.R.C.