



# Slow Masticating Juicer 300W

## Instruction Manual



Item No. 32889

# SAFETY INSTRUCTIONS



**IMPORTANT:** Read these instructions carefully before using this appliance and keep them for future reference.




**Warning!** Read all safety warnings and instructions. Failure to follow these may result in electric shock, fire and/or injury.

- The intended use of this appliance is explained in this instruction manual. The use of accessories other than those recommended may present a risk of personal injury.
- **Always** check the mains voltage corresponds to the voltage on the rating plate.
- This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have received supervision or instruction concerning its use by a person responsible for their safety.
- Children **must** be supervised to ensure they do not play with the appliance.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge providing they have been given supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- Children **must not** play with this appliance or carry out cleaning and maintenance.
- Always switch off the appliance and disconnect from the power source if left unattended and before assembling, disassembling, or cleaning.
- **Never** disconnect the appliance by pulling on the power cord.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- This appliance is **not** intended to be used with a separate timer or remote-control system.
- **WARNING:** When positioning the appliance, ensure the power cord is not trapped or damaged.
- **WARNING:** Do **not** locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

## **ADDITIONAL SAFETY INFORMATION:**

- Improper use can cause personal injury or damage to the appliance.
- **Never** immerse the appliance, power cord or plug in water or in any other liquid. If the appliance gets wet, shut off the power supply immediately.
- This appliance should be placed on a flat, stable surface out of the reach of children.
- Do **not** use if the appliance or power cord are damaged or malfunctioning. Consult a qualified electrician for repairs. Regularly check the appliance for damages.
- Keep your fingers away from the moving parts of this appliance. **Never** attempt to push food into the appliance with your fingers whilst it is switched on.
- Always wait for the moving parts to stop before removing any components.
- Do **not** exceed the maximum level indicated on the Lower Juicing Body.
- **Only** use accessories supplied by the manufacturer.
- Ensure all components of the appliance are securely in place before turning the power on.
- Always store the appliance out of the reach of children.
- Keep all packaging away from children.
- Do **not** tamper with any safety switches.
- Keep the appliance away from flammable or explosive objects.
- **Never** leave the appliance unattended when in use.
- **Never** turn the appliance on without food in it.
- **Never** let the power cord hang over the edge of a table or touch heated surfaces.
- Exercise caution when handling the Auger as the edges are sharp.
- Do **not** bend the power cord.
- **Never** touch the appliance, power cord or plug with wet hands.
- Do **not** use the appliance outdoors, in wet areas or near water.
- **Only** use this appliance for its intended purpose.
- This appliance is intended for household use **only**.
- This appliance is **not** intended for commercial use.
- **WARNING: Never** move the switch directly from '1' to 'R' as this can damage the appliance. Always turn to 0 and wait for the juicer to turn off completely, then turn onto the next speed.

# COMPONENTS

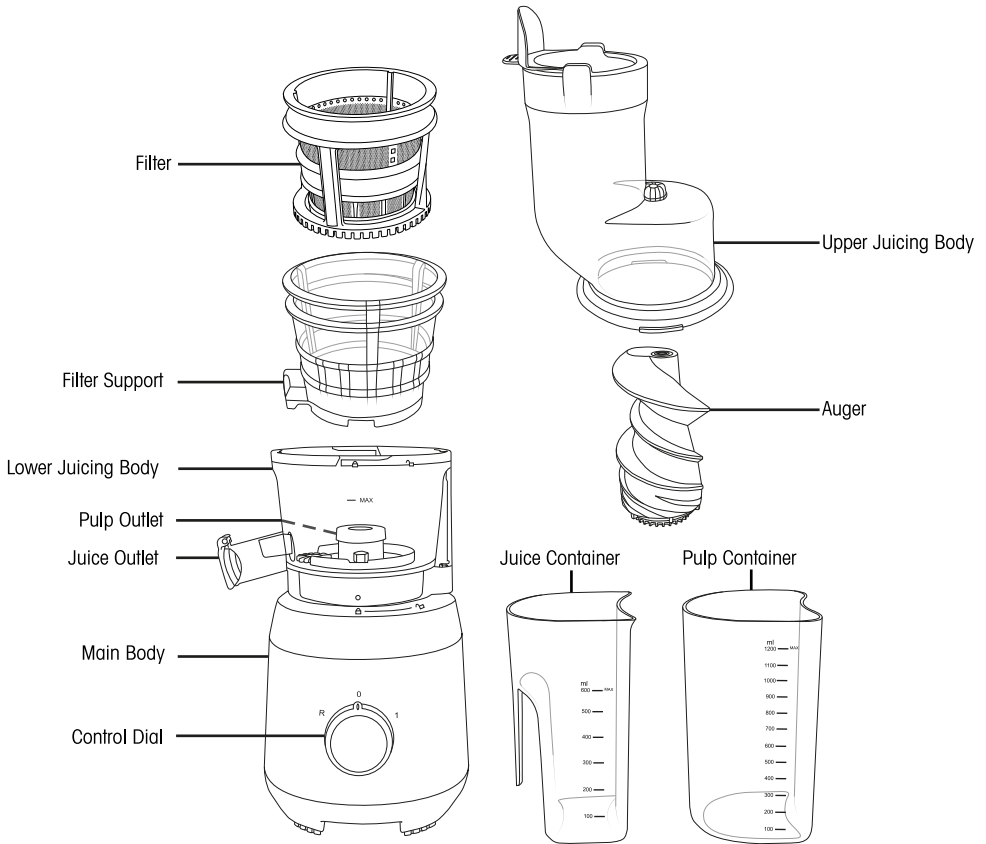

# ASSEMBLY

**Please note:** Check all components are clean before putting together.

- Ensure the two silicone parts are correctly assembled inside the Lower Juicing Body. These are located at the base of the Lower Juicing Body and at the start of the Pulp Outlet.
- Attach the Lower Juicing Body to the Main Body. Align the arrow with the unlock symbol and twist clockwise to lock in place.
- For juicer operation: Insert the Filter into the Filter Support. Then place inside the Lower Juicing Body.
- Insert the Auger into the assembly, twisting slightly until secured in place. It should be level with the Filter.
- Place the Upper Juicing Body over the assembled components. Align the arrow with the unlock symbol and twist clockwise to lock in place.

# USING THE APPLIANCE

**Please note:** Place the appliance on a flat, stable surface before switching on.

- Position the Pulp Container beneath the Pulp Outlet, and the Juice Container beneath the Juice Outlet.
- Prepare your food by cutting into small chunks (approx. 2 x 2 cm).
- Insert the food through the opening of the Upper Juicing Body.
- Connect the appliance to a suitable wall outlet.
- When ready to use, move the Control Dial to '1' for normal function.
- When no longer in use, move the Control Dial to '0'.

# USING THE REVERSE FUNCTION

- If the appliance is currently in use, move the Control Dial to '0' and wait until it has stopped moving. Then move the Control Dial to 'R' (reverse).
- If food is stuck, use the reverse function for 5 seconds. Then move back to '0', switch off the appliance, and remove the dislodged food.
- **Never** move the Control Dial directly from '1' to 'R' as this can damage the appliance.
- **Note:** if too much food is jammed in the juicer, the appliance will stop working to protect it from malfunctioning. If this happens, use the 'R' speed for 5 seconds, then turn the dial to '0'. Once the juicer has switched off, take off the lid and remove the food which has jammed.

# CLEANING

**Please note:** Regular cleaning will help prolong the life of this appliance.

Disconnect the appliance from the wall outlet before cleaning.

COMPONENT	✓	✗
Appliance (external)	Wipe with a clean, damp cloth. Dry thoroughly.	Do <b>not</b> immerse in water or pour water onto it.  Do <b>not</b> use abrasive cleaning products.
Detachable components	Wash any components that touched food in warm, soapy water. Then dry thoroughly.  Lower Juicing Body: remove the silicon parts before cleaning.	Do <b>not</b> use abrasive cleaning products.

# TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
The appliance is not working after being plugged in and switched on.	The plug is not connected properly.	Reinsert the plug into the wall outlet.
A smell is produced after first use.	This is normal and does not affect the safety of the appliance.	None
The appliance is excessively loud.	One of the detachable components is not correctly installed.	Switch off and unplug the appliance. Disassemble. Then reassemble the components correctly.
The appliance is stained after prolonged use.	This is normal when juicing fruit and does not affect the quality of the juice.	None
The appliance switched off during use.	Food is stuck and the appliance has automatically switched off to avoid overheating.	Move the Control Dial to 'R' (reverse) for 5 seconds. Unplug the appliance and remove any blocked food.
	Too much food in the appliance or the food is too tough.	Switch off and unplug the appliance. Disassemble and remove the food before continuing.

# TECHNICAL SPECIFICATIONS

Product Name: Slow Masticating Juicer 300W

Item Number: 32889

Model Number: CY-335

Rated power: 300W

Voltage: 220–240 V~50 Hz

## CLASS I EARTHED APPLIANCES (3 CORE) PLUG:

- This appliance has been fitted with a BS UK compliant plug which **must not** be replaced or removed.
- The plug is fitted with a BS UK compliant fuse suitable for this type of appliance and **must only** be replaced by a fuse link of the same rating.
- If access to the fuse link is only possible by removing the plug cover, this **must only** be done by a suitably qualified person.
- If the plug or power cord of this appliance is damaged, do **not** use.
- Dispose of the appliance responsibly.
- This appliance is earthed.



### Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ  
Importer EU: Benross Marketing Ltd, Italielei 1-2000 Antwerp Belgium.  
Consumer Services: E: [afterservice@benross.com](mailto:afterservice@benross.com). T:+441518327600.

Made in P.R.C.