



# **Multi-Function Electric Cooker**

## **Instruction Manual**



**Item No. 35410 / 35500**

# IMPORTANT! SAFETY INSTRUCTIONS



**READ THIS MANUAL BEFORE USING THIS APPLIANCE.**




**FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY.**

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- **If the supply cord is damaged it must only be repaired or replaced by a suitably qualified person.**
- **Do NOT position appliance where it can be reached by children.**
- **Extra caution is necessary when used near children or when left unattended.**
- **The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.**
- **Children must not play with the appliance.**
- **Cleaning and user maintenance by children must not be carried out without supervision.**
- **Children of less than 3 years should be kept away unless continually supervised.**
- **Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided it has been installed in its intended normal operational position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.**
- **Children from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or carry out user maintenance of the appliance.**
- **This appliance is for household use only and not commercial or industrial use.**
- **Always unplug the appliance after use and before cleaning.**
- **Do not use the unit outside.**

- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- If the product or its supply cord is damaged do not use and consult a qualified person for repair or dispose of responsibly.
- Store the appliance out of reach of children when not in use.
- Store in a clean dry storage area when not in use.
- Always ensure any vents or outlets are clear from blockages which may impact on the products function or safe use.
- Always unplug this product from the mains by pulling on the plug not the power cable.
- Only use a soft cloth with mild soapy water to clean this product. Do not submerge this product in water or any other liquid.
- Do not use the appliance for other than its intended use.
- Never leave the unit unattended during use.
- Avoid danger of tripping, do not allow the electrical cable to hang down.
- Keep the electrical cable away from hot surfaces and open flames or sharp edges.
- Never touch the electric cable or plug with wet hands.
- Never immerse the unit, electric cable or plug into water or other liquids.
- Check the unit, electrical cable and plug regularly for visible damage. Do not use the unit under any circumstances if you have noted any damage.
- Only use the unit on a heat-resistant surface. Never position the unit close to hot surfaces or open flames.
- High temperatures are present during operation. Only touch the handles on the unit.
- The connector must be removed before the appliance is cleaned and the appliance inlet must be dried before the appliance is used again.
- Only the appropriate connector must be used.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- This unit can not be used to grill or roast food.
- Cooking appliances should be positioned in a stable situation with the handles positioned to avoid spillage of hot liquids.

# COMPONENTS

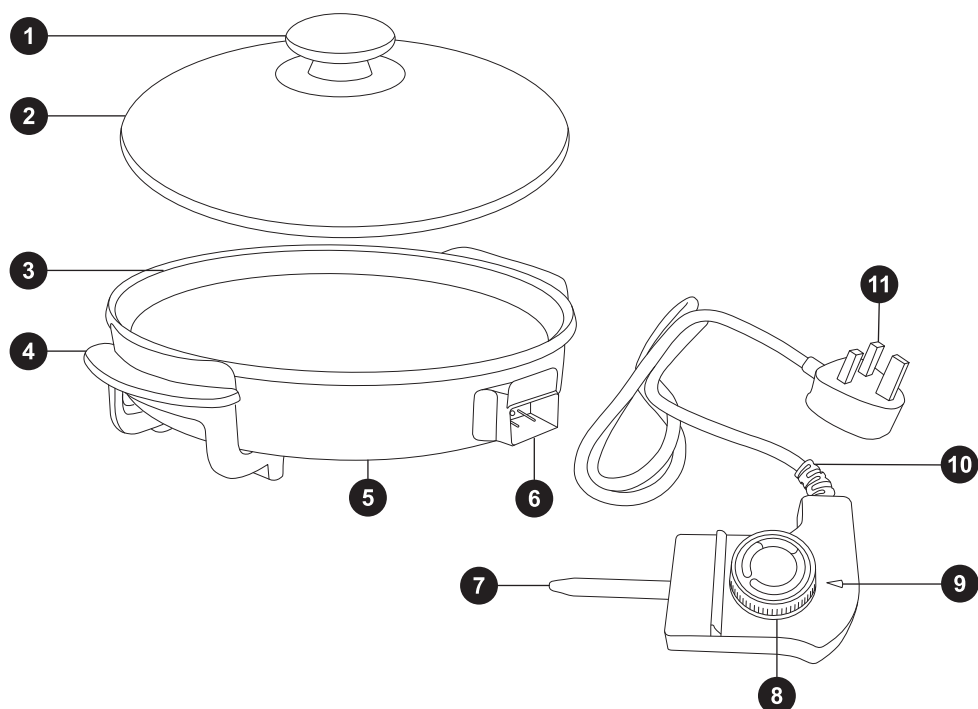

- |    |                                 |     |                       |
|----|---------------------------------|-----|-----------------------|
| 1. | Lid Handle                      | 7.  | Temperature Sensor    |
| 2. | Glass Lid                       | 8.  | Temperature Regulator |
| 3. | Cooking Surface                 | 9.  | Control Lamp          |
| 4. | Handles (including heat shield) | 10. | Electric Cable        |
| 5. | Base Unit                       | 11. | Electric Plug         |
| 6. | Power connection base           |     |                       |

## BEFORE USE

- Before using the appliance clean the unit and cover carefully.
- Do not use any aggressive detergents to clean the appliance.
- To avoid damaging the non-stick coating, do not use brushes with metal or nylon bristles or sharp objects such as knives or spatulas.
- Ensure the appliance is completely dry after cleaning.
- Connect the temperature regulator to the power connection base of the unit. Make sure that the plug is connected properly.
- Set the temperature selector switch to heat level "0".
- Connect the plug to a 220-240V AC 50Hz fuse socket.

**NOTE: DO NOT USE A MULTIPLE OUTLET STRIP OR EXTENSION CABLE.**

## USING THE APPLIANCE

1. Brush the pan with a little cooking oil.
2. Set the temperature regulator to the required heat level. The control lamp will light up to signal that the unit is ready for use (ON).
3. It takes about 10-15 minutes after the unit is switched on before the control lamp goes off. You can then start cooking the food.
4. Once cooking is complete, the unit can be kept warm. To do this, set the temperature regulator to the thermostat level.

## USING THE LID

Use the glass lid when possible whilst cooking all food types. The cover will reduce cooking time and prevents smells escaping.

**WARNING: THE GLASS LID HAS A VENT THROUGH WHICH HOT STEAM CAN ESCAPE! AVOID CONTACT WITH THE HOT ESCAPING STEAM.**

**CAUTION: THE LID CAN BECOME EXTREMELY HOT DURING OPERATION, THEREFORE USE OVEN GLOVES WHEN REMOVING THE LID TO AVOID BURNS.**

## AFTER USE

- Set the temperature regulator to the 0 level.
- Unplug the appliance from the wall outlet.
- Allow the unit to cool down thoroughly before cleaning.

## CLEANING AND MAINTENANCE

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth. For tougher stains, use mild soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Ensure the appliance is dry before storing.

# PLUG

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with a UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.



### Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ  
Importer EU: Benross Marketing Ltd, Italeiei 1-2000 Antwerp Belgium.  
Consumer Services: E: [afterservice@benross.com](mailto:afterservice@benross.com). T: +441518327600.  
Made in P.R.C.