



# **X47**

# **Teppanyaki Grill**

## **Instruction Manual**



**Item No. 35490**

# IMPORTANT! SAFETY INSTRUCTIONS



**READ THIS MANUAL BEFORE USING THIS APPLIANCE.**



**FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY.**

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- **If the supply cord is damaged it must only be repaired or replaced by a suitably qualified person.**
- **Do NOT position appliance where it can be reached by children.**
- **Extra caution is necessary when used near children or when left unattended.**
- **The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.**
- **Children must not play with the appliance.**
- **Cleaning and user maintenance by children must not be carried out without supervision.**
- **Children of less than 3 years should be kept away unless continually supervised.**
- **Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided it has been installed in its intended normal operational position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.**
- **Children from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or carry out user maintenance of the appliance.**
- **This appliance is for household use only and not commercial or industrial use.**
- **Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.**

- If the product or its supply cord is damaged do not use and consult a qualified person for repair or dispose of responsibly.
- Always unplug the appliance after use.
- Store the appliance out of reach of children when not in use.
- Store in a clean dry storage area when not in use.
- Always ensure any vents or outlets are clear from blockages which may impact on the products function or safe use.
- Always unplug this product from the mains by pulling on the plug not the power cable.
- Always unplug before cleaning.
- Only use a soft cloth with mild soapy water to clean this product. Do not submerge this product in water or any other liquid.
- Do not use the appliance for other than its intended use.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk damaging the appliance.
- Never use any connector other than the one provided with this appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Only use this appliance on a heat resistant surface
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Avoid touching these parts.

- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc, and the power cord and plug do not come in contact with water.
- Before cleaning always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface.
- Always remove the plug from the wall socket when the appliance is not in use.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device is designed for home use only.
- Never modify this appliance in any way.

**ATTENTION: IN CASE OF OVERHEATING, THE SAFETY INTEGRATED THERMOSTAT WILL AUTOMATICALLY SHUTDOWN THE DEVICE.**

- In the above circumstance, unplug the unit and wait 10-20 seconds before switching the power on again. After this, the appliance will be ready to use again.

## BEFORE FIRST USE

- Clean the grill and accessories. We recommend heating up the grill for about 10 minutes without any food on.
- Fully ventilate the room by opening windows and or doors when heating up the grill without food on.

# USING THE APPLIANCE

- Unroll the power cord completely.
- Insert the plug with thermostat into the appliance and make sure the thermostat is on its minimum position and put the plug in an earthed power socket.
- Connect the apparatus in a correct socket-outlet, to avoid any danger.
- ALWAYS disconnect the power source before cleaning the appliance or assembling the accessories.
- Stand the appliance a heat resistant table or flat surface.
- Select the cooking temperature using the thermostat dial. The pilot light will come on indicating that the appliance is heating.
- Preheat the grill to reach the ideal cooking temperature. When the appliance reaches the desired temperature, the pilot light will go out.
- Now place the food onto the grilling surface.
- The grilling times vary according to the nature of the foodstuffs and to your personal taste.
- When grilling is finished switch off the grill and disconnect it.

## PRACTICAL HINTS

- Frozen food should always be thawed before it is grilled.
- To grill meat, put the thermostat in its maximum position to preheat the grill. For other ingredients, choose the temperature accordingly.
- Never scratch the special non-stick coating. Use a wooden spatula or a heat resistant plastic spatula.

# MEAT & POULTRY SAFE COOKING GUIDELINES

## COOKING

Cook all raw beef, pork, lamb and veal steaks, chops, and roasts to a minimum internal temperature of 145°F (62.8°C) as measured with a food thermometer before removing meat from the heat source. For safety and quality, allow meat to rest for at least three minutes before carving or consuming. For reasons of personal preference, consumers may choose to cook meat to higher temperatures.

**GROUND MEATS:** Cook all raw ground beef, pork, lamb, and veal to an internal temperature of 160°F (71.1°C) as measured with a food thermometer.

**POULTRY:** Cook all poultry to an internal temperature of 165°F (73.9°C) as measured with a food thermometer.

## CLEANING

- Before cleaning, put the thermostat in its minimum position and make sure that the plug has been removed from the mains supply socket.
- Let the grill to cool down thoroughly and unplug the thermostat from the appliance.
- Never immerse the appliance or the plug in water or any other liquid. However, should there be water on the electric connection, wait until the appliance is completely dry before using it again.
- Wipe the outer surfaces of the grill with a damp cloth and dry afterwards.
- Do not use harsh abrasive cleaners as these might damage the non-stick coating.

## STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

## SPECIFICATIONS

|       |                |
|-------|----------------|
| Input | 220V~240V 50Hz |
| Power | 2000W          |

## PLUG

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with a UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.



### Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ  
Importer EU: Benross Marketing Ltd, Italeiei 1-2000 Antwerp Belgium.  
Consumer Services: E: [afterservice@benross.com](mailto:afterservice@benross.com). T: +441518327600.  
Made in P.R.C.