



10 Piece Kebab Grill

Instruction Manual



Item No. 37119

SAFETY INSTRUCTIONS



IMPORTANT: Read these instructions carefully before using this appliance and keep them for future reference.




Warning! Read all safety warnings and instructions. Failure to follow these may result in electric shock, fire and/or injury.

- The intended use of this appliance is explained in this instruction manual. The use of accessories other than those recommended may present a risk of personal injury.
- **Always** check the mains voltage corresponds to the voltage on the rating plate.
- This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have received supervision or instruction concerning its use by a person responsible for their safety.
- Children **must** be supervised to ensure they do not play with the appliance.
- This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge providing they have been given supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- Children **must not** play with this appliance or carry out cleaning and maintenance.
- **Always** switch off the appliance and disconnect from the power source if left unattended and before assembling, disassembling, or cleaning.
- **Never** disconnect the appliance by pulling on the power cord.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction concerning its use in a safe way and they understand the hazards involved.
- This appliance is **not** intended to be used with a separate timer or remote-control system.
- **WARNING:** When positioning the appliance, ensure the power cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

ADDITIONAL SAFETY INFORMATION

- Improper use can cause personal injury or damage to this appliance.
- Do **not** touch the hot surfaces of this appliance. Use the Handles.
- **Never** immerse the appliance, power cord or plug in water or in any other liquid. If the appliance gets wet, shut off the power supply immediately.
- **Never** touch the appliance, power cord or plug with wet hands.
- Do **not** use if the appliance or power cord are damaged or malfunctioning. Consult a qualified electrician for repairs. Regularly check for damages.
- Do **not** use the appliance outdoors, in wet areas or near water.
- Do **not** place on or near a hot gas or electric burner or in a heated oven.
- Do **not** place anything on top of this appliance.
- Keep this appliance away from flammable or explosive objects.
- **Never** let the power cord hang over the edge of a table or touch heated surfaces.
- Do **not** bend the power cord.
- Ensure at least 10 cm of space around the appliance during use.
- Allow the appliance to cool completely before disassembling, cleaning or adding accessories.
- Exercise caution when moving the appliance or removing the Drip Cups to avoid spilling hot liquids.
- Do **not** clean with metal scouring pads. Small bits of metal can break off and lead to electric shock (see Cleaning).
- Do **not** store objects (other than approved accessories) inside the appliance when not in use.
- **Always** wear protective hand coverings when inserting or removing anything into/from the appliance.
- **Only** use this appliance for its intended purpose.
- This appliance is **not** intended for commercial use.
- This appliance should be placed on a flat, stable surface out of the reach of children.
- **Always** store the appliance out of the reach of children.
- Keep all packaging away from children.

COMPONENTS

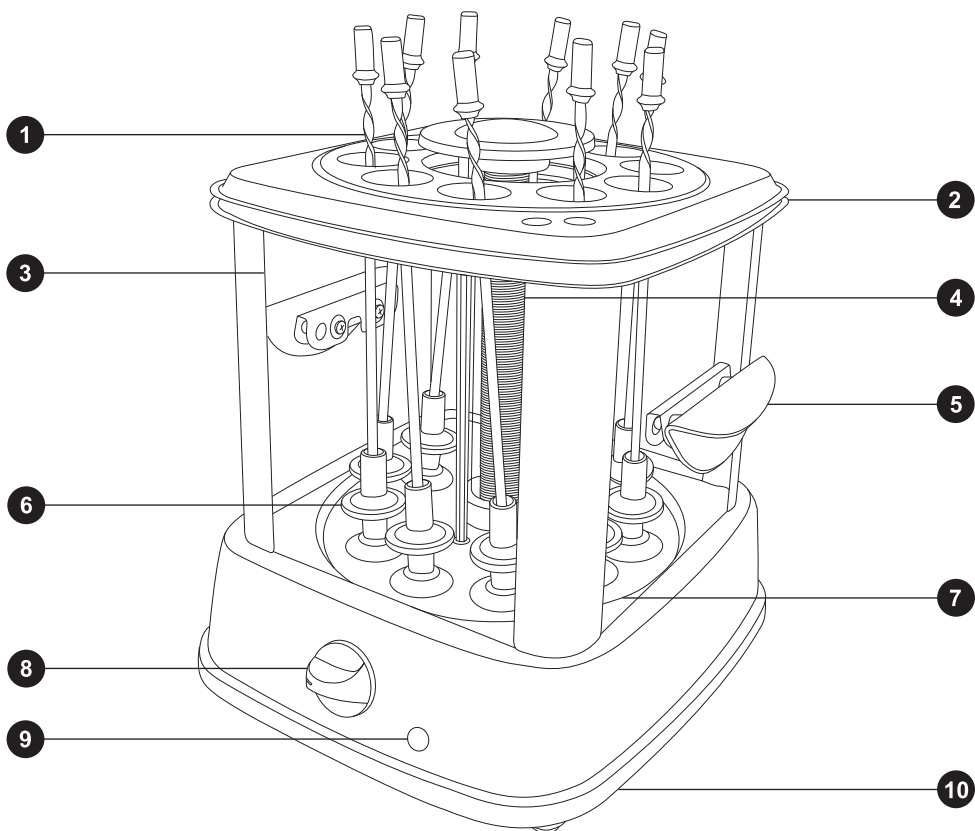

1. Kebab Skewer

2. Lid

3. Glass Cover

4. Heating Element

5. Handle

6. Drip Cup

7. Drip Tray

8. Control Dial

9. Indicator Light

10. Base

ASSEMBLY

Please note: Clean the appliance before first use (see Cleaning).

- Insert the Drip Tray over the main Heating Element so it slots into place. Then add the ten Drip Cups on top.
- Insert the Skewers into each of the Drip Cups.
- Place the Glass Cover over the assembled components. Make sure it is securely attached to the Base

USING THE APPLIANCE

- Connect the appliance to a suitable wall outlet (see Safety Instructions).
- Prepare your chosen food by chopping it into chunks (approx. 3 cm).
- Slide the food onto the Skewers and place the Skewers into the appliance.
- Turn the Control Dial to set the cooking time. Allow to cook for the specified time (see Cooking guidelines).
- When no longer using the appliance, switch it off by turning the Control Dial to OFF and removing the plug.

COOKING GUIDELINES

FOOD	TIME
Chicken wings	15–25 minutes
Meat kebab	15–30 minutes
Vegetable kebab	13–20 minutes

CLEANING

Please note: Regular cleaning will help prolong the life of this appliance.

- Clean and remove any stickers before using for the first time.
- After use, turn the Control Dial to OFF and unplug the appliance.
Allow it to cool completely before cleaning.

COMPONENT	✓	✗
Base, Heating Element	Clean with a damp cloth and dry thoroughly. Use nonabrasive cleaner on any tough stains.	Do not use metal scouring pads or abrasive cleaners. Do not put in dishwasher or pour water onto it.
Glass Cover	Clean with warm soapy water and dry thoroughly.	Do not use metal scouring pads or abrasive cleaners.
Drip Cups, Drip Tray, Skewers	Clean in hot soapy water or in the dishwasher. Dry thoroughly. Use nonabrasive cleaner on any tough stains.	Do not use metal scouring pads or abrasive cleaners.

STORAGE

- Unplug the appliance and allow it to cool completely before storing.
- Make sure all components are clean and dry.
- Store the appliance in a clean, dry place away from the reach of children.

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
The appliance is not working.	No mains connection.	Plug the appliance into a suitable wall outlet (see Safety Instructions).
	The cooking time has not been set.	Turn the Control Dial to the desired time.
Smoke is coming out of the appliance after turning on for the first time.	This is normal and will fade after a few minutes.	None
Smoke is coming out of the appliance (not first use).	The food is greasy. This will leak onto the Drip Tray and produce smoke.	This will not affect the appliance or food. Once the appliance has cooled, wipe away any grease from inside the appliance.
	The Drip Tray still contains grease residues from previous uses.	Clean the Drip Tray thoroughly after each use (see Cleaning).

TECHNICAL SPECIFICATIONS

Product Name: 10 Piece Kebab Grill

Item Number: 37119

Model Number: FL2026A

Rated power: 800 W

Voltage: 220–240V~50Hz

Class I earthed appliances (3 core) plug

- This appliance has been fitted with a BS UK compliant plug which **must not** be replaced or removed.
- The plug is fitted with a BS UK compliant fuse link suitable for this type of appliance and **must** only be replaced by a fuse link of the same rating.
- If access to the fuse link is only possible by removing the plug cover, this **must** only be carried out by a suitably qualified person.
- If the plug or mains cable is damaged, do **not** use the appliance. Dispose of it responsibly. This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ
Importer EU: Benross Marketing Ltd, Italelei 1-2000 Antwerp Belgium.
Consumer Services: E: afterservice@benross.com. T: +441518327600.
Made in P.R.C.