



Sandwich Toaster

Instruction Manual



Item No. 35129 / 35139 / 35149

SAFETY INSTRUCTIONS



IMPORTANT: Read these instructions carefully before using this appliance and keep them for future reference.



Warning! Read all safety warnings and instructions. Failure to follow these may result in electric shock, fire and/or injury.

- **The intended use of this appliance is explained in this instruction manual. The use of accessories other than those recommended may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- If the product or its supply cord is damaged it must only be repaired or replaced by a suitably qualified person or disposed of responsibly.
- Do NOT position appliance where it can be reached by children.
- Extra caution is necessary when used near children or when left unattended.
- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of knowledge and experience if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Children of less than 3 years should be kept away unless continually supervised.
- Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided it has been installed in its intended normal operational position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children from 3 years and less than 8 years shall not plug in, regulate or clean the appliance or carry out user maintenance of the appliance.
- This appliance is for household use only and not commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Always unplug the appliance after use.
- Store the appliance out of reach of children when not in use.
- Store in a clean dry storage area when not in use.

- Always ensure any vents or outlets are clear from blockages which may impact on the products function or safe use.
- Always unplug this product from the mains by pulling on the plug not the power cable.
- Always unplug before cleaning.
- Only use a soft cloth with mild soapy water to clean this product. Do not submerge this product in water or any other liquid.
- Do not use the appliance for other than its intended use.
- The baking surfaces get very hot. Touch the handles only.
- Put the unit down onto a heat resistant mat or surface.
- In order to prevent the heat from building up, do not put the unit directly underneath a cupboard. Ensure there is enough space all around.
- Beware of steam coming out when you open the baking section.
- The bread can burn, never use the waffle maker near or below curtains and other flammable materials.
- The temperature of accessible surfaces may be high when the appliance is operating.

BEFORE USING THE APPLIANCE

1. Clean the plates using a damp sponge and dry carefully.
2. Slightly grease the baking plates with a little oil or butter. Close the appliance and plug it in. The indicator light will come on.
3. Allow it to heat up for several minutes to remove any odour which may be present when your appliance is used for the first time.
4. The Sandwich maker is ready for use.

USING THE APPLIANCE

1. Plug appliance in and switch on mains power. The red light will come on.
2. When the green light on your appliance comes on the baking trays are ready to use. Prepare the ingredients for your toasted sandwich. For each sandwich you need 2 slices of bread.
3. To obtain a golden brown finish you can lightly butter the side of bread that is in contact with the cooking plates.
4. Lay a slice of bread with the buttered side on the lower plate. Place your filling and cover with the second slice of bread with the buttered side up. You can cook only one sandwich at a time if required.

5. Close the sandwich maker plates onto the bread until tightly clamped then lock into place.
6. Approximate cooking time takes 4-6 minutes, check your sandwich after 2 minutes.

CLEANING & STORAGE

- Before cleaning the appliance, unplug it and allow it to cool down.
- Never place the appliance in water or under running water.
- To clean the outside of the appliance, use a damp sponge and dry carefully.
- To clean the plates, use a damp sponge with washing up liquid. Rinse and dry them with care.
- If there is any stain backed onto the plate, we would advise using vegetable oil to soften it and wait 5 minutes before removing. Do not use a scouring pad or powder.
- When not in use the appliance must be stored in a clean dry place.
- Children should not have access to stored electrical appliances.

PLUG

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed
2. The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.



Importer UK: Benross Marketing Ltd, Liverpool L24,9HJ
Importer EU: Benross Marketing Ltd, Italeiei 1-2000 Antwerp Belgium.
Consumer Services: E: offerservice@benross.com. T: +441518327600.
Made in P.R.C.