
Fisher™ Wifi Audio Kit Troubleshooting Guide

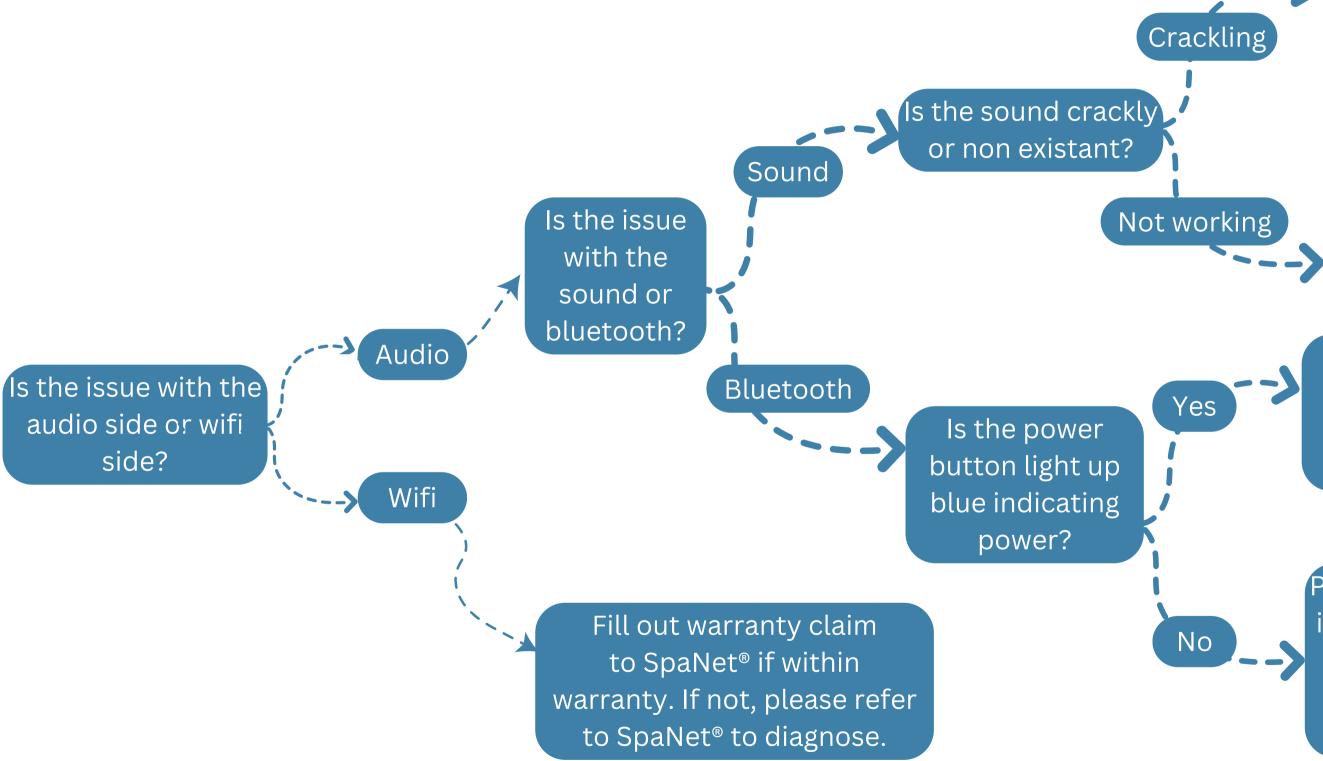

Likely speaker issue. Identify faulty speaker and replace.

Likely audio system issue. Replace audio system.

Test with another phone or appliance. If it does not show up, might be an issue with the bluetooth.

Press and hold the button until it lights up. If still no go, check power supply to the Fisher™ audio Wifi system. If failed, replace power supply.