

**TOOLS NEEDED FOR INSTALL:**

1. Phillips Screw Driver

STEP 1: Place Visor in designated area.

STEP 2: Use a Phillips Screw Driver and screw in screws to complete installation.

STEP 3: Repeat opposite side.

