



OPERATING MANUAL


Intended Use

The Glass Trolley UPT 600 is constructed for transport of plate glass and exterior windows

Supplied

- 2x Side Panels
- 3x Connecting Pipes
- 1x Manual

Assembly

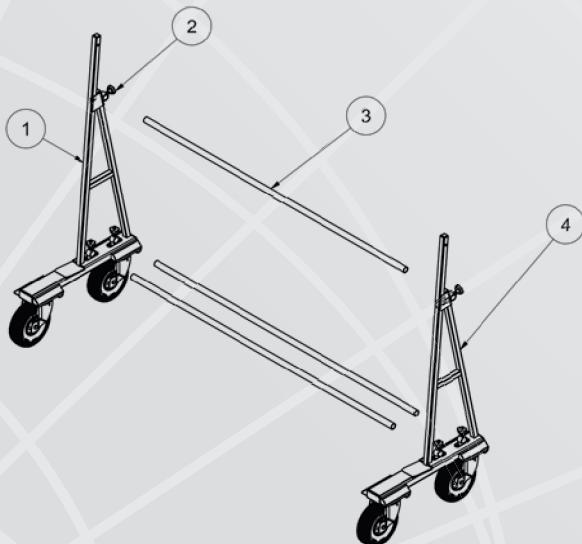


At least 2 people are needed to assemble the trolley. Set the left side panel (Pos. 1) upright. Insert the connecting tubes (Pos. 3) into the clamps (Pos. 2) of the side part, tighten them with the help of the handle, then put the right side part (Pos. 4) in. Push the tubes through the clamp holders (Pos. 3). Then screw them together with the holder, you can now adjust the distance between the side parts according to the size of the material to be transported with the aid of the clamping bracket. Before commissioning, check the correct assembly and tire pressure of the trolley

Technical Data

Model:	UPT 600
Article Number:	700667
Max. Load:	600 kg
Max. Payload:	3.500 x 6.000 mm
Dead Weight:	63 kg
Side Weight:	25 kg
Material:	Steel
Length x Width Height :	2.000 x 800 x 1.790 mm
Support Width	140 mm
Max Load Length: Tyre	2.000 mm
Pressure:	2,5 bar

Ground Clearance: 336 mm

Use: to be used on level ground only either inside or outside

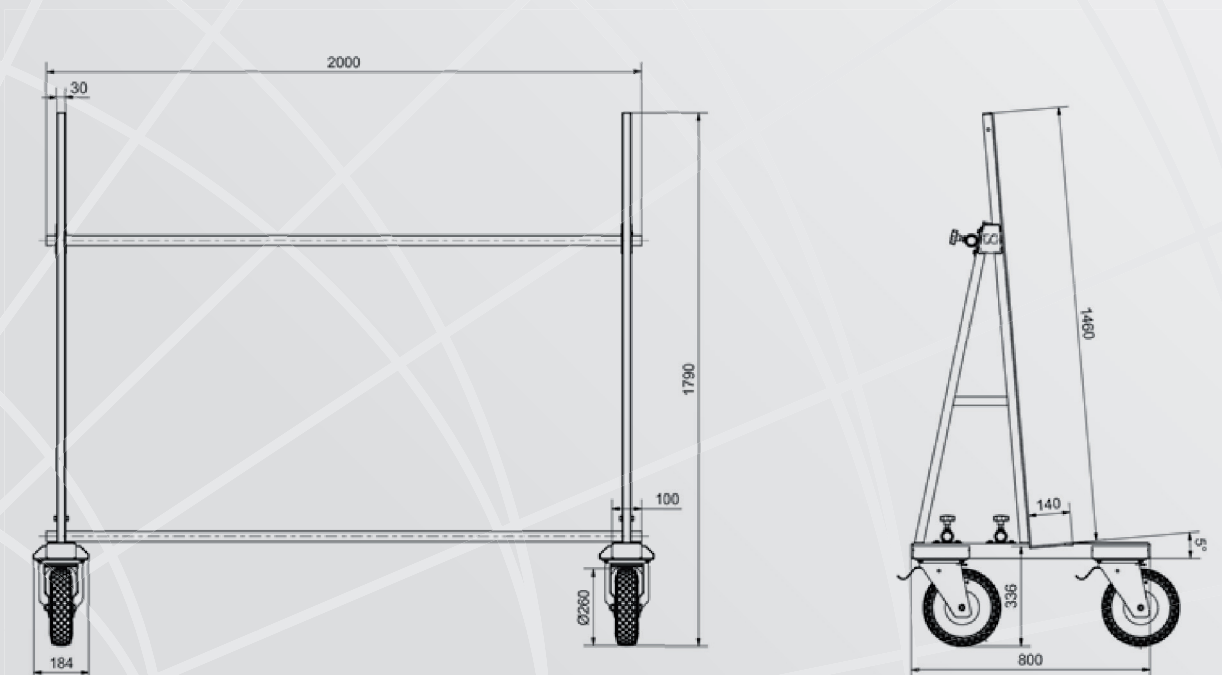

Maintenance & Service

IMPORTANT!

Maintenance, servicing and repair must only be carried out by qualified and authorized persons!

Protective measures and rules of conduct



- Visual inspection of the racks before each loading process
- When loading the racks, the carrying capacity must not be exceeded.
- Ensure even loading of the racks.
- Transporting material must be secured before moving the wagon.
- Before unloading, make sure the trolley is safe and level and that the load is undamaged.
- Secure the trolley against unintentional rolling away.
- Preferably only push the glass trolley. When pulling, there is a risk of the trolley catching on the feet / lower leg
- Glass transport vehicles UPT 600 only on level, secure and stable ground.
- During transport, make sure that the movement is carried out only slowly so that the trolley can be stopped without danger.

Response to malfunctions

- Immediately stop operation if there are identifiable hazards.
- Report defects immediately.
- Have defects repaired ONLY by a specialist.

Warranty

Warranty expires at:

- Non-compliance with the specifications of our operating instructions
- Used outside the described applications
- Structural changes to the trolley and misappropriation