



**REQUIREMENTS FOR STAND-BY AND OFF MODE LOSSES, AND NETWORKED STANDBY
ACCORDING TO COMMISSION REGULATION (EU) 2023/826**

Test Date: May-July 2025 **Products:** Yoto Mini E & Yoto Player 3rd Gen. (V3E)

AC Power Consumption					
Mode	Measured		Limit	Time to Enter mode	Conditions
	Mini E	V3E			
OFF mode	0.39W	0.38W	0.5W	within 30 secs of pressing power off button	USB Power inserted, battery fully charged, unit powered OFF
Standby	0.69W	0.68W	0.8W	within 18 minutes after unit is idle and off-line	USB Power inserted, battery fully charged, unit idle with display showing a clock with white numbers. (unit offline)
Network Standby	0.82W	1.6W	2W	as soon as unit is idle and on-line	USB Power inserted, battery fully charged, unit idle with display showing a clock with red numbers. (unit online)

External Power Adaptor
<p>These products are shipped without an external adapter.</p> <p>The following is the information of the certification test adaptor</p> <p>Manufacturer/ Trade mark HUAWEI, Model :HW-100400C01, Input 100-240Vac, 50/60Hz, 1.2A Max.; output 5.0Vdc, 2.0A, or 9.0Vdc, 2.0A or 10.0Vdc, 4.0A</p>

Network connect/disconnect instructions	
<p>Initial Network Setup for the Yoto player</p> <p>To set up your Yoto player, you'll need the Yoto App installed on your mobile phone.</p> <p>Step-by-Step Setup:</p> <ol style="list-style-type: none">1. Open the Yoto App and select "Join a family account."2. Power on the Yoto player.<ul style="list-style-type: none">- Connect it to the charger.- Ensure no NFC card is inserted.- Press and hold both orange buttons for 5 seconds until the screen shows six letters and you hear the voice prompt: "Enter this code into the app to continue."3. In the app, select your Yoto unit type and enter the six-letter code shown on the screen.4. Once the unit is successfully paired, a tick mark (✓) will appear on the screen.5. Follow the in-app instructions to connect the unit to WiFi.<ul style="list-style-type: none">- The unit will now automatically reconnect to this WiFi whenever powered on.	<p>Managing WiFi Connections</p> <p>To disconnect or remove a WiFi network:</p> <ol style="list-style-type: none">1. Ensure the Mini Player is powered on and connected to WiFi.2. Open the Yoto App and go to the Settings page.3. Tap the name of your Player to access its settings.4. Select "Manage" > "Manage Wi-Fi".5. Tap "Disconnect" to temporarily disconnect (it will reconnect after restart).6. Tap "Forget ALL" to delete all stored WiFi networks from the Player. <p>Bluetooth Mode</p> <p>Turn Bluetooth ON:</p> <ul style="list-style-type: none">- While the Player is on and idle, press and hold the left button for 3 seconds to enter Bluetooth mode.- Then, briefly press and hold the right button to enable Bluetooth.- The device is now discoverable and ready to pair. <p>Turn Bluetooth OFF:</p> <ul style="list-style-type: none">- Press and hold the left button for 3 seconds again while in Bluetooth mode.