

## Wall Pack Installation Instructions

### Applications:

Tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.

### Cautions:


1. Do not use an electric generator to test the LED fixtures.
2. Please abide by related country, regional and local law and regulations when install this fixture;
3. Please don't install the fixture when raining to lower the risk of electric shock and avoid failure.

### Notes:


1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
2. Please wear gloves to avoid injury before installation.
3. If any smoke or spark of the wire has occurred, please turn off the power immediately and notify relevant personnel.

This installation instruction applies to the following products. Although the products vary in appearance, their installation steps are the same.


### Installation I:

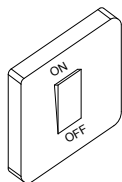


1. Make sure power is off before installation.

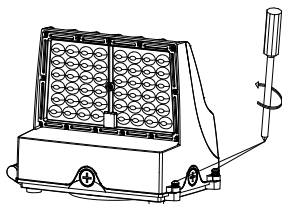


2. Remove the screws on the heatsink.

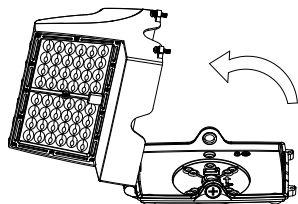


3. Open the fixture and take apart the heatsink.

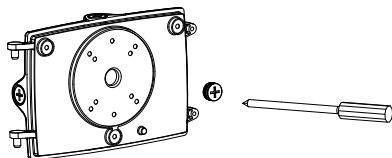


4. Open the fixture and take apart the heatsink.

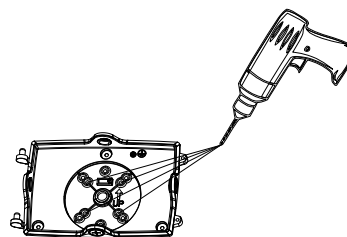


5. Drill through the mounting holes on the base with an electric drill.

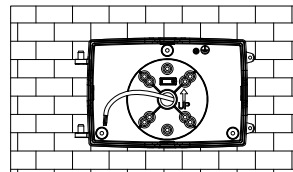

7. Pass the driver AC wire through the base.

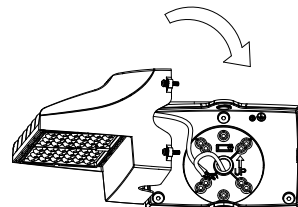


 9. Connect the LN and ground wire, assemble the heatsink back to the fixture.




9. Make sure the installation is complete before turning on the power.


### Installation II:

 


1. Make sure power is off before installation.

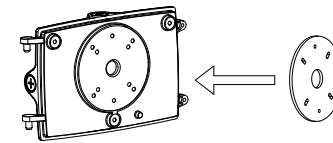


6. Paste the EVA pad to the corresponding position of the base.

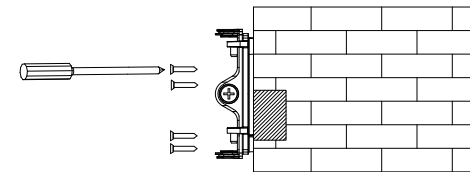


8. Place the base in the corresponding position and lock it with screws.

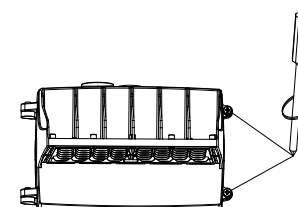


10. Tighten the screws on the heatsink.

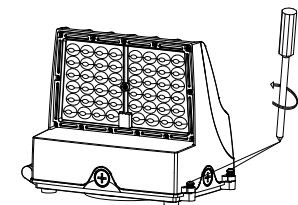


2. Remove the screws on the heatsink

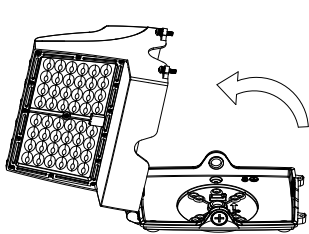


3. Open the fixture and take apart the heatsink.

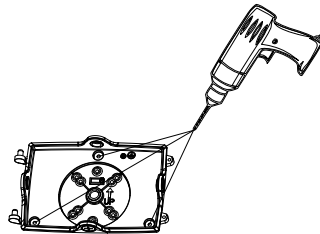


4. Drill through the mounting holes on the base with an electric drill.

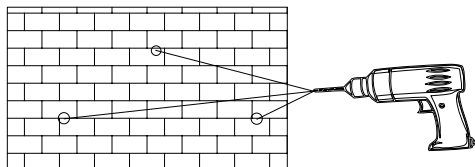


5. Drill the corresponding mounting holes on the wall with an electric drill.

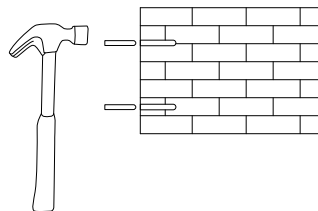


6. Insert the expansion rubber plug into the mounting hole on the wall.

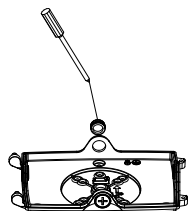


7. Remove the 1/2 plug on the side of base with a screwdriver.

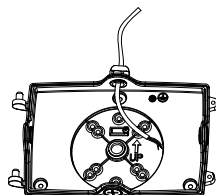


8. Install a waterproof screw at the position where the 1/2 plug is removed, and pass the driver AC wire through the base.

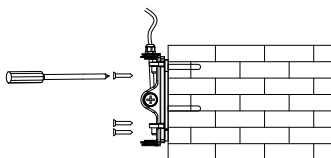


9. Place the base in the corresponding position and lock it with screws.

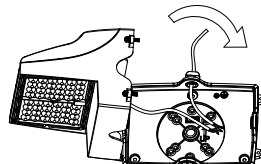

10. Connect the L, N and ground wire, assemble the heatsink back to the fixture.

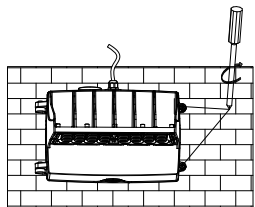

 11. Tighten the screws on the heatsink.



12. Make sure the installation is complete before turning on the power.

### Standard wire:


L/live wire: Black/Brown N/null wire: White/Blue Ground wire: Green/Yellow-green.  
Warning: During grounding, make sure the earth wire of the driver and fixture housing are connected together with the earth wire of the local power supply.

MIN 167° F SUPPLY CONDUCTOR

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### SPECIAL FUNCTIONS INSTRUCTION


Operate as following instructions if the product is designed with below functions

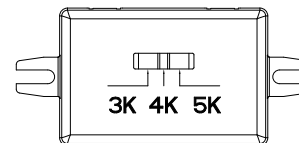

#### CCT adjustable instruction

1. The color temperature of the lamp turns to 3000K when the switch is set to 3K
2. The color temperature of the lamp turns to 4000K when the switch is set to 4K
3. The color temperature of the lamp turns to 5000K when the switch is set to 5K

 **Note:** Please turn off the power before adjusting the color temperature.




#### Wattage adjustable instructions

Turn the wattage adjustable knob to a certain wattage gear, the power of the lamp will change to the corresponding wattage.

Adjustable wattage range 25%-100%.

**Note:** Please turn off the power before adjusting the wattage.

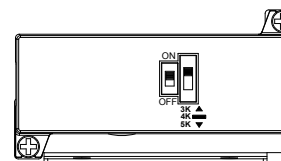

#### 2 in 1 Controller (Photocell controller & CCT Adjustable)

1. It will turn on photocell controller when the switch is set to ON.
2. It will turn off photocell controller when the switch is set to OFF.
3. The color temperature of the lamp turns to 3000K when the switch is set to 3K
4. The color temperature of the lamp turns to 4000K when the switch is set to 4K
5. The color temperature of the lamp turns to 5000K when the switch is set to 5K

**Note:** Please turn off the power before adjusting the color temperature.