
# BuzziProp Beam INSTALLATION MANUAL

INSTALLATION MANUAL 220-240V

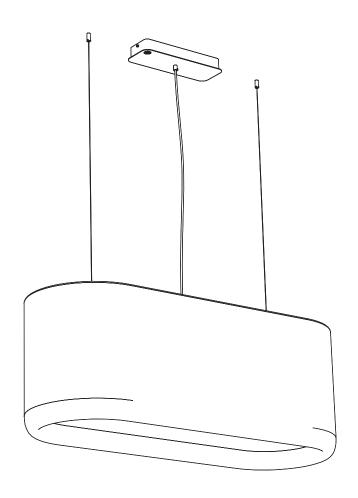



#### **Technical** info

















Input current: Max 0.35Amp

#### **Environmental Protection**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.


**A** The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

⚠ The BuzziSol is approved to be combined with BuzziShade, BuzziPleat.


⚠ The control terminals of LED driver need to use SELV control signal.


A If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard."

#### **Excluded**

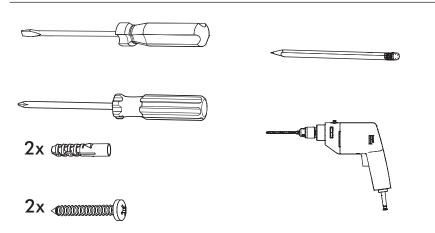


## Included BuzziProp Beam Globe | Spot

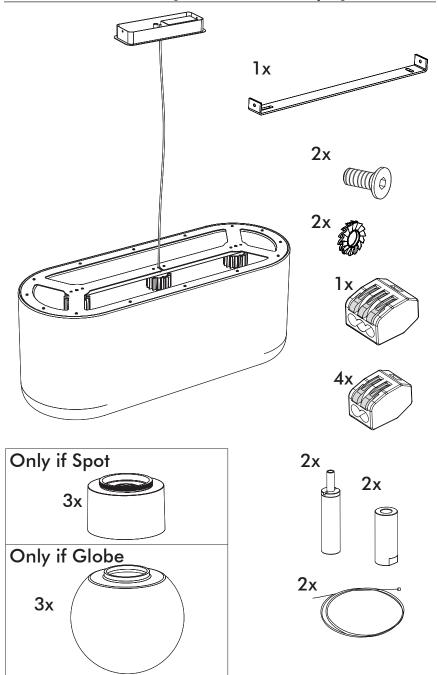

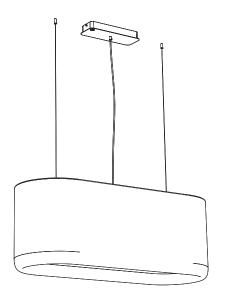


## **Configuration Type B**


P.14

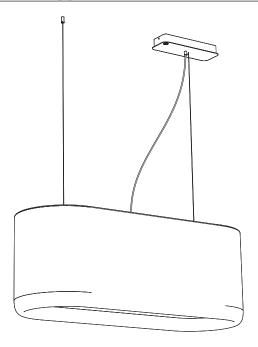



### BuzziProp Beam Type A


# 2 PERS.

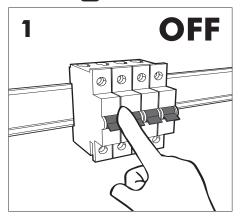


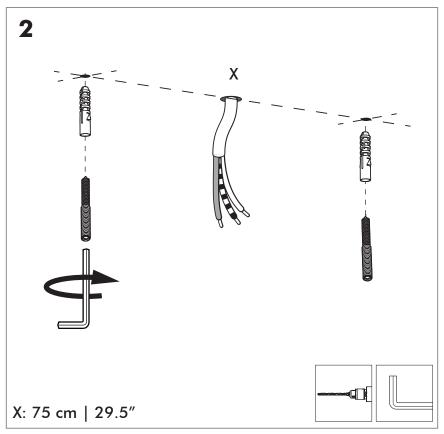


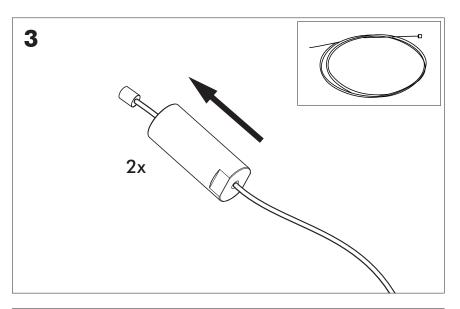


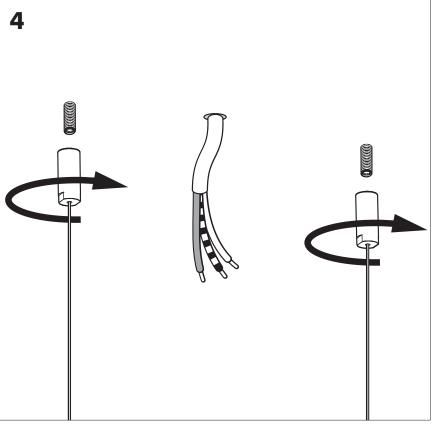


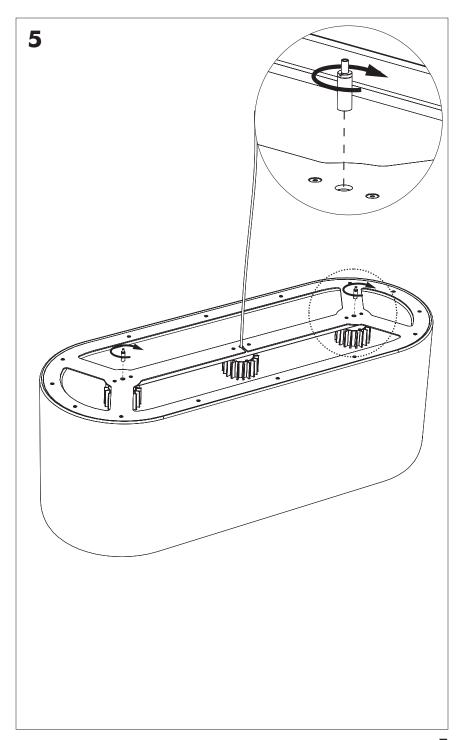


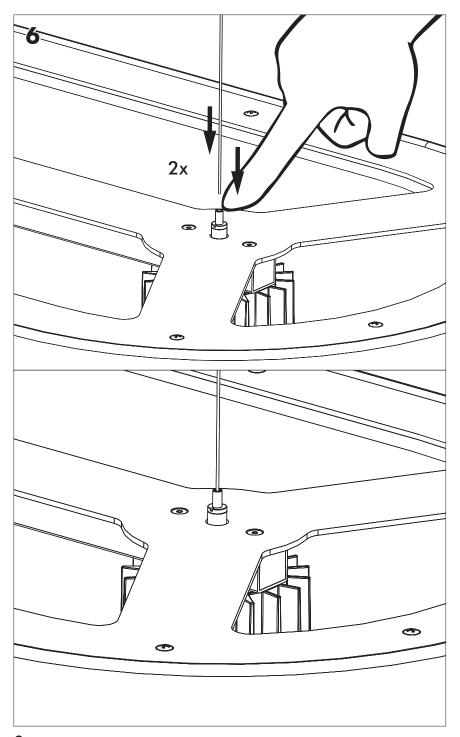


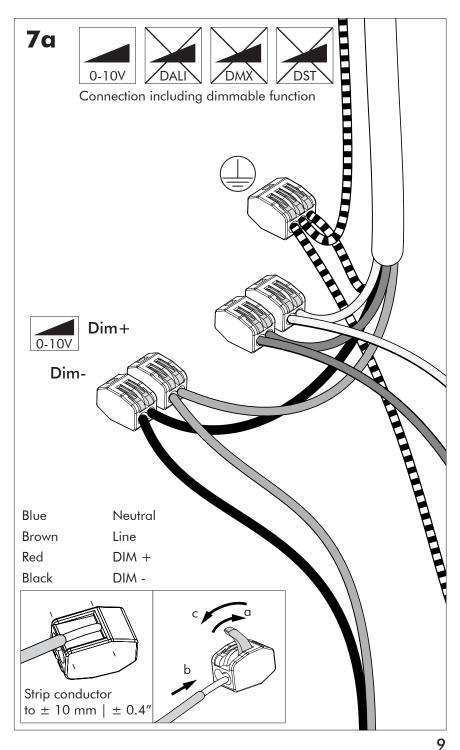


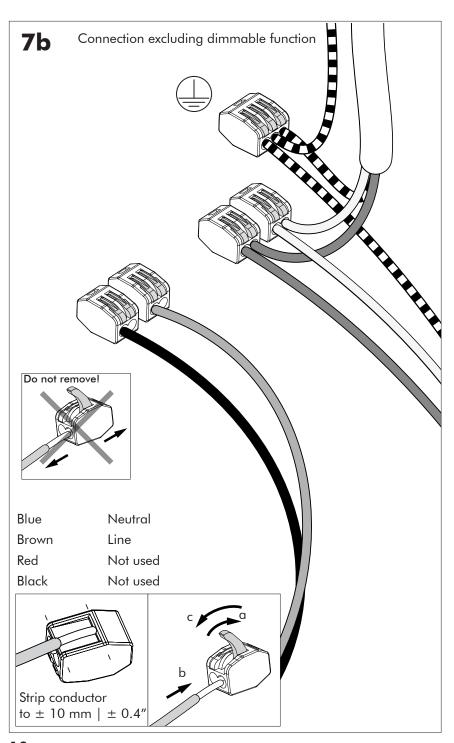

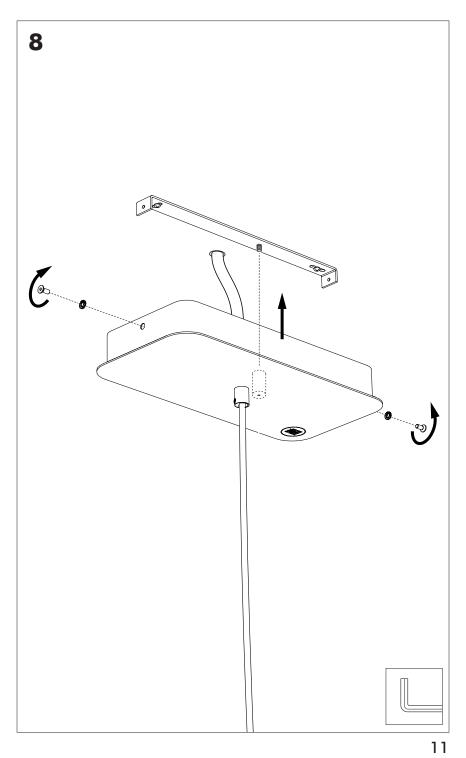

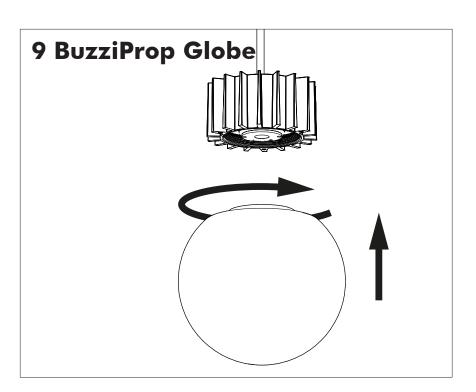


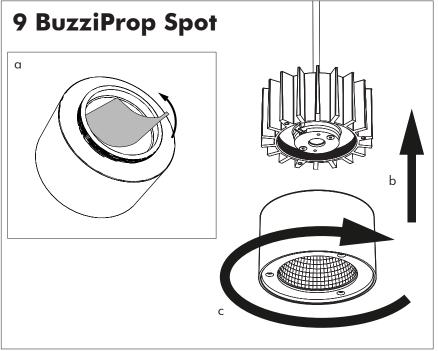


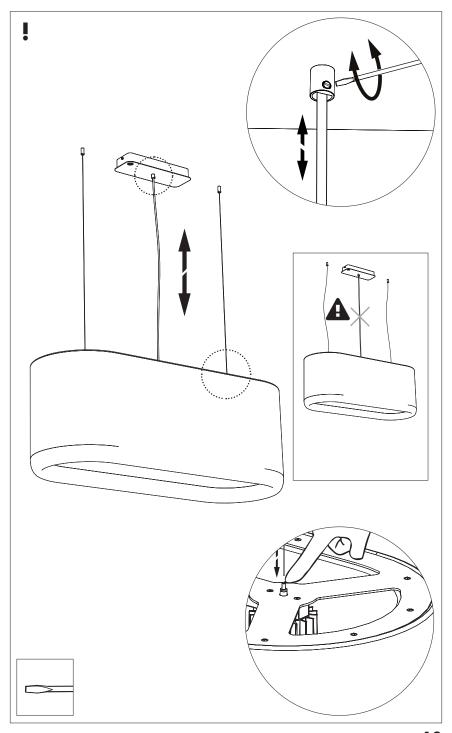



## BuzziProp Beam Type B


# 2 PERS.

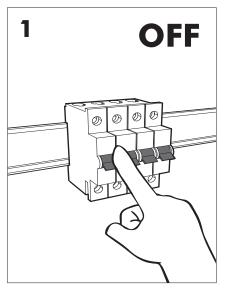


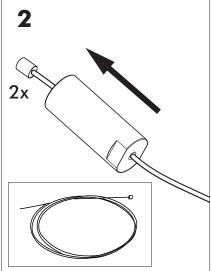


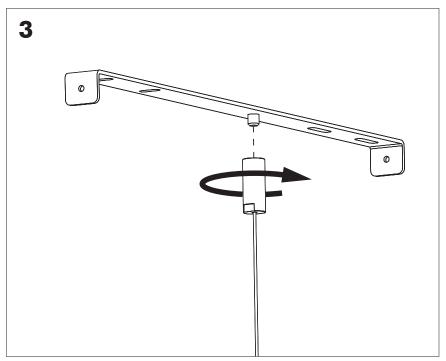


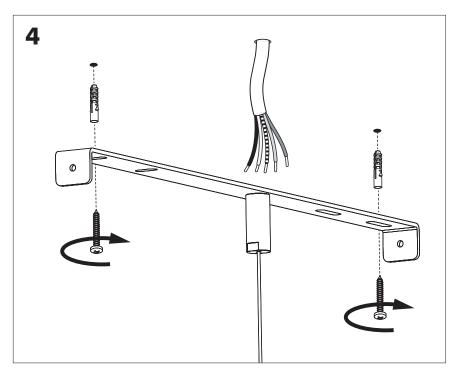


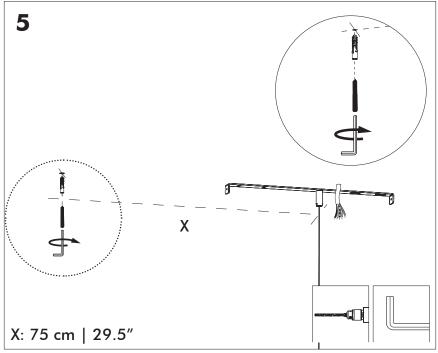


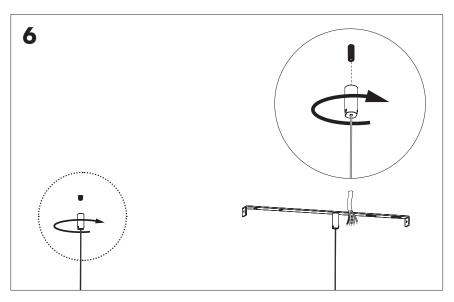


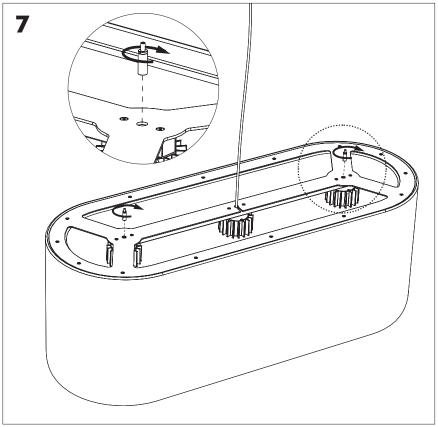


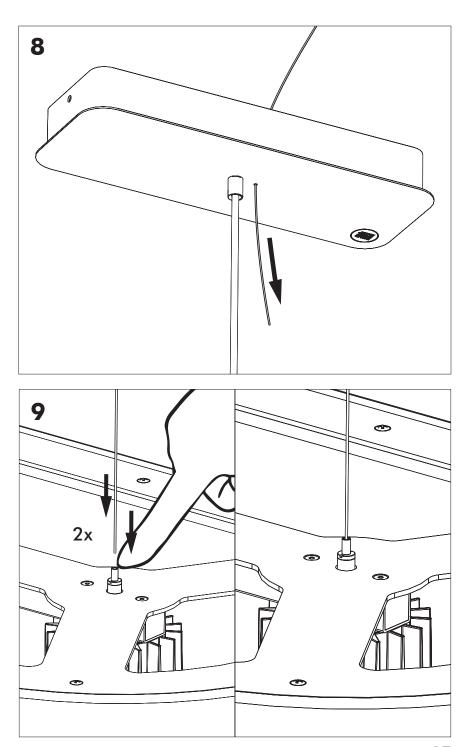


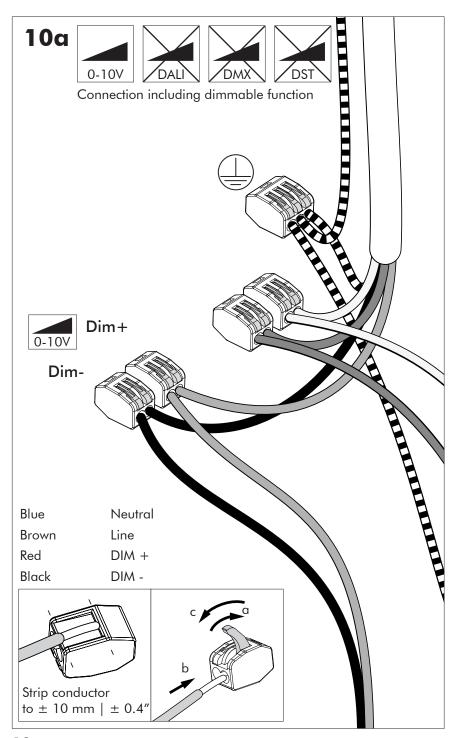


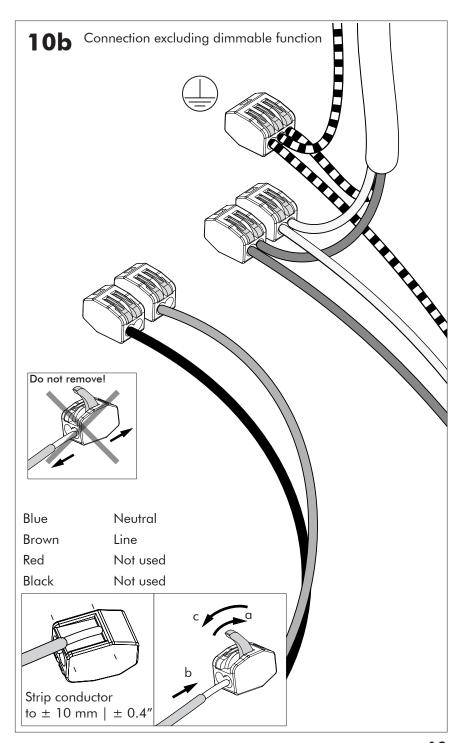

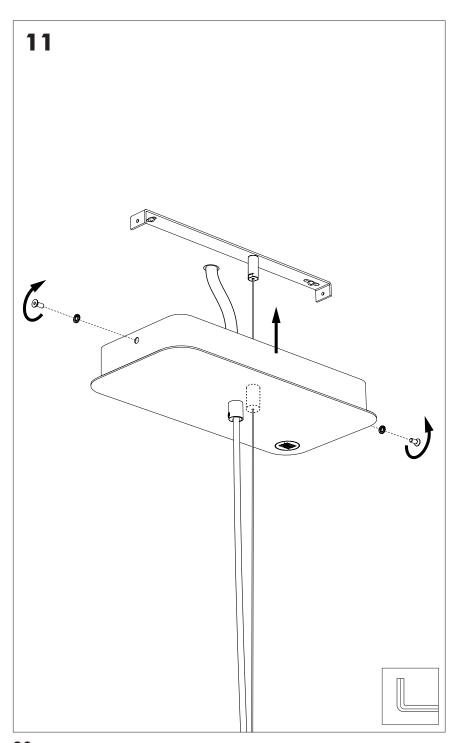

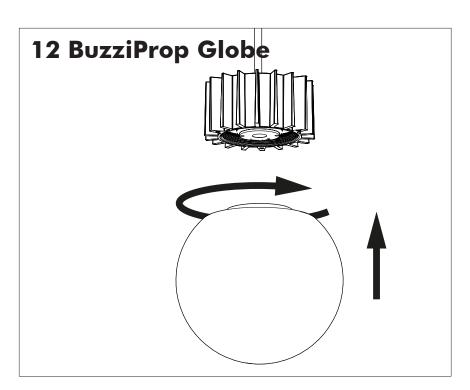

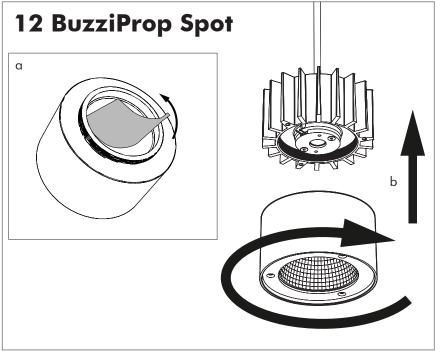

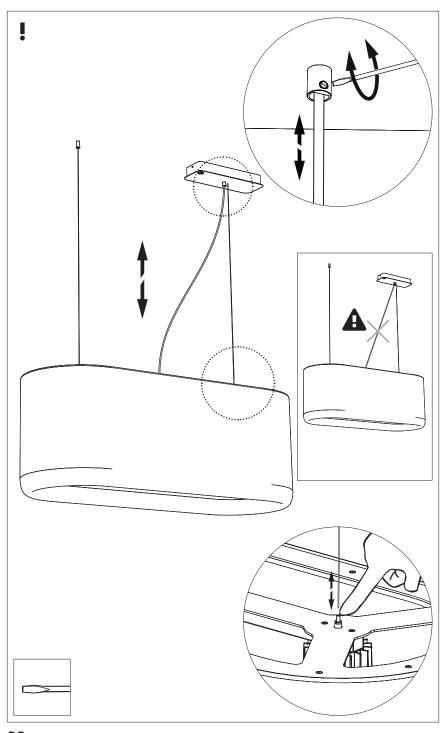

BuzziSpace Group NV Italiëlei 8, 2000 Antwerp Belgium ☎+32 (0)3 846 10 00

✓ info@buzzi.space

% www.buzzi.space



A-0000007363/01 Last update: 04/12/2023