

BuzziShade Square Beam INSTALLATION MANUAL

INSTALLATION MANUAL 220-240V

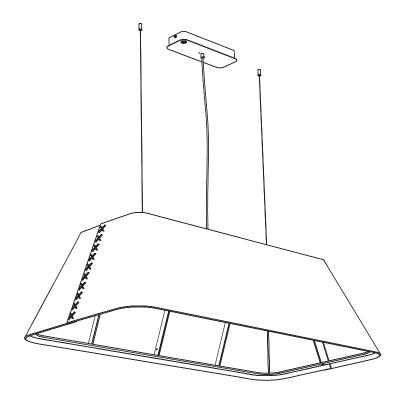



Technical info

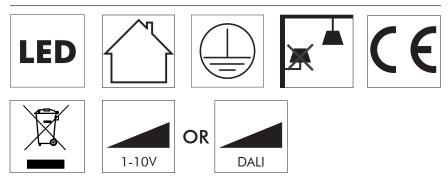

Power factor>0.8;

Input current: Max 0.35Amp

Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.


A The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

⚠ The BuzziSol is approved to be combined with BuzziShade, BuzziPleat.


The control terminals of LED driver need to use SELV control signal.


A If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard."

Excluded

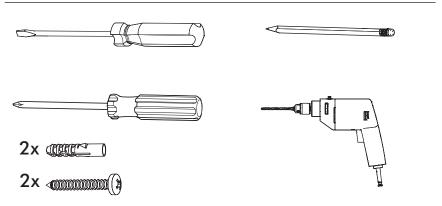


Included BuzziShade Square Beam Globe | Spot

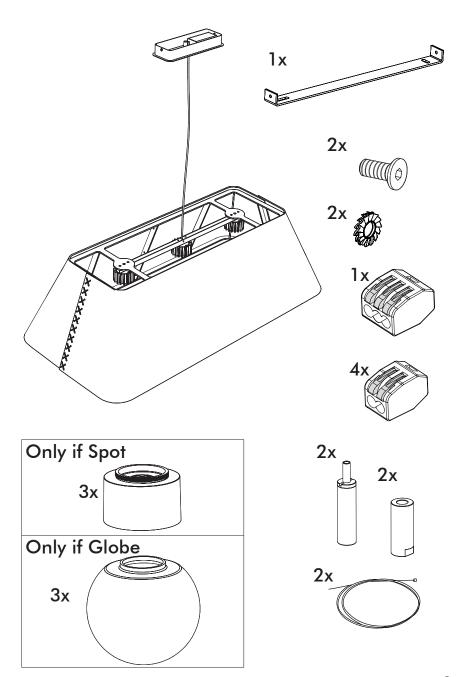

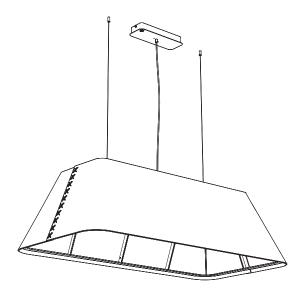


Configuration Type B


P.14

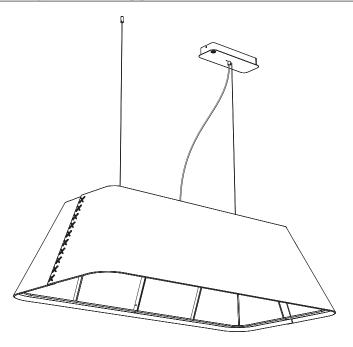



BuzziShade Square Beam Type A


2 PERS.

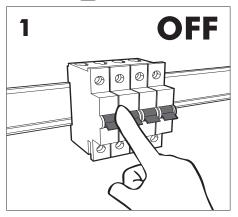


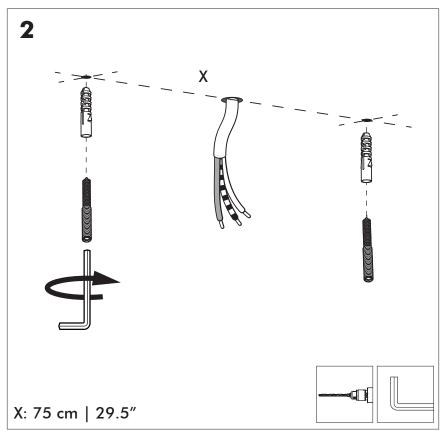


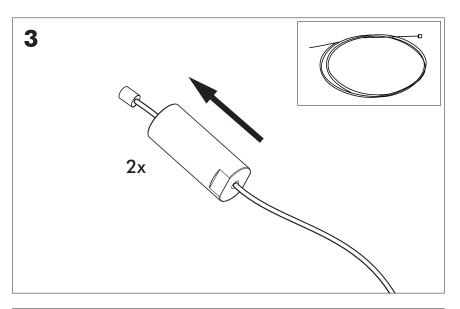


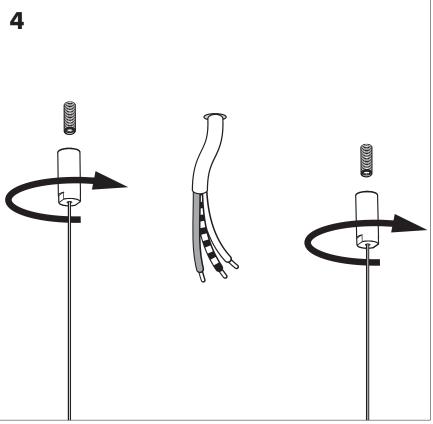


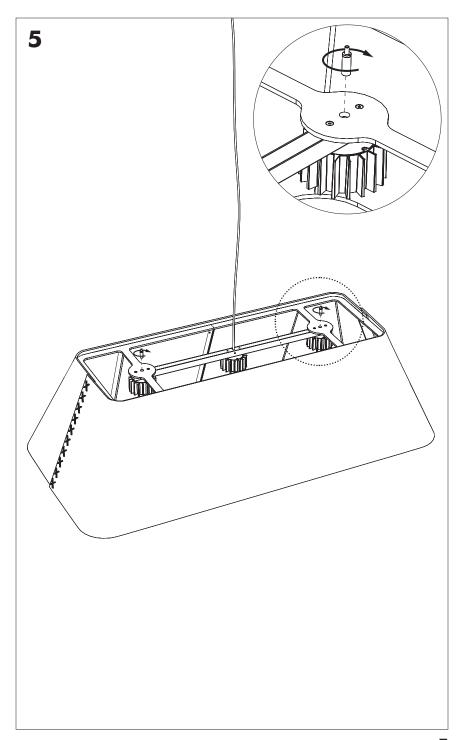


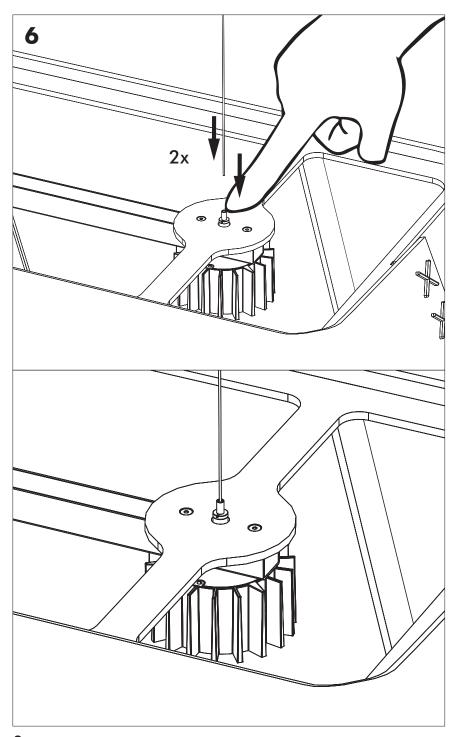


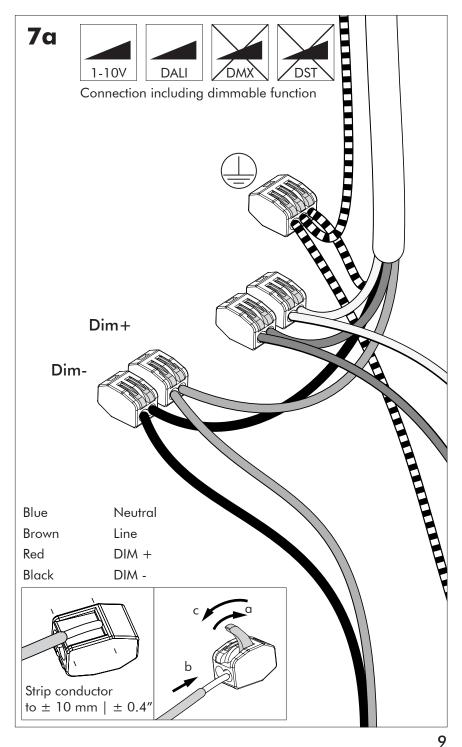


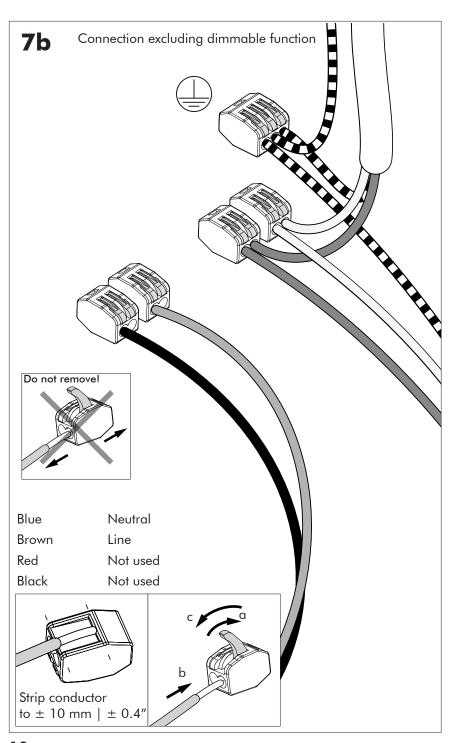

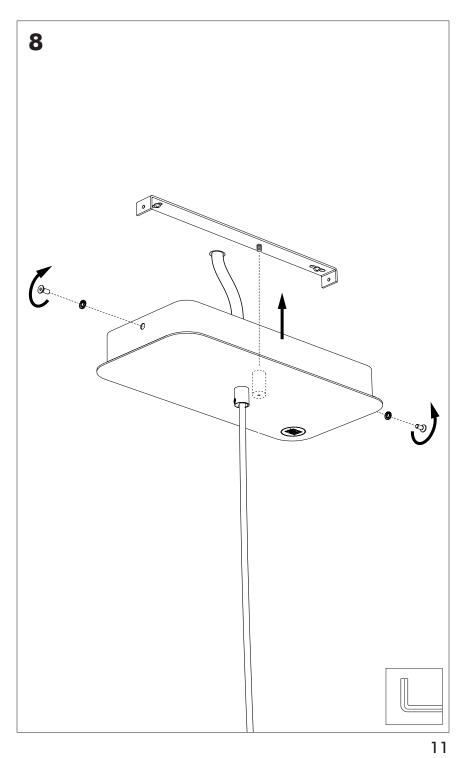

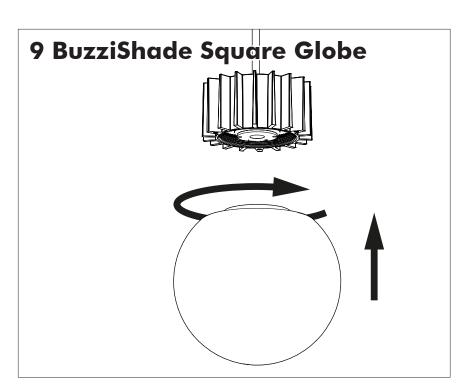


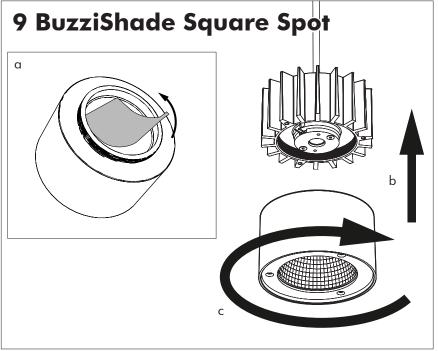


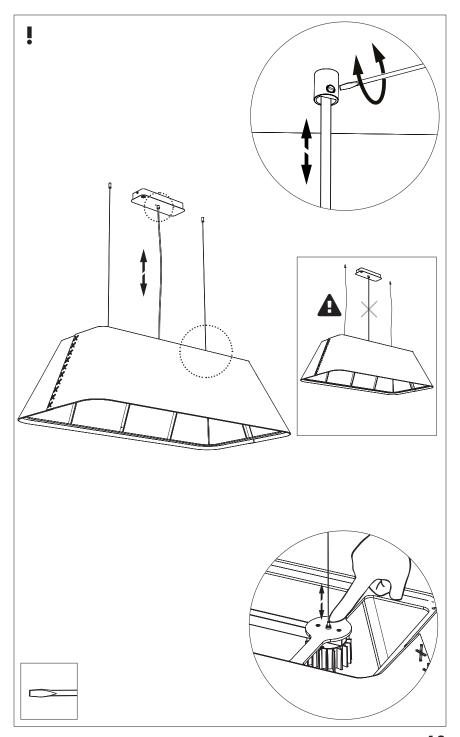



BuzziShade Square Beam Type B


2 PERS.

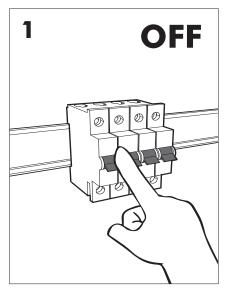


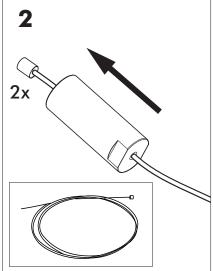


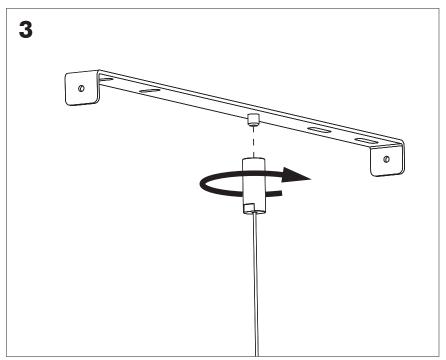


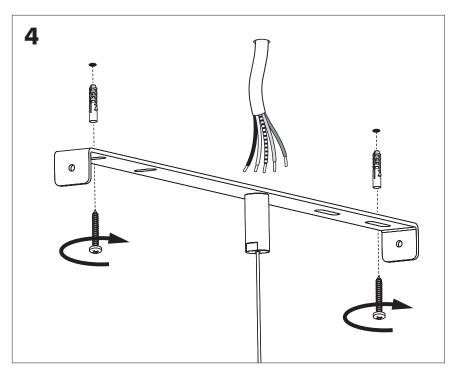


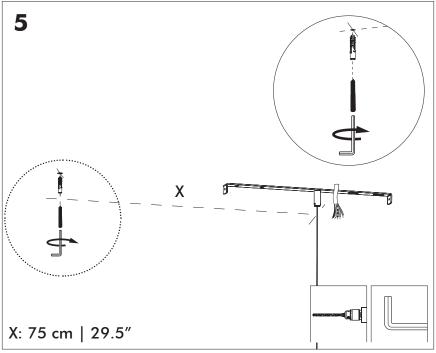


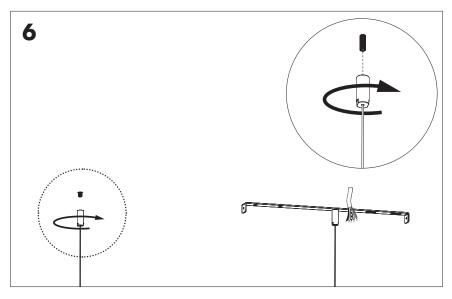


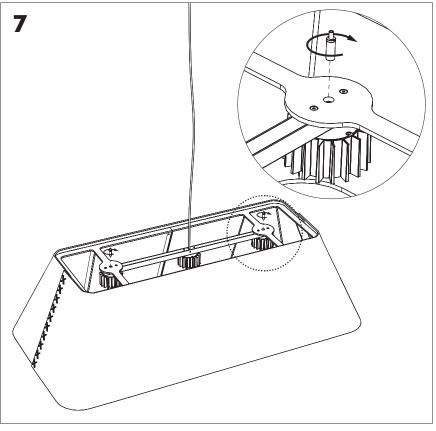


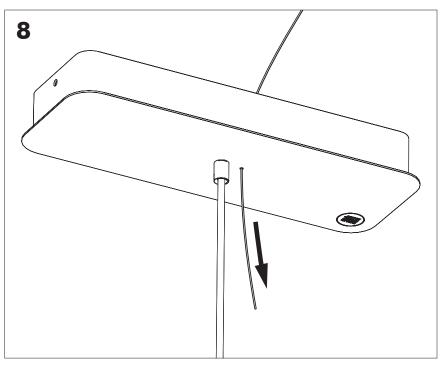


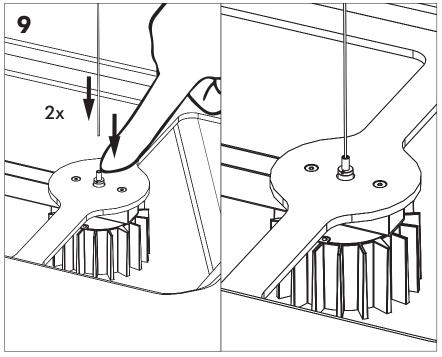


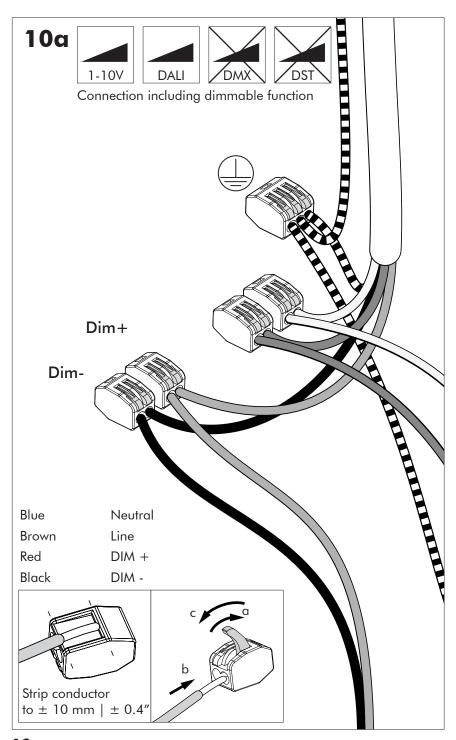


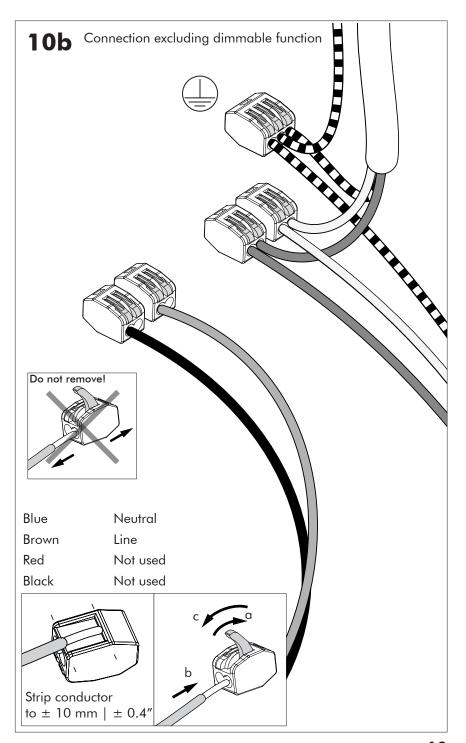

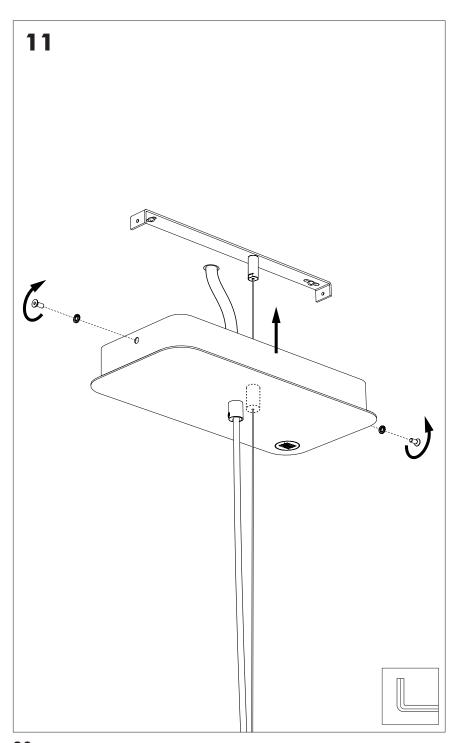

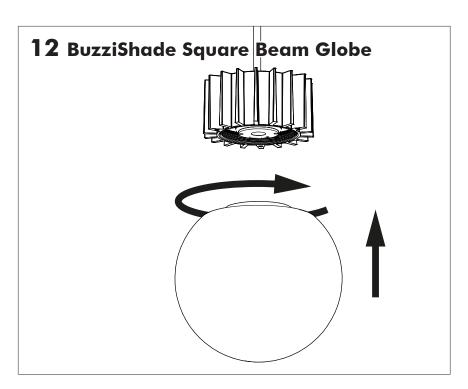

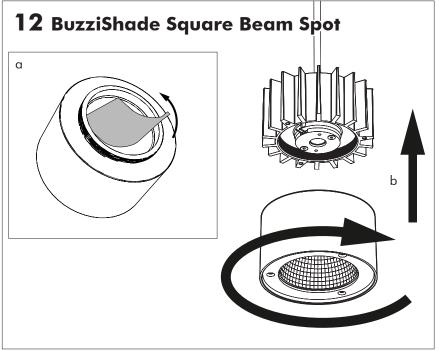

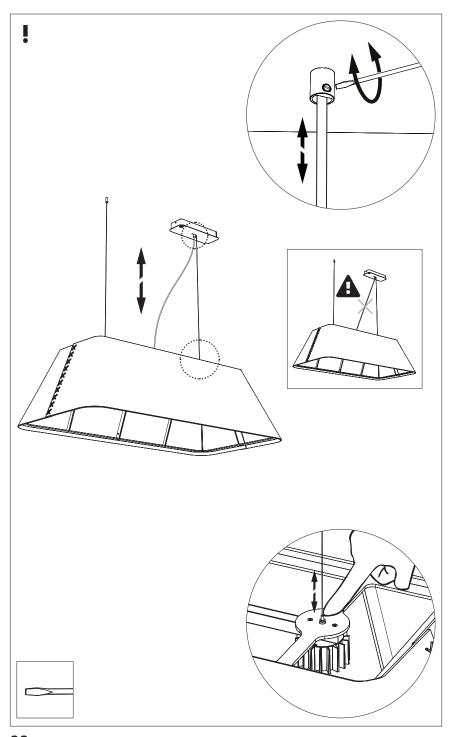

BuzziSpace Group NV Italiëlei 8, 2000 Antwerp Belgium

≅+32 (0)3 846 10 00

■ info@buzzi.space

www.buzzi.space



A-0000007365/02 Last update: 03/09/2024