 
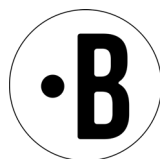 


# BuzziNest Booth

INSTALLATION MANUAL  
EU

 
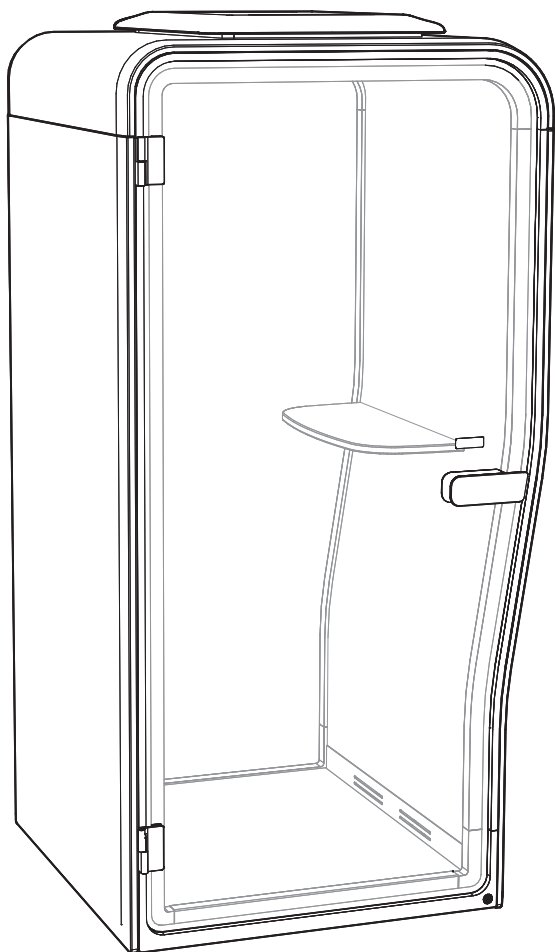 


## BuzziNest Booth







2 PERS. 




## Excluded

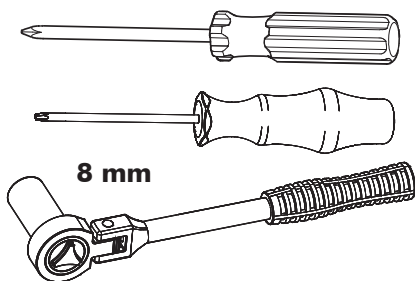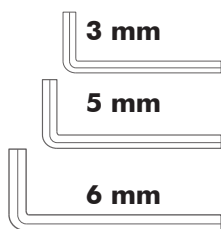


## Included

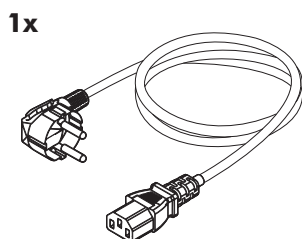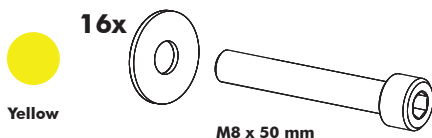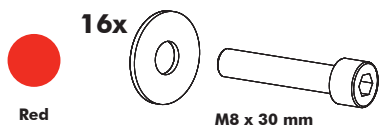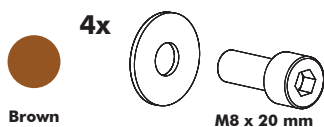      

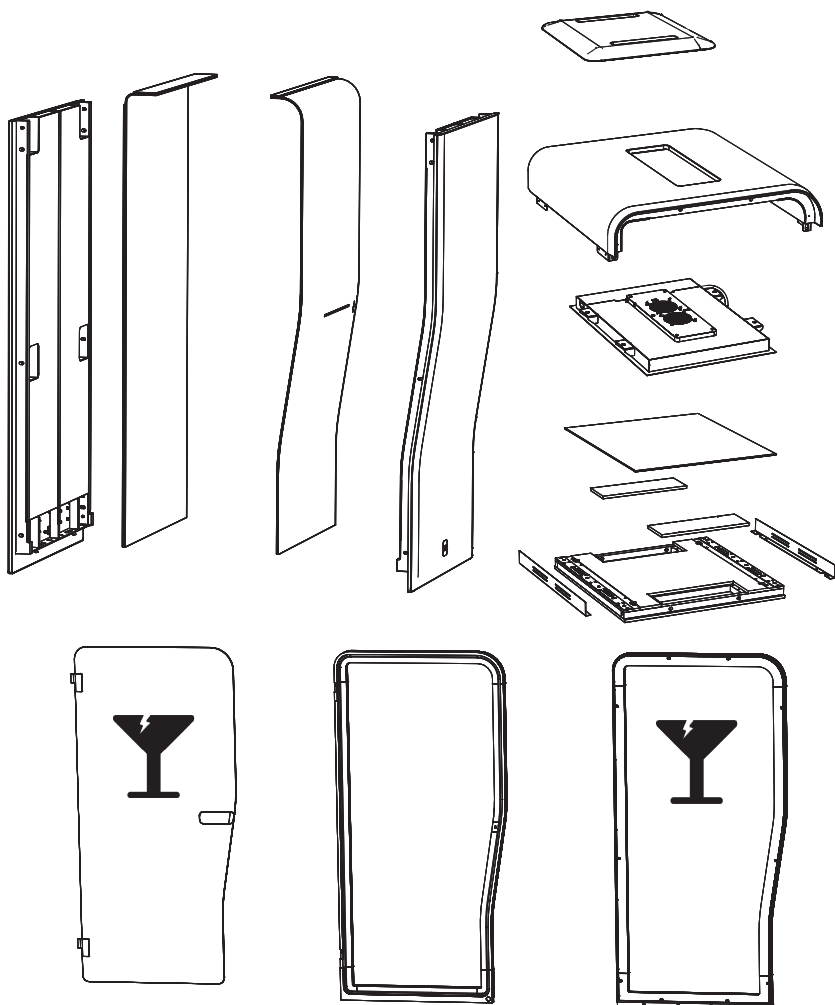 


## Optional shelf and electrification

 **⚠ Max 30 kg load on shelf**

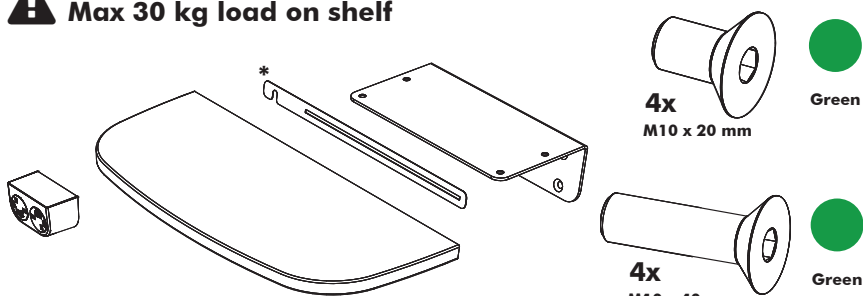


**\* Only for 3D Rib panel**






 
**1**

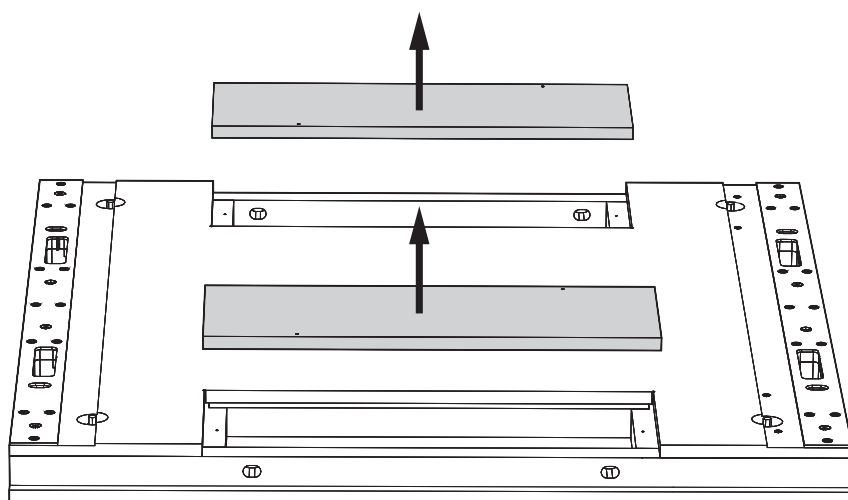




**2**

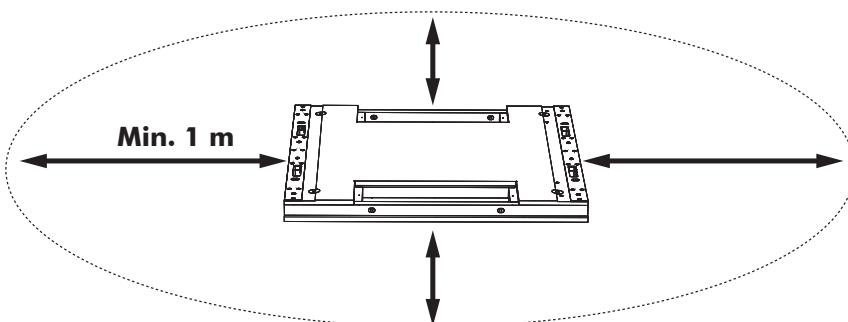 




# 3

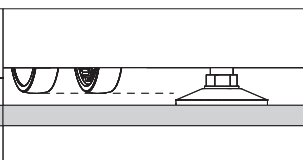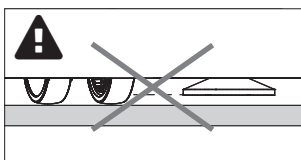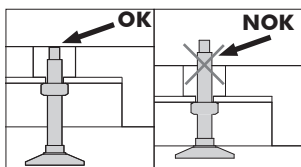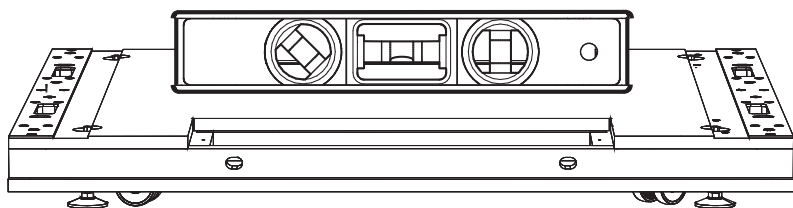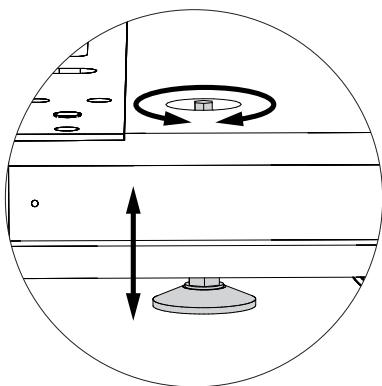      



4

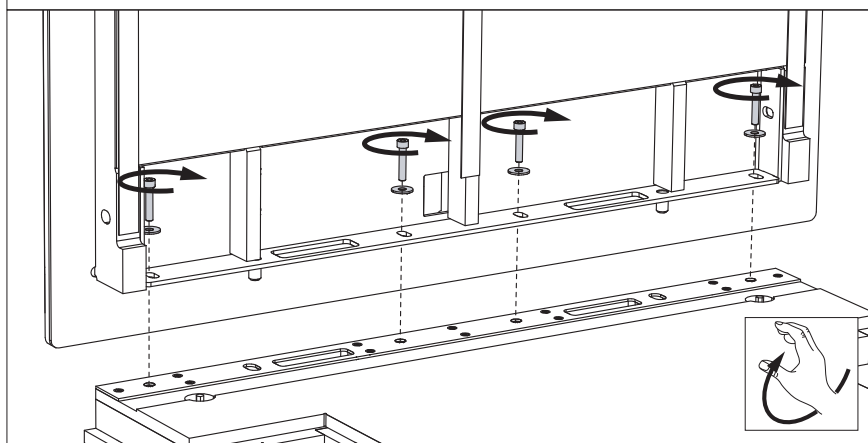  
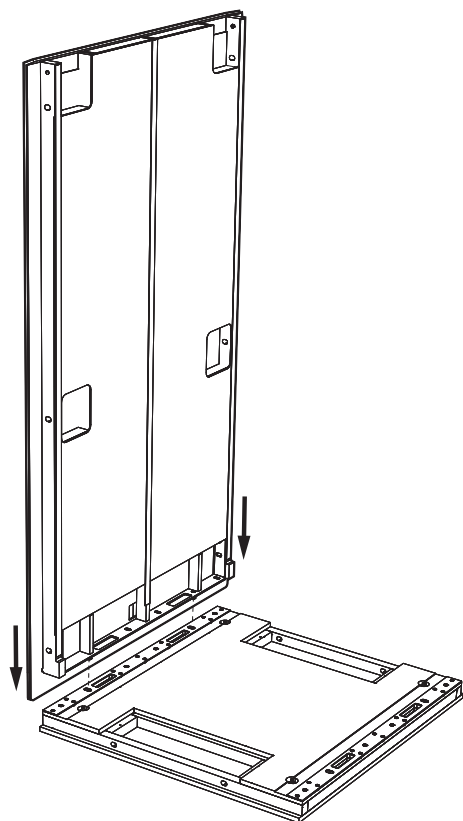 


5

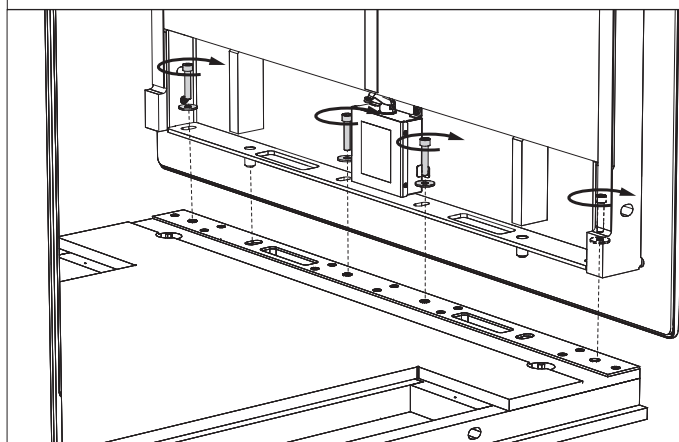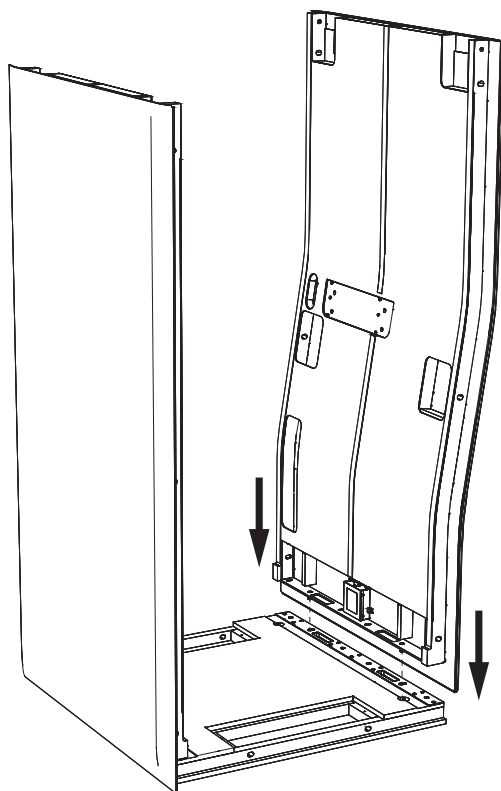   


6

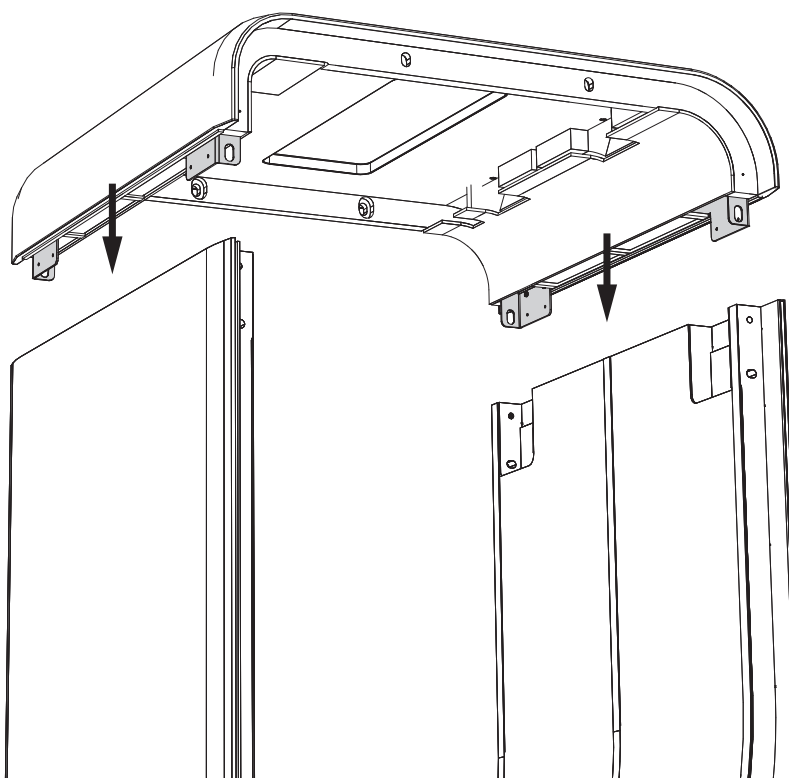 
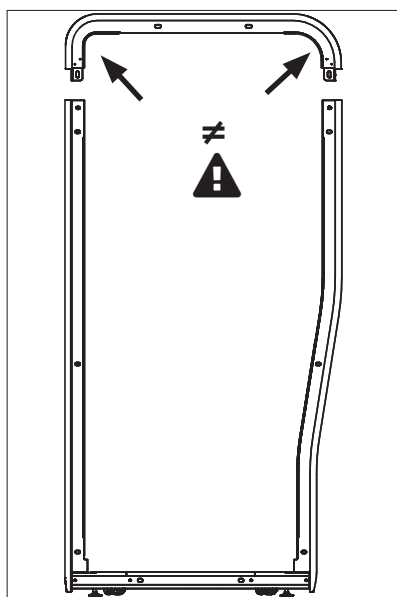 


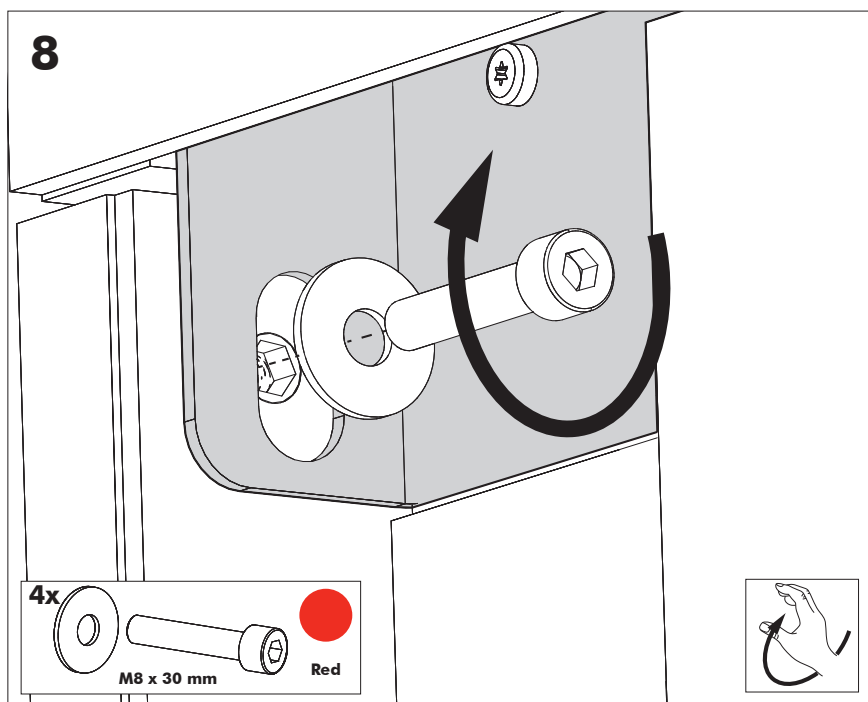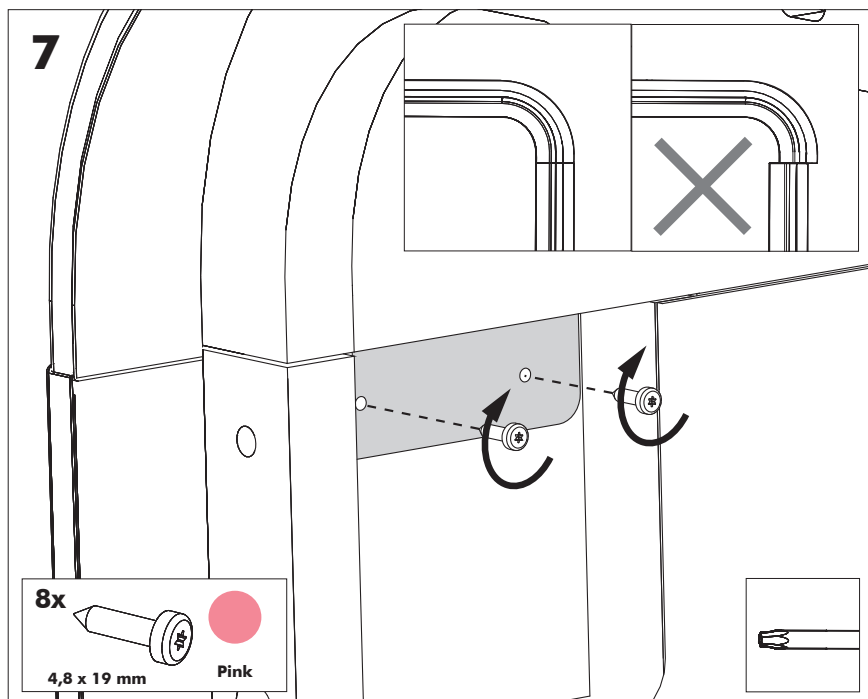  

9

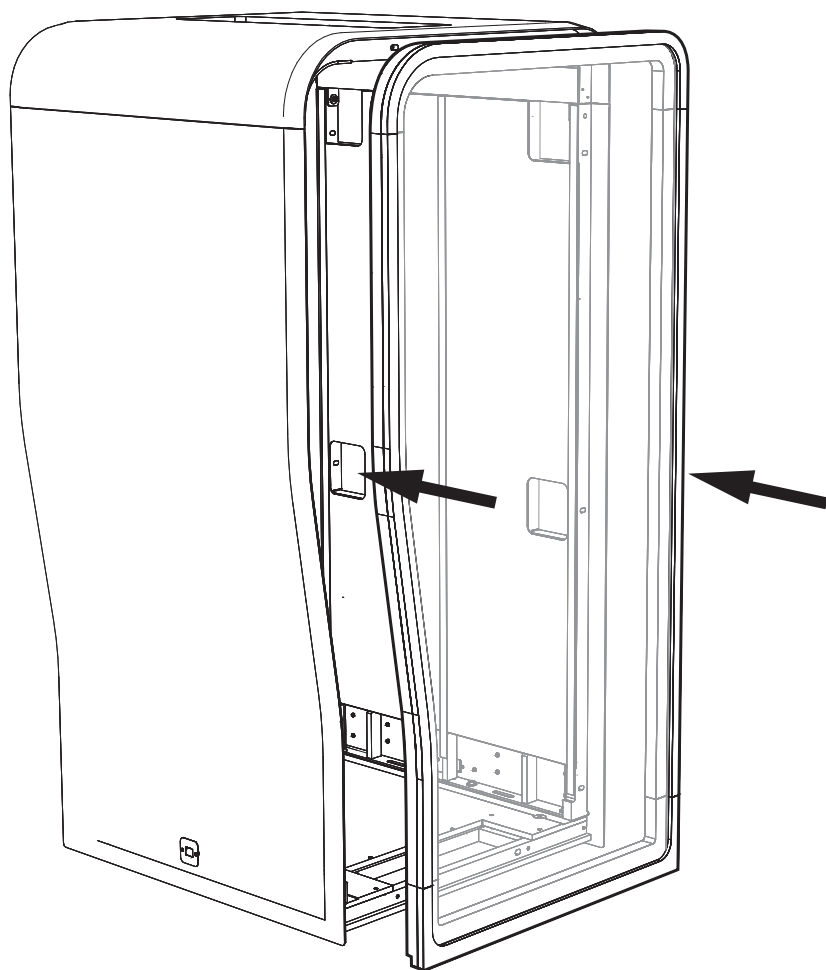 

# 10

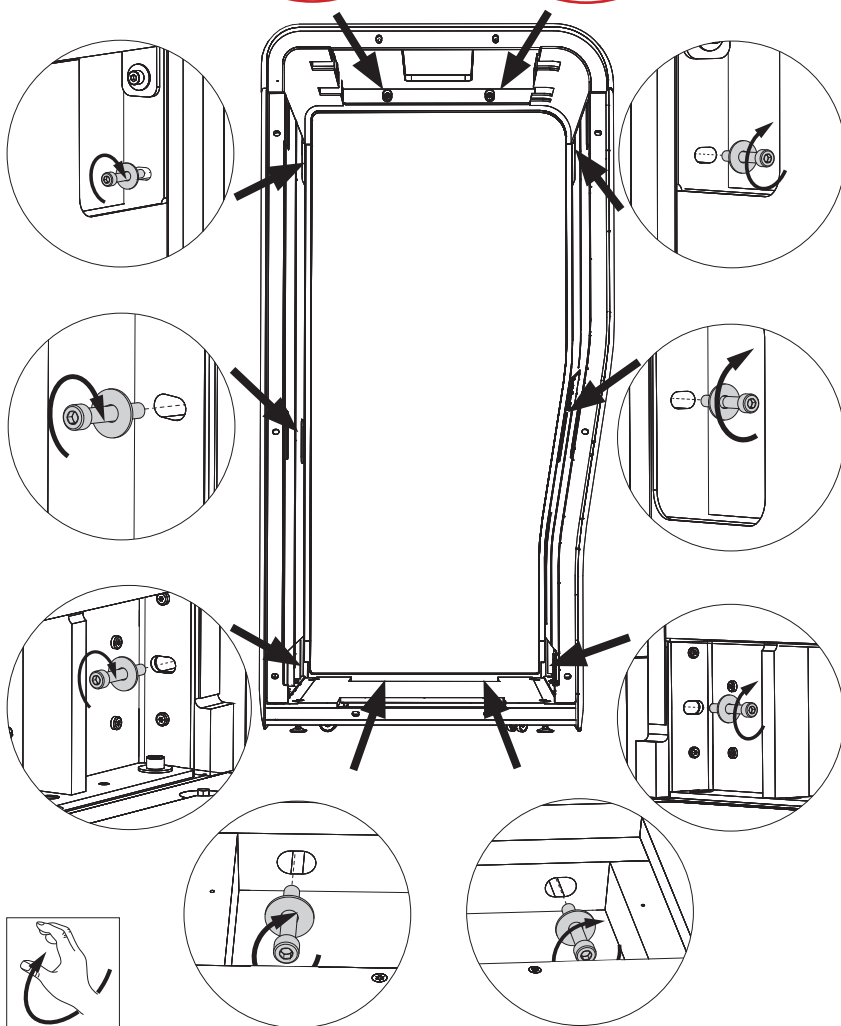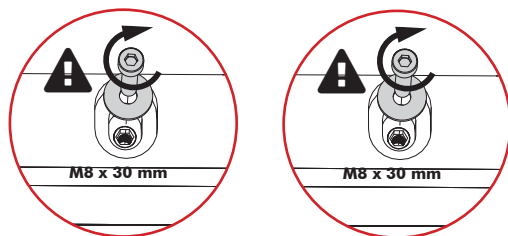  

8x



M8 x 50 mm



Yellow

2x

 


M8 x 30 mm





Red

11

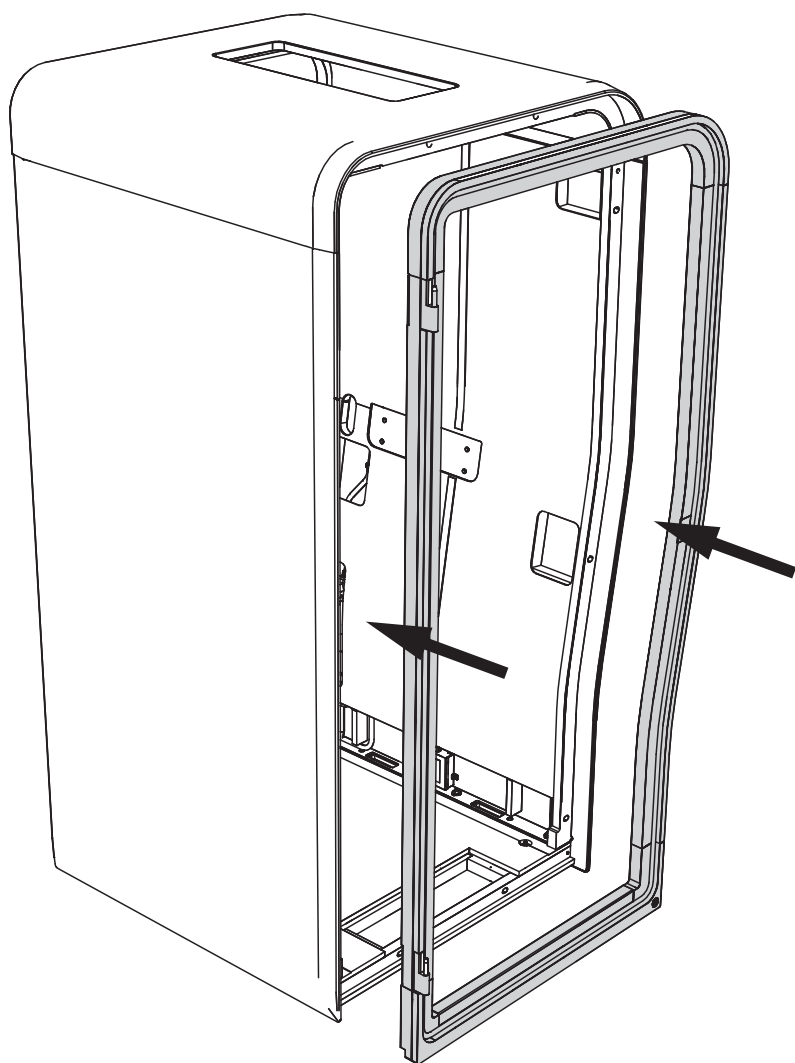

# 12

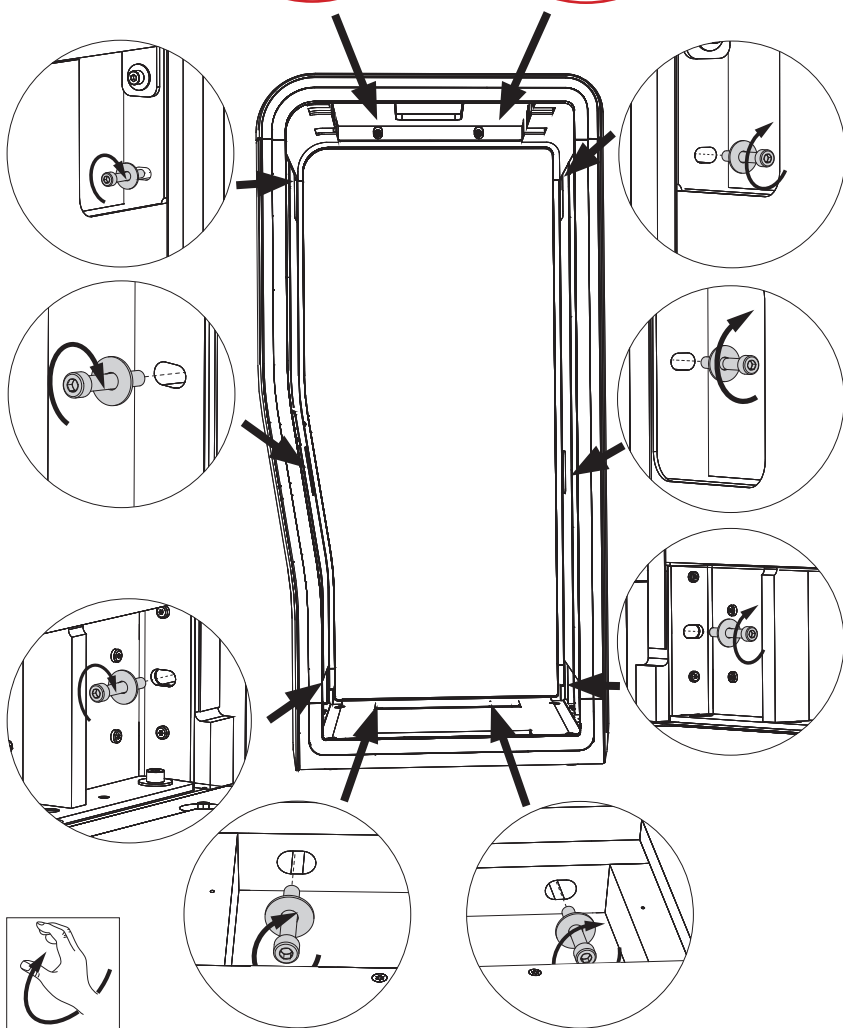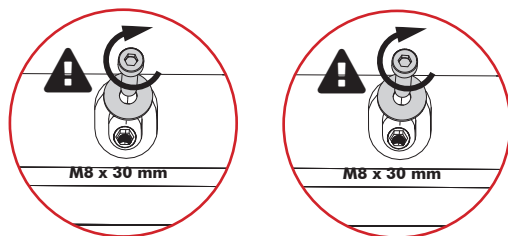  

8x



M8 x 50 mm



Yellow

2x






M8 x 30 mm




Red


**13**

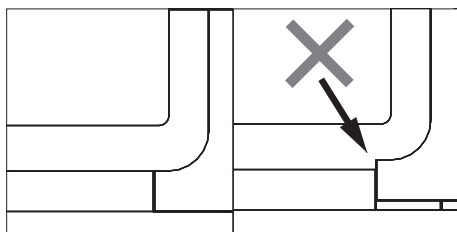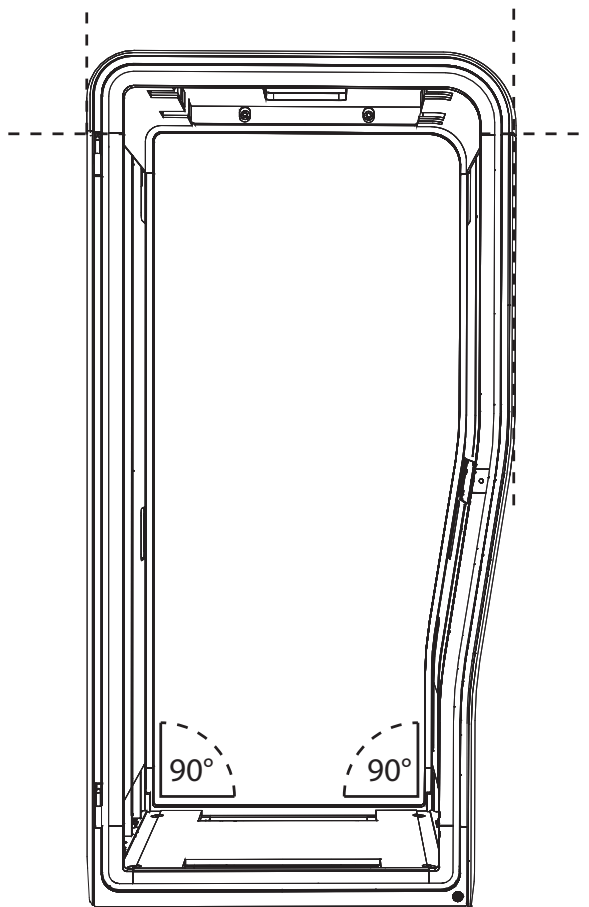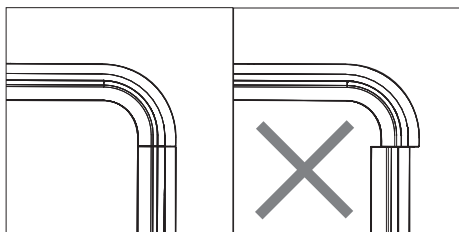   





14

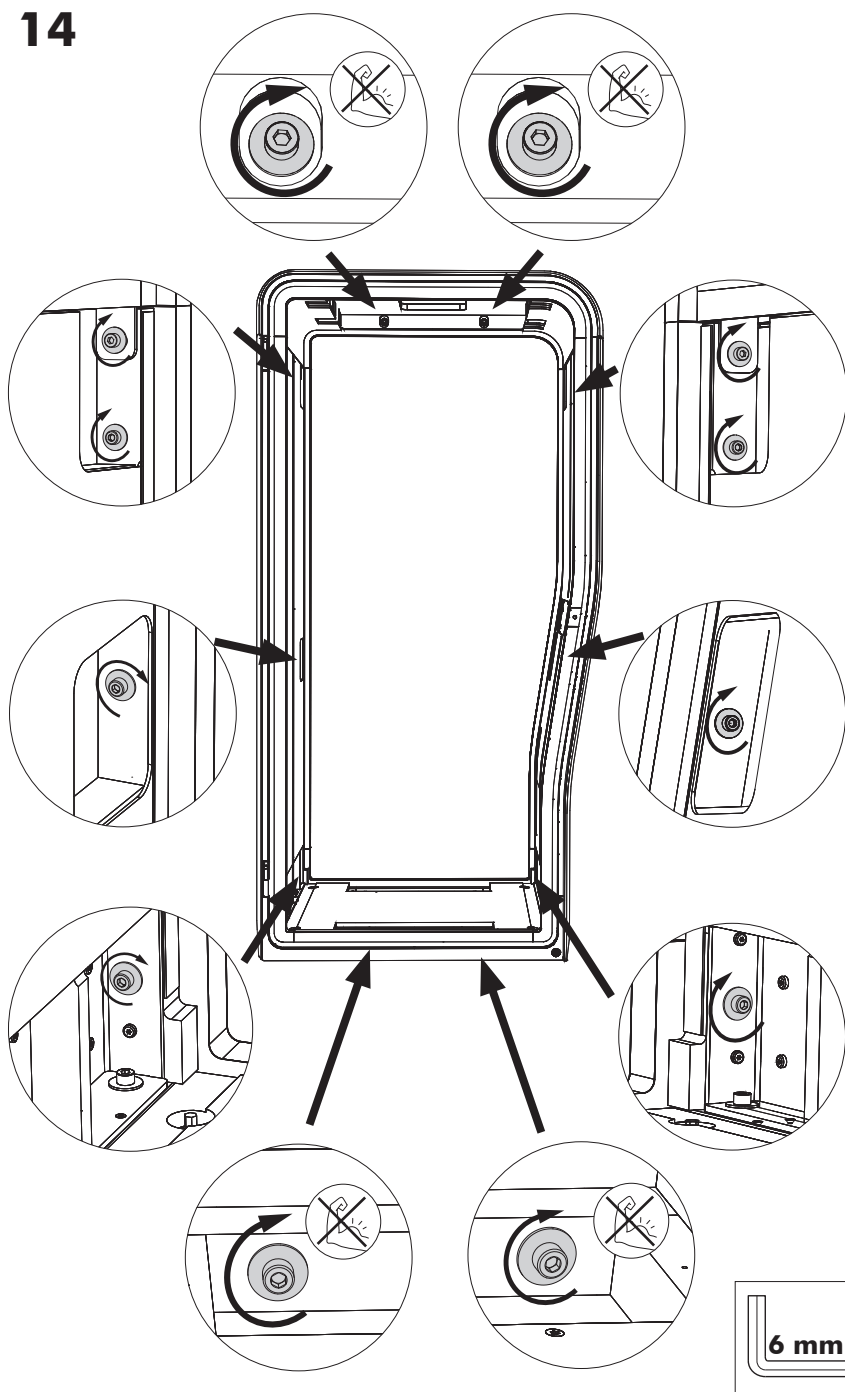 


15

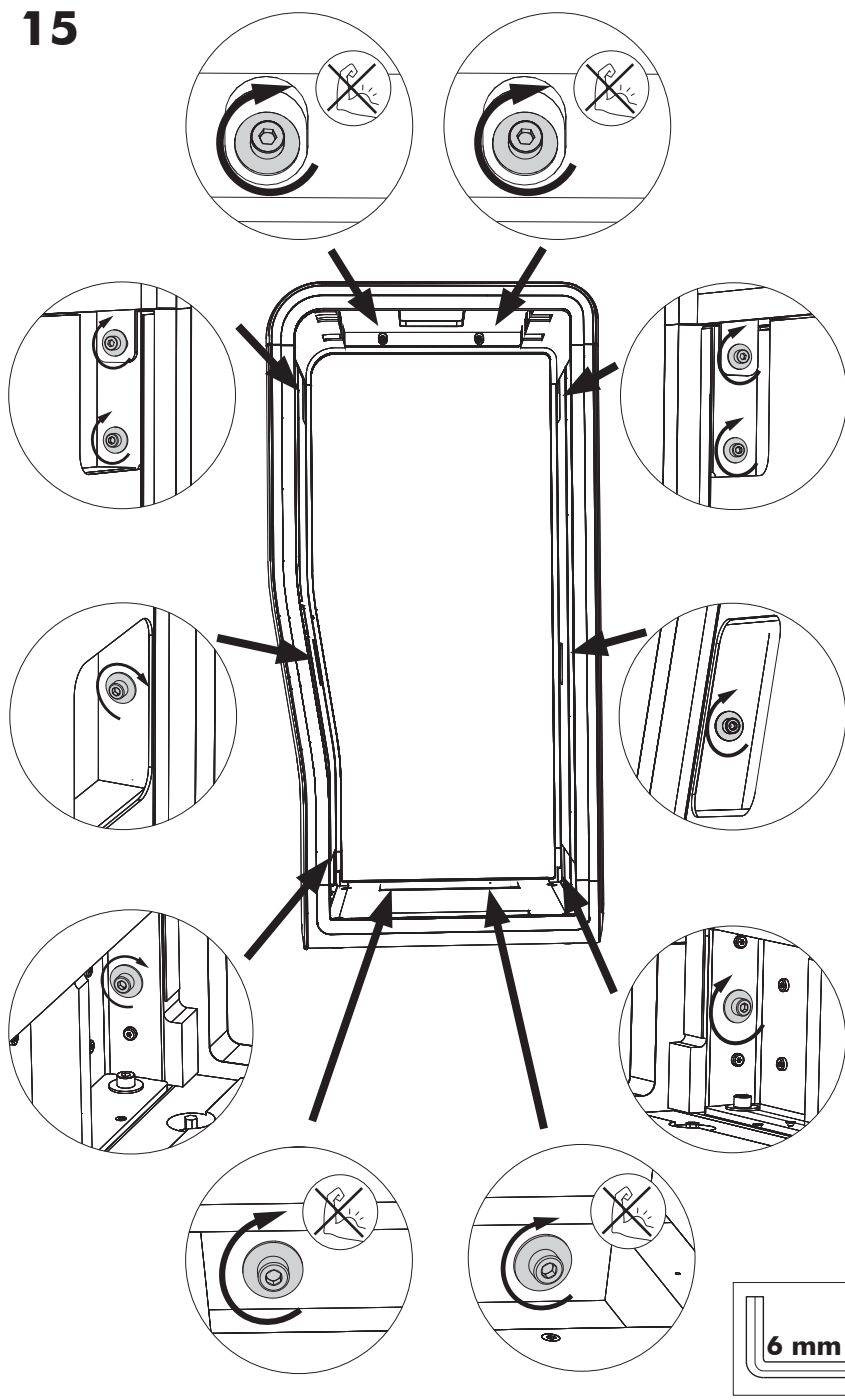 


16

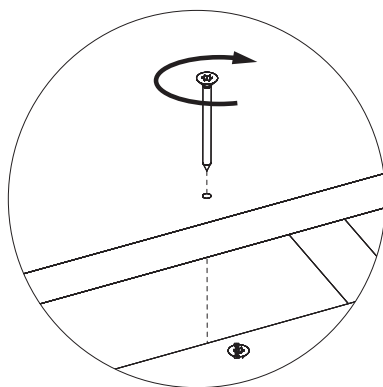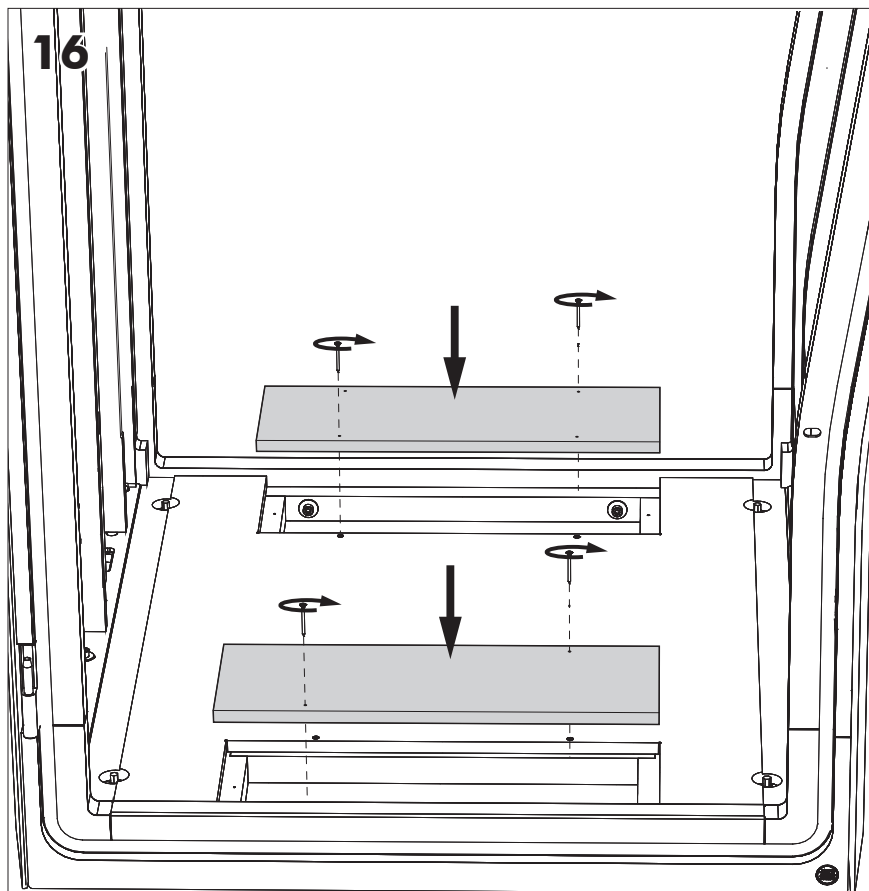    




# 17

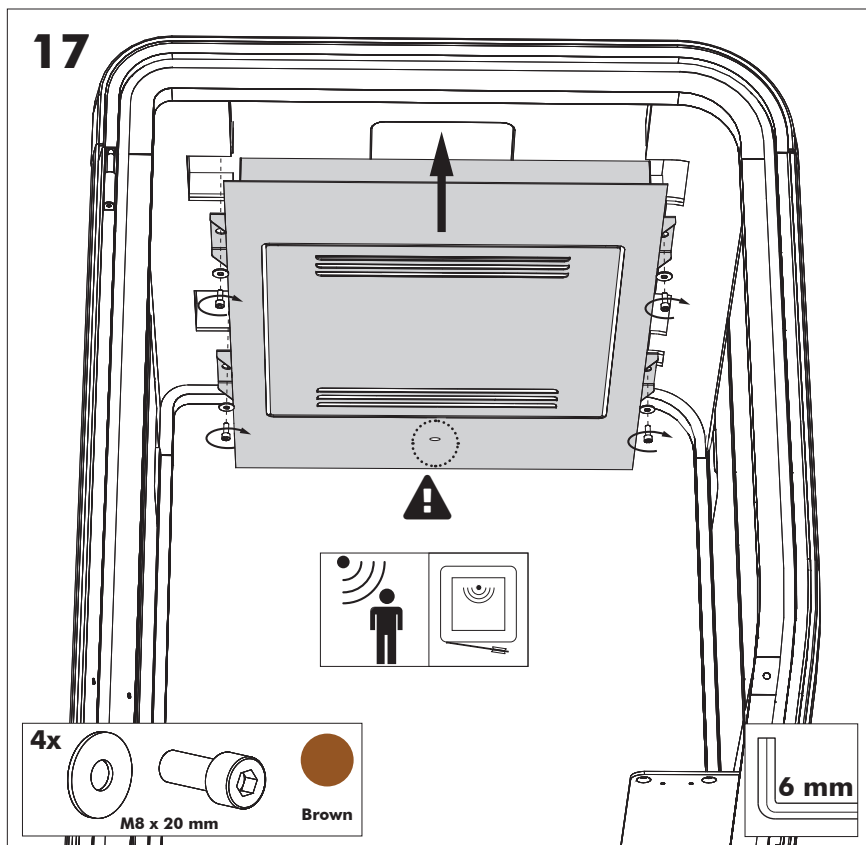 




# 18

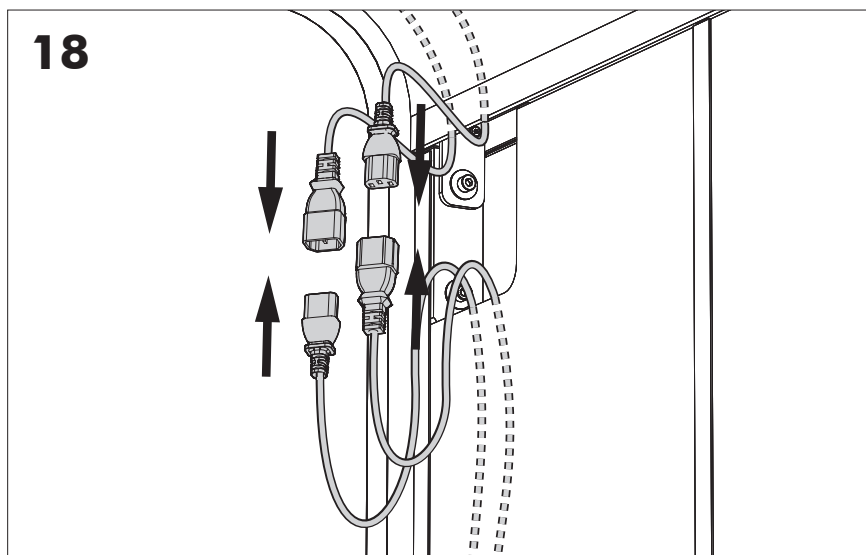 


**19**

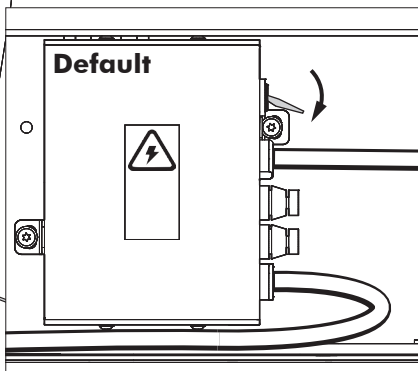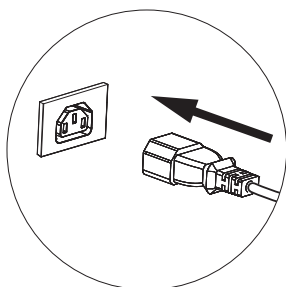  
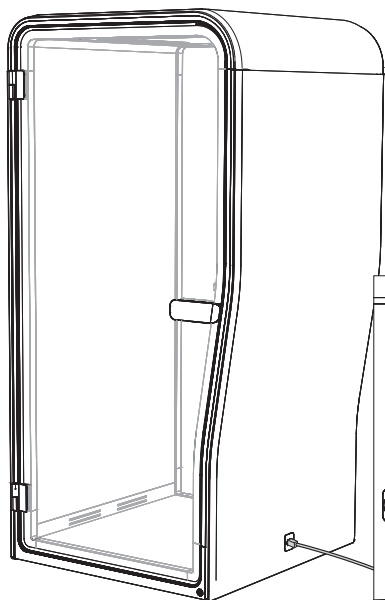 


**19 Optional**

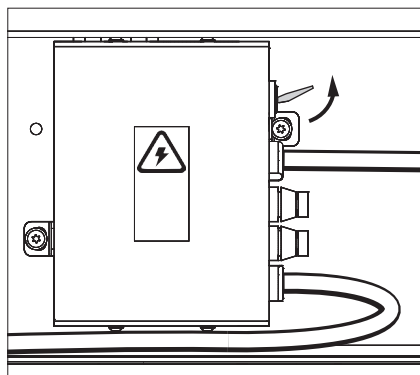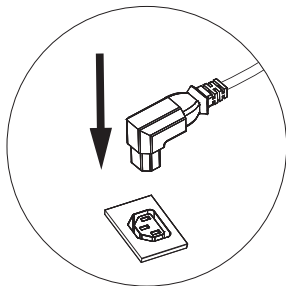  
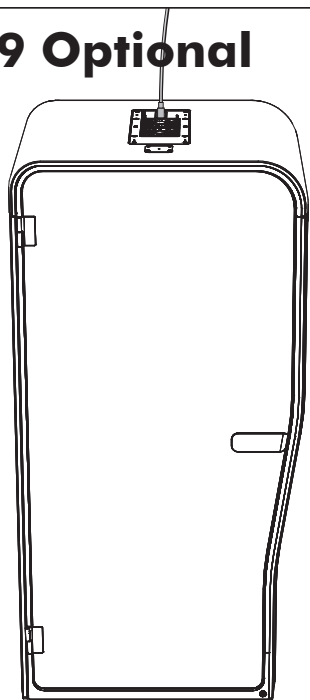 


20


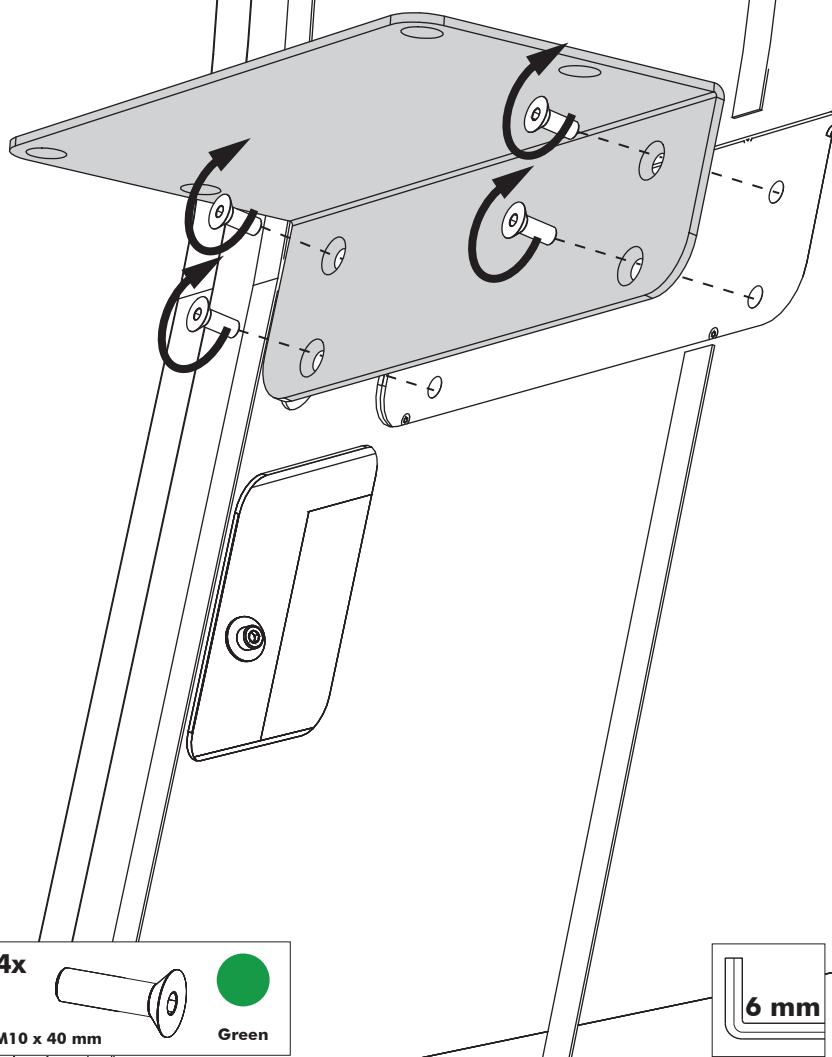 


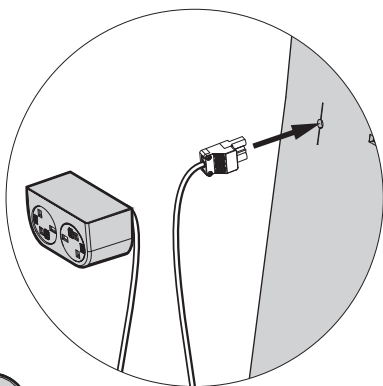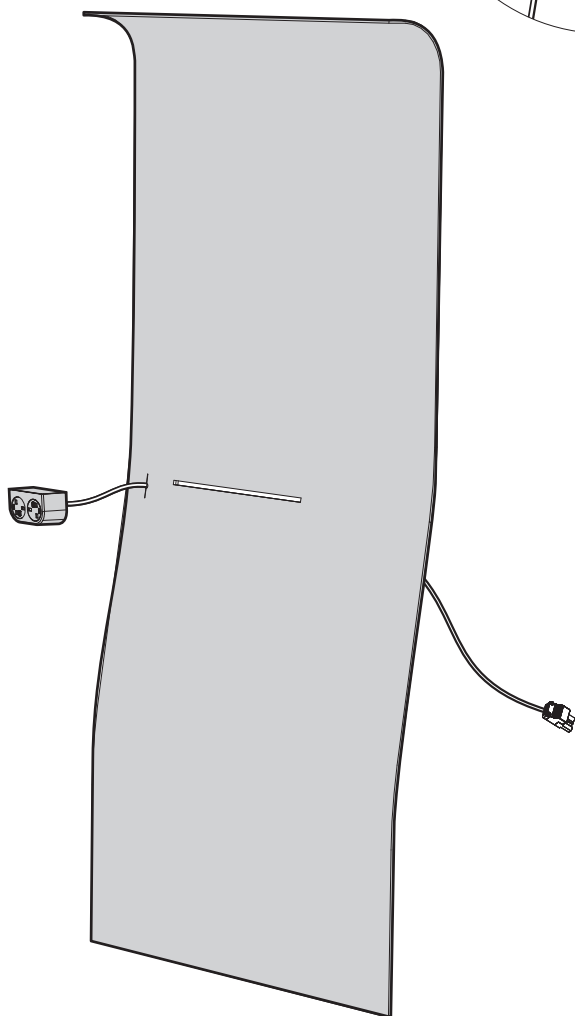  


**22**

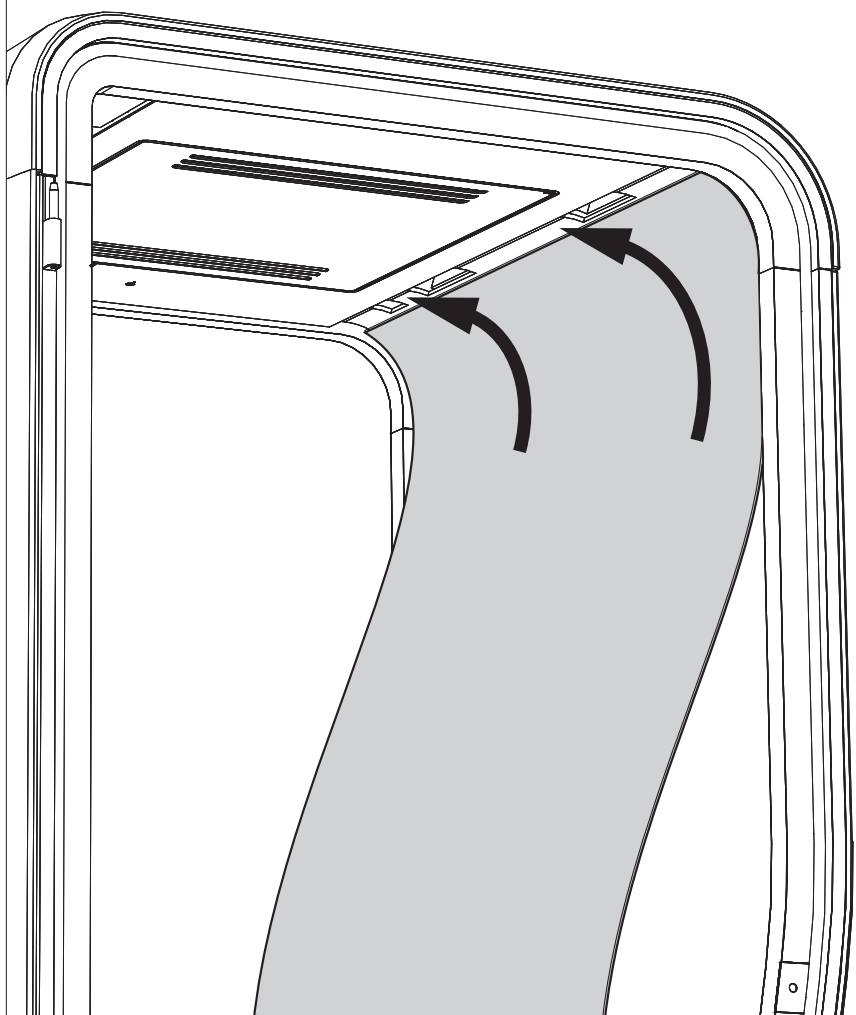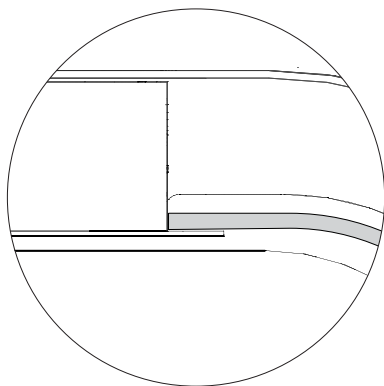  


**23**

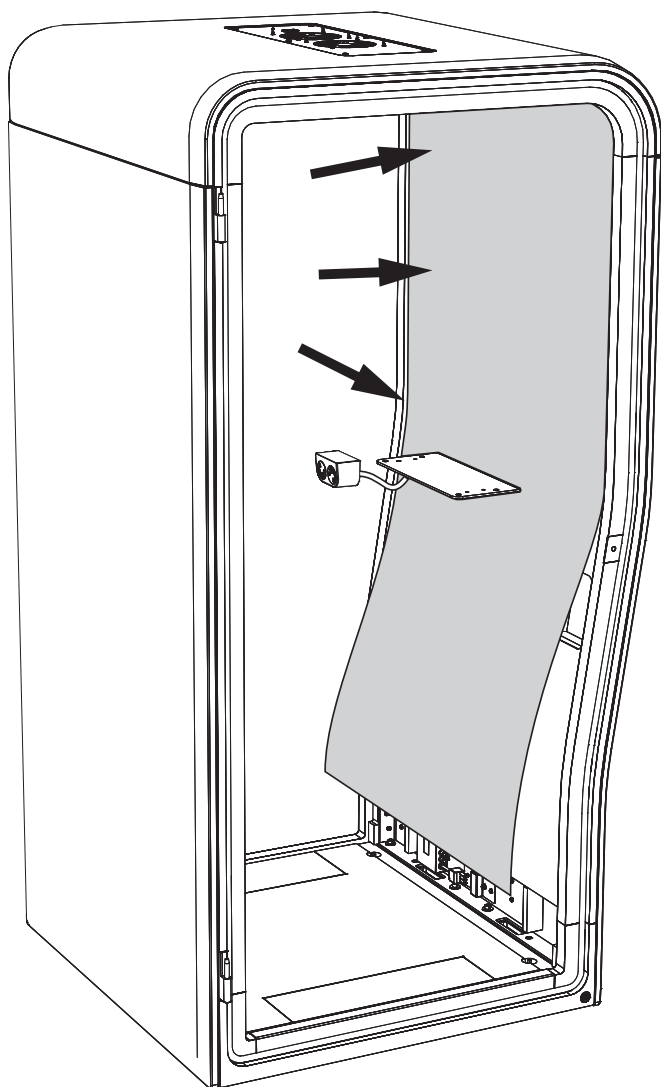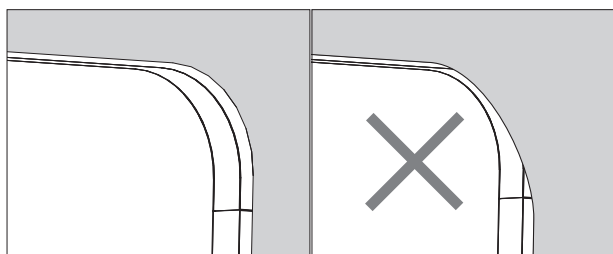  


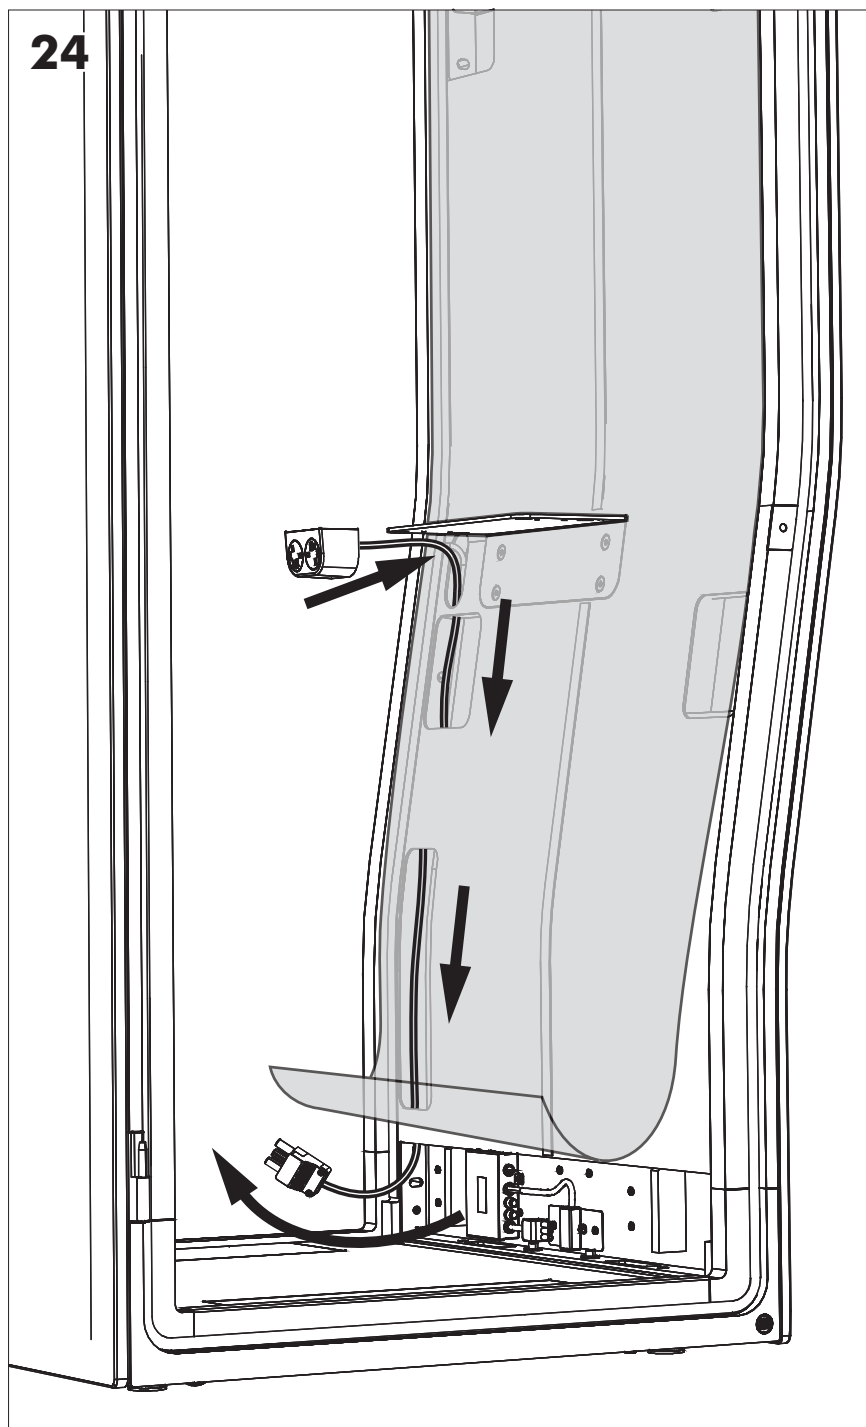 


**! Only for 3D Rib Panel**

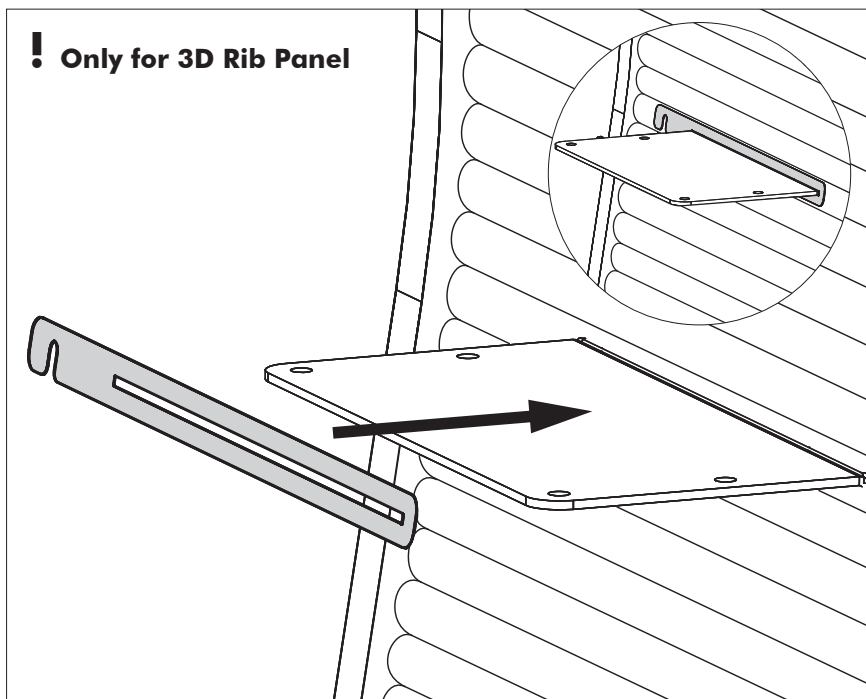 


**25**

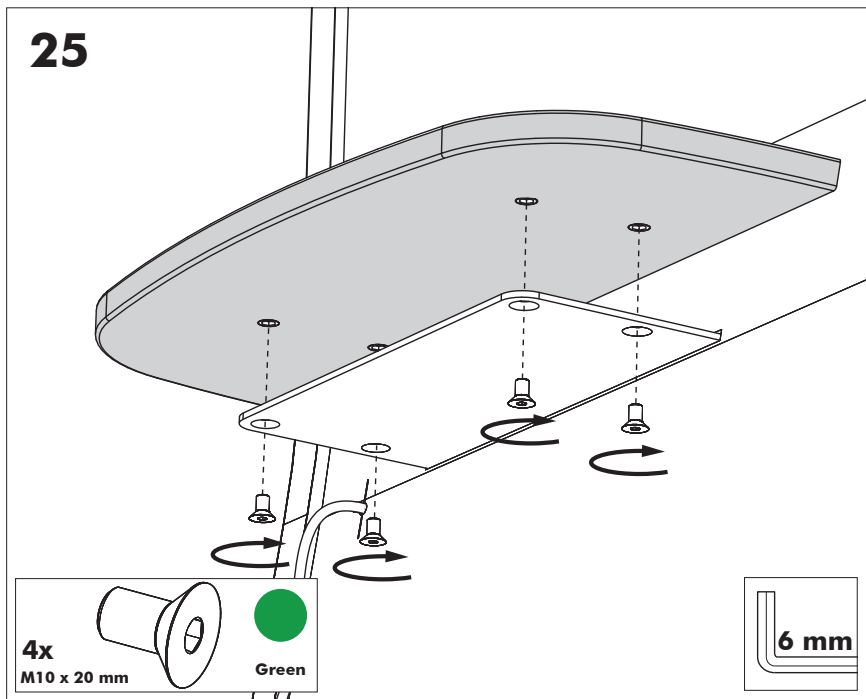 


**26**

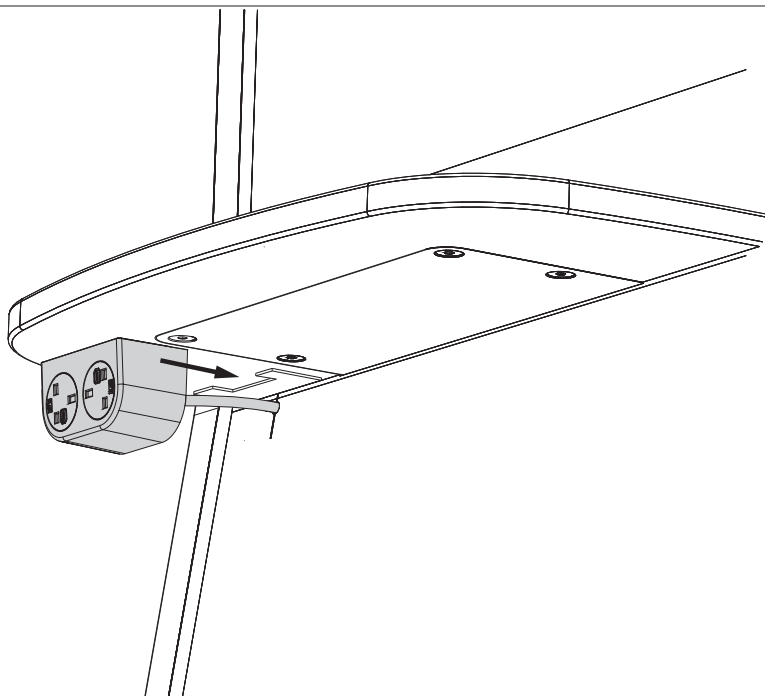 


**27**

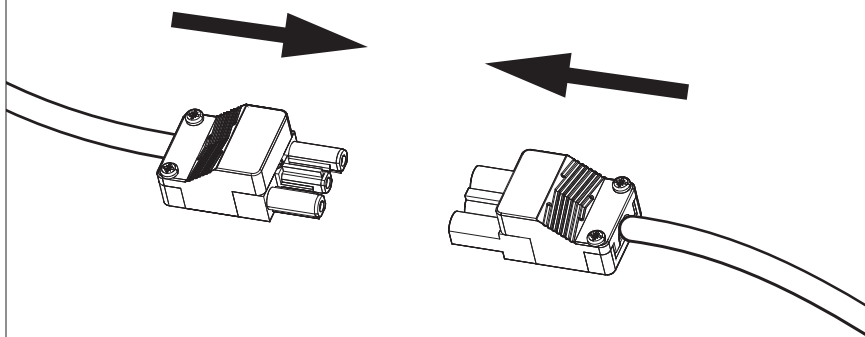 




**28**

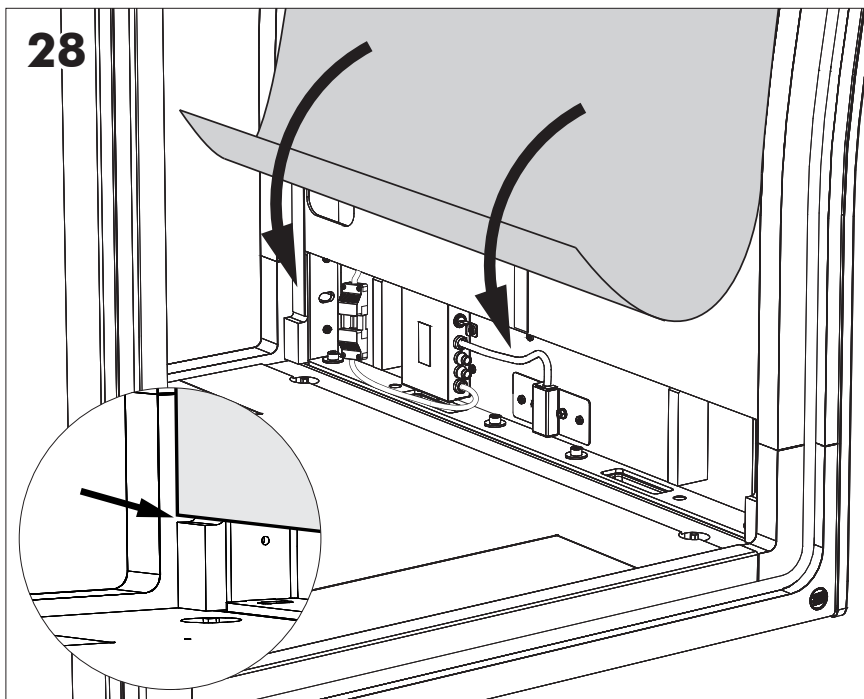 


**29**

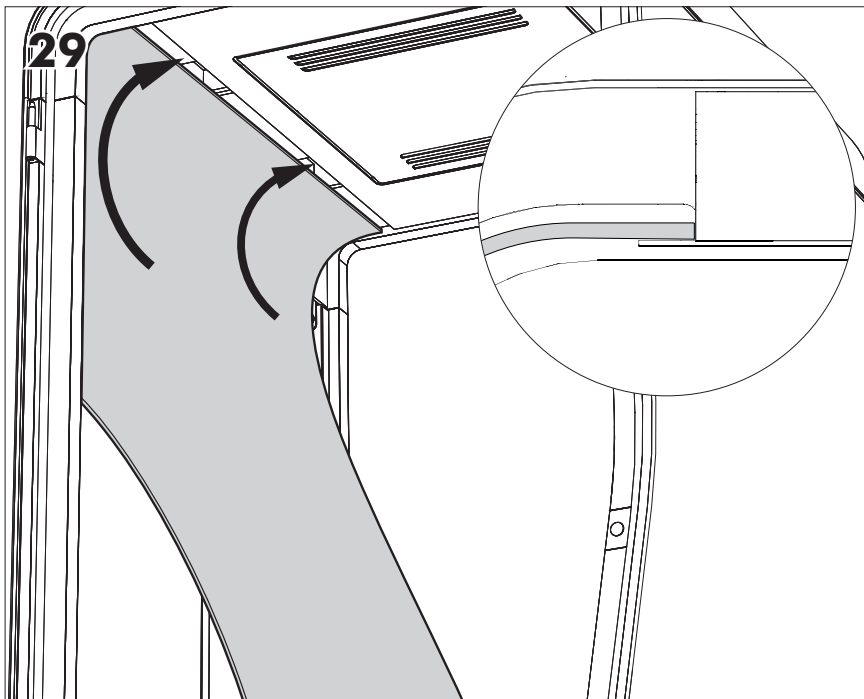 


**30**

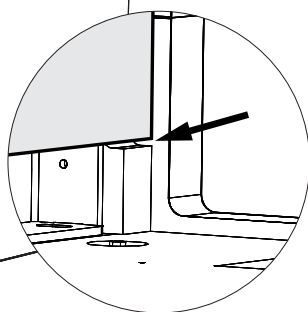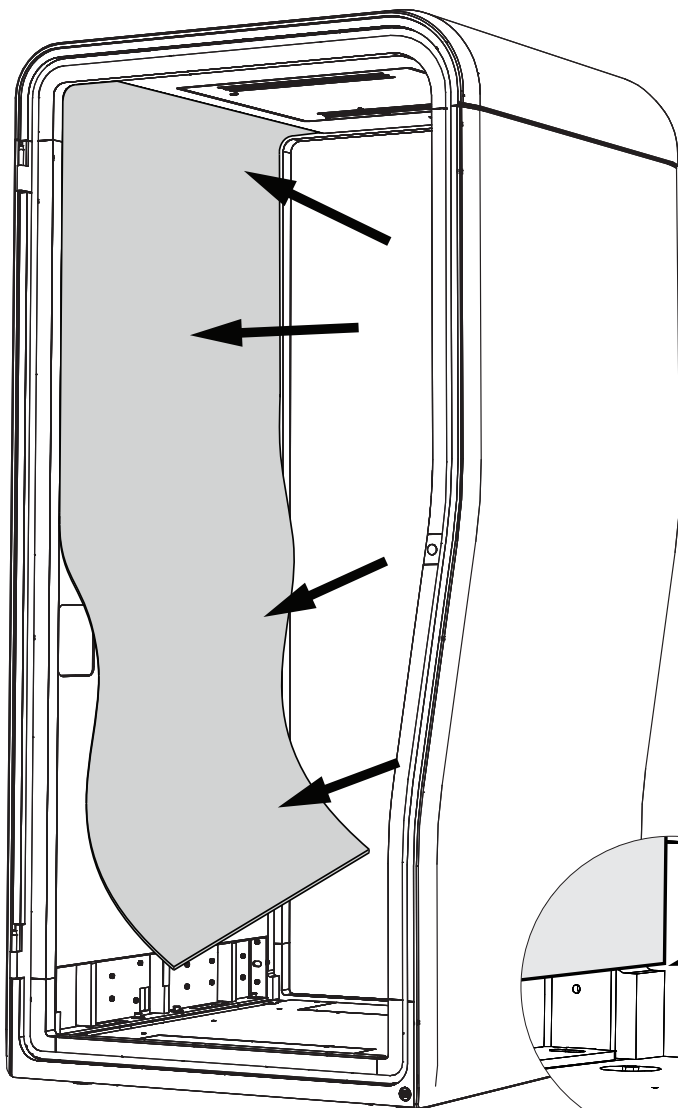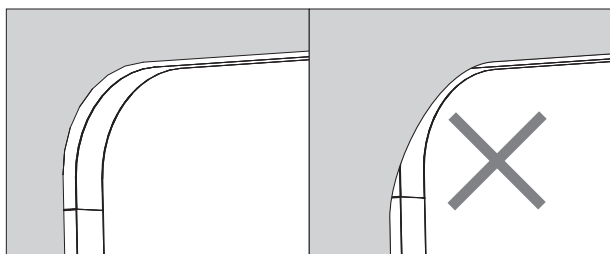   

**31**

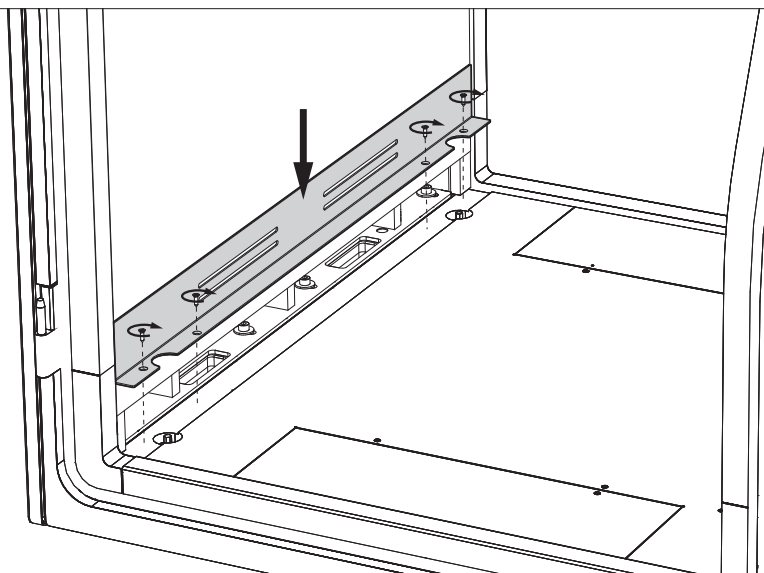 


**4x**

 

**Orange**


**5 mm**

 **32**

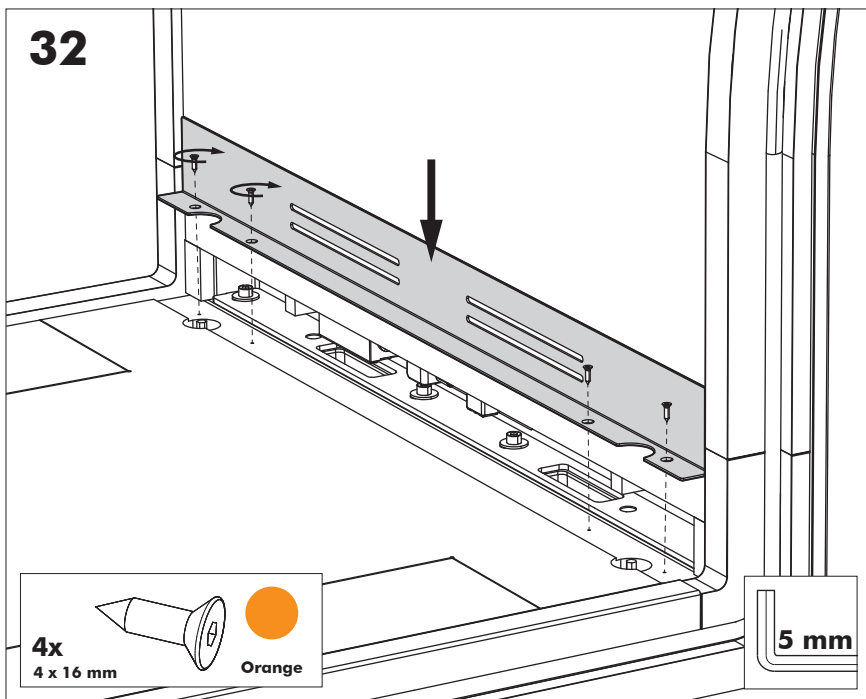

**4x**

 
**4 x 16 mm**





**Orange**

**5 mm**

 
**33**

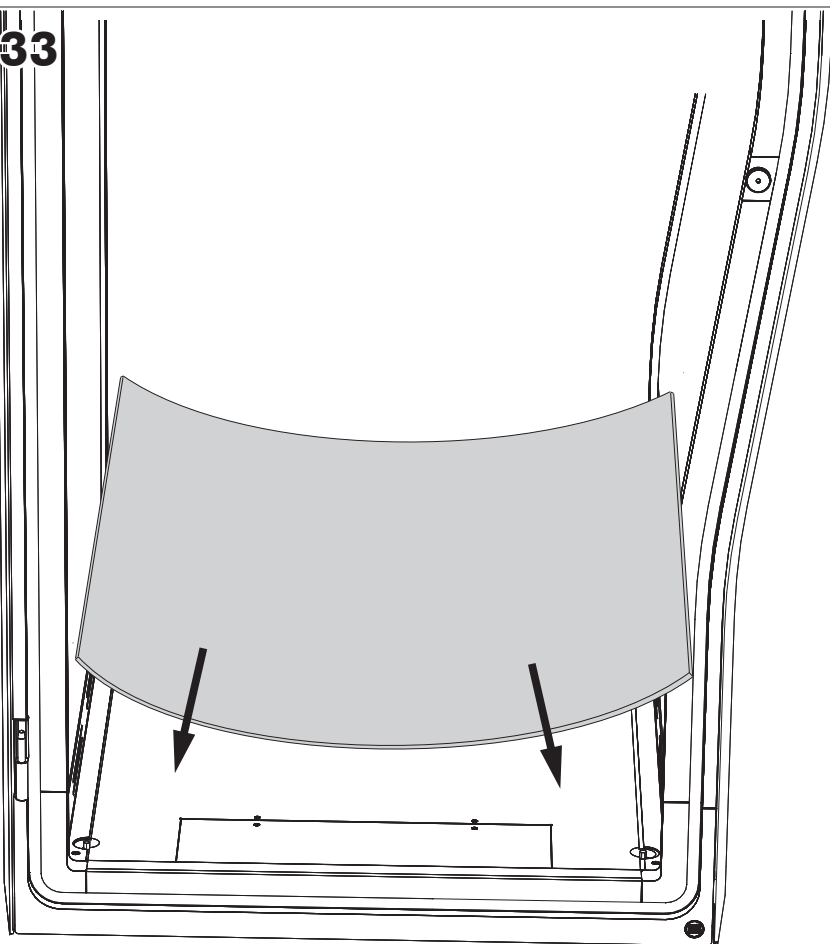


**34** 2 PERS. 

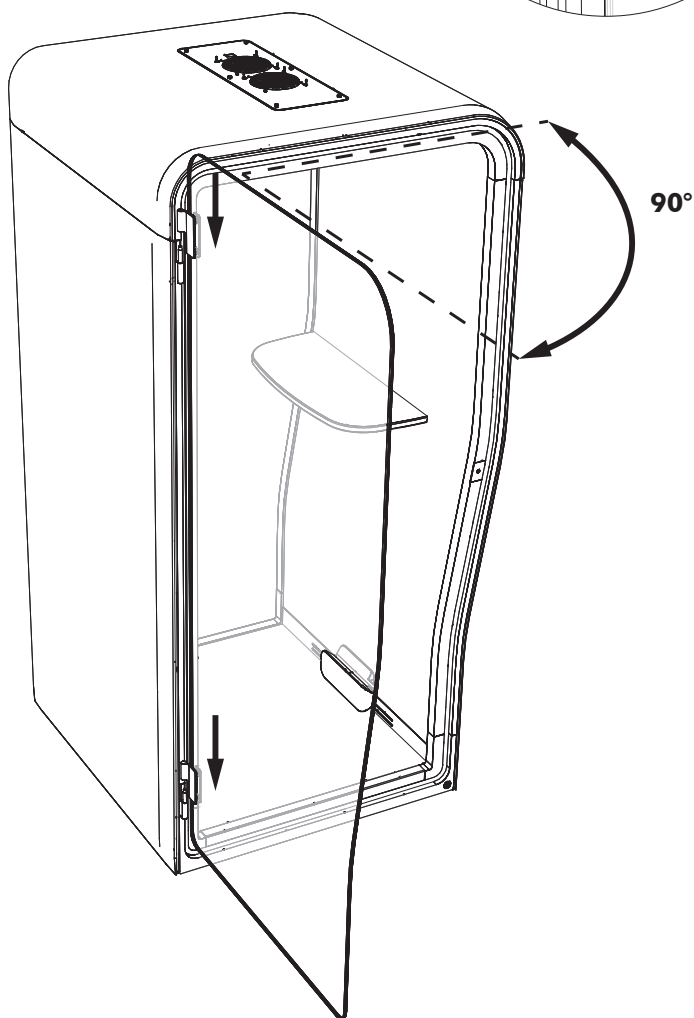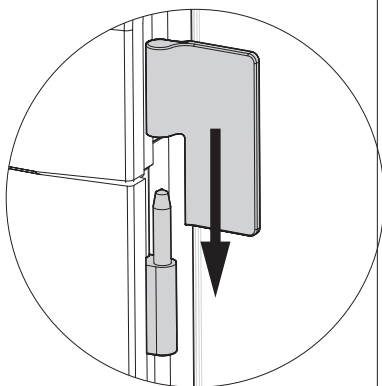  


**35**

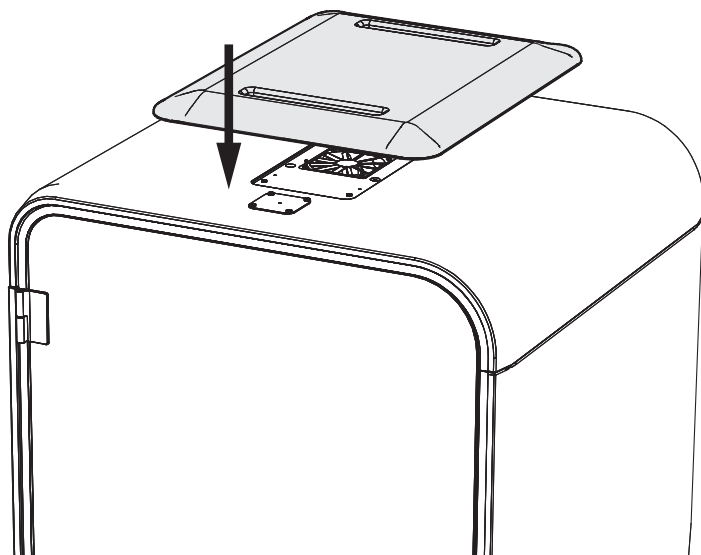 

**36**

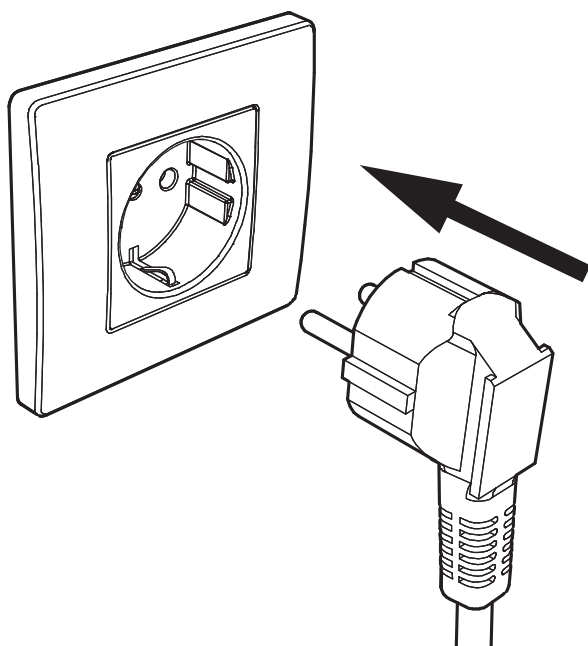 

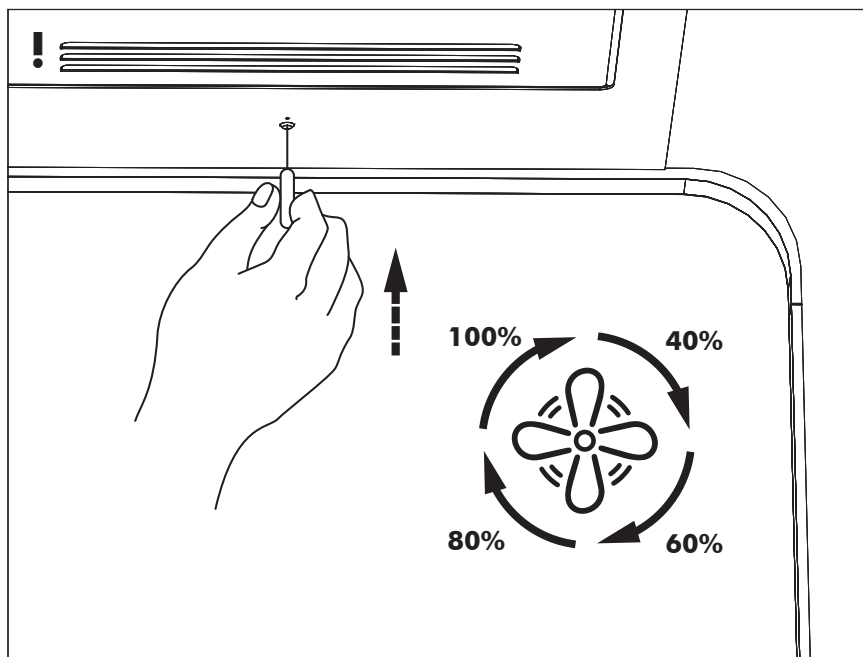 

### **Change the default airflow rate during occupancy:**

Press the button underneath the discrete hole next to the PIR motion detector using a pin to cycle through the various fan settings.

The LED Lighting blinks briefly when changing to a next setting.  
The LED Lighting blinks twice when reaching the 40% setting.

### **Fan Settings**

 
100%: 31 l/sec

80%: 25 l/sec


60%: 20 l/sec (factory setting)

40%: 12 l/sec


## Move Booth

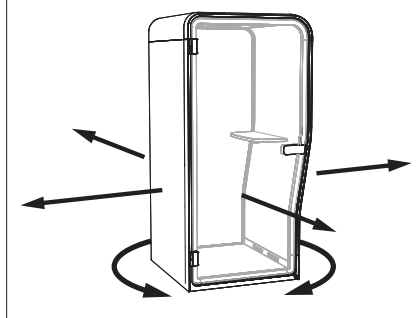


1

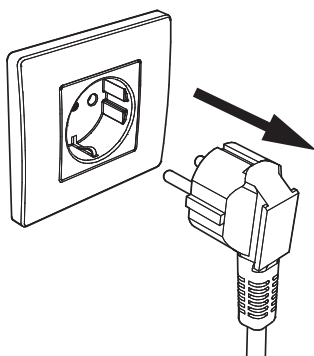 


2

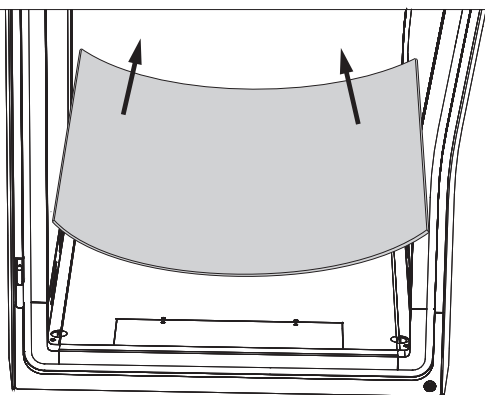 




3

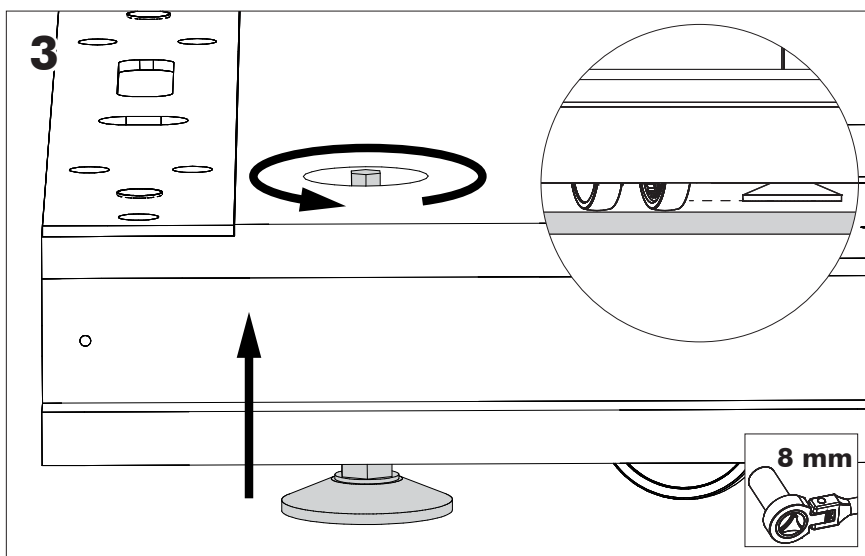 


**4**

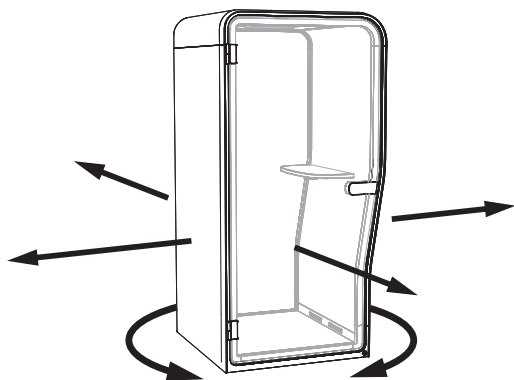 


**5**

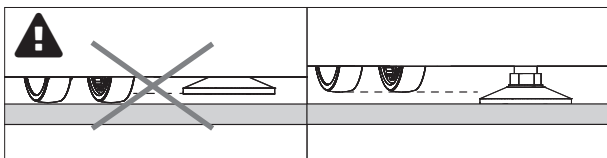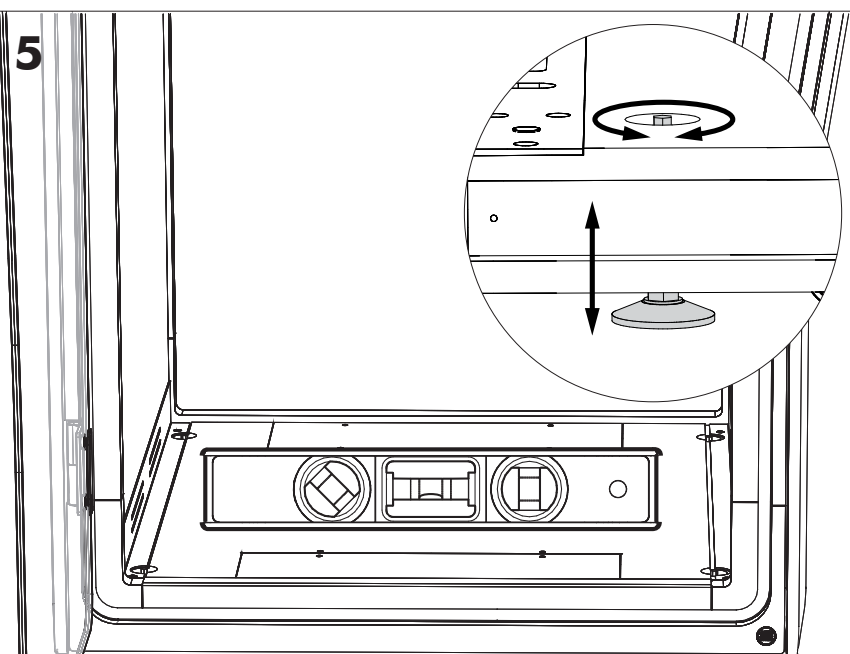   

**6**

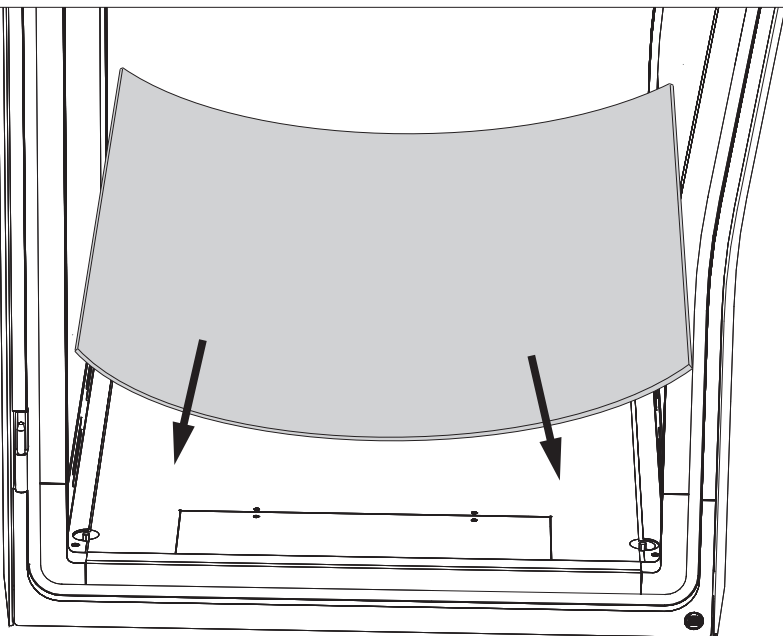 

**7**

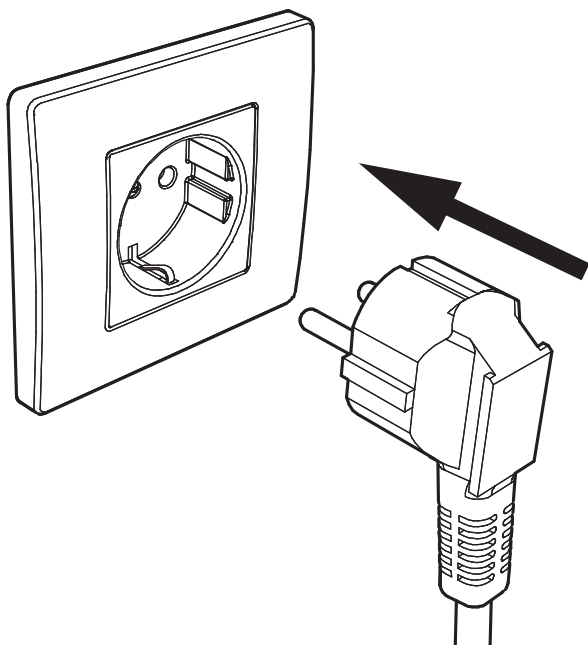 








BuzziSpace Group NV  
Italiëlei 8, 2000 Antwerp  
Belgium

☎ +32 (0)3 846 10 00

✉ [info@buzzi.space](mailto:info@buzzi.space)

 🌐 [www.buzzi.space](http://www.buzzi.space)

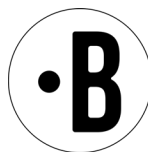

Doc nr.: A-0000007320/05

Last update: 03/10/2024