 


BuzziNest Booth

 
 
INSTALLATION MANUAL
EU

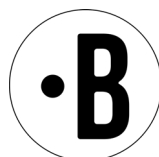






BuzziNest Booth


2 PERS. 

Excluded

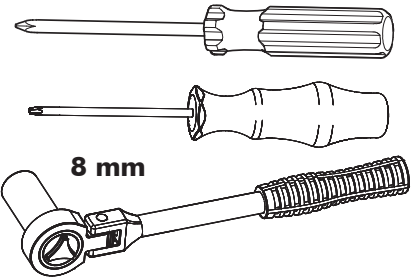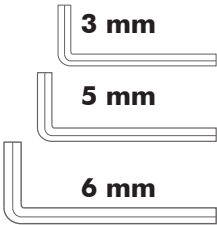




Included

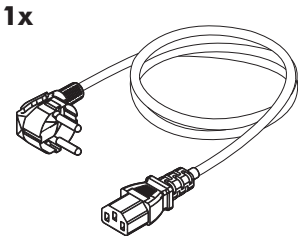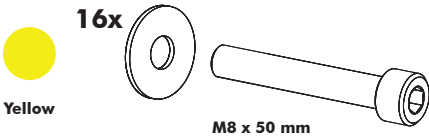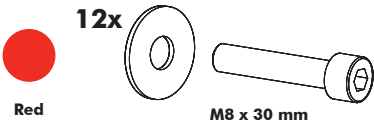     

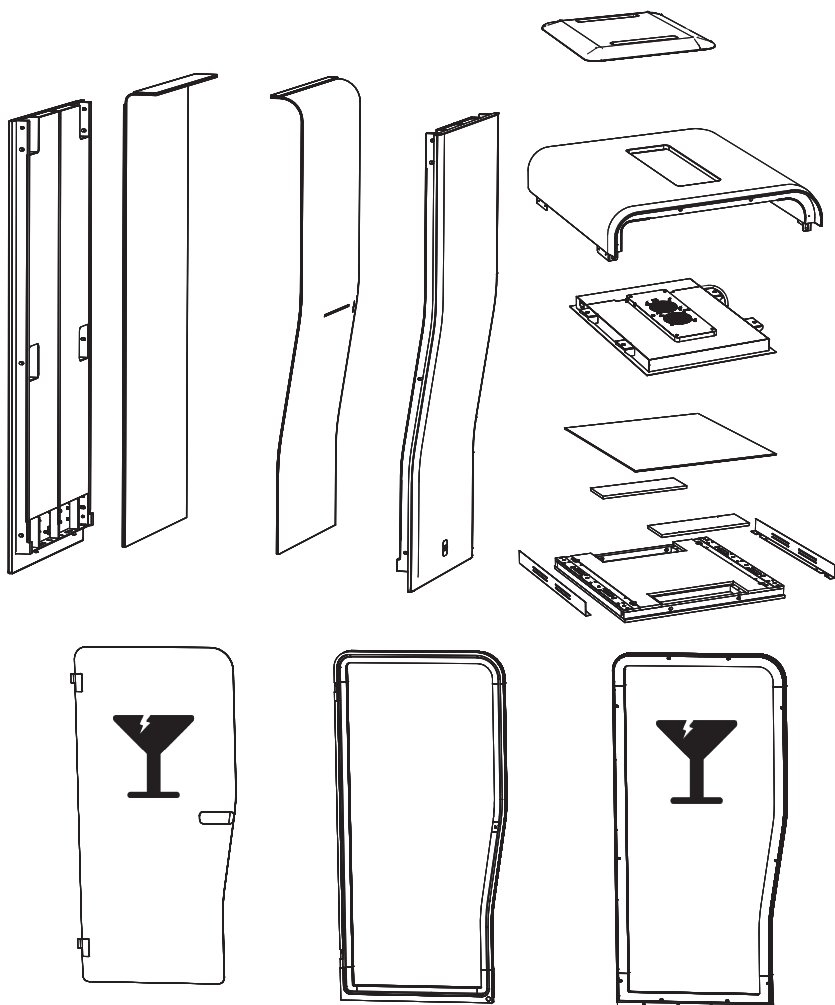 


Optional shelf and electrification

   ⚠ Max 30 kg load on shelf

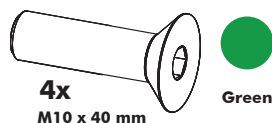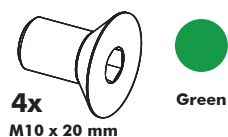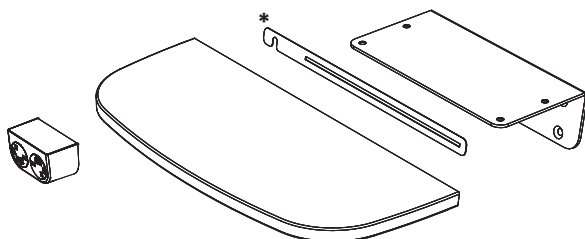


*** Only for 3D Rib panel**





 
1

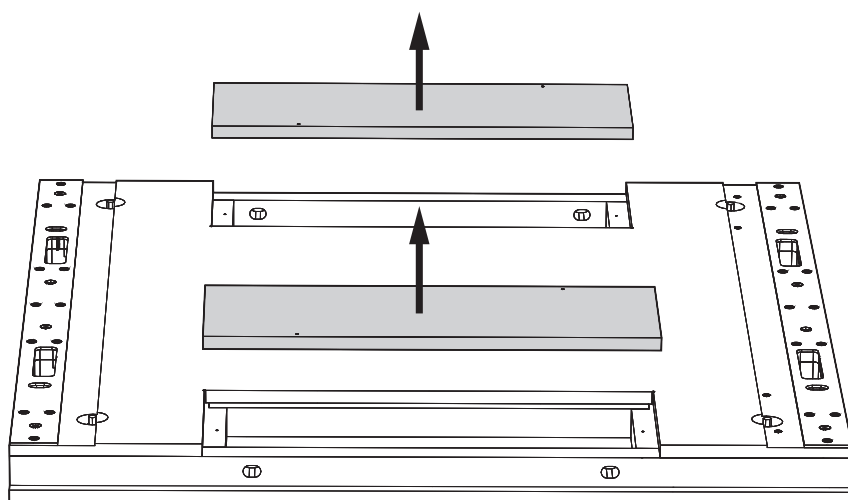




2

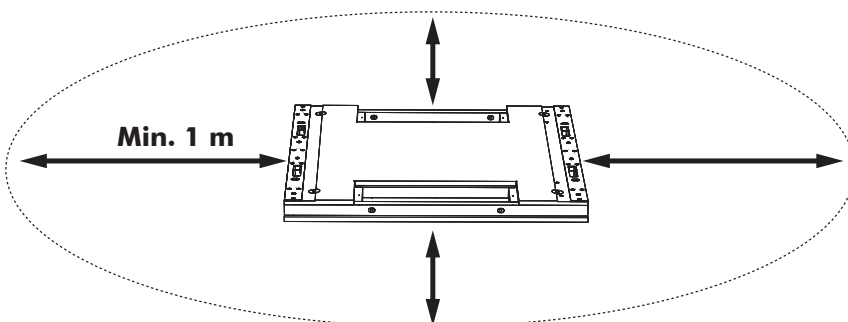 




3

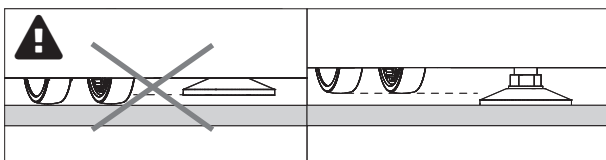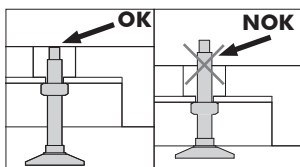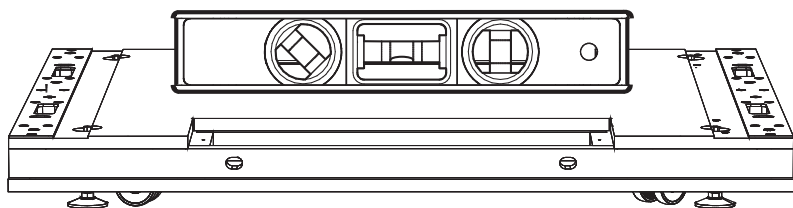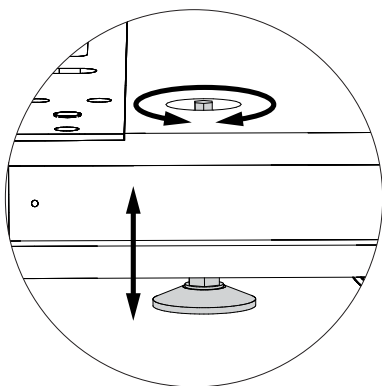     



4

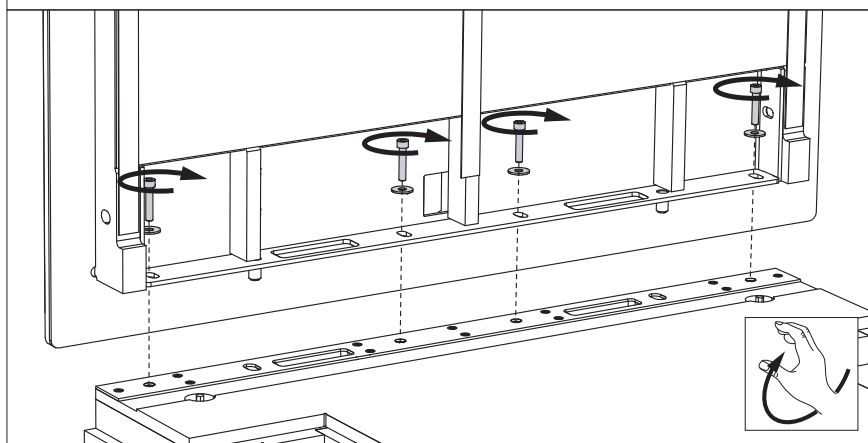  
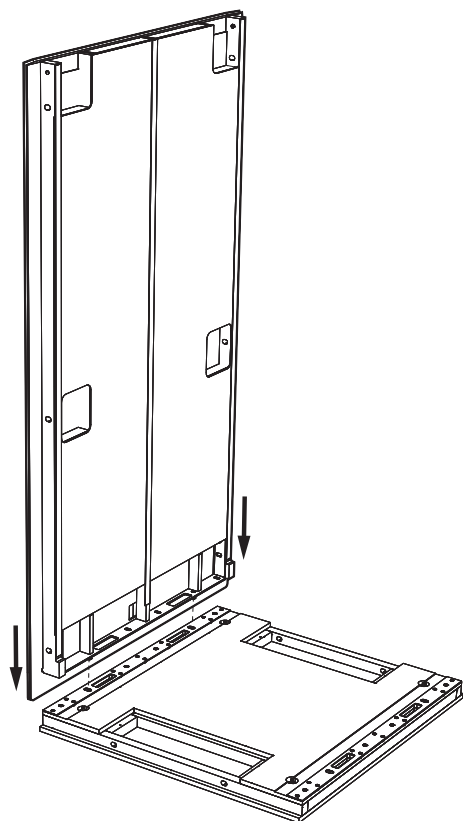 


5

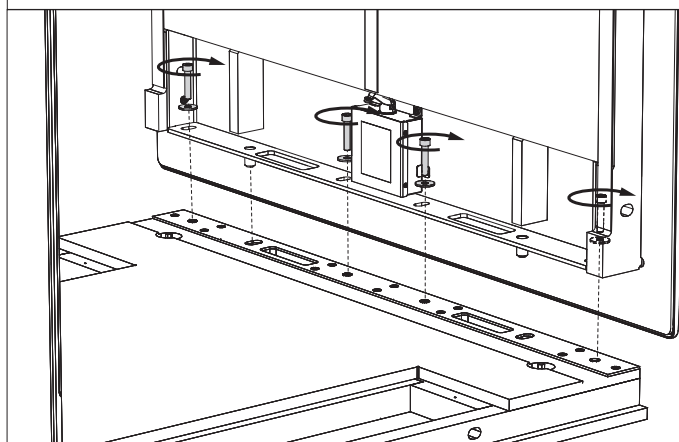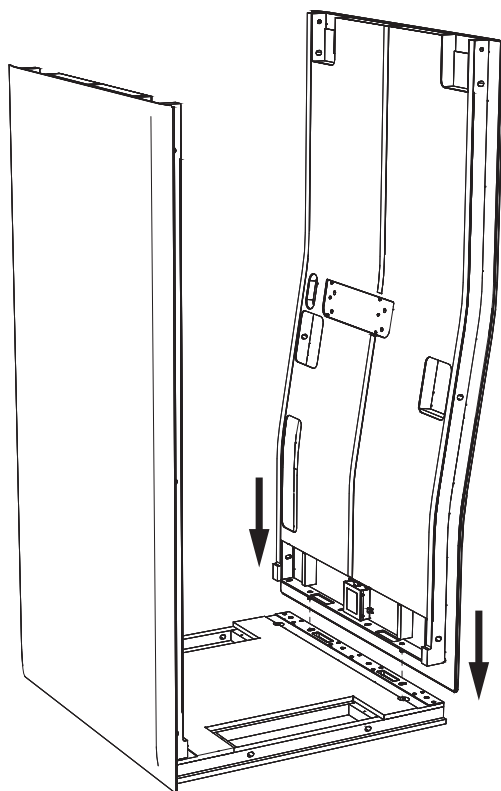   


6



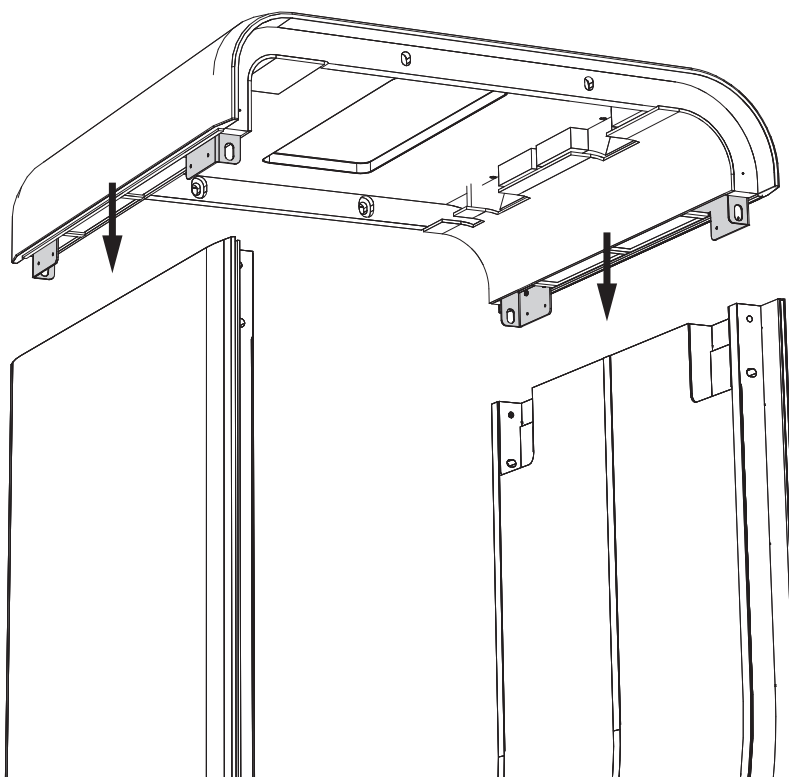 
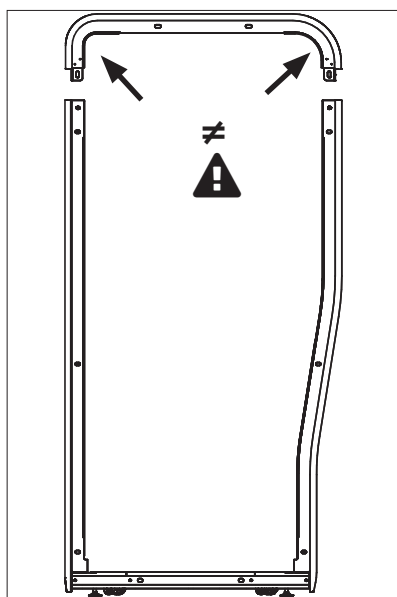 


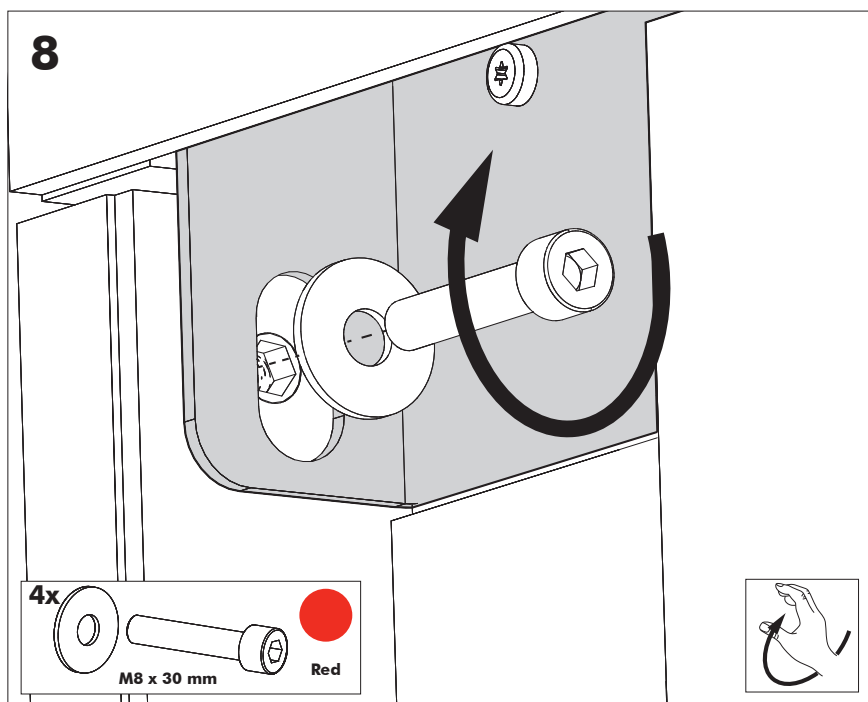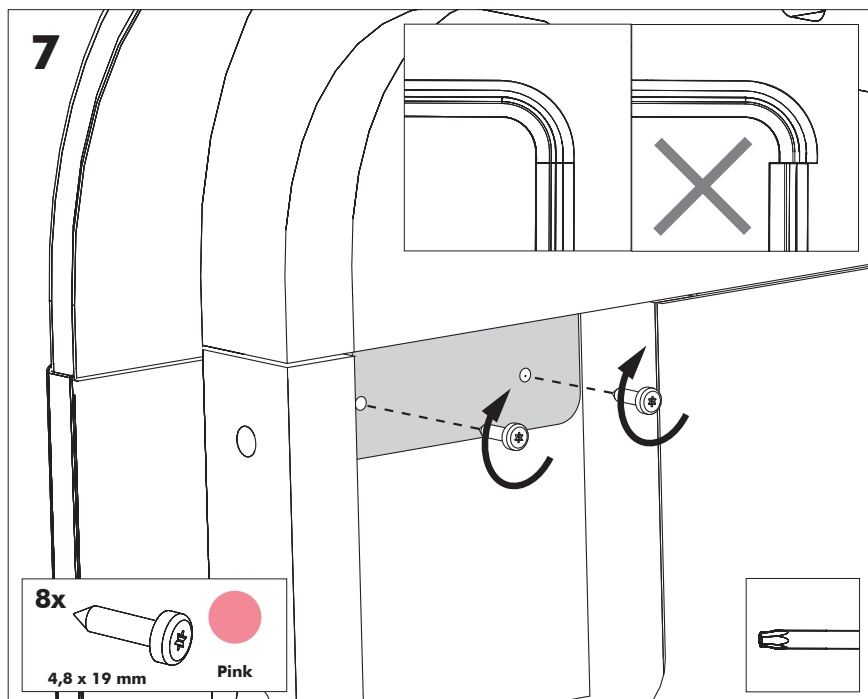  


9

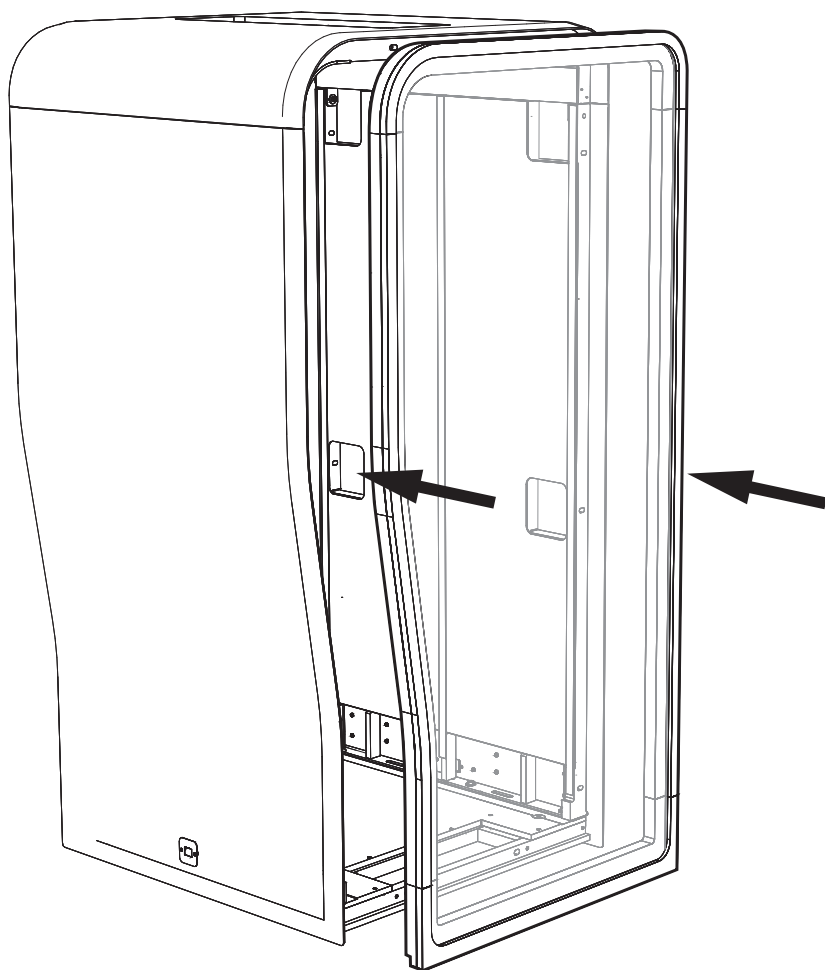 





10

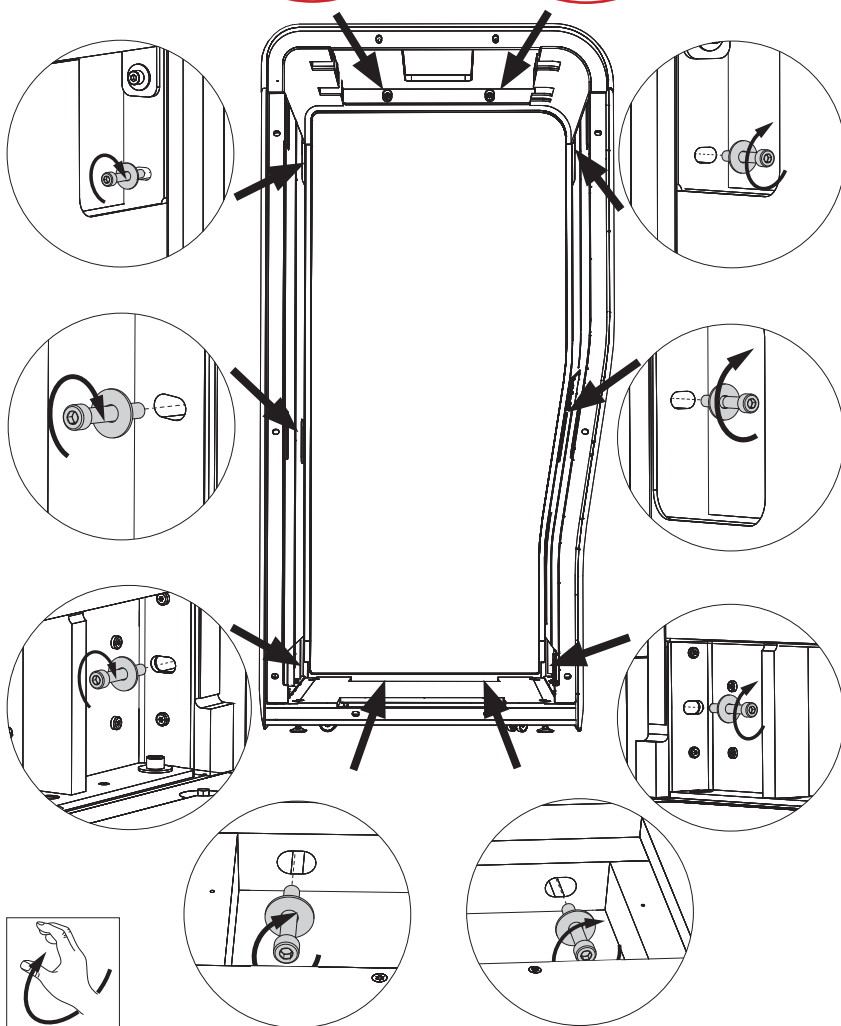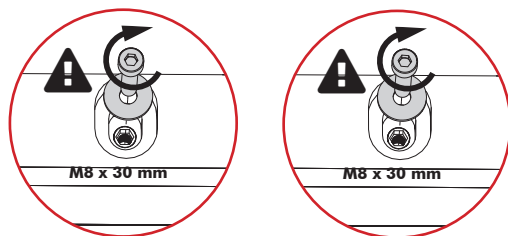    




11

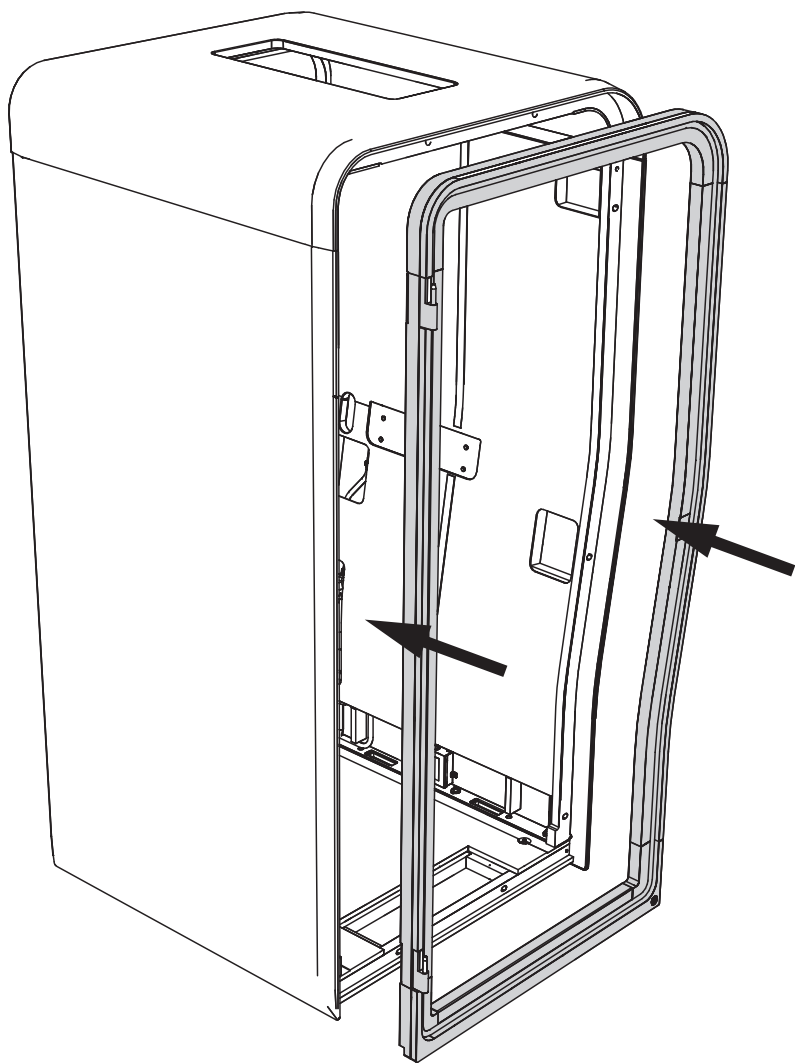 


12

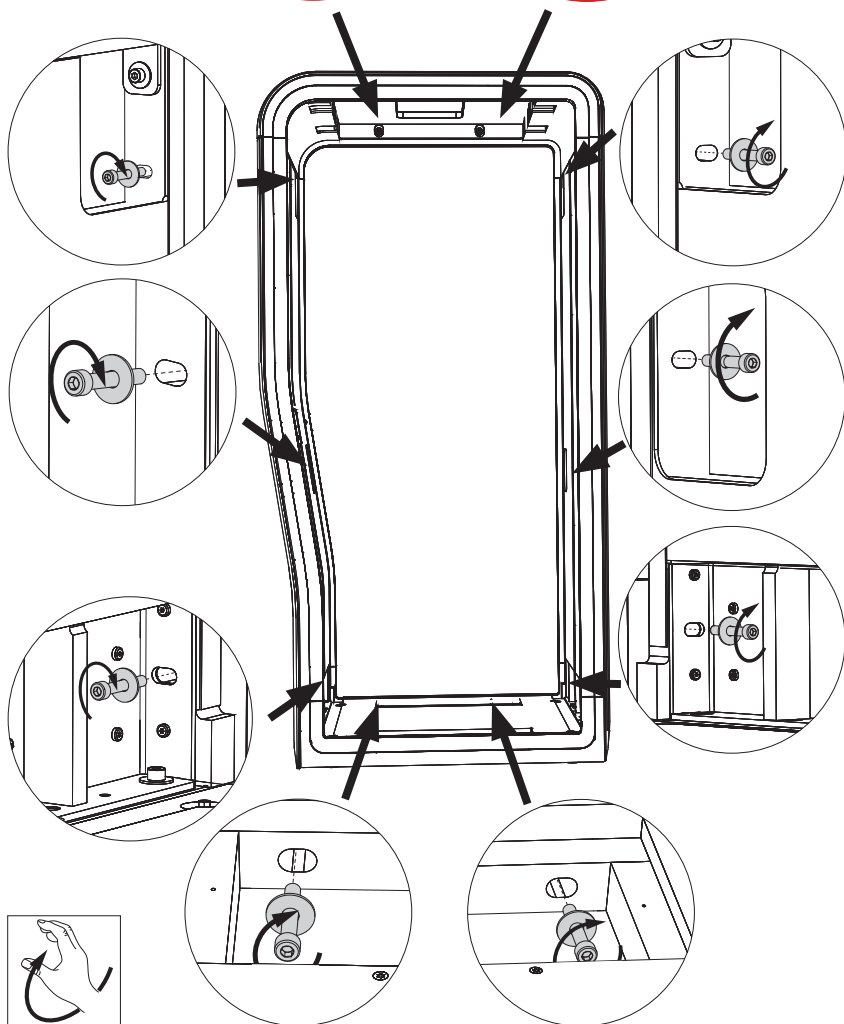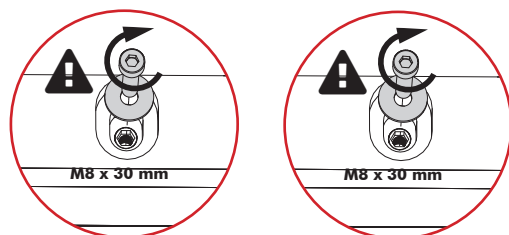    


13

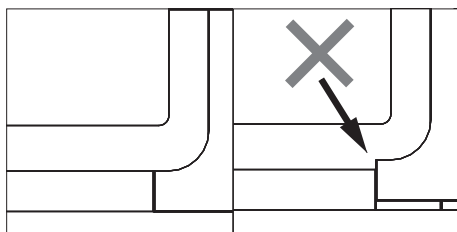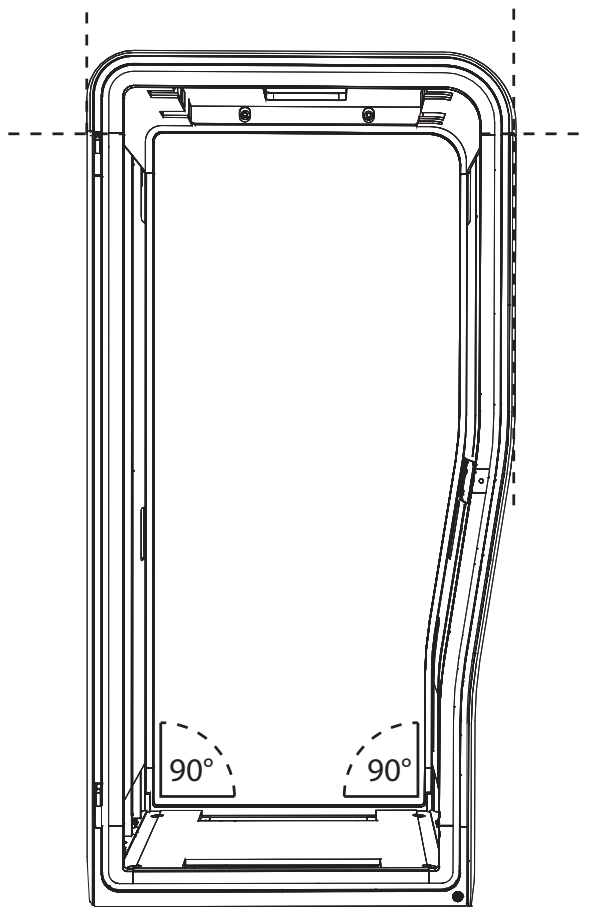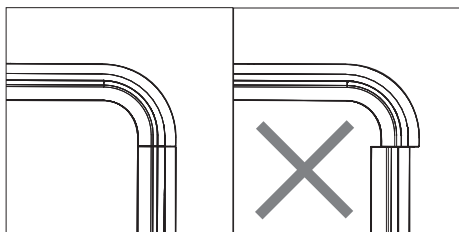   





14

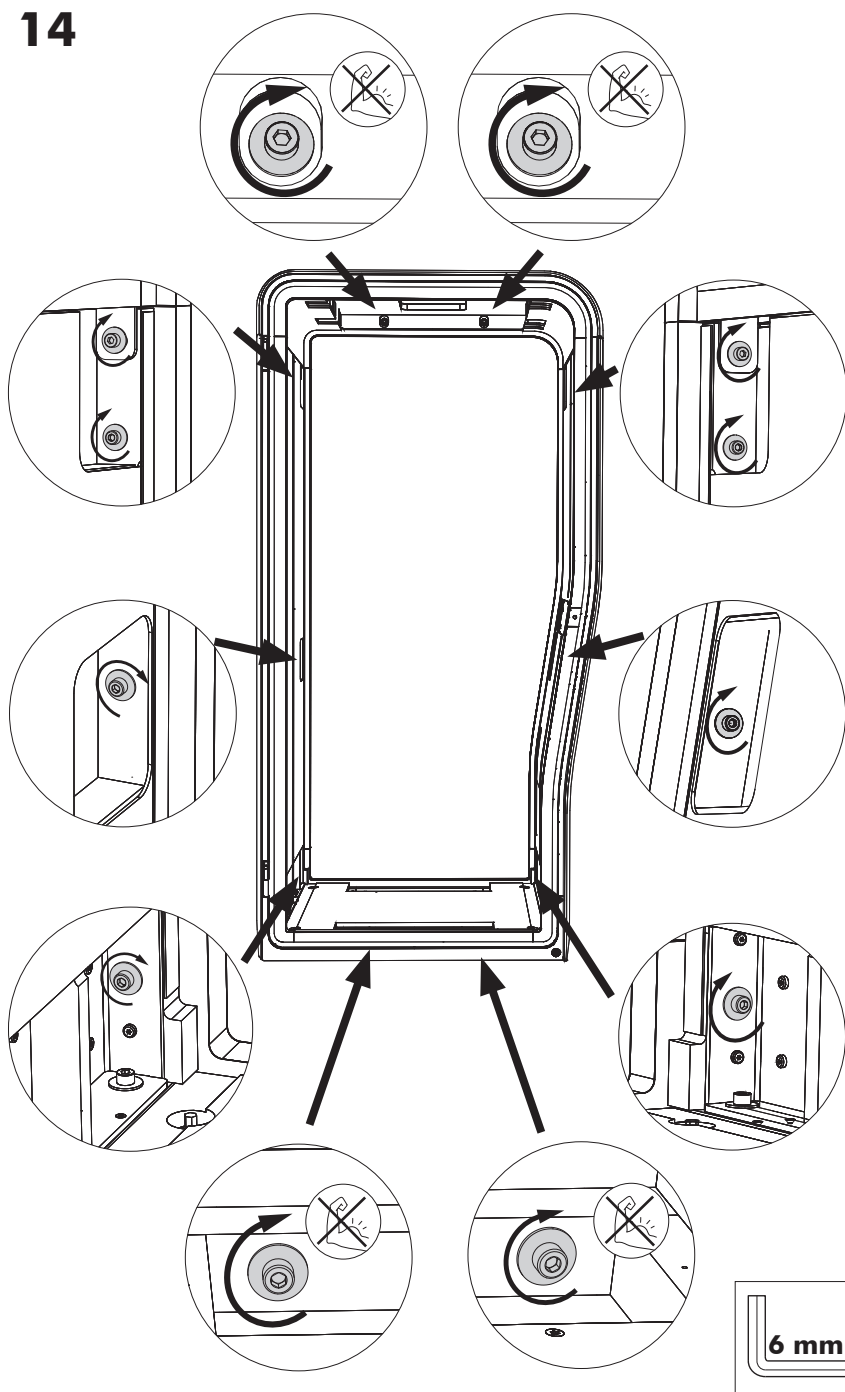 


15

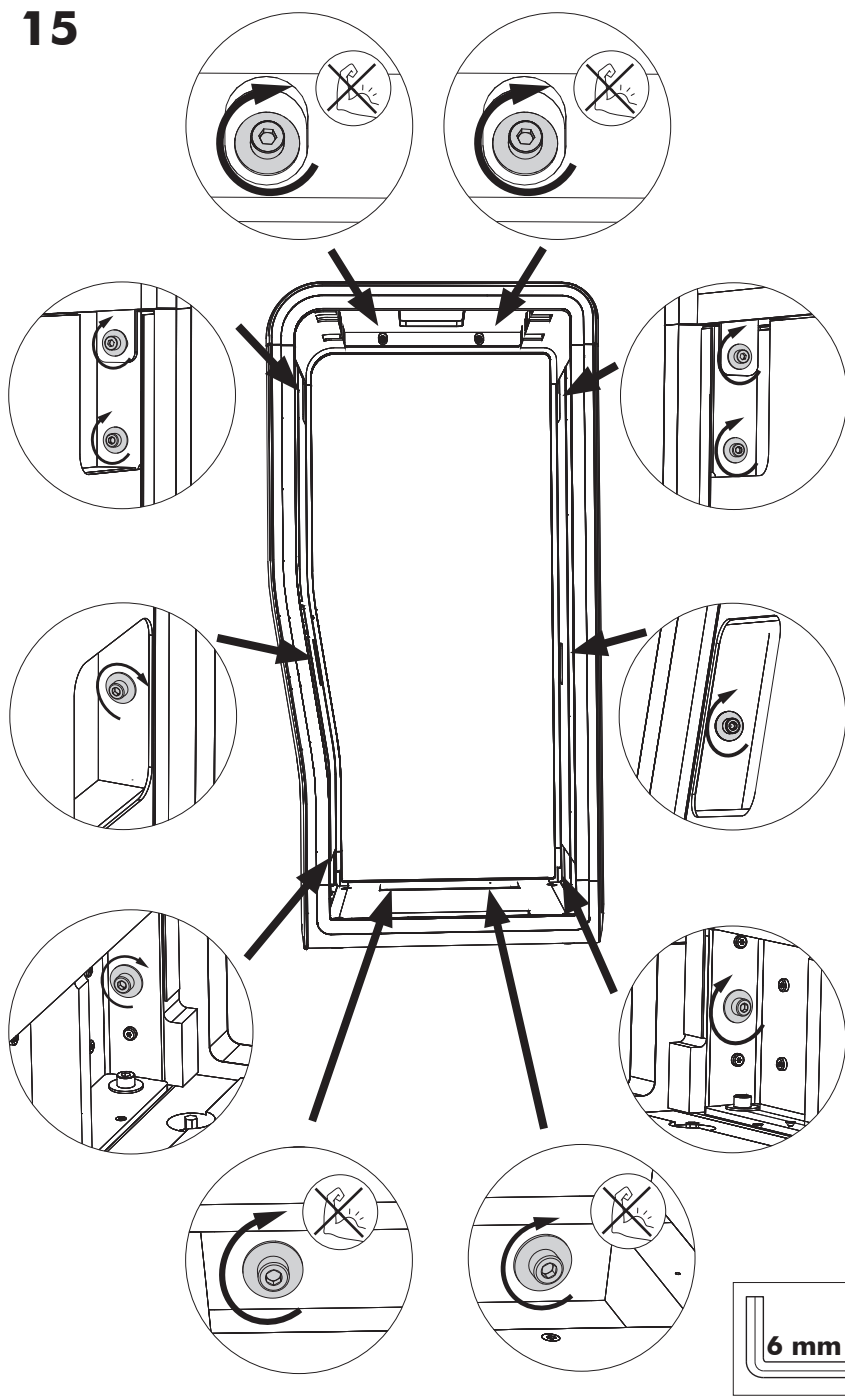 


16

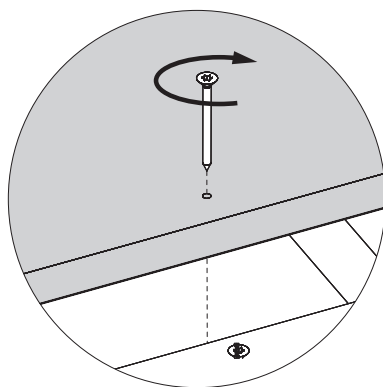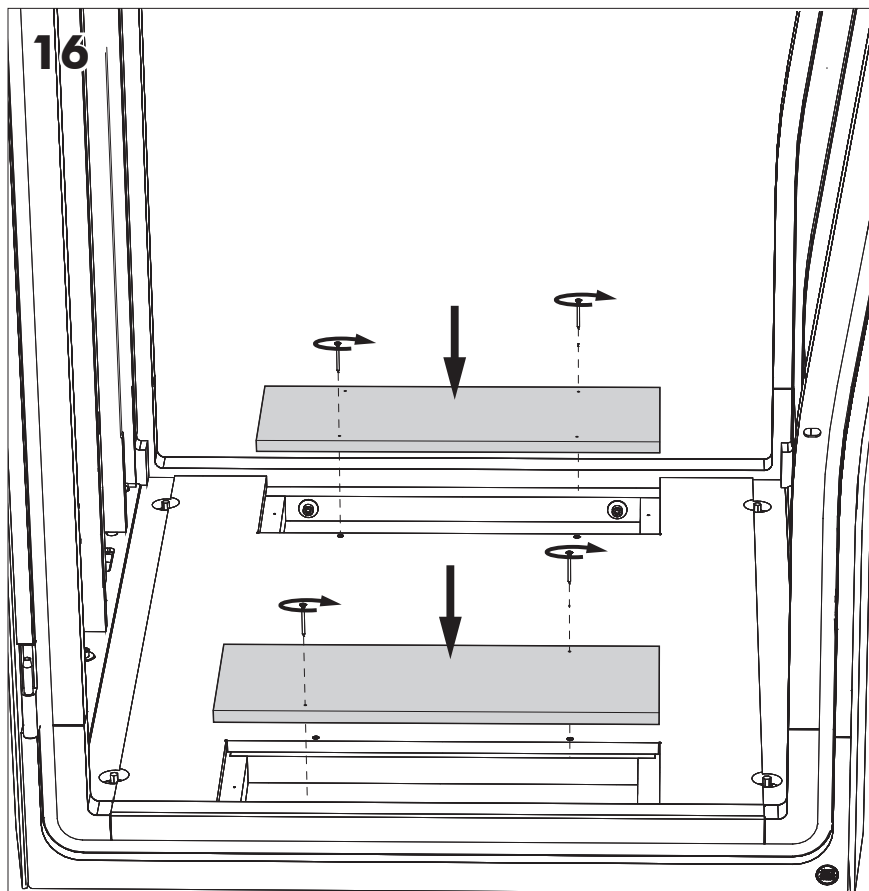    




17

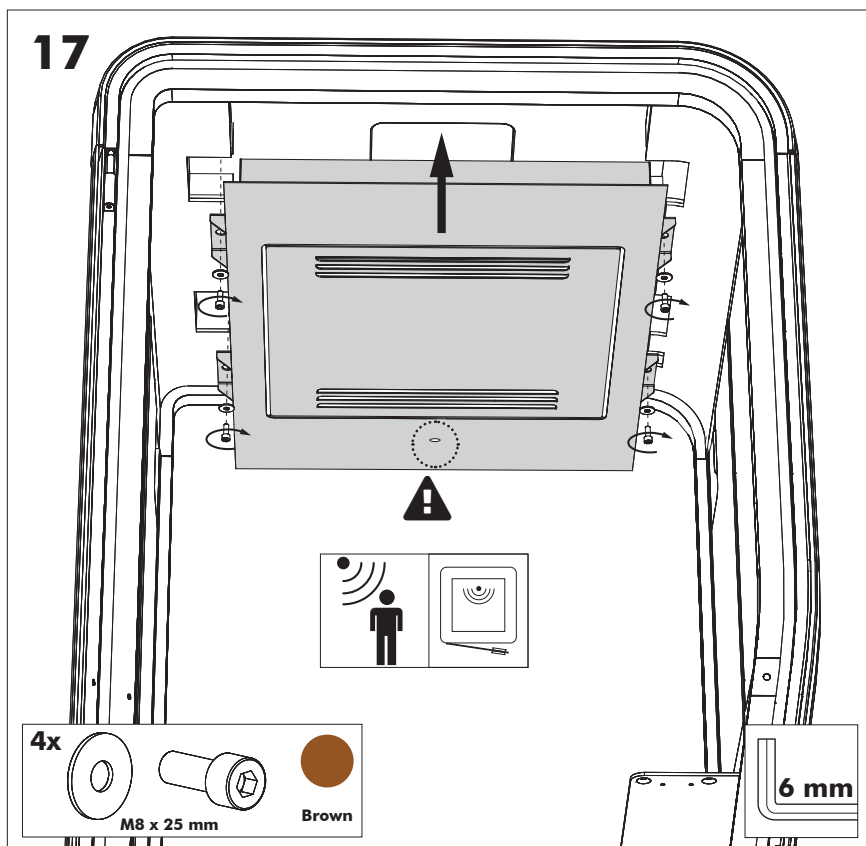 




18

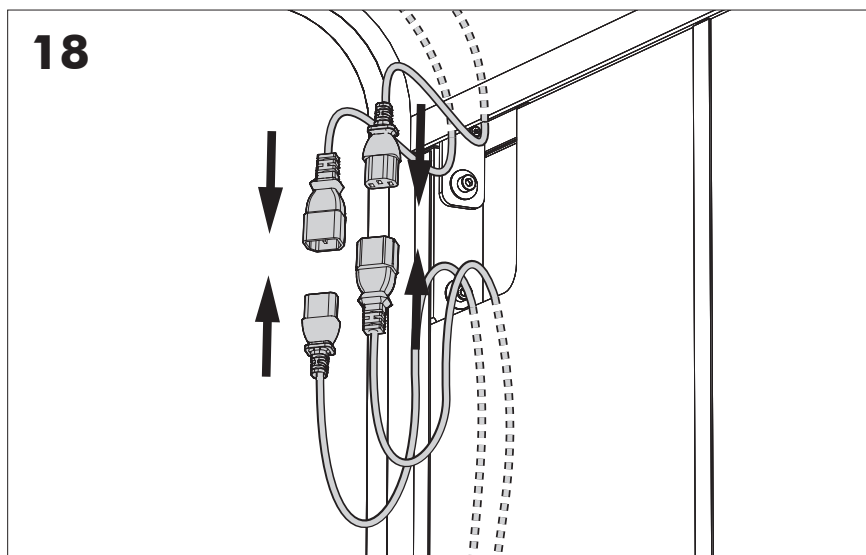 


19

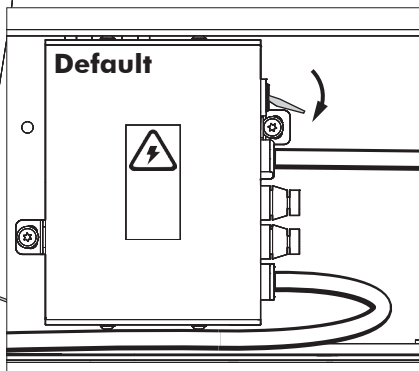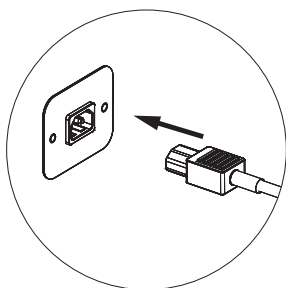  
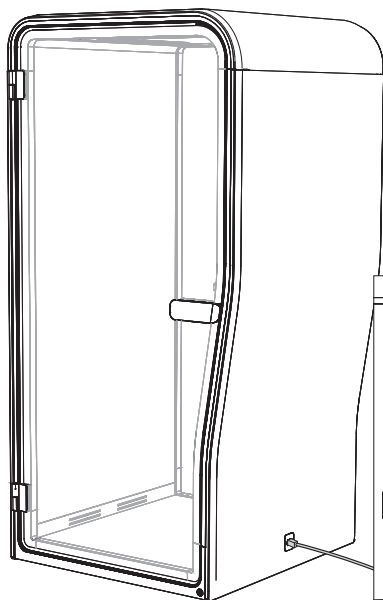 


19 Optional

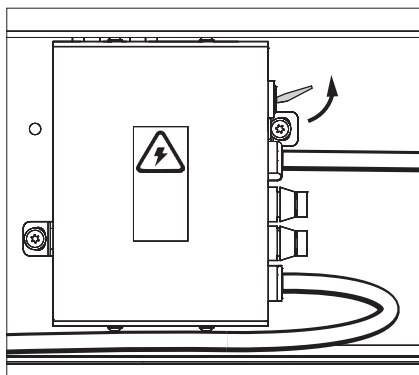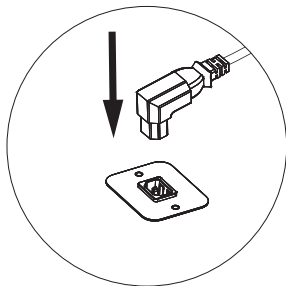  
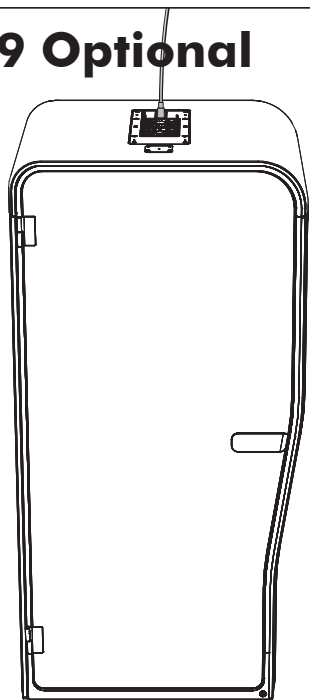 


20


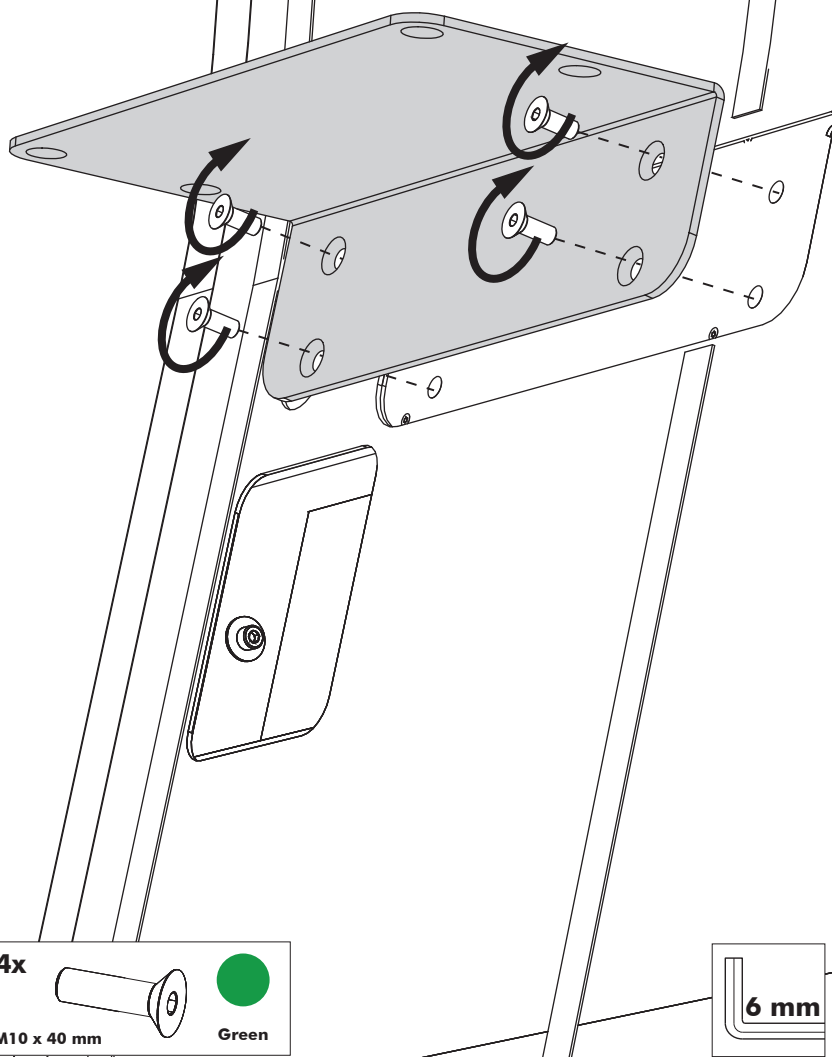 


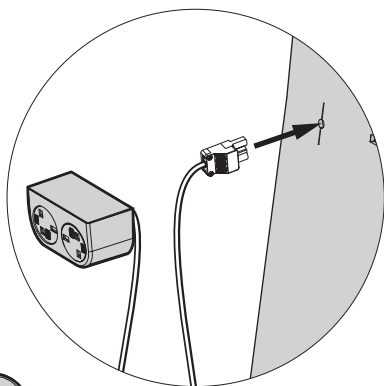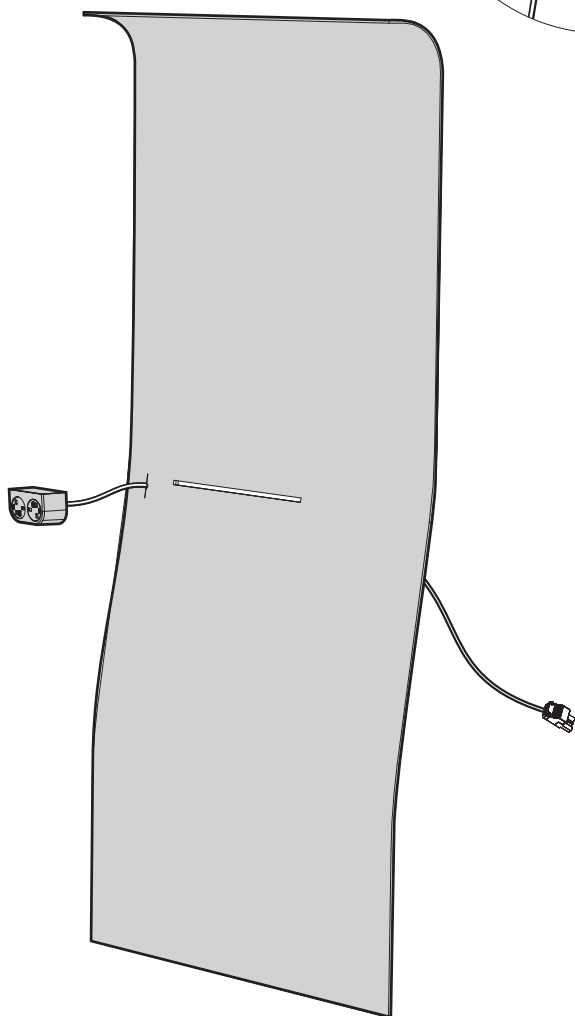  


22

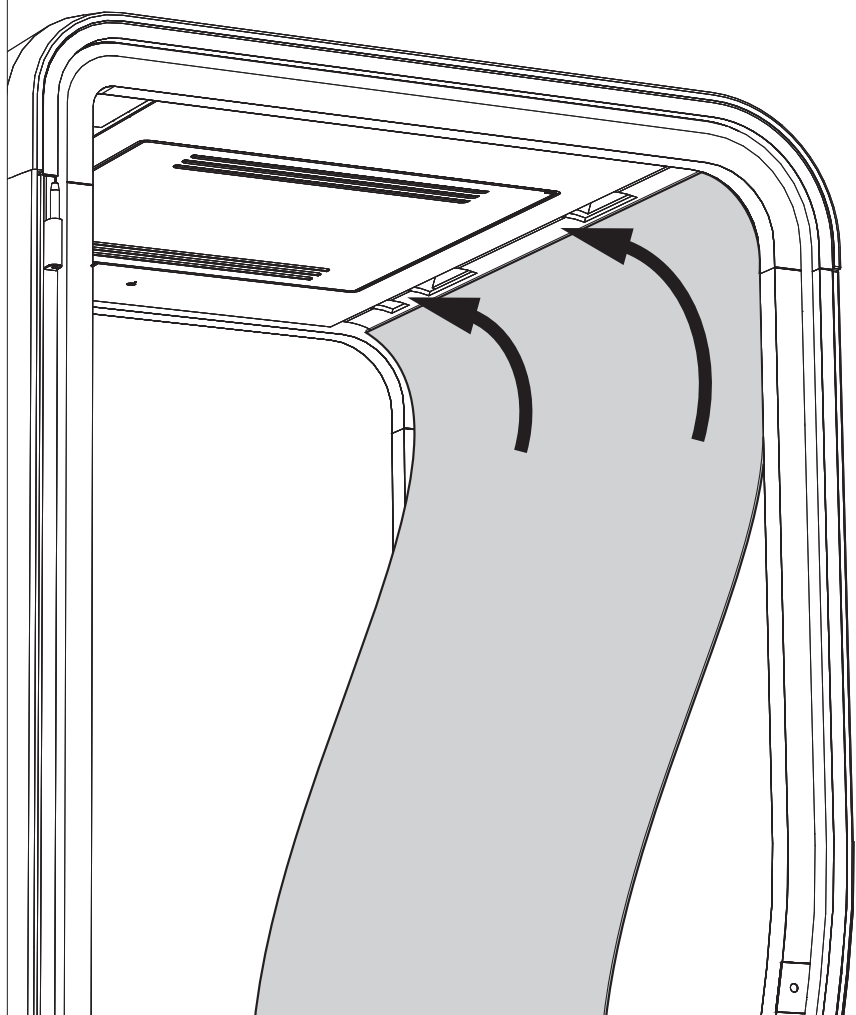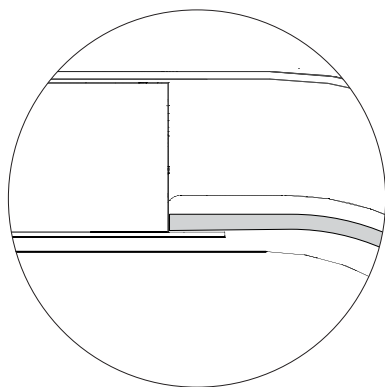  


23

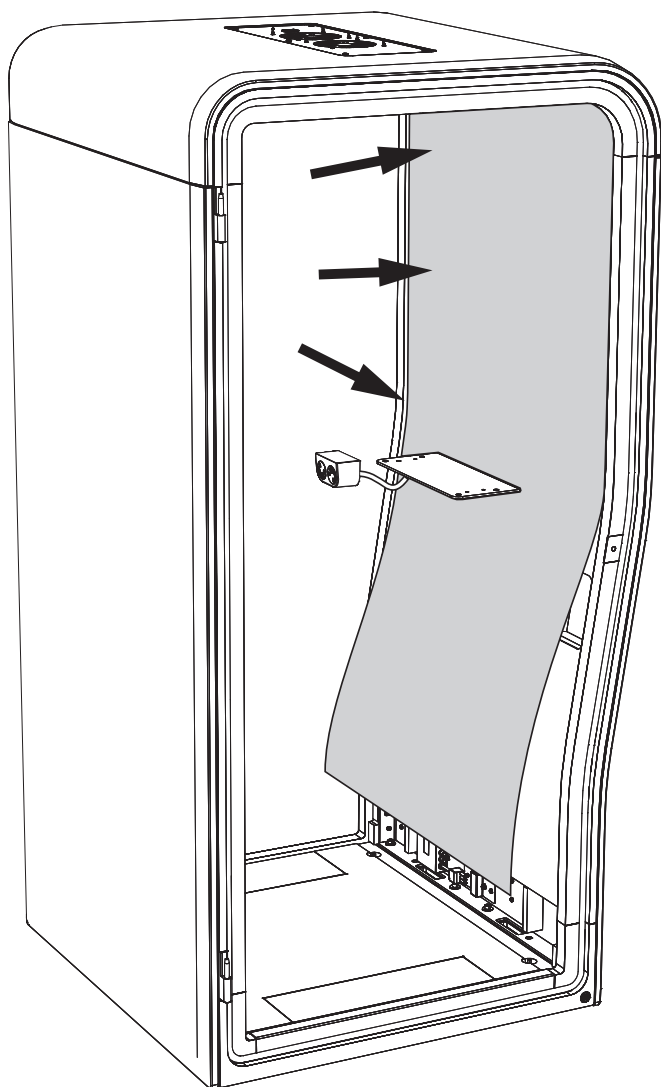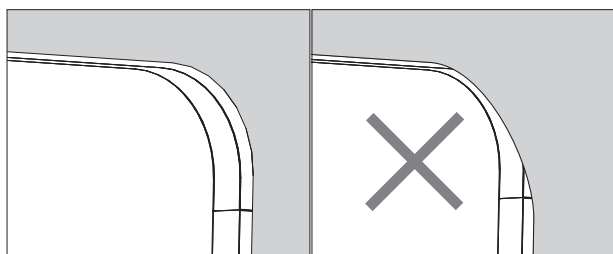  


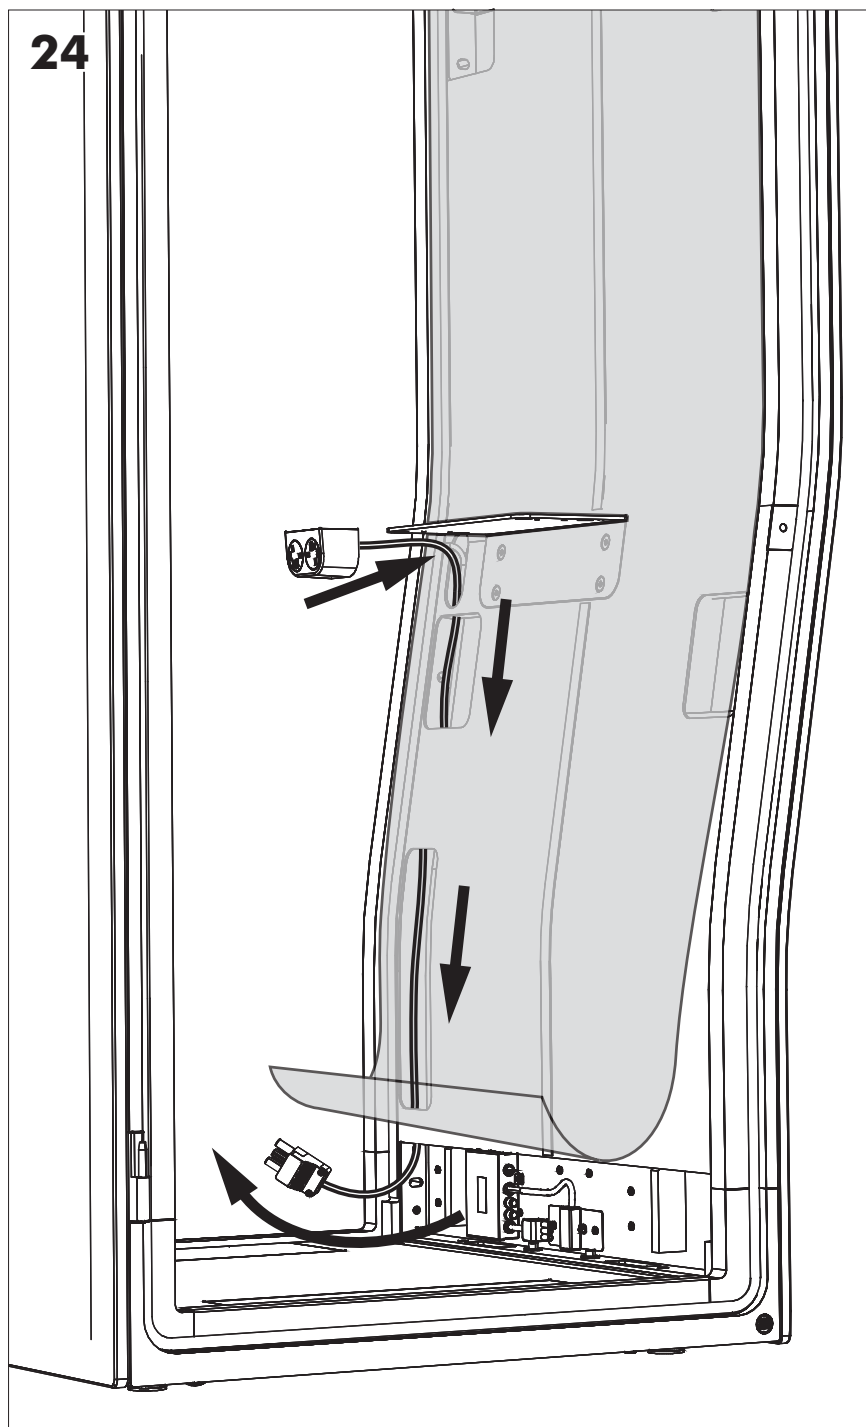 


! Only for 3D Rib Panel

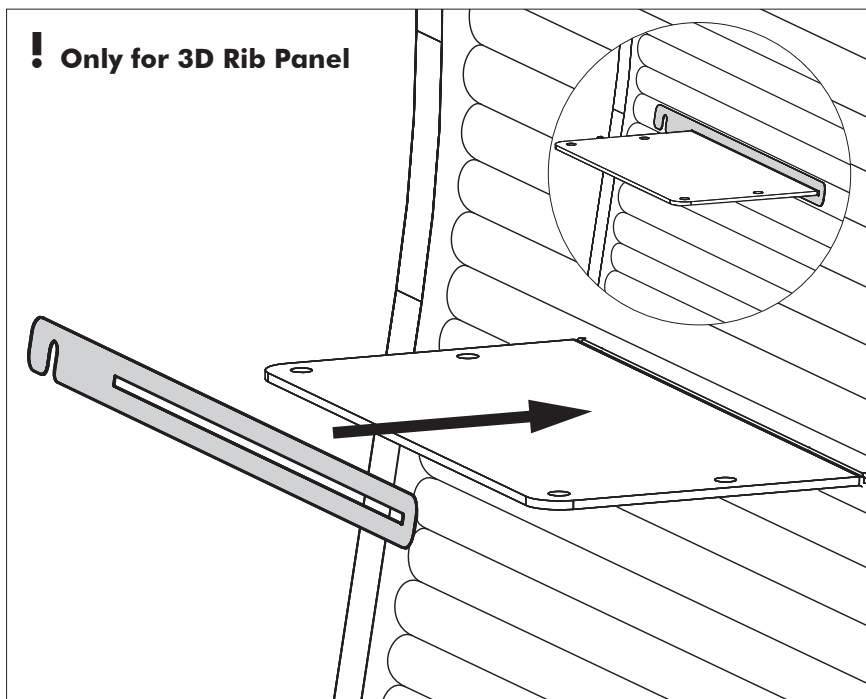 


25


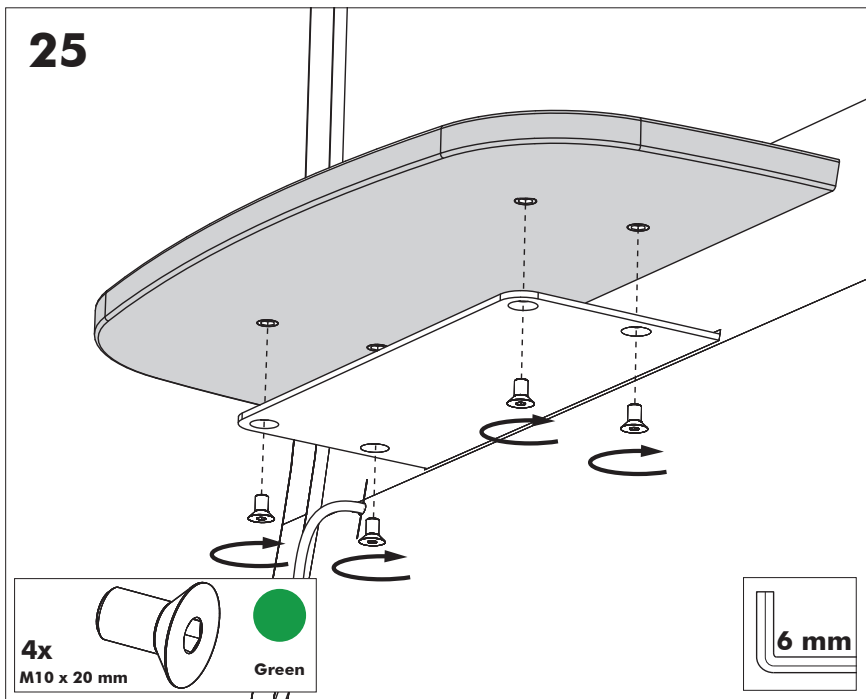 


26



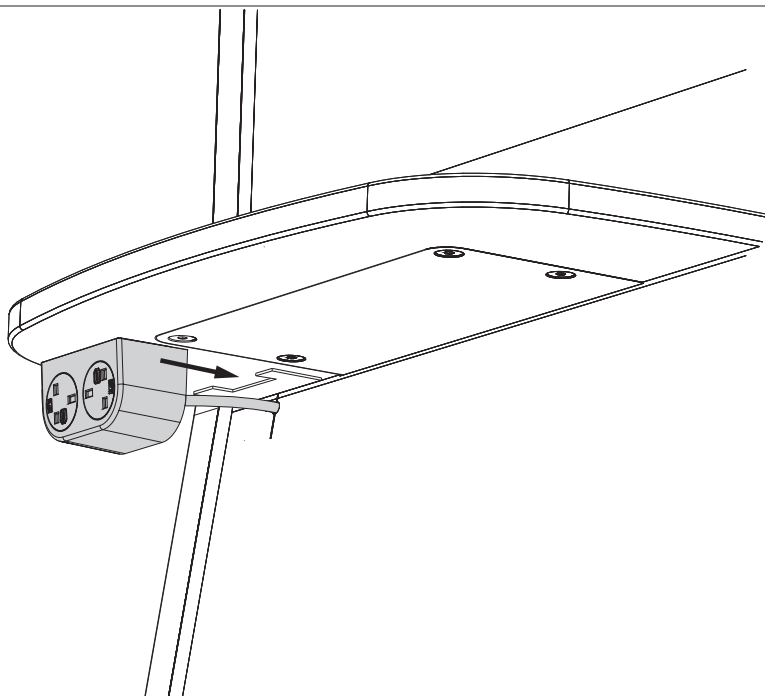 


27

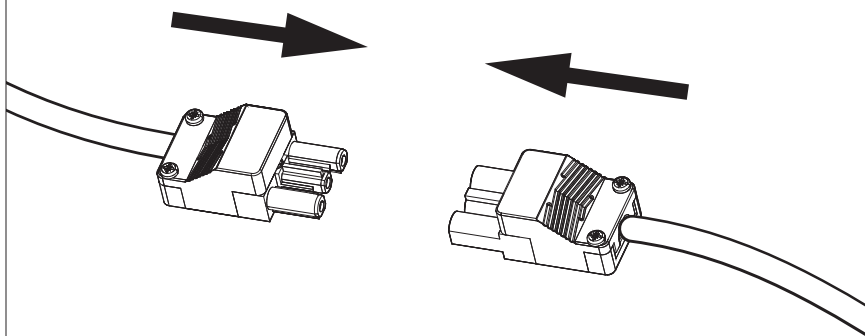 


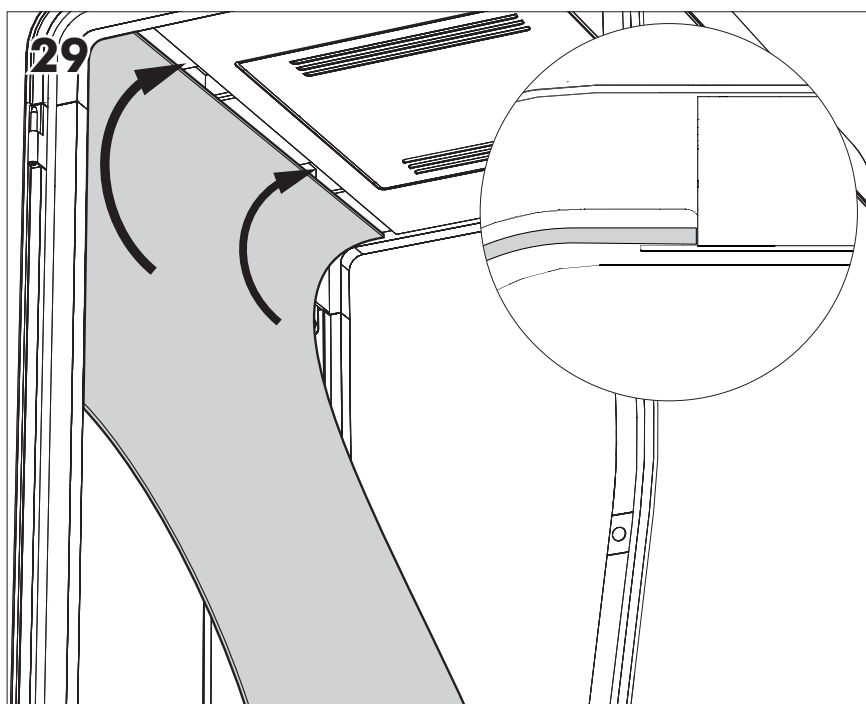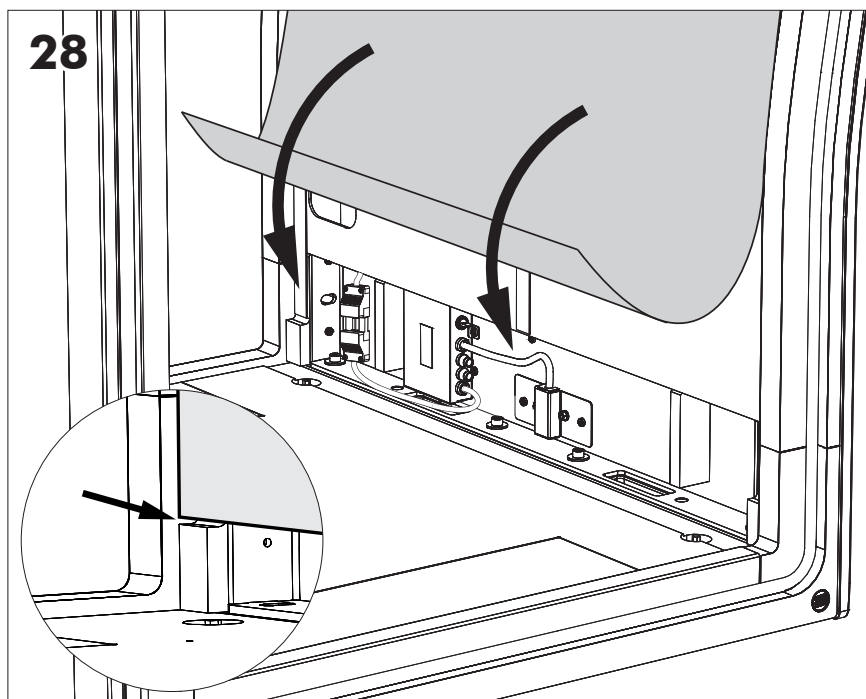  


30

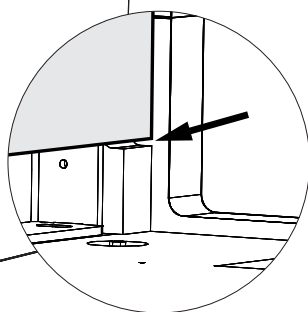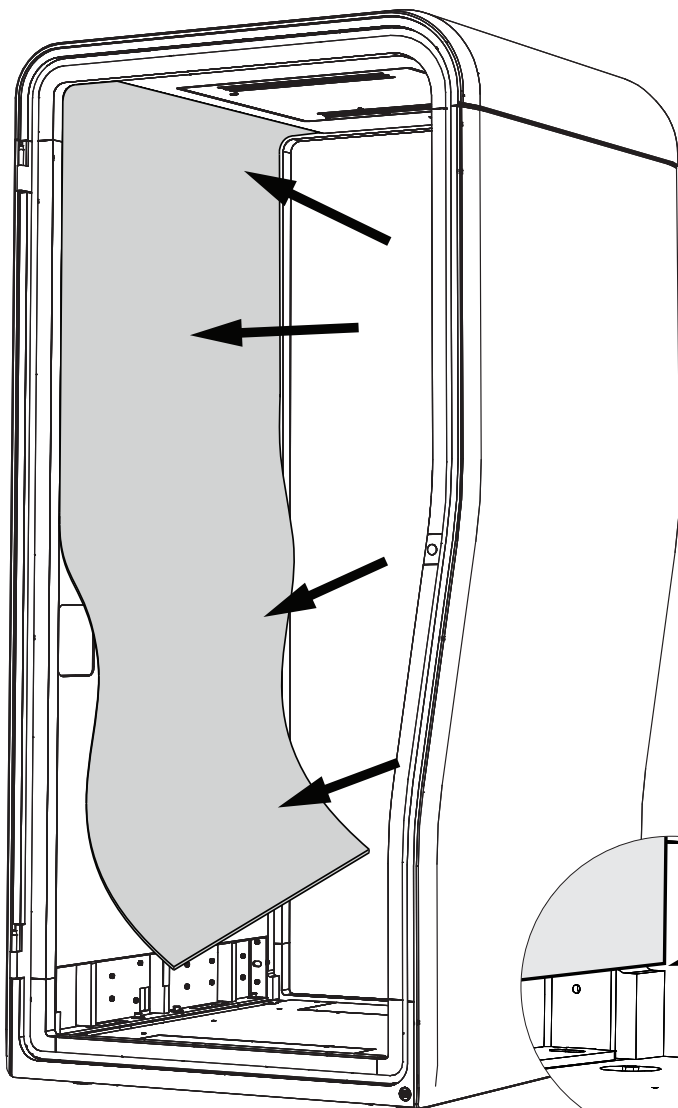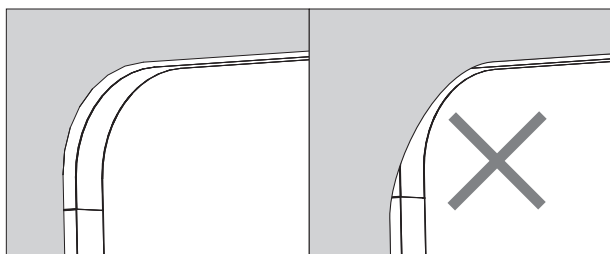   

31

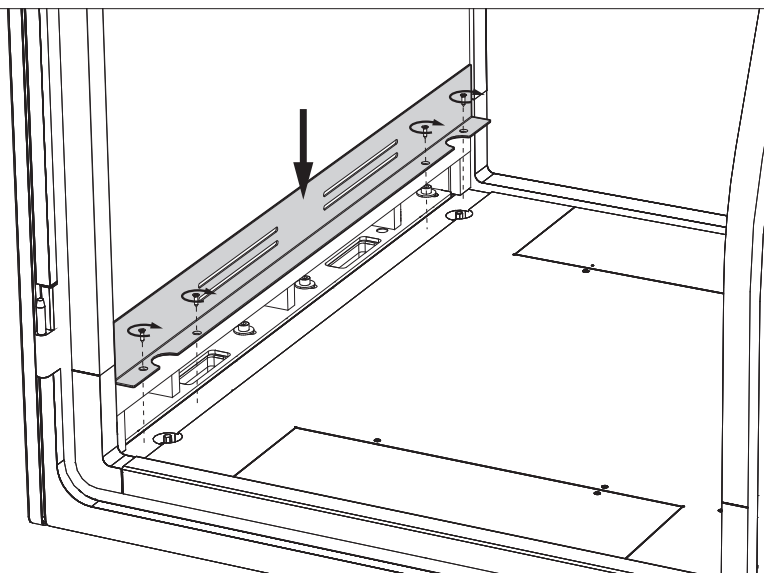 


4x

 

Orange


5 mm

 32

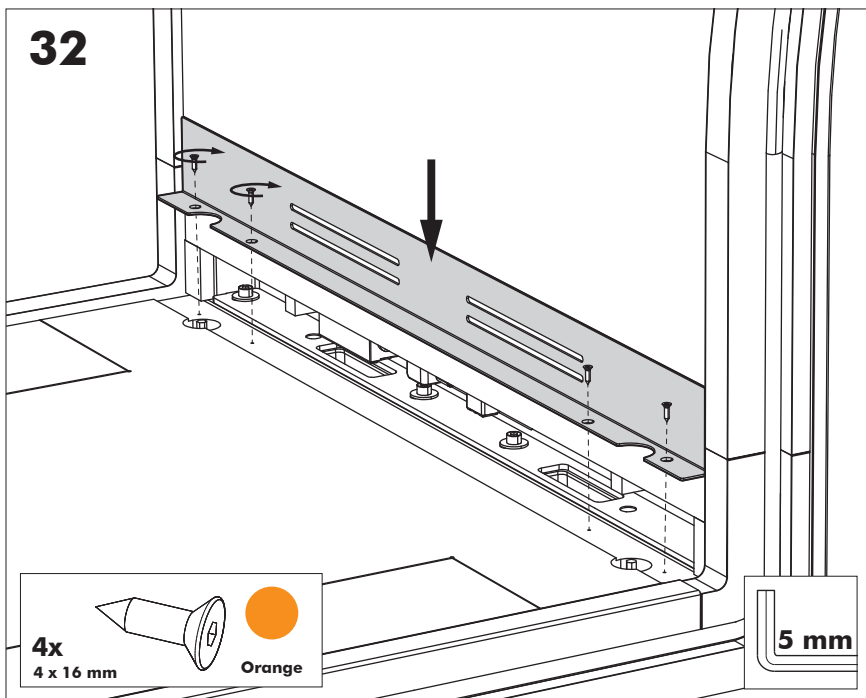

4x

 
4 x 16 mm





Orange

5 mm

 
33

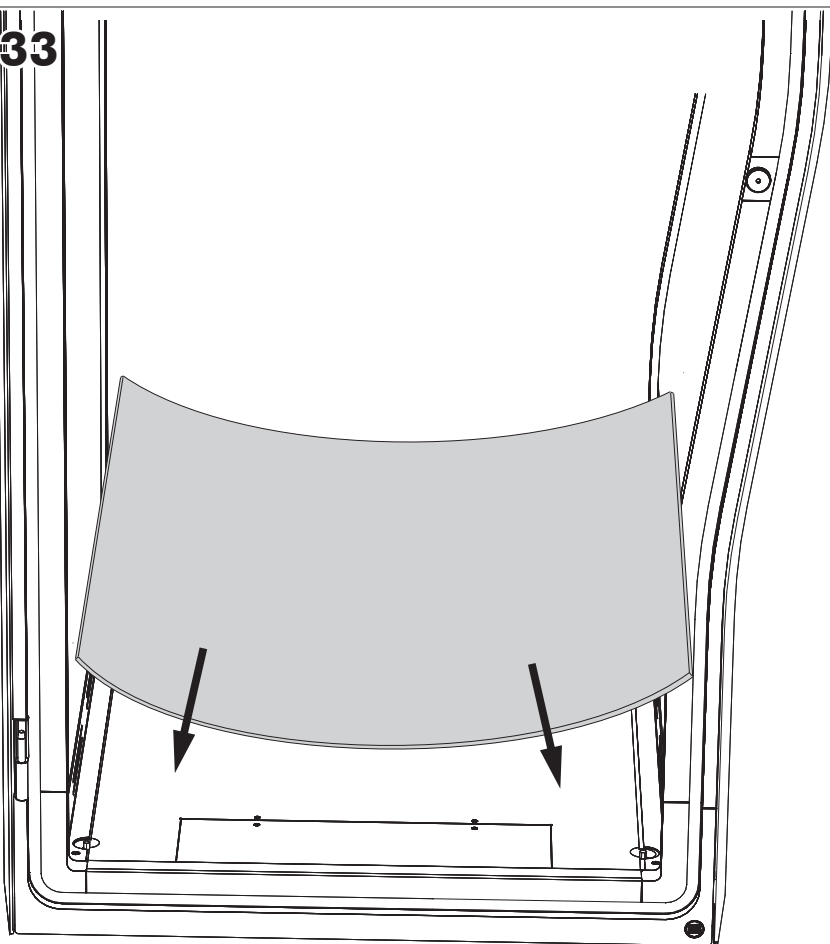


34 2 PERS. 

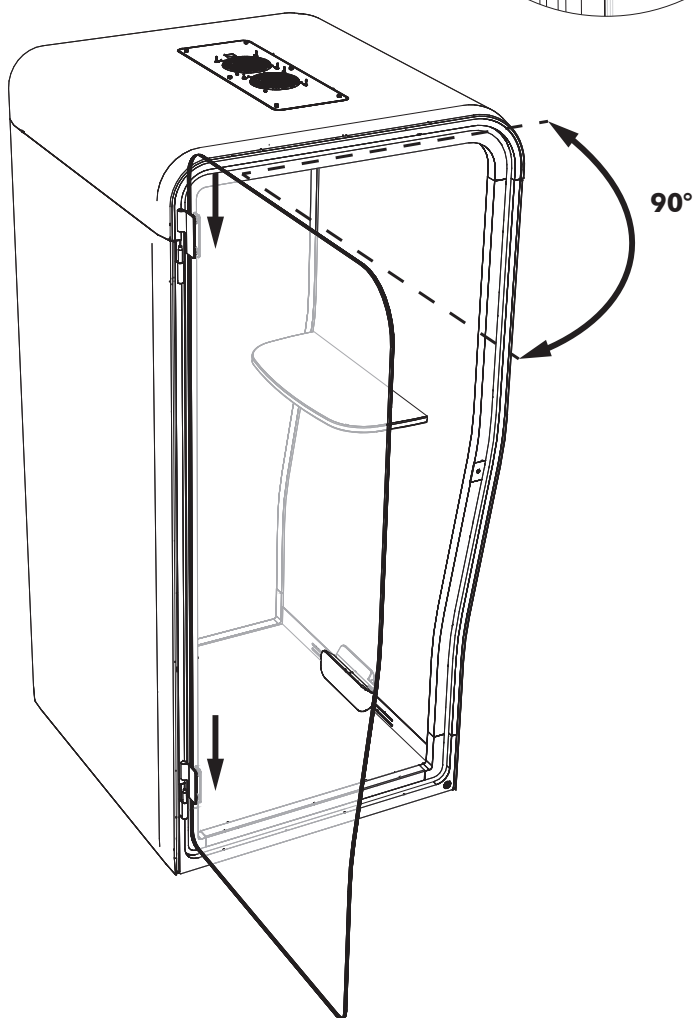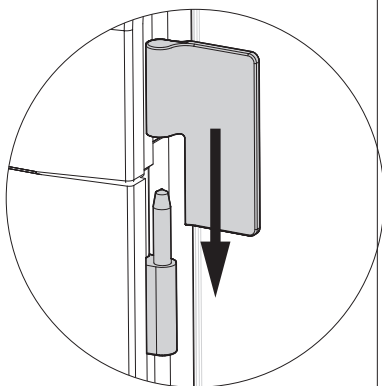  


35

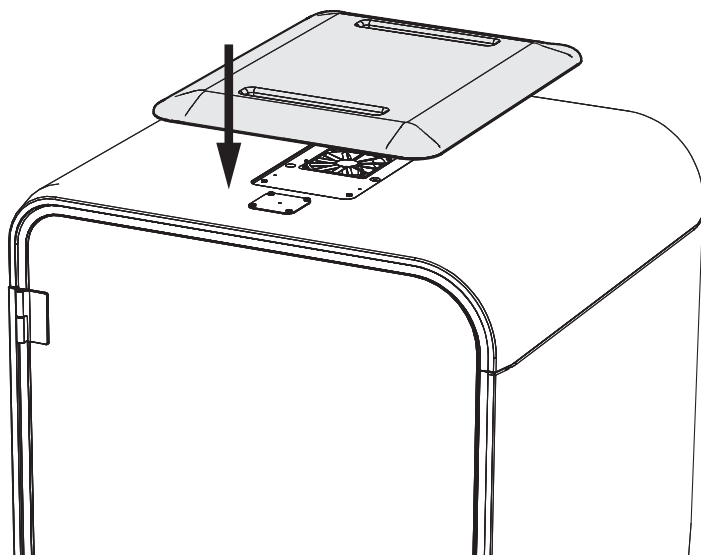 

36

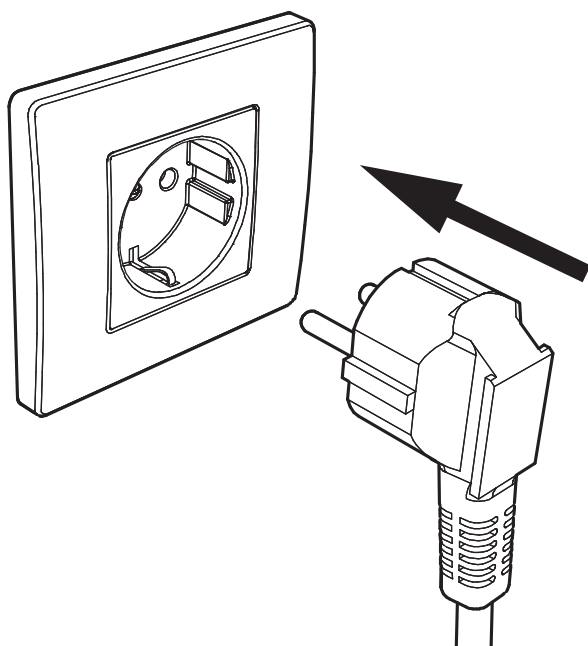 

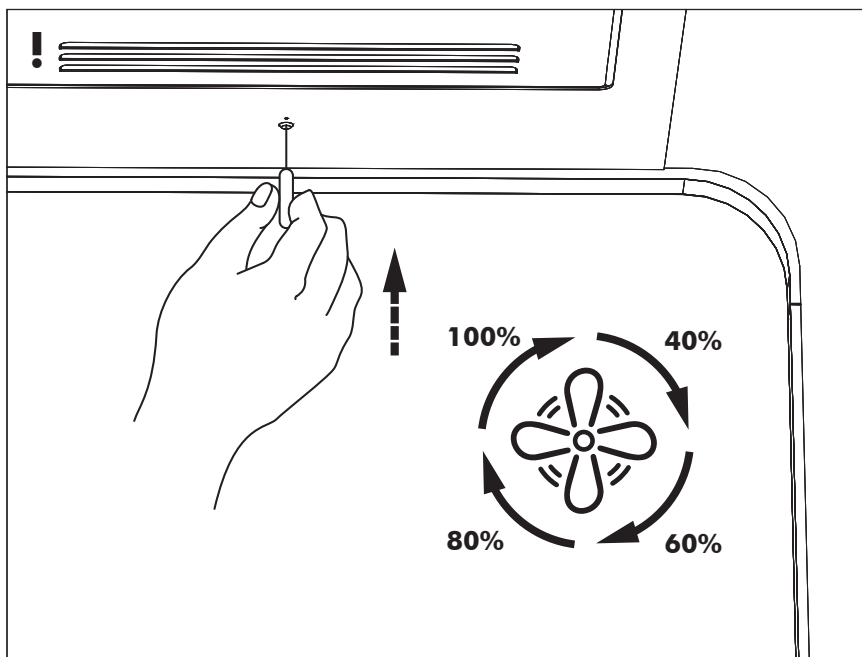 

Change the default airflow rate during occupancy:

Press the button underneath the discrete hole next to the PIR motion detector using a pin to cycle through the various fan settings.

The LED Lighting blinks briefly when changing to a next setting.
The LED Lighting blinks twice when reaching the 40% setting.

Fan Settings

 
100%: 31 l/sec

80%: 25 l/sec


60%: 20 l/sec (factory setting)

40%: 12 l/sec


Move Booth

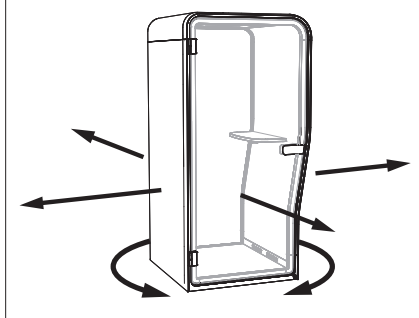


1

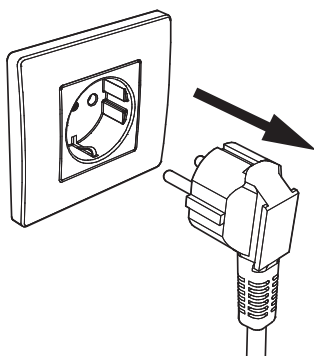 


2

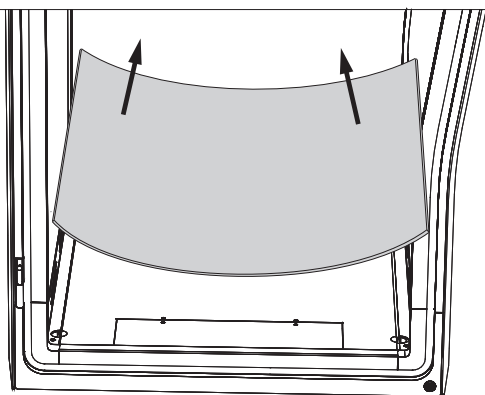 


3

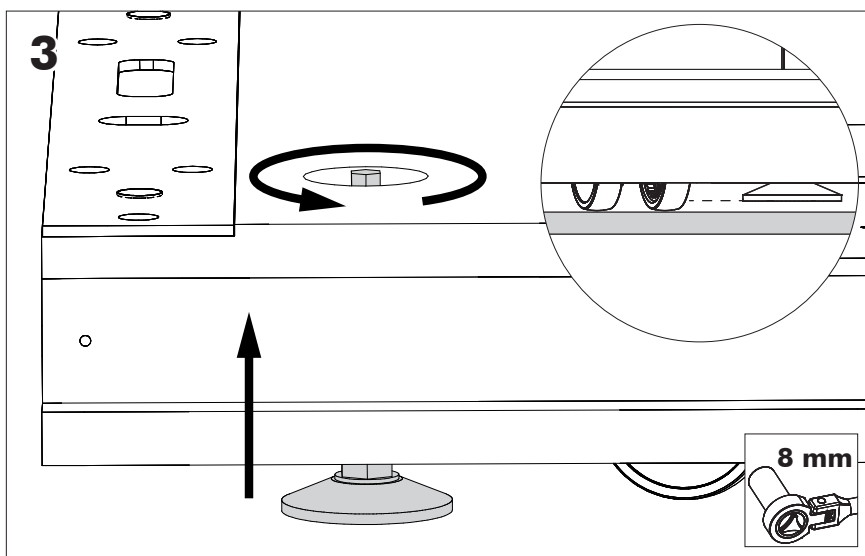 


4

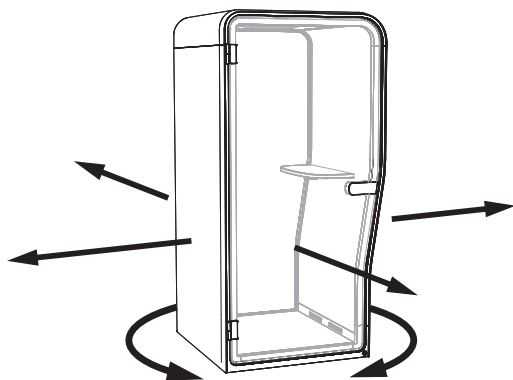 


5

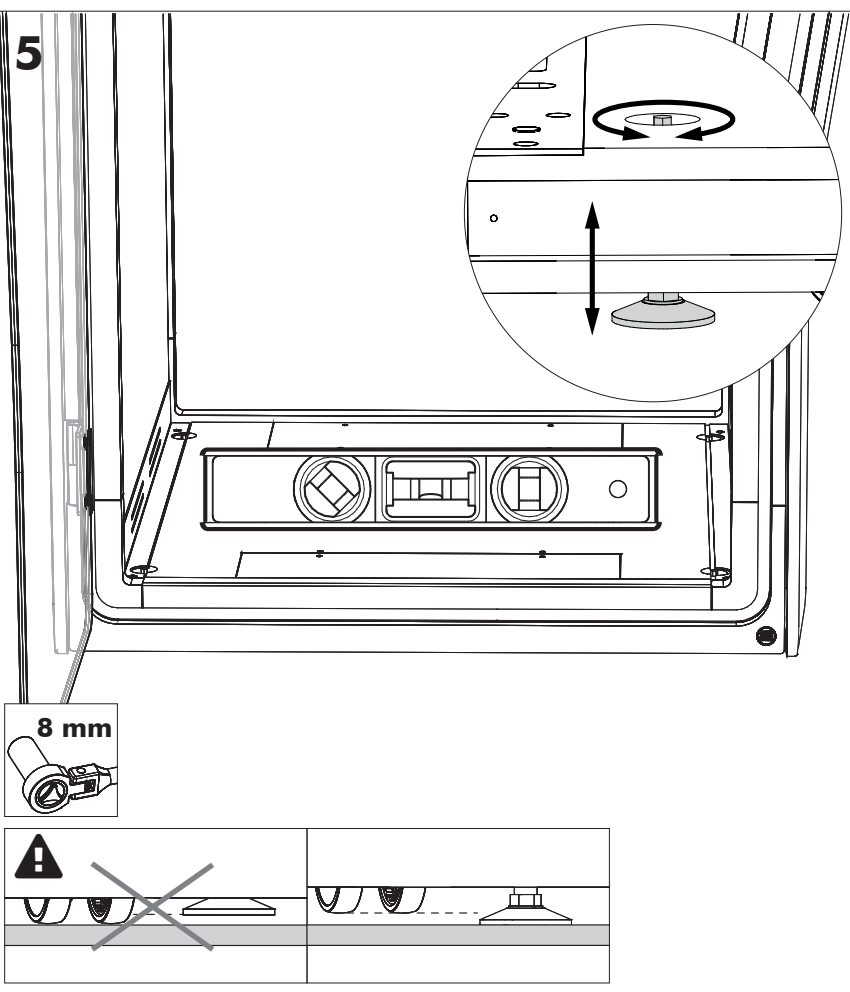 

6

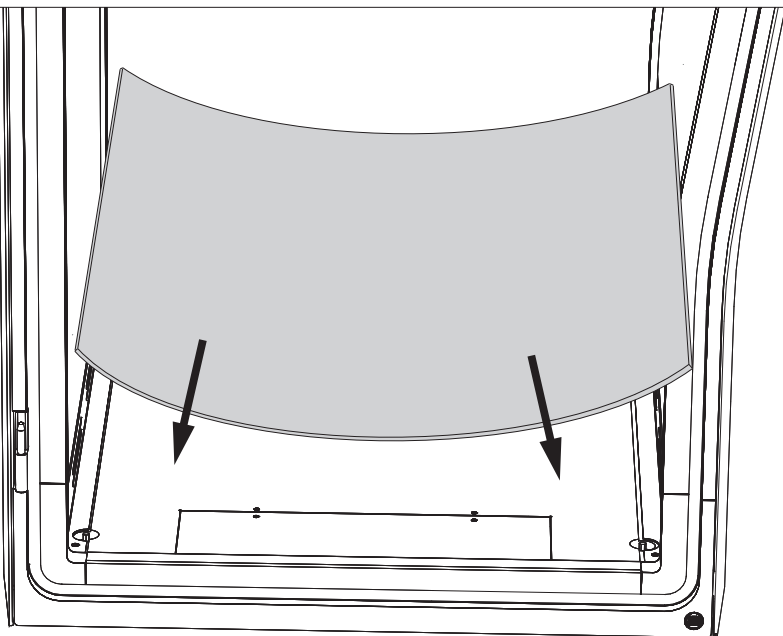 

7

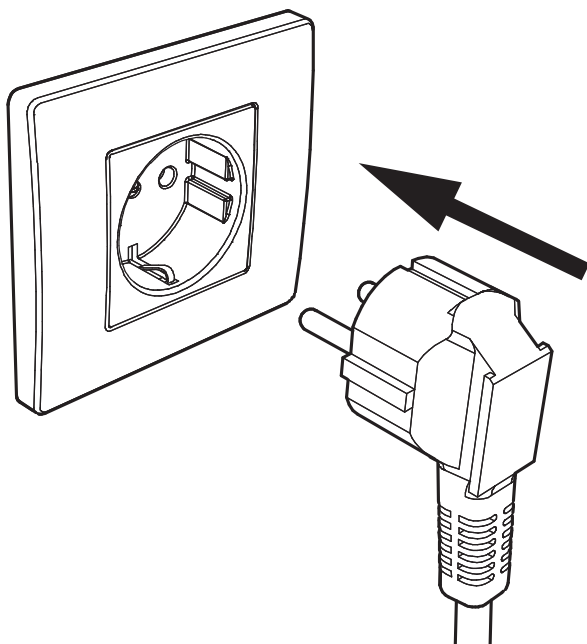 


BuzziSpace Group NV
Italiëlei 8, 2000 Antwerp
Belgium

☎ +32 (0)3 846 10 00

✉ info@buzzi.space

 🌐 www.buzzi.space

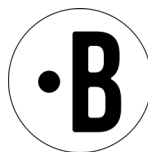

Doc nr.: A-0000007320/06

Last update: 25/04/2025