

# GIANT DECKCHAIR

Assembly & Safety Instructions



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE**

Before assembling your deck chair, please read these instructions carefully in order to assemble it properly.

**i**

- Designed for up to 3–4 people
- Maximum load capacity: 400 kg (evenly distributed)\*
- Overall dimensions: 250 × 170 × 10 cm  
4 sqm print area, making our Giant Deckchair one of the largest in the UK.
- Tested in accordance with BS EN 581-1 & BS EN 581-2 (Outdoor Furniture –Seating)

\* Uneven loading or dynamic use (e.g. jumping or sudden movement) may affect stability and is not permitted.

# What's Included

## Please check all components before assembly:

- Part 1 & 2- main wooden frame sections (2 pcs)
- Part 1.1 & 2.2 - top and bottom wooden beams (151.50 cm)
- Part 1.2 & 2.1 - wooden beams (161.00 cm)
- Part 3 - support beam (170.50 cm)
- Part 4.1 & 4.2 - wooden stoppers (2 pcs)
- Fabric sling (1 pc)

## Fixing:

- 10 × screws (8 × 120 mm)
- 4 × screws (4.5 × 80 mm)

## Tool included:

- L-key TX40

All parts are labelled to match their position on the frame.


**If any parts are missing or damaged, do not assemble the product and contact your supplier.**

## Materials & Compliance

The fabric used for the deckchair is **B1 fire-rated** (flame-retardant) in accordance with **DIN 4102-1**  
The wooden elements are manufactured from timber sourced from **FSC-certified** suppliers



# Assembly Instructions

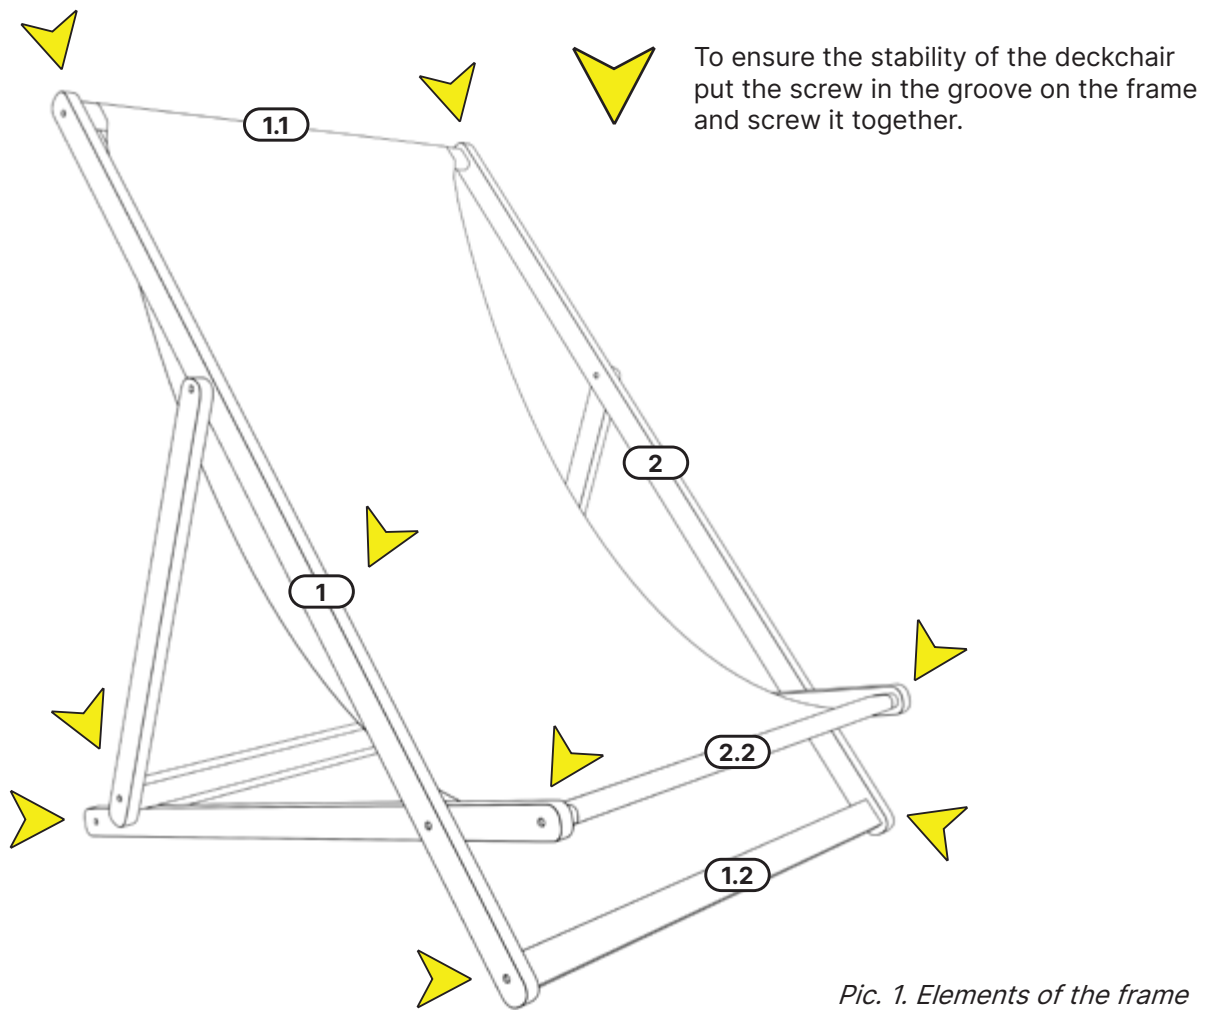

*Pic. 1. Elements of the frame*

- Assemble the product on a flat, stable surface
- Do not assemble on sloped or uneven ground
- Do not use the deckchair in wind conditions exceeding 20 km/h.

**Always remove the fabric or fully secure the product in changing weather conditions.**

- Assembly requires a minimum of 2 adults
- Keep children away during assembly
- Follow the assembly steps as shown in the diagrams provided.
- Ensure all components are correctly fitted and securely tightened before use.

**The deckchair must be secured at all times when used outdoors.  
Failure to properly secure the product may result in injury or damage.  
The manufacturer accepts no liability for damage or injury caused  
by improper installation or misuse.**



*Pic 2. Each end of the beam is marked to indicate its correct position on the frame.*



*Pic 3. Beam no. 3 must be securely fixed to the stoppers using 4.5 × 80 mm screws.*



*Pic 4. Securing the deckchair using ground anchors*

# Assembly Instructions

## Assembly Instructions

1. Place PART 1 (three connected beams) flat on the ground with the holes facing up.
2. Insert all cross beams into the holes (Pic. 2).  
Use beams: 1.1, 1.2, 2.1, 2.2 and 3.
3. Slide the fabric onto the beams: top pocket → PART 1.1  
bottom pocket → PART 2.2
4. Place PART 2 on top of the beams.  
Make sure each beam goes into the correct hole (numbers must match).
5. Fix everything using 120 mm screws (Pic 1).
6. Carefully turn the deckchair upright. Tighten all screws again.
7. Attach the stoppers (part no. 4.1 & 4.2) using 4.5 × 80 mm screws.

### IMPORTANT:

**PART 3 MUST be fixed to the stoppers.**  
**Do not use the deckchair unless this is done (Pic. 3).**



### Before Use

- Check all screws are tight
- Make sure the frame is stable
- Secure the deckchair with weights or anchors

### Safety

- Do not stand or climb on the deckchair
- Do not use in strong wind
- Max load: 400 kg (evenly distributed)

**The deckchair position must be secured with ground anchors or weighted bags (anchors and weight are not included in the set) (Pic. 4)**



*Pic 5. Correct installation of the deckchair position stoppers.*

# Safety Instruction

- ✓ Children must be supervised by an adult at all times when using the deckchair.
- ✓ This product is not a play structure.
- ✓ The Giant Deckchair must only be used for its intended purpose.
- ✓ This product is designed for use on a firm, flat and level surface only.
- ✓ Do not use on sloped or uneven ground.
- ✓ Do not use the deckchair in strong or gusty winds.
- ✓ Do not leave the product unattended outdoors.
- ✓ When used outdoors, the deckchair must be secured using ground anchors or weighted bags.
- ✓ Keep the deckchair at least 2.5 metres away from open flames, heaters or other heat sources.
- ✓ Do not place hot objects or chemical substances on the deckchair.
- ✓ Avoid exposing painted wooden surfaces to excessive heat, as this may cause discolouration or damage to the finish.
- ✓ Take care to avoid scratches, impacts or mechanical damage to the structure.

## Use & Maintenance

Check all fixings regularly and tighten if needed.

Before each use, check that all screws, beams and connections are secure and free from damage.

Do not use the product if any part is damaged or loose.

- Do not assemble and disassemble repeatedly, as it may weaken the structure
- Clean using a damp cloth only
- Do not use pressure washers or harsh chemicals

### Fabric:

- Removable and washable at 40°C
- Water-resistant but not waterproof

### Wood:

- Factory-treated for outdoor use
- Reapply wood protection annually to maintain durability and appearance

### Storage

- Store in a dry, covered area when not in use
- Ensure the product is completely dry before storage. Do not store the product when wet, as this may cause mould or material damage.



### Important Safety Notice

This product is designed for seating use only.

Any misuse, including standing, climbing or improper installation, may result in injury and void any warranty or liability.

# Replacing the Fabric Sling

**To replace the fabric, follow the steps below:**

1. Lay the deckchair on its side
2. Unscrew the five screws fixing Frame Part 1
3. Carefully remove Frame Part 1, leaving the vertical beams in place within Frame Part 2
4. Slide the fabric sling off beams 1.1 (top) and 2.2 (bottom)
5. Slide the new fabric sling onto the same beams
6. Refit Frame Part 1 and secure it using the original screws

**IMPORTANT:**

- **Ensure the fabric is aligned evenly on both sides**
- **Always tighten all screws securely before use**
- **Do not use the deckchair if not fully assembled**

**Note:**

If the screw holes in the frame have become worn, we recommend:

- carefully re-drilling the holes, and
- using appropriately sized replacement screws

## Warranty

**12 months**  
wooden structure

**12 months**  
fabric

**6 months**  
print

Warranty applies only when the product is used in accordance with these instructions.

This product is intended for both private and commercial use.

The operator is responsible for ensuring safe use in public or event environments.

# GIANT DECKCHAIR

