Preface

Dear Owner:

Thank you for your trust in Geely and choosing a Geely vehicle that features excellent performance in safety, comfort, power and economy. We hope to bring happiness and fun to your life with our premium products and services.

Thoroughly review this manual before your first drive and consistently follow its instructions. Doing so will enhance your understanding of the vehicle's operation, keeping it in optimal condition and delivering reliable performance throughout its lifespan. The more you know about your vehicle, the more you will enjoy the fun and safety of driving.

If you encounter any issues during vehicle operation, please contact an authorised Geely Service Centre promptly. You will be provided with the highest levels of customer service in maintenance and repair, and make sure to adhere to the maintenance schedule outlined in this manual.

As the information contained within the manual is an integral part of the vehicle, please ensure that if selling or lending the vehicle, this manual is provided to the new owner.

Happy Life, Geely Drive!

Geely Automobile International Corporation

July 2026

All Rights Reserved. Without the written permission of Geely Automobile International Corporation, this manual cannot be reproduced or copied in whole or in part.

Note: The cover and pictures in the manual are only for reference. All the pictures shall be subject to the actual product.

Contents

Notice to Owners

5 Notes to Owners

9 Prompt Information

10 Graphical Information

10 Event Data Recorder (EDR)

12 Exterior Overview

13 Interior Overview

15 Front Compartment Overview

Driving Safety

17 Seat Belt Overview

18 Three-Point Seat Belt

20 Airbag Overview

21 Position of Airbags

23 Deployment of Airbags

24 Airbag Deactivation

25 Selection of Child Restraint System

28 Use of Child Restraint System

29 Installation of Child Restraint System

31 Child Safety Lock

Entry and Exit

33 Vehicle Search

33 Key Unlock and Lock

35 Keyless Unlock and Lock

36 Central Unlock and Lock

37 Automatic Unlock and Lock

37 Door Open

38 Occupant In–Vehicle Detection

38 Trunk Opening and Closing

40 Anti-theft System

41 Front Storage

42 Rear Storage

43 Frunk Storage

44 Trunk Storage

Preparations Before Driving

45 Adjustment of Driver Seat

46 Horn

46 Adjustment of Steering Wheel

47 Steering Wheel Heating*

48 Steering Wheel Buttons

50 Adjustment of Exterior Rearview Mirrors

51 Exterior Rearview Mirror Folding/ Unfolding

52 Adjustment of Interior Rearview Mirror

52 Window Opening/Closing

54 Using Wipers

Lights

57 Exterior Lighting

58 Interior Lighting

59 Intelligent High Beam Control (IHBC)

Instrument Cluster

61 Instrument Cluster Overview

63 Warning Light and Indicator Light

Understanding Your Vehicle

67 Wired Charging

68 Wireless Charging*

70 Sun Visor and Vanity Mirror

71 Adjustment of Front Passenger Seat

71 Adjustment of Rear Seats

72 Adjustment of Front Seat Headrests

73 Adjustment of Rear Seat Headrests

73 Front Seat Heating*

Starting and Driving

75 Driving Instructions

78 Power Supply Mode

79 Start Procedure Operation

80 Gear Shift

81 Drive Mode

82 Service Brake

83 Vehicle Parking

84 Energy Recovery

84 Parking Brake

86 Brake System

89 Electric Power Steering (EPS)

89 Pedestrian Warning System

90 Tire Pressure Monitoring System (Direct)*

92 Tire Pressure Monitoring System (Indirect)*

93 Active Grille Shutter (AGS)

Combined Driver Assistance

95 Introduction to Combined Driver Assistance System Sensors

97 Adaptive Cruise Control (ACC)

104 Intelligent Cruise Control (ICC)

112 Lane Keeping Assist (LKA)

116 Collision Mitigation Support Front (CMSF)

120 Emergency Maneuver Assist (EMA)

121 Front Departure Alert (FDA)

122 Traffic Sign Identification (TSI)

124 Forward Cross Traffic Alert (FCTA)

125 Rear Side Radar Assist System

128 Driver Monitoring System

Parking Assist

129 Introduction to Parking Assist System Sensors
130 Parking Assist Warning System
131 Rear View Camera System
132 Surround View Monitor*

Air Conditioning

135 Front Air Conditioning Control System
138 Adjustment of Air Outlets
139 A/C Settings

Multimedia System

141 Desktop
141 Apps
143 Vehicle Settings

Charging and Discharging

147 Charging Precautions
148 Charging Operation
151 Energy Center

Maintenance and Repair

153 Regular Maintenance
153 Replacement of Key Battery
154 Hood Opening and Closing
156 Coolant
157 Brake Fluid
158 Washer Fluid
158 Replacement of Wiper Blades
160 Maintenance of Low-Voltage Battery
162 Power Battery
164 Maintenance of Tires
166 Exterior Cleaning
168 Interior Cleaning
171 Replacement of Bulbs
172 Inspection or Replacement of Fuses
173 Front Compartment Fuse Box
176 Interior Fuse Box

In Case of Emergency

179 Emergency Equipment
181 Emergency Unlocking of Door
182 Emergency Unlocking of Trunk
183 Emergency Unlocking of Charging Cable
184 Jump Starting
185 Overheating of Drive Motor or Motor Controller
186 Recovering from a Stuck Vehicle
187 Emergency Call (E-call)*
188 Emergency Evacuation of Personnel
188 Power Battery Damage and Fluid Leakage

189 Vehicle Evacuation from Accident Scene

192 Temporary Storage for Accident Vehicles

Technical Information

193 Vehicle Identification Number

194 Vehicle Identification Label

194 Front Compartment Operation Warning Label

195 Drive Motor Code

196 Main Vehicle Dimension Parameters

196 Vehicle Mass Parameters

196 Powertrain Performance

196 Power Battery Parameters

197 Drive Motor Parameters

197 Tire Parameters

197 Wheel Alignment Parameters

198 Recommended Fluids and Capacities

Notes to Owners

Manual Instructions

- All the information in this manual is the latest information as of the time of publication. The contents of this manual are based on the product information at the time of publication. However, due to variations in vehicle configurations and possible upgrades after production, the contents of this manual may not match your actual vehicle. Please refer to the actual vehicle as the authority.
- The labels, logos, and images in this manual are for illustrative purposes only and may not accurately reflect the actual vehicle. Refer to the actual vehicle for specifics.
- The vehicle may be upgraded later. Before the upgrade, you will be notified to obtain your consent. The vehicle after the upgrade may be different from the description in the owner manual delivered with the purchased vehicle. The actual vehicle shall prevail in terms of specific information.
- Geely Auto will update this manual as timely as possible according to vehicle functional upgrades. Should your vehicle features differ from the latest manual due to declining updates when released, the actual vehicle features take precedence.
- To help you intuitively understand and operate your vehicle, features or options in this manual may differ from those in marketing, sales and advertising materials.
- Some functions of this vehicle require data services. The use of relevant applications may involve the purchase of products or services, which shall be voluntary according to actual needs. For specific information, please consult the local authorized dealer or service station. All contents are subject to the actual vehicle.

OTA Update

This vehicle is equipped with a software upgrade function. You can set this function and upgrade the vehicle system by clicking Multimedia to keep your vehicle functions up to date.

When your vehicle has a software update, you will be pushed prompt information to remind you to upgrade your software. You can choose to update immediately or enable automatic updates at night based on your driving situation. Any of these upgrade methods will initiate the system software upgrade.

- Do not move the vehicle during the OTA update in progress.
- The OTA update can be performed only after ensuring that the vehicle is parked in a safe area, the gear is in the "P" position, and the mobile communication network is in a normal connection state.
- Prior to initiating an OTA update, ensure the vehicle has sufficient battery charge.
- Do not connect any third-party devices to the vehicle's OBD port before or during an OTA update.
- During the upgrade process, the vehicle cannot perform charging or discharging. Ensure the vehicle has sufficient battery charge before initiating the upgrade.

- During an OTA update, all vehicle functions are inoperable.
- If the OTA update fails, retry the update. If the retry fails, contact a Geely Auto Service Center.

Vehicle Overview

- This vehicle is a pure electric vehicle, which differs from conventional gasoline vehicles in its characteristics. Please read the instructions in this manual carefully before first use. Otherwise, it may cause personal injury and property damage, and may also result in you losing your maintenance or warranty rights.
- The vehicle uses a lithium-ion battery (power battery) to store electric energy. Try to keep the power battery fully charged before driving. During driving, the power battery is in a state of gradual discharge. When the power battery is at low power, it must be recharged otherwise the vehicle may not be able to run.
- This vehicle is equipped with two types of batteries. One is a power battery (high voltage) used to supply power to drive the motor and propel the vehicle. The other is a low-voltage battery,and whose function is the same as the low-voltage battery of traditional fuel vehicles, and which is used to supply power to low-voltage electrical systems such as headlights, audio, and horns. The electricity of the low-voltage battery comes from the power battery.
- This vehicle uses a charging plug to connect to the power grid for power battery charging. Additionally, during braking, the motor generates electricity, and partial electricity is stored in the power battery, thus extending the driving range of the vehicle. This process is known as energy recovery.
- This vehicle features the creep function. That is, when the vehicle is in a drivable state (the ready for operation indicator light is on) and in Drive (D) or reverse (R) gear, releasing the brake pedal and parking brake will make the vehicle move forward or backward slowly.

High-Voltage Safety

The following information is helpful to keep passengers and emergency personnel safe from high voltage:

- The vehicle's power system uses high voltage. During operation, the system generates high temperature and high pressure. Always strictly adhere to the warnings on the vehicle warning labels.
- The high voltage fuse (inside the power battery) provides short-circuit protection for the power battery.
- Positive/negative high-voltage cables connected to the power battery are usually controlled by a high-voltage relay. When disconnecting the vehicle high voltage power supply, the relay is disconnected to prevent the current from flowing out of power battery.
- The power supply of the vehicle needs to be cut off for 5 minutes before the voltage drops to a safe level for human touch. To prevent serious injury or death caused by accidental contact with high-voltage electricity, it is strictly forbidden

to touch, cut off or damage any orange high-voltage cables or high-voltage components.

- To avoid serious injury or even death, do not touch high-voltage cables, connectors, and high-voltage components (such as motor controllers and power batteries).
- If exposed wires protrude into or out of the vehicle, do not touch them under any circumstances, as an electric shock accident may occur.
- The high-voltage cables are all insulated from the metal body of the vehicle. The high-voltage current flows through these cables and does not pass through the metal body of the vehicle. As the metal body is insulated from high voltage parts, it is safe to touch the metal vehicle body.

Warning Information

- When a fault occurs in the power system or due to improper user operation, the instrument cluster automatically displays warning information; please read the information and follow the instructions. If the warning light illuminates, a warning message is displayed, or the low-voltage battery fails, the power system may not start. In this case, please try to start the system again. If the Ready indicator does not turn on, contact a Geely Service Centre as soon as possible.
- When the collision sensor detects an impact of a certain level, the system and high-voltage current output will be cut off, and the vehicle will not be able to start. Please contact a Geely Auto Service Center for inspection and repair.
- The removal and replacement of any high-voltage components in the vehicle may affect the performance and high-voltage safety, therefore any work involving the removal and replacement of high-voltage components must be the responsibility of a Geely Auto Service Center.

The vehicle is equipped with high voltage systems as well as a 12V low voltage system. High voltage systems are extremely dangerous. Serious injury or death may occur in case of failure.◀

Important Tips

- Please check tyre wear and tyre pressure regularly as per the methods recommended herein and tyre pressure requirements.
- Always use the oil and fluid recommended in this manual and perform maintenance according to the requirements.

Safety Precautions

- Observe all traffic laws, regulations and road speed limit and drive safely and responsibly.
- When performing parking operations, always ensure the vehicle has come to a complete stop before activating the electric parking brake and shifting the gear to the Park (P) position to prevent unintended vehicle movement.
- The vehicle is equipped with the Anti-lock Brake System (ABS). Please depress the brake pedal firmly rather than pumping it.
- This vehicle is equipped with airbags. For the safety of children, do not use the

backward child restraint system on a seat with frontal airbag protection (activated).

- In the event of a vehicle fire, occupants should evacuate immediately, move to a safe location, and call emergency services. Inform rescue personnel that the vehicle in fire is an electric vehicle equipped with high-voltage components.
- Avoid contact with leaking vehicle fluid. Immediately remove contaminated clothing and flush skin with copious amounts of water or soapy water for 15 minutes or more, then seek medical attention promptly upon skin contact with electrolyte solution. If the eyes come into contact with electrolyte, immediately open the upper and lower eyelids and flush the eyes with plenty of water for more than 15 minutes, then seek medical attention immediately.
- Do not disassemble, sell, transfer, modify, or store the power battery without authorization. It should be the responsibility of Geely Service Centre to recycle and remove the power battery from the scrapped vehicle according to the prescribed procedures to prevent safety accidents.
- It is necessary to use and place the floor mat with appropriate size properly. The floor mat should not affect the normal use of each pedal, so as to avoid affecting the action of the pedal due to the sliding of the floor mat, thus causing traffic accidents.

Accessories, Spare Parts and Modifications

- For your safety, arbitrarily removing or replacing vehicle parts or components is forbidden.
- Refitting or adding devices is not allowed. Geely shall not bear any responsibility for the direct or indirect losses incurred from modification or installation of additional equipment.
- Geely is responsible only for tested and certified original hardbound accessories and options. Geely original hardbound accessories are preferred in order to ensure the vehicle performance and safety are maintained.

Prompt Information

This manual provides information on all models. Due to the variation of configurations and models, the descriptions in this manual may differ from the actual configuration of your vehicle. The vehicle you actually receive shall prevail.

Warning



Ignoring the warning may cause serious injury or death. The stated steps or requirements must be strictly followed.◄

High Voltage

It means that the event stated here is related to the high voltage circuit of vehicle and must be strictly observed. Otherwise it may lead to electric shock, serious injuries or even death.◄

Caution



Steps and requirements stated in the caution must be strictly observed. Otherwise, your vehicle might be damaged.◄

Description



Indicative descriptions for your better use of the vehicle information.◄

Environmental Protection



Issues described are related to environmental protection.◄

Asterisk

The asterisk "*" symbol following a title or name indicates that the configuration or function described is only featured on certain models. Your vehicle may not necessarily have it.◄

Graphical Information



This arrow represents the operation direction of an object in the image.



This arrow represents the motion direction of an object in the image.



This arrow represents the rotation direction of an object in the image.



This arrow represents the flipping direction of an object in the image.

Event Data Recorder (EDR)

Geely vehicles are equipped with an event data recording system that conforms to the relevant national standards. This system is used to record the relevant information when a vehicle collides, such as the vehicle's driving speed (the signal comes from the chassis controller and is obtained from the sensor, indicating the vehicle speed at the time of the event) and braking status (indicating whether the vehicle is braking at the time of the event).


When a collision occurs, the current event data can overwrite the previous non-locked event data according to the time sequence of the accident data storage.

The event data information helps relevant personnel understand the state of the vehicle at the time of the event, and facilitate relevant parties to act in accordance with relevant laws and regulations. In addition, the information can be used for engineering research and help Geely Auto continuously improve product quality and safety.

According to the requirements of national laws and regulations, it may need to disclose relevant recorded data to certain authorities (such as the Police, relevant public organisations, or other institutions that have access to the event data recording system). Special data reading equipment conforming to corresponding standards shall be used to read data. The special equipment is connected to the OBD interface of the vehicle or the EDR controller is separately connected to extract the data. Only authorised individuals or organisations can read or extract the data.


Access to data reading equipment: If necessary, you can contact an authorised Geely Dealer and apply to the manufacturer for access to the equipment with their assistance.

Exterior Overview

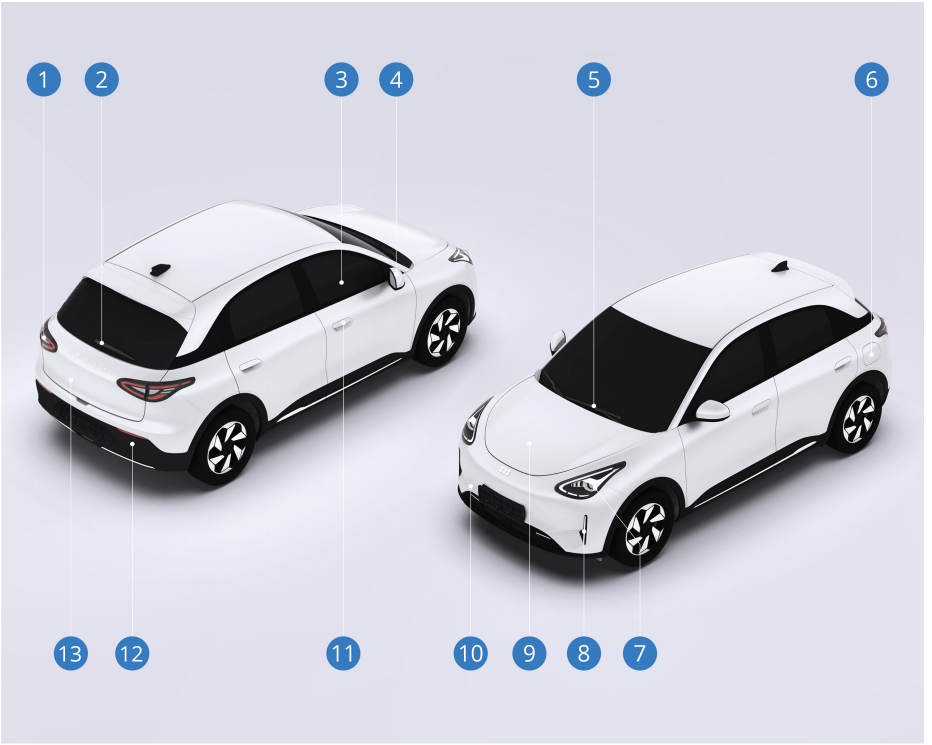

1. Rear Combination Light
2. Rear Wiper
3. Window
4. Exterior Rearview Mirror
5. Front Wiper
6. Charging Port
7. Front Combination Light
8. Daytime Running Light
9. Hood
10. Front Towing Hook Cover Plate
11. Exterior Door Handle
12. Rear Towing Hook Cover Plate
13. Trunk

Interior Overview

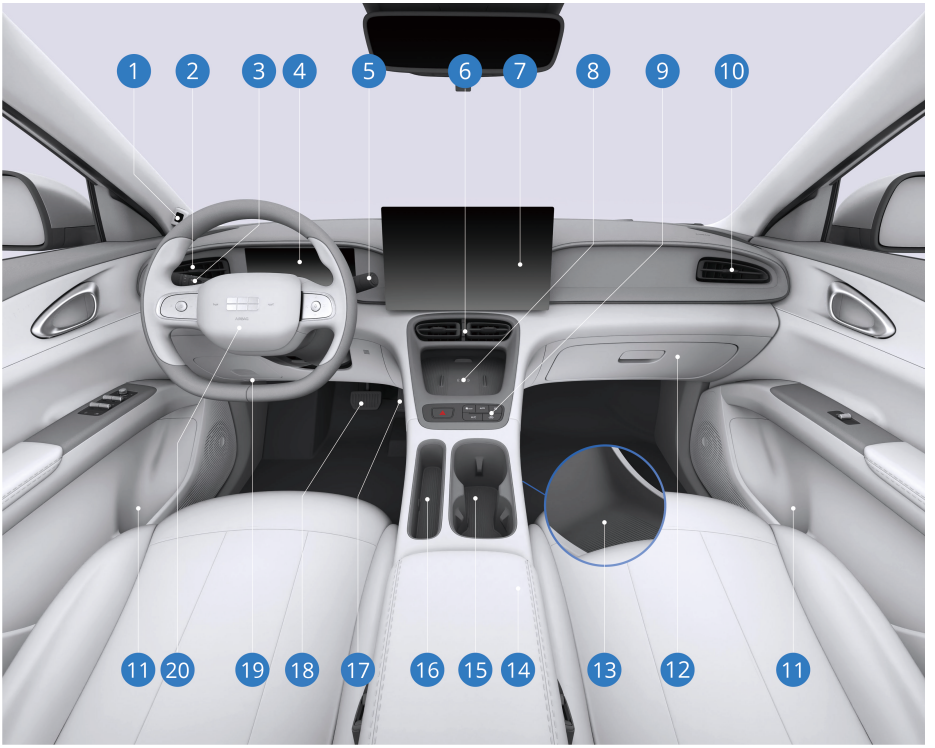

1. Driver Monitoring Camera
2. Left Air Outlet
3. Light/Wiper Control Lever
4. Instrument Cluster Display
5. Shift Lever
6. Central Air Outlet
7. Multimedia Display
8. Sub Instrument Panel Front Storage Box
11. Door Storage Box
12. Glove Compartment
13. Sub Instrument Panel Lower Storage Box
14. Front Center Armrest Storage Box
15. Cup Holder
16. Sub Instrument Panel Upper Storage Box
17. Accelerator Pedal
18. Brake Pedal

9.	Sub Instrument Panel A/C Control Switch	19.	Hood Release Handle
10.	Right Air Outlet	20.	Steering Wheel

Front Compartment Overview



1. Coolant Expansion Tank
2. Washer Fluid Reservoir
3. Frunk
4. Front Compartment Fuse Box
5. Brake Fluid Reservoir
6. Low-Voltage Battery


Seat Belt Overview

When the vehicle is running, all driver and passengers should wear seat belts properly. In case of emergency braking or an accident, wearing seat belts properly can reduce the injury to the driver and passengers.

- Improper wearing or fastening of safety belt may cause serious injury or death!
- No driver or passenger is allowed to sit in the area without seat and safety belt or the seat with damaged safety belt.
- Each seat belt can only be used by one person. Do not share a seat belt with others (including children).
- Do not pass the shoulder seat belt across the neck or pass through the armpit.
- The seat belt in the vehicle is primarily designed according to the body shape of adults, and children should use appropriate child safety devices.
- If a pregnant woman uses the seat belt incorrectly, the seat belt may cause serious injury or even death to the mother and fetus in case of emergency braking or collision.◄

- Do not remove, disassemble or modify the seat belt.
- Do not clean the seat belt with bleach, dyes or chemical solvents.◄

Proper Wearing of Seat Belts

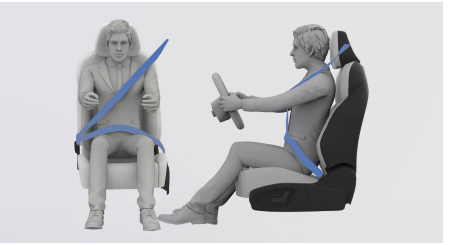

- The seat backrest should be in a vertical position and your back should make full contact with the backrest.
- The seat belt should not be twisted.
- The shoulder seatbelt should go over the shoulder and across the chest.
- The waist safety belt should be as close to the hip as possible.

Seat Belt Safety Guidelines for Pregnant Women

The method for pregnant women to wear seat belts is basically the same as that for normal use, but the following matters should be noted:

- Lower the waist seat belt as much as possible and place it under the bulging abdomen.
- The shoulder seat belt should pass over the shoulder but avoid the abdomen, so that it is located in the chest.

Seat Belt Reminder Alarm

Please pay attention to the illuminated warning light on the instrument cluster; otherwise, serious personal injury and property damage will be caused.◄

This vehicle is equipped with seat belt unfastened reminder function for the driver, front and rear passengers. When the seat belt unfastened reminder is triggered, the

seat belt unfastened warning light on the instrument cluster display will illuminate in different states, and the seat with the seat belt unfastened will be displayed on the instrument cluster display.

When the power system is activated, the warning light illuminates if the driver, front or rear occupant seat belt is not fastened.


- When the vehicle speed is 10~25km/h or the forward driving distance exceeds about 300m, this light will flash slowly and be accompanied by a warning tone.
- When the vehicle speed exceeds 25km/h, the lamp will flash quickly with warning tone.
- When the vehicle speed exceeds 10km/h, if the safety belt is unfastened, the lamp will flash and accompanied by a warning tone. Until the safety belt is fastened at the corresponding position, the lamp will go out and the warning tone will disappear.

Three-Point Seat Belt

- It is forbidden to insert objects other than the vehicle latch plate into the buckle, otherwise, it may cause failure of the buckle. This will reduce the protective effect of the seat belt and may cause serious personal injury or death.
- Take care to prevent foreign objects such as food scraps, nut shells, buttons, coins, viscous liquid from falling into the seat belt buckle. It may cause the failure of the seat belt reminder function and the locking or unlocking function of the buckle.◄


1. Lift the latch and slowly pull the seatbelt across your body.

The three-point seat belt may be locked when being pulled across body too fast. If this occurs, release and retract it a little to unlock it. And then pull the seat belt slowly across your body.◄

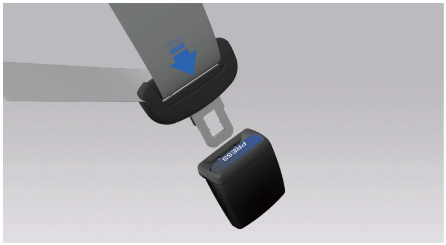

2. Press the latch into the strike plate until it clicks, then pull the latch to verify it is securely locked. Confirm the correct position of the release button on the buckle to facilitate unfastening of the seat belt when necessary;

3. Pull the shoulder belt upward to tighten the lap belt section.

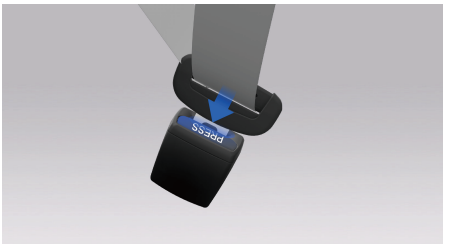

4. To release the seat belt, press red button on the buckle. The seat belt should return to unused state.

- When wearing a seat belt, do not allow it to become twisted or knotted.
- In order to prevent the seat belt from damaging the surrounding area due to excessively fast retraction or an obstruction due to too slow retraction, please return the seat belt to the original position after unfastening the seat belt.
- Ensure that the seat belt is not caught in the door before closing the door. Otherwise, the seat belts and doors will be damaged.◀

Seat Belt Pretensioner

The seat belts are equipped with seat belt pretensioners. In the event of a vehicle collision and the seat belt device reaches the trigger condition, the seat belt will be tensioned to keep the passengers safe. The pretensioner can only work once. After a collision, it is necessary to contact a Geely Service Centre for a new pretensioner, and other seat belt system components may need to be replaced.

Airbag Overview

Airbags are a passive supplemental restraint system, typically used in conjunction with seat belts to provide additional protection for the head, chest, and abdomen of occupants.




- Airbags are an integral part of the passive safety system, but can never replace the seat belts. All the passengers in the vehicle must fasten seat belts during driving.
- Depending on the collision position, angle, degree and type of object during the collision, airbags may not be deployed in all accidents.
- Airbags deploy with tremendous force, so occupants should adjust their seats to maintain a safe distance from airbags and curtain airbags, properly wear seat belts, and maintain correct seating posture to avoid serious injury or death.
- Due to the considerable speed and force when the airbag is unfolded, do not let infants or children on the front seat or hold them on the front seat to avoid serious injury.
- It is forbidden to place any object between any occupant and the airbag. Failure to comply may prevent airbags from inflating properly or cause the airbag to force the object into occupants during deployment, resulting in serious injury or death.
- When the airbag is deployed, some gas and dust will be released, which may irritate the skin and eyes. Please seek medical treatment if required.
- After the airbag is deployed, do not touch it to avoid scalding.
- The protection function of the airbag system can only be used once. If the airbag has been deployed, it must be replaced at a Geely Service Centre immediately.
- Do not maintain, repair or replace any part of the airbag system without authorisation. Otherwise, the system may not work normally, causing serious personal injury or death. ◀

Position of Airbags

Frontal Airbag

- Do not press or strike the driver airbag cover with excessive force, as this may trigger the deployment of the driver airbag, resulting in serious injury or death.
- During vehicle use, the occupants must ensure that they keep a distance of at least 25 cm from the airbag. Do not sit on the edge of the seat or lean against the dashboard to prevent serious personal injury or death when the airbags expand. ◄

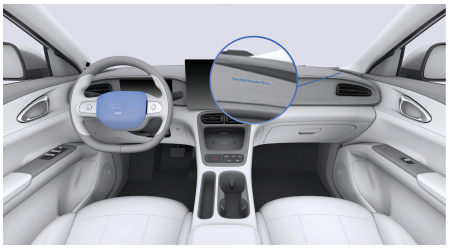

One airbag is mounted in the centre of steering wheel and the other in the instrument panel above the glove box respectively, marked with "AIRBAG".

Deployment and deflation of airbags are completed in a very short time. They will not have protective effects on a possible follow-up second collision. ◄

When the following conditions occur, contact a Geely Service Centre immediately:

- Frontal airbags have been deployed.
- The front part of the vehicle is impacted without triggering deployment of the frontal airbag.
- The frontal airbag cover has cracks, scratches or other forms of damage. ◄

Side Airbag

It is forbidden to install seat outer cover on the seat equipped with side airbag. Otherwise, it may affect the deployment of side airbag. ◄



Side airbags are mounted in the backrests of driver seat and front passenger seat, the seat is marked with "AIRBAG".

When the following conditions occur, contact a Geely Service Centre immediately:

- Side airbags have been deployed.
- The door is impacted without triggering deployment of the side airbag.
- The cover of seats at the side airbag assembly has cracks, scratches or other forms of damage. ◄

Before consulting the personnel of a Geely Service Centre, do not make any of the following operations that may affect the normal operation of side airbags:

- Install electronic devices such as mobile two-way radio communication devices.

- Refit the passenger side body structure. ◄

Far-Side Airbag



Far-side airbags are mounted inside the driver seat, the seat is marked with "AIRBAG".

Do not use a seat cover on the driver's seat back. ◄

Side Curtain Airbag

Do not install any decorative parts around the side curtain airbag, such as on the windshield, door glass, side pillars, or headliner, or stick microphones or other equipment inside the roof and on auxiliary handles. When the side curtain airbag is deployed, these items will be thrown out under the strong deployment force of side curtain airbag, resulting in personal injuries or malfunction of side curtain airbag. ◄



The side curtain airbags are installed above the doors on left and right sides of the vehicle and are labeled with a marking "AIRBAG".

When the following conditions occur, contact a Geely Service Centre immediately:

- Side curtain airbags have been deployed.
- The door is impacted without triggering deployment of the side curtain airbag.
- When the front pillar, rear pillar and roof side member decoration or ceiling fitted with side curtain airbags have been scratched, cracked or damaged in other forms. ◄

Before consulting the personnel of a Geely Service Centre, do not make any of the following operations that may affect the normal operation of side curtain airbag:

- Install electronic devices such as mobile two-way radio communication devices.
- Refit suspension system.
- Repair at or near the bracket. ◄


Deployment of Airbags

Deployment of Frontal Airbags



When the vehicle is subjected to a moderate to severe frontal or near-frontal collision and the system activation conditions are met, the front airbags will deploy to cushion the forward momentum of the occupants and prevent them from directly impacting the steering wheel and instrument panel.

Deployment of Side Airbags and Side Curtain Airbags

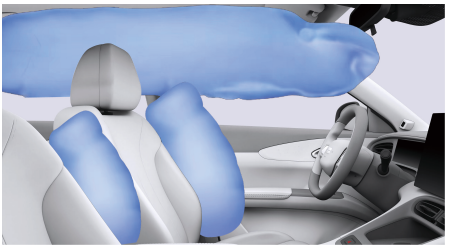

When the vehicle is subjected to a moderate to severe side impact and the system activation conditions are met, the side airbags and side curtain airbags will deploy. They work in conjunction with the seat belts to reduce injuries caused by the collision.

Cases in which Frontal Airbags May Not Deploy

- The vehicle is not started.
- Collision with easily deformable objects such as trees.
- When the vehicle collides against low objects like steps during driving.
- When the vehicle falls down into a trench or pit suddenly.
- In case of crash (underride collisions) against the rear of truck.
- Rollover.
- Side impact, rear impact and slight frontal impact.
- The airbag system has faults.
- Other special cases.

Cases in which Side Airbags and Side Curtain Airbags May Not Deploy

- Frontal or near-frontal collision.
- Rear impact.
- Rollover.
- Minor side impact.
- The airbag system has faults.
- Other special cases.

Airbag Deactivation

Front Passenger Side Airbag Switch



If a rear-facing child seat is installed in the front passenger seat, the front passenger airbag must be turned off. Press and rotate the indicated position to the OFF position.

It is forbidden to turn off the front passenger airbag when there is a passenger in the front row (not a child).◀

Front Passenger Airbag Status



Deactivating front passenger side airbag indicator status: OFF


Activating front passenger side airbag switch: ON

The front occupant airbag will only deploy in a collision when it is enabled. If the front passenger seat is occupied, please ensure that the front passenger side airbag is in the correct condition before and during driving.

Selection of Child Restraint System

When using a child restraint system on the passenger seat, the following instructions must be followed:

- When using a rear-facing child restraint system, the passenger airbag must be deactivated. After removing the rear-facing child seat, the front occupant airbag should be activated immediately.
- If possible, adjust the front occupant seat backrest to an upright position to ensure firm contact between the backrest and the child restraint system.
- When installing a child restraint system on the front passenger seat, the backrest of the child restraint may not fully conform to the contour of the seat. Try adjusting the seat position to allow the child restraint to be more securely restrained on the front passenger seat.
- When installing an ISOFIX child seat in an outer rear seat position, it is recommended to first tuck the ISOFIX cover flap between the seat backrest and cushion to facilitate insertion of the ISOFIX connectors.

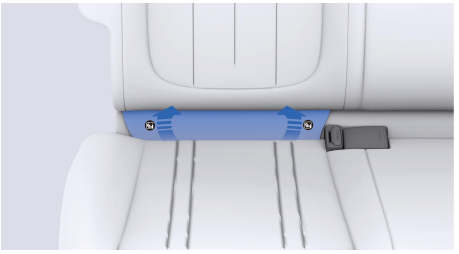

- When installing an ISO/R3 type child seat in an outer rear seat position, it is recommended to first adjust the front seat to the mid-position and tilt the front seatback slightly forward to increase rear seat space, facilitating installation of the child seat.
- When installing an ISOFIX child seat in an outer rear seat position, it is recommended to first tuck the ISOFIX cover flap between the seat backrest and cushion to facilitate insertion of the ISOFIX connectors.
- When installing a child seat with a top tether in an outer rear seat position, it is recommended to raise the headrest to its highest position or remove it, ensuring stable contact between the top tether and the top of the seat backrest.
- When installing a child seat with a backrest in an outer rear seat position, if interference occurs between the child seat and the headrest, it is recommended to remove the headrest.
- When installing a backless child seat in an outer rear seat position, it is recommended to adjust the headrest so that it is level with or above the top of the child's head.
- When installing a child seat with side impact protection pods in an outer rear seat position or the front passenger seat, it is recommended to fit the pods to the child seat to enhance side impact protection.

Applicability information of child safety seat on each seat when it is secured with seat belts:

		Front passenger seat				
	Driver Seat	**Enable the passenger airbag**	**Disable the passenger airbag**	**Second row left seat[(a)]**	**Second row middle seat[(a)]**	**Second row right seat[(a)]**
Seating position suitable for universal seat belt anchorage	X	Yes Front-facing only	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	X	No	No	Yes	No	Yes
Seating position suitable for lateral anchorage (L1/L2)	X	No	No	No	No	No
Maximum applicable rear-facing anchorage (R1/R2X/R32/R3/No)	X	No	No	R1/R2/R3	No	R1/R2/R3
Maximum applicable front-	X	No	No	F2X/F2/F3	No	F2X/F2/F3

	Driver Seat	Front passenger seat		Second row left seat[a]	Second row middle seat[a]	Second row right seat[a]
		Enable the passenger airbag	Disable the passenger airbag			
facing anchorage (F2X/F2/F3/No)						
Maximum applicable booster anchorage (B2/B3/No)	X	B2/B3	B2/B3	B2/B3	No	B2/B3

(a): Adjust the second-row seat backrest to the upright and locked position.

According to the child classification of ECE R129, child seats as shown in the table below is recommended:

Child Height	Manufacturer	Type	Accessories
40~105cm	Maxi-Cosi	Pearl 360 &FamilyFix 360 base	ISOFIX + support leg
61~105cm	BeSafe	iZi Kid X3 i-Size	ISOFIX + support leg
100~150cm	Britax Romer	Kidfix i-size	ISOFIX + seatbelt + XP-PAD + SecureGuard + SICT
135~150cm	Graco	Booster Basic R129	Seatbelt

Use of Child Restraint System

Infants and Older Children

Infants

Both seat belt and airbag systems on the vehicle are not designed for protecting infants. Corresponding child restraint systems should be used for infants and young children.



- The neck of an infant or young child is not fully developed, and his/her head is heavier than other parts of the body. In order to reduce the risk of neck and head injuries in a crash, infants and young children need comprehensive support.
- Do not carry an infant in your lap while riding. In the event of a crash, infants and young children cannot be held due to the impact of the crash, and they should be fixed in appropriate child restraint system.
- Do not let children stay alone in the vehicle or play with the seat belts. If the shoulder belt twines around the neck of a child, the child may be severely injured and even die when the seat belt is retracted.◀

Older Children

Older children who are beyond the range of child safety seats must wear seat belts.



- Do not route the safety belt across the child's face or neck, or place it behind the back or on the abdomen; instead, position the belt over the shoulder and across the chest, securing it snugly against the hips. Otherwise, serious injury or death may occur in a crash.
- It is forbidden for two children to share one seat belt, otherwise the seat belt cannot properly disperse the impact force, which may lead to serious injury or even death in the event of a collision.◀

The instructions attached to child safety seat states the weight and height limits for the children sitting in it. Children who meet the following applicable conditions must use the child safety seat together with the seat belt:

- The children's knees cannot bend on the edge of seat when they try to sit on the seat as backward as possible. Children's knees cannot bend on the edge of seat.
- The shoulder belt cannot put on the children's shoulder when the seat belt is fastened well.
- It is impossible to wear the seat belt at a lower position and be close to the buttocks of children.
- The seat belt cannot be always fastened properly during vehicle driving.

Description of child restraint system

It is generally recommended to use the rearward-facing child safety seat for infants and young children aged under 3~4 years. For children who are not suitable for rearward-facing child safety seats due to their large size, the forward child safety seats can be used. For children whose body size is too large to fit in the forward child safety seat, use an auxiliary soft seat cushion to fasten the seat belt.

Installation of Child Restraint System

It will be safer if children and infants are properly fixed in a child restraint system on rear seats.

Type I




Type II



There are warning labels pasted on the front and back of the sun visor at the front passenger side, reminding that the vehicle is equipped with frontal airbags and the related precautions shall be observed.

Do not use a rearward facing child restraint on a seat that is protected by an activated frontal airbag.◄

Installation of ISOFIX Child Restraint System

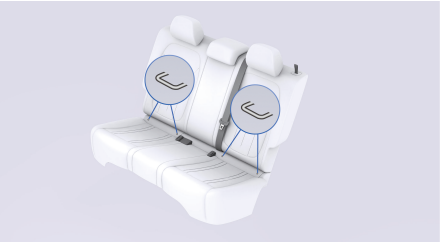


Dedicated fixing points that meets ISO specifications are mounted in the gaps on both sides of the rear end of the seat cushion. This fixing interface is used to install the child restraint system with standard ISO specification on the rear seat. It is not necessary to fix the child restraint system with a seat belt at this time.

- When installing a child restraint system in a rear seating position, carefully read the manufacturer's instructions provided with the child restraint. It is essential to confirm with the child restraint manufacturer whether the device is certified for use in this specific vehicle model and can be installed correctly.
- If the child restraint system is not installed to the ISOFIX fixing interface correctly, it may not work properly. Severe injury or even death may occur to the child. When installing a child safety device, make sure to strictly follow the instructions of manufacturer.
- Always mount child restraint system when the vehicle is stationary.◄

Install child safety seat needing top tether according to the following procedures:

1. Lower the seat headrest to the lowest position;

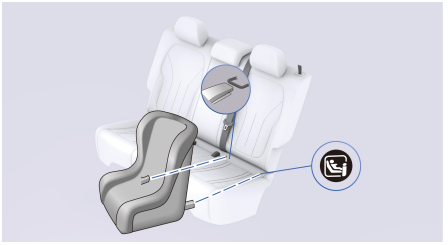

2. Locate the ISOFIX fixing interface on the vehicle seat;
3. Align the ISOFIX connectors on the child restraint system with the vehicle's ISOFIX anchorage points and insert them securely.
4. Check that the buckles are properly locked;



5. Hook the child safety seat strap into the seat backrest fixing interface.

Ensure the top tether belt is securely fastened. Push and pull the child restraint system in multiple directions to verify it is firmly installed. Follow the manufacturer's instructions for proper installation.◀


If the child restraint system is not installed to the ISOFIX fixing interface correctly, it may not work properly. Severe injury or even death may occur to the child. When installing a child safety device, make sure to strictly follow the instructions of manufacturer.


The child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Always mount child restraint system when the vehicle is stationary. When the ISOFIX child restraint system is correctly fixed to the ISOFIX fixing interface, a “click” sound will be heard.◀

Installation of Child Restraint System with Top Tether

The anchor point for the top tether is located at the end of the front passenger seat rail. When installing a child restraint system with a top tether, the front passenger seat needs to be adjusted to its forward position to find the anchor point for the tension strap. When installing a child restraint system, carefully read the manufacturer's instructions provided with the child restraint. Ensure the top tether is correctly fixed on the anchor point.

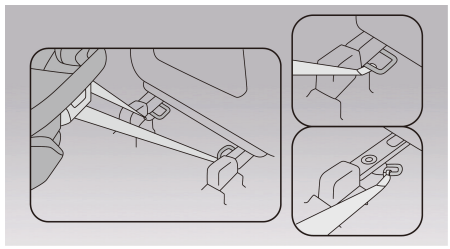

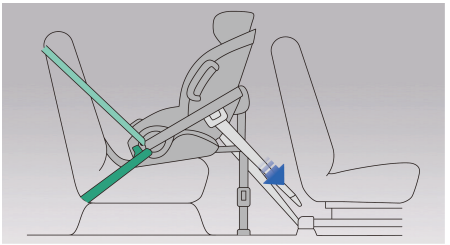

Child Safety Lock



The left and right rear doors are fitted with child safety locks. Please use child safety locks when left/right sides of rear seat are occupied by children.

Child Safety Lock On

Toggle the child safety lock switch in the arrow direction as shown in the figure, then the child safety lock will be in the "open" position; the door cannot be opened from the inside but can be opened from the outside to protect the safety of children.

Child Safety Lock Off

Toggle the child safety lock switch in the opposite direction of the arrow as shown in the figure, then the child safety lock will be in the "closed" position; the door can be opened from the inside or the outside.

- After setting the child safety lock, be sure to check whether the door can be opened from inside to ensure child safety lock functions normally.
- Using the Child Safety Lock can prevent children in the car from unintentionally opening the rear door, reducing the risk of travel accidents.◀

Vehicle Search

When you forget the parking position of the vehicle, you can press the locking/vehicle search button on the smart key twice consecutively to find it.

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → Custom → Vehicle Search Mode, and then select Honk & Blink, Honk or Blinking Lights from the interface.


Key Unlock and Lock

Key Features

The smart key has been matched with the vehicle system. If the smart key is lost, damaged or stolen, please contact a Geely Service Centre immediately to disable the smart key's vehicle control functions such as starting, unlocking and locking. If the smart key is recovered, the Geely Service Centre can reactivate the above functions of the smart key.

Please keep the spare smart key in a safe place and do not place it in the vehicle.◀

A new smart key should be paired with the vehicle at Geely Service Center before normal use.◀

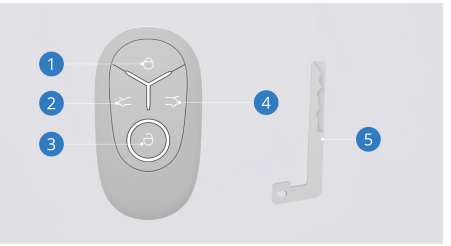

1. Lock / Vehicle Search Button
2. Frunk Button
3. Unlock Button
4. Trunk Button
5. Mechanical Key

If the smart key is interfered by other signals, the vehicle may not be able to detect the key, be started, be unlocked and locked etc.

- The smart key is covered by metal shields, for example, when placed

together with mobile phones that have metal shells.

- Do not place smart keys near electronic devices that generate strong interference, such as laptops, Bluetooth headsets, active power adapters and chargers, Bluetooth access cards, two-way radios, or items with built-in security chips.◄

Do not make unauthorized modifications to the smart key, including but not limited to altering its transmission frequency, increasing its transmission power (such as by adding an external power amplifier), or attaching external or alternative detection antennas.◄

Remote Unlocking

After a short press on the unlock button of the smart key, the vehicle is unlocked and the turn signals flash several times. Press and hold the frunk button on the smart key to unlock the frunk. Briefly press the trunk button on the smart key to unlock it. For models equipped with a power trunk, press and hold the trunk button on the smart key to unlock and automatically open the trunk to the set position.

Remote Locking


When the locking/vehicle search button of the smart key is briefly pressed, the vehicle is locked, the locking prompt sound (The locking prompt sound function is enabled) is produced, the turn signal flashes, the interior lights go out, and the audio entertainment system is turned off. If either door is not closed, the door will not lock when the locking / vehicle search button on the smart key is pressed.

Set door locking prompt sound function

Click the following on the multimedia display in sequence: Vehicle Settings → Sound Settings → Spatial Sound, and then enable or disable the locking prompt sound in the interface. Lock Sound Effect: When the locking confirmation sound is enabled, you can select from different lock sound effects.

Keyless Unlock and Lock

Locking and Unlocking of Vehicle by Touching Door Handle Button

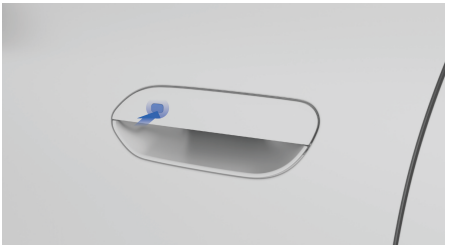

Unlocking

When carrying a valid smart key within a certain range of the driver door, touching the locking/unlocking area on the driver door handle will unlock the four doors automatically. And the doors will be opened by pulling the door handle. Upon successful unlocking the doors, the turn signals flash.

Locking

After closing the four doors, hood, and trunk, press the unlocking/locking button on the driver door handle to lock the four doors. After successful locking, the turn signal flashes, the locking sound prompts (locking prompt sound function on), and the interior backlight fades out.

Keyless locking will fail if the following occurs:

- There is a door not closed.
- The hood or trunk is not closed.

When keyless locking operation is performed, if the turn signal indicator is not visible or the locking confirmation sound is not heard (with the locking sound function enabled), it indicates that the locking has failed. The possible reasons may include the following:

- If the vehicle is locked and the trunk is opened and then closed again, the vehicle will not lock if the smart key used for locking was left inside the trunk, to prevent the smart key from being locked inside the vehicle.
- To prevent accidental operation, after the driver unlocks the vehicle using the front door handle, there is a 1 second wait period before the keyless locking function can be executed. Similarly, within 1 second after locking, the keyless unlocking function cannot be used.
- There are blind spots in the smart key detection range. Please do not place the smart key in remote locations such as storage shelves.◀

- The smart key only works within a certain distance. Please note that its working scope is sometimes affected by physical and geographic factors. For safety reasons, it is necessary to check whether the operation succeeds when locking the vehicle.
- When the vehicle is in a charging pile, a large parking lot, a substation, and other places with signal interference, or when the smart key is put together with the interference equipment (such as phones, Bluetooth headsets, computers and inverters), the smart key will be interfered. Consequently, abnormal key functions, such as unlocking or locking abnormalities will be observed occasionally. If so, wait for 3s before placing hand on the door handle

unlocking or locking sensor area for unlocking or locking.◄

Central Unlock and Lock



The central door locking button is located on the driver's side door armrest.

Unlocking

All doors will be unlocked if central control button is pressed when four doors are locked.

Locking

All doors will be locked if central control button is pressed when four doors are closed.

The unlocking by using central control buttons inside the vehicle can only be executed in the state that the anti-theft system is disabled.◄

Automatic Unlock and Lock

Collision Unlocking

In case of severe collision during travel and the system detects a collision signal, the four doors are unlocked automatically so that the passengers can leave the vehicle quickly. Whether to automatically unlock depends on the specific impact force and accident type.

Automatic Unlocking When Parking

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → Doors and Windows, and then enable or disable the Automatic Door Unlocking When Parked in the interface. After the function is enabled, and he vehicle is locked, the doors will unlock automatically if the vehicle stops and the engine is turned off.


Automatic Re-locking

When the vehicle is in the locked state and the unlocking button of the smart key is pressed, if any of the four doors and trunk is not opened, the four doors will be locked again automatically. After the interior lights turn off, the system enters the armed state.

Automatic Locking During Driving

While the vehicle is in motion, the doors will automatically lock once the speed exceeds a certain value.

Door Open

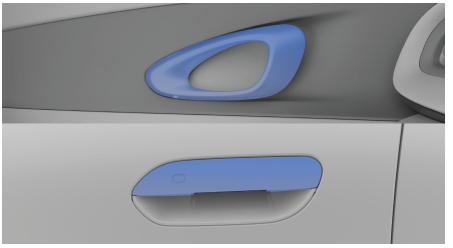

When doors are in the unlocked state, the door can be opened by pulling interior/ exterior handles of vehicle.

Occupant In-Vehicle Detection

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Intelligent Reminders to enable or disable the rear occupant detection function on this interface.

After the vehicle is locked, if the system detects the presence of an occupant or an active pet (larger than 20*50 cm), a life detection warning light and horn alert will be triggered, and a notification will be sent to the driver. If the presence remains after the initial alert, the warning will escalate to a cyclic warning. If the interior temperature becomes too high, the system will lower the windows for ventilation.

After locking, significant movement or vibration caused by non-living objects inside the vehicle (e. g., seat movement or swinging decorations) may affect the accuracy of the detection function.◄

Trunk Opening and Closing

- Maintain a safe distance from the trunk during opening or closing to avoid personal injury.
- Never allow a child to enter the trunk. Once a child is trapped in the trunk, it is likely that he or she will not be able to escape on their own and will result in heat stroke or other unintentional injuries. Make sure the trunk is closed when the vehicle is unattended.◄

When manually opening or closing the trunk, please be gentle (open or close slowly). Failure to do so may result in damage or loss of function of the trunk.◄

Opening/closing trunk inside vehicle*

The trunk can be opened by swiping down the multimedia home screen and clicking the trunk button. Click the trunk button again to close it.

Opening Tailgate via Smart Key



When the vehicle power is in OFF or ACC mode, briefly press the trunk button on the smart key to unlock. For models equipped with an electric trunk, press and hold the

trunk button on the smart key to unlock, and automatically open the trunk to the preset height. Press and hold the trunk button on the smart key again to close the trunk.

Opening or closing the trunk from outside of vehicle


Trunk Opening



When the vehicle is stationary and unlocked, press the trunk button on the trunk to open the trunk.

When the smart key is near the trunk and is not disturbed, press the trunk button on the back door to open the trunk.

Trunk Closing*

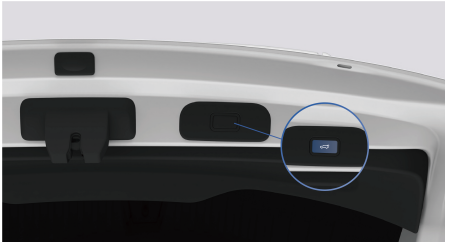

When the vehicle is stationary and the trunk is open, briefly press the trunk button on the trunk to close the trunk.

Manual closing of trunk




When the vehicle is stationary and the trunk is open, press down slowly at the indicated position in the figure until a clicking sound is heard to close the trunk.

Trunk opening height setting*

Setting via the Multimedia Display

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → More, set the tailgate opening height in the interface.

Setting via the Tailgate Close Button

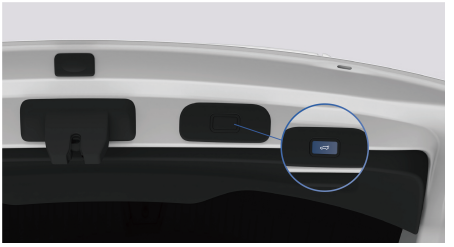


1. When opening or closing the trunk from outside of the vehicle, press the trunk close button shortly to suspend the opening or closing of the trunk.
2. Manually push the trunk up or down to adjust to the desired height.
3. Press and hold the trunk close button until you hear two beeps; the height of the trunk is successfully set. Next time the trunk is opened, the height setting for this time will be used.

Anti-theft System

The anti-theft system is available for this vehicle. The anti-theft system is automatically disarmed when the brake pedal is depressed, the gear is not in Park (P) and a valid key is found in the vehicle.

If the vehicle cannot be started by either of the following two methods, then repair of the vehicle is required. Contact a Geely service outlet for a new key.

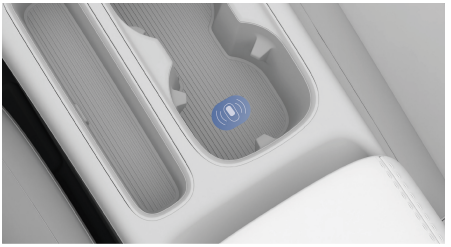

- Place the key in the key symbol area inside the front cup holder.
- If the key appears to be undamaged, try using another smart key.

Do not leave the key or devices that can disable the anti-theft system in vehicle.◄

Anti-theft Alarm System

The anti-theft alarm system is a system that generates an audible and visual alarm when the risk of vehicle theft is detected. The anti-theft alarm system will enter the armed state 30 seconds after the vehicle is locked.

Using a smart key or locking and unlocking functions outside the car will disable the functions of other key inside the vehicle after 30 seconds. ◄


In the armed state, the anti-theft alarm is triggered when the doors, hood, and trunk are not opened in a reasonable manner.

The triggered anti-theft alarm system can be turned off in any of the following ways:

- Starting the vehicle (with a valid key in the vehicle detection range).
- Unlocking the vehicle with a valid key. ◄

Front Storage

Opening/Closing of Centre Armrest

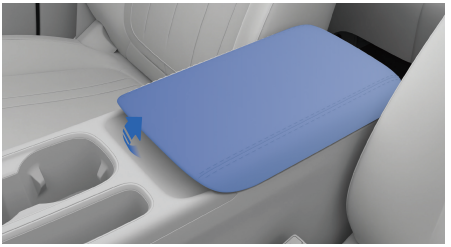

A storage box is provided under the front centre armrest, which can be accessed by flipping up the centre armrest.


Do not open the storage box under the centre armrest during driving.◄

Opening/Closing of Glove Box



Pull the glove box handle to open the glove box. Push the glove box cover forward to close the glove box.

Rear Storage

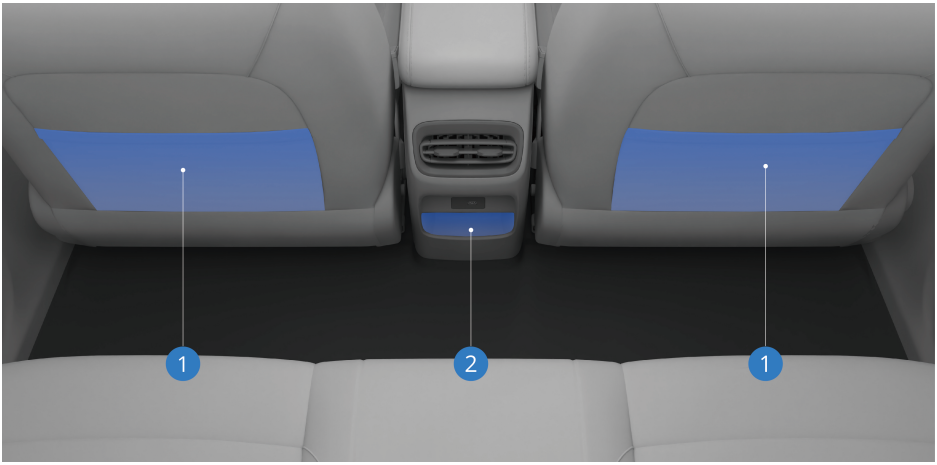

1. Magazine Pocket
2. Sub Instrument Panel Rear Storage Box

The magazine bag is located on the back of front seat and is used to contain small objects like newspaper, maps etc.

Do not put heavy or sharp objects in the magazine pocket to avoid damage to the magazine pocket.◀

Frunk Storage



Opening the hood to use the frunk storage box.

Do not leave pets in the frunk to avoid accidental injury.◀

- When storing liquid items, ensure they are properly sealed to prevent leakage and potential damage to the vehicle. In case of any spillage, clean it up promptly.
- The height of stored items cannot exceed the upper edge of the frunk storage box to avoid potential damage to the hood.
- Do not place items exceeding 25kg in the frunk storage box, as this may cause damage to it.
- Items may move during sudden braking or collisions. Secure all objects properly to ensure driving safety.◀

Trunk Storage



When the trunk is opened, objects can be loaded in the trunk, and the trunk light will automatically illuminate.

Do not leave pets in the trunk to avoid accidental injury.◀


- If the weight of loaded goods exceeds the loading capacity of the vehicle, or the weight distribution of the vehicle is uneven after being loaded, the driving ability of the vehicle will be affected seriously and reducing the driving safety. Luggage in the loading area will move in case of a traffic accident or emergency braking. Objects should be placed as low and forward as possible, i.e., as close to the rear seat backrest as possible.
- When loading a higher or larger object, the size of the object must not exceed the height of the seat backrest and the compartment, and make sure to fix the object in the vehicle to ensure driving safety.◀

Adjustment of Driver Seat

- Do not adjust seats while driving. So as not to lose control of the vehicle and thus cause personal injury or death.
- The seat backrest should not be inclined too much during driving. Otherwise, it may cause personal injury or death in the event of a collision.
- In the event of an accident, the seat belt can provide maximum protection only by maintaining the correct sitting posture.◀


Do not place any object under the power seat or obstruct the movement of the seat. Otherwise, the seat adjustment motor may be damaged.◀

Type I

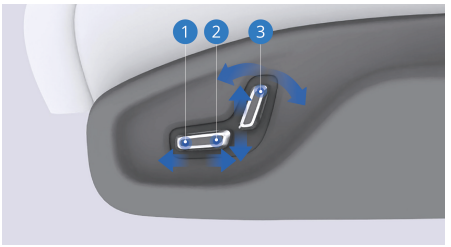

1. Move the switch forward/backward to adjust the front and rear positions of the seat.
2. Move the rear end of the switch up/down to adjust the height of the seat cushion.
3. Move the switch forward/backward to adjust the angle of the seat backrest.

Type II

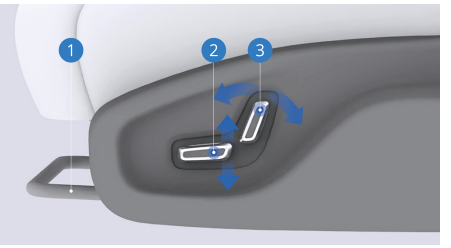

1. Hold the middle of the forward/backward adjustment lever and pull it up. Lean lightly against the seat and slide the seat to the desired position. Release the adjustment lever until the seat rail clicks and the seat is locked.
2. Move the rear end of the switch up/down to adjust the height of the seat cushion.
3. Move the switch forward/backward to adjust the angle of the seat backrest.


Horn



Press the horn icon area on the steering wheel and the horn will beep.

Adjustment of Steering Wheel

- Do not adjust the steering wheel while the vehicle is in motion, as this may lead to personal injury, death, or property damage.
- After adjusting the steering wheel position, please confirm that the steering wheel is firmly locked, otherwise it may cause personal injury, death or property damage.◄

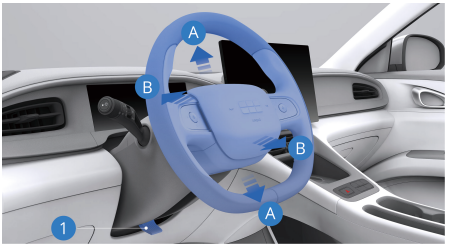

1. Steering Wheel Lock Lever

Adjust the steering wheel to the proper position by following these steps:

1. Adjust the seat to a proper driving position;
2. Turn the steering wheel to the straight-ahead driving position;
3. Release the steering wheel locking lever fully;
4. Use both hands to hold firmly the steering wheel and adjust it back/forth (directions B), up/down (directions A) to the optimal position.
5. Fold the steering wheel locking lever fully to lock steering wheel in the current position.

Setting of Steering Wheel Turning Force

The driver should choose an appropriate steering force according to driving skill and road conditions.◀

When the vehicle power supply is in ON gear or the vehicle is started, click the following on the multimedia display in sequence: Vehicle Settings → Driving → Driving Mode → Steering Assist, and then select the required steering force.

Steering Assist: After the function is activated, the steering wheel turning force will match the selected driving mode. After the function is deactivated, you can choose comfort, standard, or sports mode based on your driving needs.

Steering Wheel Heating*

When the interior temperature is low and the vehicle is in the power-on mode, click the seat button in the A/C interface of the multimedia display, then click the steering wheel heating button to activate the steering wheel heating function.

Once the steering wheel heating reaches the temperature set for the selected level, the system will automatically regulate temperature fluctuations to maintain the steering wheel at that target temperature.

The steering wheel heating indicator light indicates the heating level status of the steering wheel. When the 1st level is lit, it means the steering wheel heating is in low level, when the 2nd level is lit, it means the steering wheel heating is in medium level, and when the 3rd level is lit, it means the steering wheel heating is in high level. When all three indicator lights below the steering wheel heating adjustment button are off, it means the steering wheel heating is in the off status.◀

Automatic steering wheel heating function


Click the seat button in the A/C interface of the multimedia display, and then click the steering wheel automatic heating button to turn on or off the steering wheel automatic heating function.

The steering wheel heating function is automatically activated when the cabin temperature is low. When the steering wheel temperature exceeds the target heating temperature, the heating function will be automatically deactivated.

The steering wheel heating function defaults to level 3 when activated.◄

Steering Wheel Buttons


Left Steering Wheel Buttons

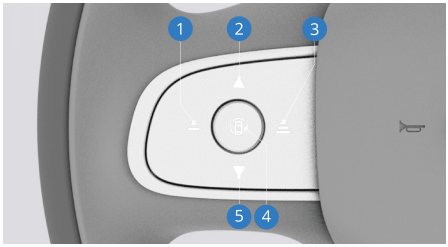

1. Headway - button: Short press to decrease the headway.
2. Speed adjustment and cruise resume button:
   - Short press: the cruise speed increases by 5 km/h.
   - Long press: the cruise speed increases by 1 km/h continuously.
   - With the function deactivated, press the button to recover the Intelligent Cruise Control (ICC)/Adaptive Cruise Control (ACC) function.
3. Headway + button: Short press to increase the headway.
4. OK button: When the function is inactive, press the button to activate the Intelligent Cruise Control (ICC)/Adaptive Cruise Control (ACC) function. After the function is activated, briefly press the button to exit the Intelligent Cruise Control (ICC)/Adaptive Cruise Control (ACC) function. Press and hold the button to exit and turn off the Intelligent Cruise Control (ICC)/Adaptive Cruise Control (ACC) function.
5. Speed adjustment and cruising activation button:

- Short press: the cruise speed decreases by 5 km/h.
- Long press: the cruise speed decreases by 1 km/h continuously.
- Press this button to activate the Intelligent Cruise Control (ICC)/ Adaptive Cruise Control (ACC) system function and set the current speed as the cruising speed.

Right Steering Wheel Buttons

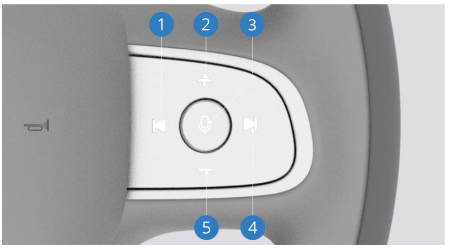

1. Left button: When the instrument cluster menu is closed, short press the left button can mute ordinary alarm messages or switch to the previous song or channel. Short press the left button to hang up a Bluetooth call. Press and hold the left selection button to turn on or off the instrument cluster menu. When the menu is open, briefly press the same button to cycle through menu options.
2. Up button: short press the up button to increase the volume of the multimedia or Bluetooth phone audio source, and press the up button to unmute when it is in mute status.
3. Merge Button: Briefly press the merge button to turn the voice function on or off. Long press the Fusion button to activate the device Connection function.
4. Right button: When the instrument cluster menu is closed, short press the right button can mute ordinary alarm messages or switch to the next song or channel. Short press the right button to answer phone calls, and short press the button during the call to turn off the microphone. Press and hold the right selection button to turn on or off the instrument cluster menu. When the menu is active, briefly press the same button to cycle through menu options.
5. Down button: short press the down button to decrease the volume of the multimedia or Bluetooth phone audio source. Press and hold the down button to mute.

AVN restart button: Press and hold the left selection button for more than 10 seconds at the same time to restart the instrument cluster and multimedia. For driving safety, these operations are only allowed when the vehicle is in Park (P) and not in READY mode. ◄

Adjustment of Exterior Rearview Mirrors

- It is strictly forbidden to adjust the side mirrors while the vehicle is moving; otherwise, personal injury and property damage may result.
- Make sure to unfold the exterior rearview mirrors and adjust them properly before driving.
- Do not touch the side mirrors when adjusting them to avoid personal injury. ◄

If the exterior rearview mirror is frozen, do not operate the exterior rearview mirror adjustment switch or use sharp tools to remove frost to avoid damaging the exterior rearview mirror surface. It is recommended to use the exterior rearview mirror heating function equipped on the vehicle to melt the frost. Wait until the frost is completely melted before adjusting the exterior rearview mirror. ◄

Adjustment of Exterior Rearview Mirrors



The exterior rearview mirror adjustment switch is on the interior trim panel of the driver door.

1. When the vehicle is powered on, press the mark L or R on the exterior rearview mirror adjustment switch to select the corresponding left and right exterior rearview mirrors;
2. Toggle the exterior rearview mirror adjustment switch back/forth, left/right to adjust the angle of exterior rearview mirror glass;
3. After the adjustment, press the exterior rearview mirror selection button again, and the selected state is exited.

Exterior Rearview Mirror/Rear Windshield Defrost/Defog function

Click the A/C interface on the multimedia display, and after clicking the exterior mirror/ rear windshield defrosting/defogging icon, turn on or off the exterior rearview mirror/ rear windshield defrost/defog function. When the exterior rearview mirror / rear windshield defrost/defog function is turned on, the button indicator lights up. Click this button again to turn on or off the exterior rearview mirror/rear windshield defrost/ defog function.

Exterior Rearview Mirror Folding/Unfolding

Power-folding Exterior Rearview Mirrors



Press the L and R exterior rearview mirror select buttons simultaneously and the exterior rearview mirrors will fold automatically. Press again and exterior rearview mirrors unfold automatically.

Frequent folding and unfolding of the exterior rearview mirror will result in temporary failure of the power folding function.◀

Auto Unfolding of Exterior Rearview Mirrors

When the exterior rearview mirrors are folded, they will automatically unfold once the vehicle speed exceeds a certain threshold.

Exterior Rearview Mirror Folding While Vehicle Locking

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → Custom → Fold Exterior Mirrors When Vehicle Locked, and then enable or disable the Fold Exterior Mirrors When Vehicle Locked function in this interface.

When the exterior rearview mirror adjustment switch is in the non-folding position and the exterior rearview mirror is in the unfolded state, the exterior rearview mirror will automatically fold after the vehicle is locked.


Adjustment of Interior Rearview Mirror

Adjustment of Interior Rearview Mirror

The interior rearview mirror can be adjusted to required position by turning it.

Never adjust the interior rearview mirror while the vehicle is running. Otherwise, severe personal injury or death or property loss may occur.◄

Mechanical Dimming Interior Rearview Mirror

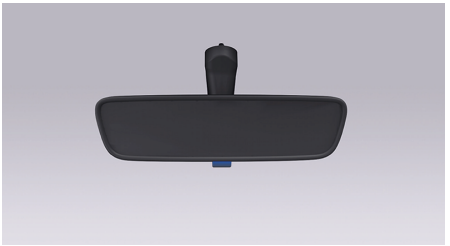

Pull the bottom handle of the interior rearview mirror to change the angle of view to realize the dimming function; push the handle back to return the interior rearview mirror to the normal position, and disable the dimming function.

Do not obstruct the rearview mirror and keep its surface clean to ensure proper function.◄

Window Opening/Closing

- It is strictly forbidden to leave children, incapacitated adults or pets in the locked vehicle with windows closed. High temperature may prevent them from escaping, which could result in injury or death due to heat exposure.
- Do not try to test the anti-pinch function with your body, otherwise it will cause personal injury or death.
- When the window is about to close completely, the anti-pinch function may not work.◄

Opening/Closing Windows via the Window Switch



1. Left Front Window Switch
2. Right Front Window Switch
3. Right Rear Window Switch
4. Window Locking Switch
5. Left Rear Window Switch

Manual Operation:

Push forward or backward the window switch and hold on, the window will manually open or close.

Automatic Operation:

Push forward or backward the window switch to the automatic position, then

release the switch, the window will open automatically or close.

Window Lock:

Press the switch to start the locking function, the window locking switch indicator light is on, and rear window opening/closing is disabled. Under these conditions, the rear windows can still be raised or lowered via the driver side window switch. When the window lock switch is pressed again, the indicator light turns off and the locking function is deactivated.

- The front passenger side and rear window switches can control the windows at their respective positions.
- During the automatic opening or closing process of the window, the window will stop opening or closing if the window switch is pressed again or pulled upward. ◄

Remote Opening/Closing of Windows

When the vehicle is in non-Ready status, press and hold the unlocking button on the smart key, the four windows will be opened at the same time; when pressing and holding the lock/vehicle search button on the smart key, the four windows (if equipped) will be closed at the same time.

Auto Close Windows after Locking

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → Doors and Windows, and then enable or disable Automatically Close Windows When Locking function in this interface. After the function is enabled, briefly press the lock/vehicle search button on the smart key, and the four windows (if equipped) will be closed at the same time.

Auto Window Closing in Rain*

When the vehicle is powered off and locked, and if it suddenly rains and the power windows are open, the vehicle can automatically close the power windows.

If the windows are not self-learning, they will not close automatically on rainy days.◄

Thermal Protection of Power Windows

If the window is operated repeatedly in a short period of time, the power window thermal protection may be triggered, causing the power window control switch to be temporarily ineffective. After a short wait, the power window operation will return to normal.

The automatic recovery waiting time is long. If you need to operate the window immediately, simply power off and restart the vehicle to resume power window function.◄

Anti-pinch Function

During the automatic closing process of the power window, if an object is caught between the glass and the window frame, the window closing operation will automatically stop and return to the initial state. If the window is hit hard, the anti-pinch

function may be triggered even if no object is pinched.

Anti-pinch Power Window Self-learning

If the power window anti-pinch function does not work properly, the power window needs to be self-learned.

The self-learning steps are as follows:

1. Push the window switch backward to the manual up position until the window glass has fully risen to the top position, then push the window switch backward again and hold it for more than 3 seconds before releasing it;
2. Push the window switch forward to the manual down position until the window glass fully lowers to the bottom position, then push the window switch forward again and hold it for more than 3 seconds before releasing it;
3. Push the window switch backwards until the glass is fully raised to the top position;
4. Complete the rise and fall of other glasses again to complete self-learning.
5. If the power window does not work properly after the above operation, contact a Geely Service Centre for maintenance.

Using Wipers

Wiper Combination Switch



1. Front wiper control switch
2. Rear wiper control switch
3. Light/Wiper Control Lever

- Do not operate the wipers on a dry, dusty, or gritty front windshield, as this may scratch the front windshield and reduce the service life of the wiper blades.
- If the wiper or front windshield is covered by ice or snow or is frozen, clear the ice and snow on the wiper and windshield before using the wiper to avoid damage. ◀

Operations of Wiper Combination Switch



Front Wiper Off

Rotate the control switch to ⎓ position, the wiper is turned off.

Intermittent Wiping of Front Wipers

Rotate the control switch in direction A to ··· Or ··· position, the wiper will perform an intermittent wiping operation.

Automatic wiping of front wipers*

Rotate the control switch in direction A to ··· Or ··· position. This activates the automatic wiping operation. ··· Vs. ··· Higher sensitivity. At this time, the wiper control system automatically adjusts the wiping speed according to the amount of rain.

LO Operation of Front Wipers

Rotate the control switch in direction A to the low-speed position. — the front wiper perform slow speed wiping operation.

HI Operation of Front Wipers

Rotate the control switch in direction A to the high-speed position. ═ Turn the control knob to position in the A direction, the wiper performs high speed wiping operation.

Mist Operation of Front Wipers

Press the button at the end of the light/wiper control handle (position 1), the button will automatically return to its original position after releasing, and the wiper will perform MIST operation.

Front Windshield Washing

Press the button at the end of the light/wiper control handle (2nd gear), and the front windshield washer sprays water while the wiper wipes; after releasing the button at the end of the light/wiper control handle, the washer stops spraying water, the wiper resets after wiping a few more times, and the front wiper operates in sequence then it closes.

Rear Wiper Wiping

After pushing the rear wiper control switch in the C direction to point to — location, rear wiper will wipe continuously; After pushing the rear wiper control switch in the direction B to point to ⁼ location, the rear wiper will stop wiping.

Rear Windshield Washing

Push the rear wiper control switch in B or C direction to position and hold it, and the wipers wipe while the rear windshield washer sprays water. After releasing the rear wiper control switch, the washer stops spraying and the wipers return or wipe continuously after several cycles.

Exterior Lighting

Light Control Stalk



High/Low Beam Switching

With the low beam on, push the light/wiper control handle to the 1st gear in direction A to turn on the high beam. Push the light/wiper control handle to any position in direction B to turn off the high beam. When the Intelligent High Beam Control system is active, push the light/wiper control stalk to its limit in direction B to turn off the intelligent high beam control system.

High Beam Flashing

Push the light/wiper control handle to any position in direction B and the high beam flashes. After releasing the light/wiper control handle, the high beam flashing turns off; repeat the operation to flash the high beam.

Turn Signal

After turning the light/wiper control handle in C/D direction to the limit position, the right/left turn signals flash, and the light/wiper control handle automatically returns to its position. After the steering is completed, the turn signal is turned off.

Lane Change Light Function

Turn the light/wiper control handle to the middle position for a short time in C/D direction, the handle will automatically return to its original position after releasing, and the right/left turn signals will flash 3 times and then go out.

Daytime Running Light

After the vehicle is started, when the low beam is off and in daytime mode, the daytime running light will be turned on.

When low beam is turned on, daytime running light is turned off automatically.

Set the Exterior Light on the Multimedia Display

Click the following on the multimedia display in sequence: Vehicle Settings → Lights and adjust the exterior lights in this interface.

1. Exterior Lights: You can turn the Auto Lights, Position Lights, and Low Beams on or off.
2. Rear Fog Light: With the low beams on, tap to turn the rear fog light on.
3. Headlight Height Adjustment: Adjust the beam height of the low beam according to the number of passengers and the vehicle's load.
4. Unlock Light: When this function is enabled, briefly press the unlock button on the smart key to unlock the vehicle and turn on the exterior lights.
5. Follow Me Home: When enabled and ambient light is low, the low beams and position lights will stay on for a period after vehicle power-off, illuminating your way home

Interior Lighting

Front Interior Light




1. Left front interior light switch
2. Right front interior light switch

Touch the left or right front interior light switch to turn on or off the corresponding front interior light separately.

Avoid using the front interior lights when driving at night. Bright lights may affect the driver's safe driving and cause traffic accidents.◀

Rear Interior Light

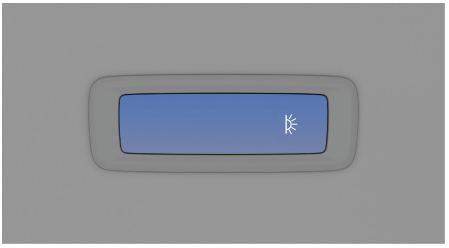

Press the icon of the rear interior light switch to turn the rear interior light on or off.

If the rear interior lighting switch is in the on position, turn it off after leaving the vehicle to avoid running out of low-voltage battery power.◀

Set the Interior Light on the Multimedia Display

Click the following on the multimedia display in sequence: Vehicle Settings → Lights and adjust the interior lights in this interface.

1. Reading Lights: Select all front interior lights on or off.
2. Interior Illumination on Door Opening: When this function is activated, the interior lights will automatically turn on or off based on the status of the doors.

When the interior light door control function is used to turn on the left and right interior lights, the corresponding lights can be turned off by pressing the left or right interior light switch.◀

Ambient Light*

Ambient lights are installed on the instrument panel, driver side, and front passenger side door trim panels.

Ambient Light Settings

Click the following on the multimedia display in sequence: Vehicle Settings → Lights → Ambient Light, and then set the ambient lighting in this interface.

Intelligent High Beam Control (IHBC)

The intelligent high beam control automatically switches between high and low beams at night. The system uses the front camera to detect the light source information, and automatically switches between the high beam and the low beam according to the situation of the oncoming vehicle, the vehicle ahead and the ambient light source.

Intelligent High Beam Control (IHBC) system is an auxiliary function of light control. But the system cannot completely substitute the driver instead. The driver should always switch the high/low beam according to the requirements of road laws and regulations as well as road changes.◀

Function Enabling and Activation



When the headlight control is set to AUTO in the multimedia display, push the light/wiper control handle in direction A for the first time to turn on the high beam, and the turn on the IHBC for the second time.

At night, after the front combination lights automatically turn on, the intelligent high beam control is activated automatically.

After the IHBC system is activated, it will recommend turning on the high beams when all of the following conditions are met:

1. Vehicle speed ⩾ 40 km/h;
2. No relevant traffic participants or other light sources are detected.

If any of the following conditions is met, the intelligent high beam control system will recommend to turn on the low beam:

1. Vehicle speed ⩽ 20 km/h;
2. Relevant traffic participants or other light sources are detected.

Function Display

When the Intelligent High Beam Control (IHBC) system controls the high and low beams of the vehicle headlight, the Intelligent High Beam Control (IHBC) indicator lights up in white, and when the Intelligent High Beam Control (IHBC) system fails, the Intelligent High Beam Control (IHBC) fault warning light lights up in yellow.

When the driver operates the light/wiper control handle to select the high beam, the driver’s selection prevails.◀

In the following examples, the system does not work or only works to a limited extent, which may require the driver's response:


- Under climatic conditions such as rainstorm, heavy snow or heavy fog, which are extremely unfavorable for driving.
- Traffic participants (such as pedestrians, cyclists) with poor illumination, railway or waterway traffic near the road, or the road with animals present.
- In the environment with strong reflective views (such as traffic signs on highways).

- When the front windshield is covered with fog, dirt or covered by labels or ornaments.◀



The intelligent high beam control system will maintain the use of high beams when the vehicle speed is kept within the range of 20-40 km/h after activating the high beam recommendation. The system will then recommend switching to low beams upon detecting light sources ahead.◀

Instrument Cluster Overview

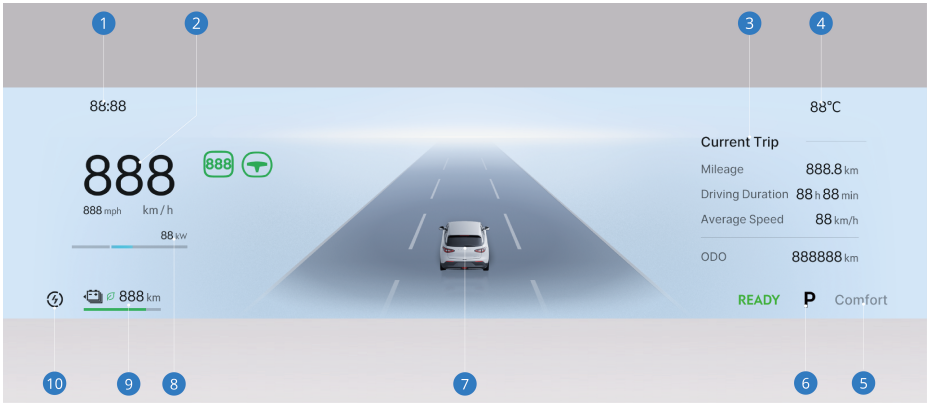

1. Clock display area

GPS time is displayed by default.

2. Speedometer

The speedometer displays the current vehicle speed.

3. Information menu

Display information such as multimedia content, average power consumption, current trip mileage and vehicle status (if equipped)

Average power refers to the average power used to drive a certain distance. Click the following on the multimedia display in turn: Energy → Mileage Statistics → Energy Consumption Curve. After the last 50km/last 100km switch is switched, the average power consumption of the instrument will switch and display accordingly.

Power consumption curve: It is calculated based on the power consumption value for driving the vehicle in the last 10km.

4. Outside temperature display area

The displayed range is -40~60°C.

5. Drive mode

It displays ECO, Comfort, Sport and Snow modes according to the different driving modes currently selected by the driver.

6. Gear display

R, N, D or P will be displayed according to the gear currently selected by the driver.

7. Current function information display area

Displays information such as intelligent driving function status.

8. Wattmeter

The power meter displays the current output power and recovered power of the drive motor.

If the power value is positive, it indicates that the drive motor is consuming electrical output power.

If the power value is negative, it indicates that the drive motor is recovering energy to charge the power battery.

9. Endurance mileage of power battery

Displays the remaining driving distance of the vehicle.

10. Energy recovery level


Displays the energy recovery level.

- The display mode of instrument cluster display can be set on the multimedia display.
- Pictures in the interface of instrument cluster are only for reference. All the pictures shall be subject to the actual vehicle. ◄

Display Settings

Do not configure the instrument cluster display settings while the vehicle is in motion.◄

Steering Wheel Buttons Adjustment Mode

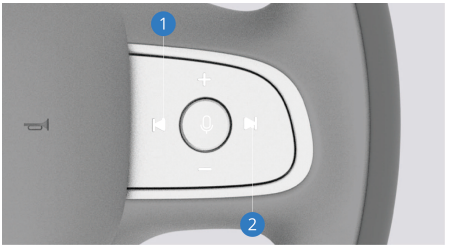

1. Left selection button: Press and hold the left selection button to access the instrument cluster menu. When the menu is open, briefly press the same button to cycle through menu options.
2. Right selection button: Press and hold the right selection button to access the instrument cluster menu. When the menu is active, briefly press the same button to cycle through menu options.

Electronic Control Unit Reset

Click the following on the multimedia display in sequence: Apps List → Energy → Mileage Statistics, and you may select Reset After Recharge/ Reset After Parking or Tripmeter to clear the trip computer data.

Warning Light and Indicator Light

Introduction to Warning Light and Indicator Light

Image	Name	Description
	Left Turn Signal Indicator Light	Left turn signal is on
	Right Turn Signal Indicator Light	Right turn signal is on
	Low Beam Indicator Light	Low beam is on
	Low Beam Fault Warning Light	Low beam is faulty
	High Beam Indicator Light	High beam is on
	High Beam Fault Warning Light	High beam is faulty
	Position Light Indicator Light	Position light is on
	Position Light Fault Warning Light	Position light is faulty
	Intelligent High Beam Control (IHBC) Indicator Light	Automatic high beam control is on
		Automatic high beam is faulty
	Rear Fog Light Indicator Light	Rear fog light is on
	Airbag Fault Warning Light	Airbag system is faulty
	Powertrain Fault Warning Light	Powertrain is faulty
	Powertrain Fault Warning Light	Brake light is faulty
	Power Battery Charge Indicator Light	Battery level is insufficient
	Power Battery Fault Warning Light	Power battery is faulty

Image	Name	Description
	Low-Voltage Battery Charging Fault Warning Light	Low-voltage battery charging system is faulty
	Charging Cable Connection Indicator Light	The vehicle is connected to charging cable
	Electric Power Steering (EPS) Fault Warning Light	Steering assist system performance is lost/degraded temporarily
		Steering assist system is faulty
	Electronic Stability Control (ESC) Status Indicator Light	Always on: Electronic stability control system is faulty Flash: Electronic stability control system is working
	Electronic Stability Control (ESC) OFF Indicator Light	Electronic stability control system is off
	Brake System Fault Warning Light	Brake fluid level is low or brake system is faulty
		Brake system is faulty
	Fatigue Detection Warning Light	Level 1 fatigue detection warning
		Always on: fatigue detection function is faulty Flashing: level 2 fatigue detection warning
		Fatigue detection sensor is obstructed
	Warning Information Indicator Light	There is a fault alarm message/ notification, and the corresponding text message appears on the instrument cluster display
		Serious fault occurs and this fault may affect the driving performance of the vehicle
	Anti-lock Brake System (ABS) Fault Warning Light	Anti-lock brake system is faulty

Image	Name	Description
	Electronic Parking Brake (EPB) Status Indicator Light	Always on: Electronic parking brake function is enabled
	Seat Belt Reminder Warning Light	The seat belt is not fastened, please fasten the seat belt
	Auto Vehicle Hold (AVH) Status Indicator Light	Auto hold function is activated
	Tire Pressure Monitoring System Fault Warning Light	Tyre pressure is too low or tyre pressure monitoring system is faulty
	Traffic Sign Identification (TSI) Fault Warning Light	Traffic Sign Identification system has fault
	Ready Indicator Light	The vehicle is ready, the high-voltage is successfully powered on, and it can be driven normally
	Collision Mitigation Support Front (CMSF) Fault Warning Light	Collision mitigation support front system is faulty
	Collision Mitigation Support Front (CMSF) OFF Indicator Light	Collision mitigation support front system is off
	Lane Keeping Assist (LKA) Indicator Light*	The lane keeping assist system has been activated, and the system is now operational
	Lane Keeping Assist (LKA) Fault Warning Light	Lane keeping assist system is faulty
	Lane Keeping Assist (LKA) OFF Indicator Light*	Lane keeping assist system is off
	Blind Spot Monitoring Indicator Light	Rear side mid-range radar is working
	Blind Spot Monitoring Fault Warning Light	Rear side mid-range radar is faulty
	Hill Decent Control (HDC) Indicator Light	Hill descent control system is in standby condition
		Hill decent control is on
		Hill decent control is faulty

Image	Name	Description
	Headlight Leveling Fault Indicator Light	Headlight leveling function is faulty
	Emergency Maneuver Assist (EMA) Fault Warning Light	Emergency steering assist function failure
	Lane Change ALCA Malfunction Indicator Lamp	Lane change function with turn signal lever has malfunction.
	Occupant Detection System Off Indicator Light	Left-behind Occupant Monitoring Deactivated
	Electronic Parking Brake Assist Insufficient Warning Light	The driver needs to depress the brake pedal due to insufficient electronic parking brake assist
	Power Limit Warning Light	The vehicle has experienced certain specific faults, and power is limited
	Cruise System Longitudinal Control Status Indicator Light	The longitudinal control of the cruise control is in deactivated state
		The longitudinal control of the cruise control is in activated state
		The longitudinal control of the cruise control is activated but cannot automatically follow the vehicle to start
		The longitudinal control of the cruise system is in speed limit fusion status
	Cruise System Lateral Control Status Indicator Light	The lateral control of the cruise control is not activated
		The lateral control of the cruise control is activated


When the vehicle power is in the ON position or the vehicle is started, some warning lights will illuminate for a few seconds for a system self-check before turning off. If any fault makes warning lamps constantly on or light up during driving, pay attention to it and contact an authorised Service Centre for maintenance as soon as possible. Otherwise, severe casualty or property loss may occur.◄

Black icons in the table are displayed as white or black according to the background in the instrument cluster display.◄

Wired Charging

Front Charging Port

The front charging port is located underneath the sub instrument panel.

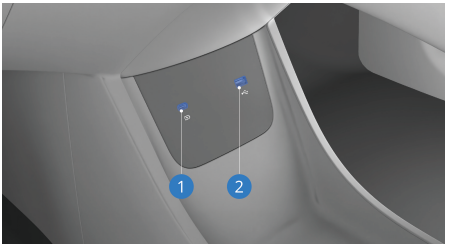

1. Type-C Charging Port
2. USB Multimedia Port


The Type-C charging port is used to charge mobile devices and supports an output power of 27W: 9V/3A. The USB multimedia interface has data transmission and charging functions, and supports 10.5W output power: 5V/2.1A.

When using a USB Drive, it is recommended to select products from brands such as Kingston, SanDisk, Samsung, HP, Or Lenovo to ensure more reliable data storage.

Supported USB drive and data transfer formats:

- USB drive format: FAT32.
- Audio formats: MP3, FLAC and AMR.
- Video formats: MP4, 3GP, MOV, AVI and MKV (including mainstream video decoding formats).
- Image formats: BMP, JPG, JPEG and PNG.◀

Rear Charging Port

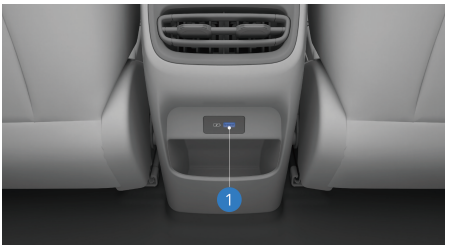

1. USB Charging Port

The USB charging port is used to charge mobile devices and supports an output power of 10W: 5V/2A.

- It is forbidden to connect the power interface to high-power electrical appliances, otherwise the vehicle fuse may be blown.
- It is forbidden to use the power interface in parallel or series with any other power supply.
- It is forbidden to modify or repair the vehicle power system without authorisation.◀

Wireless Charging*



The mobile phone wireless charging pad is located on the center console and supports a maximum output power of 15W.

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → More, and then enable or disable Wireless Charging function in this interface.

To use the wireless charging board, ensure that the coil in the mobile phone is aligned with the coil at the centre of charging board. Because the coil position of each mobile phone is different, it may be necessary to adjust the placement position of the mobile phone.

- The operating frequency of phone wireless charging may affect users with implanted medical devices such as pacemakers or cardioverter defibrillators; and it is recommended to maintain a certain distance from the mobile phone when it is using wireless charging.
- Do not place any metal objects (such as coins, keys) or flammable/explosive materials in the charging area, as this may cause panel damage, burns, or even fire. If any metal object is jamming, be sure to wait until it has cooled before removing it.
- Do not place heavy objects in the wireless charging area to avoid damage to the charging area.
- Avoid using excessively thick phone cases, cases with magnetic rings, or those containing metal parts, as this may prevent charging or damage interior components. It is recommended to remove your phone case during charging.
- Do not place cards with chips such as NFC cards, bank cards or ID cards together with mobile phones in the wireless charging area to prevent cards from being invalid and damaged.
- Do not place Tag trackers or other electrical devices containing lithium batteries in the Wireless Charging area, otherwise it may cause damage.
- Do not modify the wireless charging system, otherwise it may damage the vehicle or cause an accident.
- Do not pour any liquid in the wireless charging area, otherwise it may cause system failure.
- Do not allow foreign objects to block the wireless charging heat dissipation vent, otherwise it'll cause the cooling fan to produce abnormal noise.
- Turn off the wireless charging function when the wireless charging area is used only as storage space. Do not leave your mobile phone charging in the vehicle when the driver leaves the car to avoid potential safety hazards.

- It is forbidden to place the smart key on the wireless charging board; otherwise, the keyless start function may not work properly when charging the mobile phone.
- Wireless charging of mobile phones is only applicable to mobile phones certified by the "Qi" protocol, and it may not be possible to charge properly with non-certified mobile phones.
- Do not use wireless charging after connecting a wireless charging coil on a mobile phone that does not support wireless charging. Otherwise, the wireless charging device and mobile phone may be damaged.
- Please place the phone in the wireless charging area to charge, and make the phone cover the air outlet position.
- One wireless charging area can only charge one phone at a time.
- To prevent battery drain, please use this function while the vehicle is running. The wireless charging function may stop briefly when starting the vehicle.
- Wireless charging may be interrupted when opening or closing the door, pressing the brake pedal, or moving away from the vehicle with the Bluetooth key, as this triggers the key signal. This is normal.
- When the vehicle is driving on bumpy roads, the wireless charging function may intermittently stop or resume charging.
- To be compatible with different brands and models of mobile phones, the charging speed of in-vehicle wireless charging is slightly slower than that of the original equipment charger. Some mobile phones may experience a short interruption during the process of switching from slow charging to fast charging, which will not affect subsequent charging. If unable to enter fast charging mode, please ensure the mobile phone charging program is updated to the latest version.
- If the mobile phone cannot be charged normally, please make sure that the mobile phone is in the wireless charging area and there are no foreign objects, or wait for the wireless charging area and the mobile phone to cool down before trying again. If it still cannot be charged normally, contact a Geely Service Center for maintenance. Turn off the wireless charging function when the wireless charging area is used only as storage space. Do not leave your mobile phone charging in the vehicle when the driver leaves the car to avoid potential safety hazards.◀


Sun Visor and Vanity Mirror

Use the sun visor

Type I



Type II

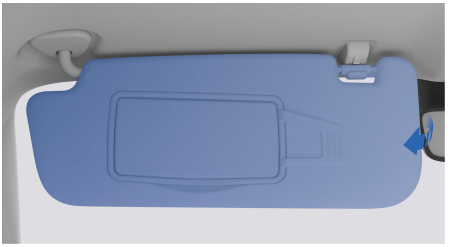


- Front Sunshade: Flip down the sun visor to position it at the front.
- Side Sunshade: First flip down the sun visor, then release the hook, and finally rotate it to the side position.

The lowered sun visor may obstruct forward visibility. If the sun visor is no longer needed, promptly return it to its original position.◀


Use the Vanity Mirror

Type I

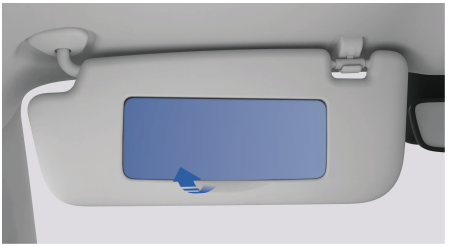

The sun visor is equipped with a vanity mirror. Flip up the mirror cover to use the vanity mirror. The vanity mirror light activates upon opening the cover plate and deactivates when closed.


Type II

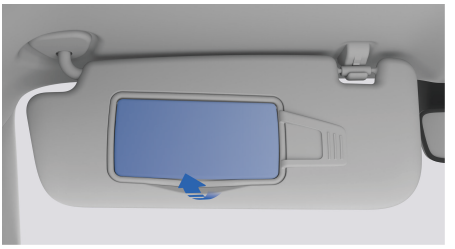

The sun visor is equipped with a vanity mirror. Flip up the mirror cover to use the vanity mirror.


Adjustment of Front Passenger Seat

Type I

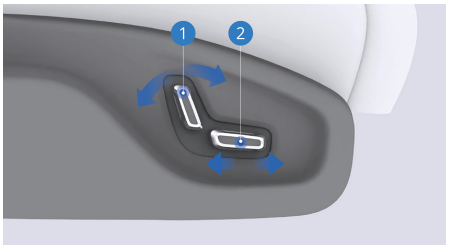

1. Move the switch forward/backward to adjust the angle of the seat backrest.
2. Move the switch forward/backward to adjust the front and rear positions of the seat.

Type II

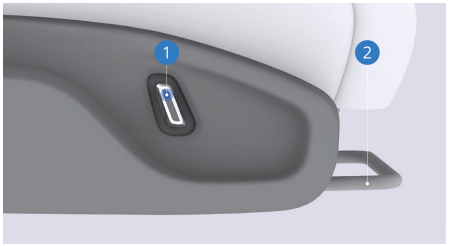

1. Move the switch forward/backward to adjust the angle of the seat backrest.
2. Hold the middle of the forward/backward adjustment lever and pull it up. Lean lightly against the seat and slide the seat to the desired position. Release the adjustment lever until the seat rail clicks and the seat is locked.

Adjustment of Rear Seats

Folding Rear Seat Backrests

The rear seats feature 4/6 folding function, allowing for an increase in the trunk space to facilitate the storage of large items.



1. Lower the rear seat headrest to the lowest position;
2. Pull up the rear seat backrest unlocking buckle;
3. Fully fold the seat backrest on the corresponding side.

After the backrest is folded, be sure to leave some space between the rear seat headrest and the front seat.

Unfolding Rear Seat Backrests

Flip the backrest backward and push it backward firmly until the seat is locked.

When the vehicle is running, passengers are not allowed to sit on folded seats or in the trunk. They should sit on the seat properly. When the backrest returns to the original position, the following precautions shall be considered to prevent injuries upon collision or emergency braking:


- Push forward/backward the top of backrest to ensure the backrest is

securely locked. Otherwise, the seat belt may not operate normally.

- Make sure the seat belt is not twisted or stuck under the seat, but well positioned for use. ◄

If a child safety seat is placed in the rear seat, the child safety seat and the child seat installation guide sheath must be removed before the rear backrest folding function can be used. ◄

Adjustment of Front Seat Headrests

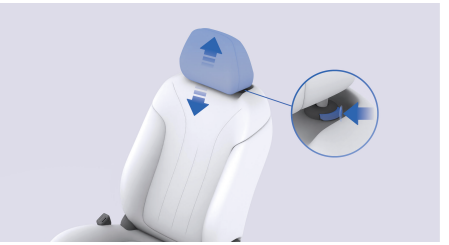


1. Press and hold the adjustment button under the seat headrest;
2. Lift up or press down the headrest to the desired height, and then release the button;
3. Gently press or lift up the headrest again until a click sound is heard to ensure that the headrest is locked in place.

Before driving the vehicle, install and adjust the headrest correctly, so that its top is flush with the top of the occupant's head. Otherwise, it may cause personal injury or death in the event of an accident. ◄

Do not adjust the seat during driving. This may cause the vehicle to lose control and cause personal injury or death. ◄

The seat backrest should not be inclined too much during driving. Otherwise, it may cause personal injury or death in the event of a collision.
In the event of an accident, the seat belt can provide maximum protection only by maintaining the correct sitting posture. ◄

Adjustment of Rear Seat Headrests

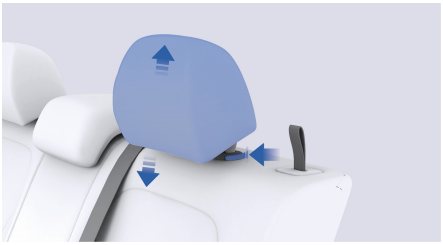

1. Press and hold the adjustment button under the seat headrest;
2. Lift up or press down the headrest to the desired height, and then release the button;
3. Gently press or lift up the headrest again until a click sound is heard to ensure that the headrest is locked in place.

Press and hold the adjusting button to push in or pull out the headrest.◄

Front Seat Heating*

Click the seat button in the air conditioning interface of the multimedia display, and then adjust the front seat heating function and the front seat auto heating function in this interface.

If the body is unable to sense pain and temperature due to medication, paralysis, palsy or other diseases, please do not use the seat heating function, otherwise it may cause body burns.◄

- Do not kneel on the seat or put the seat under concentrated load to avoid damaging the elements of the seat heating.
- Do not clean the seat by wet washing.
- The seat heating device can only be turned on when the vehicle is started to avoid the low-voltage battery power being too low.
- If the low-voltage battery level is too low, the seat heating device will be automatically turned off to conserve power.
- Do not place seat cushions on the seats when the seat heating function is on.◄

The seat heating indicator indicates the level of the seat heating. When the 1st gear is ON, it indicates that the seat heating is low. When the 2nd level is ON, it indicates that the seat heating is medium. When the 3rd level is ON, it indicates that the seat heating is high. When all indicator lights are off, the heating is off.◄

After enabling automatic heating for the driver's seat on the seat setting interface, the driver's seat heating will turn on automatically when a low in-vehicle temperature is detected. After enabling the automatic heating function for the passenger seat on the seat settings interface, the passenger seat heating will turn on automatically when a passenger is detected in the passenger seat and the in-vehicle temperature is low.◄

Driving Instructions

Under the following conditions, pay special attention to lower parts of the vehicle to avoid scratches on the vehicle chassis.

- Driving on roads with poor conditions.
- Passing a road curb.
- Driving on steep slopes.

Be especially careful when the vehicle is fully loaded.◄

New Vehicle Running-in

The running-in of a new vehicle is mainly to improve the surface quality and the friction and wear state of moving parts, so as to extend service life and reduce power consumption. In the new vehicle running-in period, observe the following requirements:

- When starting and driving, avoid fully depressing the accelerator pedal.
- In the running-in period, the vehicle should run on flat roads. Avoid driving on a muddy road or sand road.
- Avoid idling of the drive motor.
- Avoid accelerating suddenly.
- Avoid sudden braking at the initial 300 km.◄

Driving in Winter

Winter Tyre

Winter tyres are recommended for vehicles expected to regularly encounter snow and ice conditions. Although all-season tyres can provide excellent comprehensive performance on most surfaces, they may be unable to provide expected friction force or the same performance as winter tyres when driving on roads covered with ice or snow.

Winter tyres are typically used to increase friction force on road surface covered with ice or snow. The use of winter tyres may result in reduced traction on dry roads, increased road noise, and shortened tread life. Please pay attention to the changes of vehicle control ability and braking performance after installing winter tyres on your vehicle.

Please consult a Geely Service Centre for details about the supply and selection of applicable tyres. If you choose to use winter tyres:

- You shall use tyres of the same brand and the same tread pattern on four wheels.
- Only radial tyres of the same size, loading range and rated speed as original tyres can be used.
- If using winter tyres with lower rated speed, be sure not to drive at a speed exceeding the maximum rated speed of the tyres.

Tyre Chain

Tyre chain is not included in the equipment of this vehicle. The following information is for reference only.◄

Please decide whether it is necessary to fit tyre chains according to actual road conditions.

Avoid overloading the vehicle when using tyre chains. Besides, drive carefully at a low speed. Otherwise, it is possible to damage the vehicle and affect the control ability of the vehicle.

When installing tyre chains, it is necessary to select tyre chains corresponding to tyre size of the vehicle. Install tyre chains strictly

in accordance with the instructions of manufacturer.



- Avoid sharp turns and emergency braking when driving a vehicle with tyre chains.
- After installing tyre chains, the vehicle speed is strictly forbidden to be higher than the maximum speed recommended by the chain manufacturer.
- Tyre chains can only be installed on the drive wheels and cannot be used on a single wheel.◀

Economic Driving

Vehicle range and power battery capacity are affected by driving habits, storage conditions, charging methods and power battery temperature. Good usage and driving style can improve the range of the vehicle.



When driving a vehicle, ensure safe driving, obey traffic regulations, and do not obstruct others or public transportation order.◀

1. Stable starting and accelerating
   The power consumption is high during start-up and acceleration periods. Try to avoid suddenly depressing on the accelerator pedal for starting or accelerating when driving the vehicle. Stable starting and accelerating are helpful to save power.
2. Avoid unnecessary braking
   Keep a proper following distance from the preceding vehicle and try to avoid frequent braking; decelerate at a red light, and let the vehicle coast. Avoid sudden braking.
3. Keep low wind resistance
   Opening windows at a high speed will increase wind resistance of the vehicle and lead to increase of power consumption. Close the windows when the vehicle speed is higher than 80km/h.
4. Maintain correct tyre pressure
   Check tyre pressure regularly. Too low tyre pressure will increase rolling resistance of tyres and result in increase of power consumption.
5. Reasonable Operation of A/C
   Whether for cooling or heating, the use of air conditioning will accelerate the consumption of power battery, so please use it when necessary. Open windows for ventilation at low speed. It will be more energy-efficient to use the recirculation mode when the A/C is activated.
6. Reduce vehicle load
   Each kilogram of additional load may increase power consumption, so it is necessary to clear unnecessary luggage on vehicle regularly.
7. Reasonable Plan of Travel Route
   Optimise the route and try to avoid traffic jam. This will save both time and power consumption.
8. Do not change the size of the tyre at will.
   Using larger or wider tyre will increase power consumption.

Driving Through Water

To prevent vehicle being damaged when driving through water (e.g. flooded roads), it is necessary to pay attention to the following precautions:

1. It is necessary to confirm the water depth before driving through water. The water level should not go above the edge of the side member.
2. It is necessary to drive at low speed, otherwise waves may form in front of the vehicle, damaging components such as the motor controller and resulting the vehicle inoperable.
3. Do not park or reverse in water under any circumstance.



- When the vehicle runs on the road with water, mud, etc., the braking effect may be affected and the braking distance may be prolonged, which increases a risk of accident.
- Avoid emergency braking operations immediately after driving through the water.
- After driving through water, the brake must be cleaned and dried as soon as possible by intermittent braking. When traffic conditions permit, depress the brake to dry and clean them, thereby avoiding traffic accidents.◀



- Height of wave made by the vehicle from the opposite direction may exceed the allowed water level of this vehicle.
- Pits, wallows or stones may be hidden in water. They will make driving through water more difficult.
- Do not drive through salt water. Salt may cause vehicle rust. Immediately use fresh water to wash all parts in contact with salt water.
- After driving through the water, it is recommended to go to a Geely Service Centre for a comprehensive inspection of the vehicle. Eliminate hidden risks and ensure driving safety.◀

Power Supply Mode

This vehicle is equipped with a non-inductive starting system and has no start switch. To activate the vehicle, a smart key that matches the vehicle needs to be placed in the vehicle and detected.

Vehicle power status includes:

ACC: Use the smart key to unlock and open the door. The power supply of the vehicle will switch to ACC gear, and the high voltage of the vehicle will enter the non-READY high voltage mode. At this time, the comfort functions in the vehicle are available as a whole, such as cooling and heating of air conditioning, entertainment functions, and window control functions, etc.

ON: The driver gets in. When a valid key is detected inside the vehicle and the brake pedal is depressed, shifting the gear to D or R switches the vehicle power to ON. The instrument cluster READY indicator illuminates, and the vehicle enters a drivable state.

OFF: After parking, if the vehicle is locked externally or the power is turned off, the vehicle enters the power supply mode OFF, and most functions are turned off or delayed.

Power-on and Power-off Methods in the Vehicle

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → More and click Power Off button in this interface to set the power supply mode to OFF.

After the multimedia display goes out, the power supply mode can be switched back to ACC gear by depressing the brake pedal or clicking the screen within 30 seconds of the multimedia display off.

Parking Comfort

Click the following on the multimedia display in sequence: Vehicle Settings → Vehicle Controls → More, and then enable or disable the Parking Comfort function in this interface. Once the function is enabled, a pop-up window will appear to set the power-on duration for this function. Click the Enable button to activate the function, or click Cancel button to exit the settings interface.

The parking comfort function will be disabled when any of the following conditions is met:

- When the parking comfort function is turned on, and the function automatically exits when the battery level is lower than 20% (it may occur earlier due to ambient temperature), the Parking Comfort button turns grey.
- When the vehicle power is OFF, or when the battery level is ⩽ 20%, the "Parking Comfort" button is grayed out and the function cannot be used.

The parking comfort function will automatically exit when any of the following conditions is met:

- When the Parking Comfort function is active and the set time is completed, the function will automatically exit.
- When the vehicle power is in the ACC mode, if the vehicle battery level drops below 20% (it may occur earlier due to ambient temperature) while the Parking Comfort function is active, the function

will automatically exit, and the vehicle will power off.

- When the Parking Comfort function is active, if the shift lever is moved from the Park (P) to another gear, the function will automatically exit to ensure vehicle safety.

After the Parking Comfort function is turned on, the vehicle will be locked but not armed and the exterior rearview mirror will not fold if the lock/vehicle search button on the smart key is shortly pressed. ◄

Start Procedure Operation

Depress the brake pedal and switch the shift paddle to the Drive gear to start the vehicle. If the smart key is not in the vehicle or is subject to some disturbance, the instrument cluster displays a prompt that the key is not in the vehicle. If the battery in your smart key needs replacement, please refer to "Replacement of Key Battery" section.

Switch to the Drive gear and close the doors once all the starting conditions are met. After the vehicle is powered on, the READY indicator on the instrument cluster turns on and the vehicle enters a drivable state.◄


When electronic devices such as mobile phones and laptops are placed together with smart keys, the keyless start function may fail. When this function fails, please keep the smart key at a certain distance from the electronic devices. It is recommended to place the smart key near the sub instrument panel rear storage box. ◄

Standby start function

If the vehicle is at a strong electromagnetic interference area, the smart key battery power is low, or non-inductive starting function fails, when trying to start the vehicle and shift the shift lever to drive gear, the instrument cluster may display a text prompt. At this time, the vehicle cannot be started by moving the shift lever.

Please start the vehicle as per the following steps:

1. The vehicle gear is in Park (P) or Neutral (N);

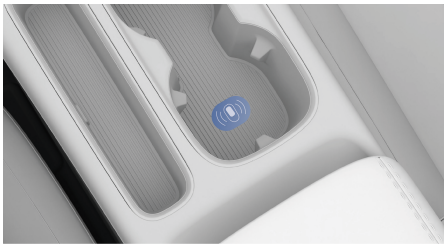


2. Place the smart key in the key symbol area inside the cup holder;
3. Depress the brake pedal;
4. The gear is switched to Reverse (R) or Drive (D), and the vehicle is in a drivable state (READY state).

If the keyless start program still does not work properly after the key battery is replaced and the vehicle is driven away from the interference area, contact a Geely Service Center for maintenance as soon as possible.◀

Gear Shift

Gear Position Information

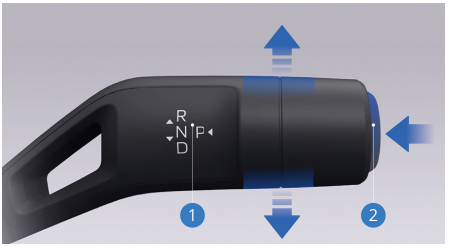

1. Shift Lever
2. P gear button

According to the currently selected gear, push the shift lever upward/downward to switch among the following gears: Reverse (R), Neutral (N) and Drive (D). Press the P button to shift into Park (P).

When shifting from D (Drive), R (Reverse), or P (Park) to N (Neutral), briefly move the shift lever to the first detent position and hold it for at least 1 second.◀

Gear Shift Operation

Park

When parking, after the vehicle is completely stopped, manually press the Park (P) button to switch the gear to Park (P). At this time, the Electronic Parking Brake (EPB) will be activated simultaneously and the wheels will be locked.

When parking for a short time, do not shift the shift lever into D or R and keep depressing the brake pedal; otherwise, the service life of the reducer will be affected. Under no circumstances should the vehicle be shifted into Park (P) gear while it is moving. Otherwise, serious

mechanical damage may occur and the vehicle may be out of control.◀

Drive

Start the powertrain in Park (P) or Neutral (N), and depress the brake pedal. Shift the lever in Drive (D), release the brake pedal, and gently depress the accelerator pedal.



Always shift the gears before depressing the accelerator pedal. It is not allowed to shift gears while depressing the accelerator pedal, or to depress the accelerator pedal before shifting gears.◀

Reverse

When the vehicle is stopped, depress the brake pedal and shift the gear in Reverse (R). After confirming that the parking brake has been automatically released, release the brake pedal and lightly depress the accelerator pedal.

Drive Mode

Click the following on the multimedia display in sequence: Vehicle Settings → Driving→ Driving Mode to select the required drive mode in this interface. It is also possible to select the desired drive mode by swiping down from the top of multimedia screen.

Eco Mode

In Eco mode, it saves fuel and energy and provides maximum driving range.

Comfort Mode

In Comfort mode, the vehicle is driven gently, providing a comfortable driving experience.

Sport Mode

In Sport mode, maximum power and fast acceleration.

Snow Mode

In snowy conditions, using the Snow Mode can optimize the vehicle's traction, driving performance, and maneuverability.

Service Brake

During driving, the actual braking distance will be different due to road conditions, vehicle weight and applied braking force. Sufficient distance should be maintained from the vehicle ahead, and cadence braking and emergency braking should be avoided.

The first 500 kilometers is the running-in period for a new vehicle. The braking distance may be long and the braking effect may be slightly poor, which is normal. You should drive carefully and keep a sufficient safe distance.



- Do not add non-original accessories to avoid affecting vehicle performance and causing traffic accidents.
- When depressing the brake pedal, if there is a sharp metal friction sound at the vehicle brake, go to a Geely Service Centre for maintenance immediately.
- Do not rest your foot on the brake pedal while driving, as this can cause brake component wear, overheating, and increase braking distance.◀

Brake Pedal

On the multimedia display, navigate sequentially: Vehicle Settings → Driving. In this interface, you can select the Brake Pedal mode or turn the Comfort Stop function on/off.

1. Brake Pedal: Set the Brake Pedal mode to Comfort or Sport Mode.
2. Comfort Parking: When activated, it can mitigate the jerking during non-emergency deceleration and stopping.

Vehicle Parking

Depress the brake pedal until the vehicle comes to a complete stop, then apply the electronic parking brake, shift the gear to P, and then turn off the vehicle power. Parked vehicles should be placed on a level, firm, and safe location that does not obstruct traffic.

Do not leave children, people with limited mobility, or pets in the vehicle. They may release the parking brake or operate the shift lever, causing the vehicle to move and resulting in personal injury or death.◀

Long-term Vehicle Storage

The vehicle should be stored in a cool, ventilated, clean and dry environment away from flammable materials. If the vehicle is parked in an enclosed and humid environment for a long time, the rust and aging of vehicle parts will be accelerated, please follow the recommendations and requirements to carry out regular maintenance on the vehicle in a timely manner.

The vehicle must be stored in accordance with the following requirements. Failure to do so may result in over-discharge of the power battery, which can lead to reduced performance or even damage to the power battery. Any damage or malfunction caused by improper storage is not covered under Geely Auto’s warranty and shall be the sole responsibility of the user:

- If the vehicle is parked for up to 7 days (inclusive), ensure the power battery level is above 10% at the time of parking.
- If the vehicle is parked for 8 days to 3 months (inclusive), ensure the power battery level is between 50% and 60% at the time of parking.
- If the vehicle is parked for more than 3 months, the battery must be fully charged and then discharged to 50%–60% before storage. Subsequently, repeat this procedure every three months from the date of initial discharge.
- When the vehicle is stored for a long time, ensure that the power battery level is higher than 20% in the long term, so as to recharge the low-voltage battery.◀

- Even if the vehicle is not running, the low-voltage battery and power battery will still continuously discharge slowly to power the vehicle's electrical equipment.
- It is recommended to drive the vehicle at least once a month to avoid prolonged parking.◀

Energy Recovery

The brake system also has energy recovery function: When the vehicle is coasting or braking in drive gear (D), kinetic energy is converted into electric energy and charged into power battery for recovery, so that the driving range is improved.

Click the following on the multimedia display in sequence: Vehicle Settings → Driving → Energy Regeneration, and select the energy recovery intensity in this interface. The higher the intensity, the higher the energy recovered during coasting.

The braking effect produced by energy recovery can't meet the braking requirement to ensure safe driving, so the driver should apply braking to the vehicle in time according to the actual situation.◀

- When the vehicle decelerates, a slight feeling of halt and motor noise may occur, which is normal.
- When the power battery is full or the power battery temperature is too high or too low, to prevent it from being damaged, the energy recovery is automatically reduced.
- When the motor temperature is too high, to prevent it from being damaged, the energy recovery is automatically reduced.◀

Parking Brake

Electronic Parking Brake (EPB)

EPB Manual Release/Parking

With the vehicle started and the brake pedal depressed, on the multimedia display, navigate sequentially: Vehicle Settings → Driving → Driver Assist. Then, tap the Electronic Parking button in this interface to release/apply the EPB. The EPB status indicator will turn off/on accordingly.

EPB Automatic Release/Parking

With the vehicle started and the shift lever shifted from P to another gear, the EPB will automatically release and the Electronic Parking Brake (EPB) status indicator light will go out. Pressing the P (Park) button will automatically apply the EPB, and the EPB status indicator will illuminate.

Once EPB is enabled, the Electronic Parking Brake (EPB) status indicator on the instrument cluster will turn on. If the indicator does not turn on, contact a Geely Service Center as soon as possible.◀

Manual emergency braking

In case of an emergency during driving, press and hold the Park (P) button to enable the emergency braking function. The emergency braking can be released by releasing the Park (P) button.

- Do not use the EPB for emergency braking during normal driving. If the EPB is used repeatedly to slow down the vehicle, the brake system may be seriously damaged.

- Improper use of the electronic parking brake may cause casualties. Unless in an emergency, do not apply the electronic parking brake for the service brake of this vehicle.
- When the EPB is released, the vehicle will lose its parking function. To avoid vehicle damage, serious personal injury, do not perform this operation on a sloping road.◄

AUTO HOLD

The Auto Hold function can help the driver to start more comfortably on sloping roads. After releasing the brake pedal, the system holds braking, so that the driver has enough time to depress the accelerator pedal to start, reducing the risk of rolling backward.

Depending on the stress, the vehicle can move even when AUTO HOLD is activated.◄

Auto Hold ON/OFF

When the engine is running, with the driver door closed and the seat belt fastened, click the following on the multimedia display in sequence: Vehicle Settings → Driving → Driver Assist to turn on/off the Auto Hold function in the interface.

Auto Hold Activation and Deactivation

1. Close the driver side door, fasten the seat belt, and start the vehicle, with the Auto Hold function enabled, if the gear is in D or N, the brake pedal is depressed, and the vehicle speed is zero, the Auto Hold function will be activated. The Auto Hold status indicator on the instrument cluster display will be turned on.
2. After lightly depressing the accelerator pedal or deeply depressing the brake pedal, the parking is automatically released, and the Auto Hold indicator on the instrument cluster display turns off.
3. If no operation is performed for more than 10 minutes, the vehicle switches to EPB mode, and the Electronic Parking Brake (EPB) system status indicator turns on.

Auto Hold force exit

When the Auto Hold function has been activated, the seat belt is unfastened, the driver door is opened or the power system is stopped, the Electronic Parking Brake (EPB) will be enabled. In this case, the Auto Hold indicator on the instrument cluster will turn off and the Electronic Parking Brake (EPB) status indicator will turn on.

Brake System

Electronic Stability Control (ESC)

The Electronic Stability Control (ESC) system is a kind of active safety technology that assists the driver in controlling the vehicle. It corrects the instability of the vehicle body and helps prevent accident from applying braking force to the wheels or reducing power system torque, and guides the vehicle back to the correct route.

The ESC system is only an auxiliary system, and there is still a significant risk when driving on slippery and wet roads, so please drive carefully.◄

ESC ON and OFF

ESC is enabled by default when the vehicle starts. Click the following on the multimedia display in sequence: Vehicle Settings → Driving → Driver Assist, and then you can press the ESC Off button to turn on/off ESC in this interface. The ESC off indicator light on the instrument cluster display will turn on/off. The system should always be turned on to maintain directional control of the vehicle.

When the ESC function is activated, it will be activated when the vehicle encounters an emergency. The ESC status indicator light will flash on the instrument cluster. This will also happen when the traction control system is activated. At this time, you may hear some noise or feel vibration in the brake pedal. This is normal. You can continue to drive the vehicle in the direction you want.

If sufficient traction cannot be achieved, ESC can be turned off in the following situations.

- When the vehicle runs in deep snow or soft road.
- When the vehicle is stuck (such as muddy road) and needs to be moved forward and backward.
- When the vehicle travels with tire chains. ◄

Hill Descent Control (HDC)

HDC can actively brake the vehicle when it is going downhill to ensure that the driver can drive down the steep slope safely at a constant speed.

- HDC only plays an auxiliary role. At any time, the driver should be responsible for the safety of the vehicle and be aware of their surroundings.
- When a slope is too large, HDC may not be able to keep the vehicle driving down the steep slope at a constant speed. The vehicle speed can then be controlled by depressing the brake pedal.◄

System On/Off

Click the following on the multimedia display in sequence: Vehicle Settings → Driving → Driver Assist to enable or disable Hill Descent Control (HDC) in this interface.

- HDC can only be activated when the vehicle speed is less than 35 km/h, and the system will automatically turn off HDC when the vehicle speed is higher than 60 km/h.

- When HDC is not activated, HDC cannot be activated due to excessively high brake temperature. When HDC is activated, the system will be automatically deactivated if brake temperature becomes excessively high.
- If the status indicator does not light up and the Hill Descent Control (HDC) fault warning light on the instrument cluster light up when turning on the HDC function on the multimedia display, it indicates that the HDC system cannot be activated.◄

Post Impact Brake (PIB)

After a collision, the PIB slows the vehicle down to a standstill and keeps the vehicle stationary. The purpose of this function is to reduce the kinetic energy of the vehicle to a safe level. The driver shall also be able to regain control of the vehicle faster after a first impact, which helps mitigate or avoid subsequent collisions.

- When post impact braking is operating, the hazard warning lights flash.
- Post impact braking is enabled by default once the vehicle is started, this function cannot be disabled.
- If the anti-lock brake system is damaged during the collision, post impact braking function is limited.
- If the Electronic Braking-force Distribution function is damaged during the collision, post impact braking will not be triggered.◄

Anti-lock Brake System (ABS)

The vehicle is equipped with ABS, which prevents wheel lock-up during emergency braking or braking on slippery surfaces, avoiding skidding or fishtailing and maintaining vehicle stability. It can improve the steering control performance of the vehicle under emergency braking for most road conditions.

The braking distance will be longer on rough, gravelly or snow covered roads than on normal roads.◄

In the following situations, ABS does not function effectively:

- Using tires with insufficient traction (such as excessively worn tires on snow-covered roads).
- The vehicles skids when traveling at high speeds on wet and slippery roads.◄

- During braking, the continuous "Cluck" sound can be heard from the front compartment and the vibration can be felt from the brake pedal. This is a normal phenomenon caused by the operation of the anti-lock brake system, not a fault.
- When the anti-lock brake system stops working, the operation feel of the brake pedal will return to the non anti-lock brake state.◄

Electronic Braking-force Distribution (EBD)

As a part of ABS, Electronic Braking-force Distribution (EBD) system, when the vehicle

is braking, will automatically adjust the distribution ratio of braking force between the front and rear axles, improving braking efficiency and working in conjunction with ABS to enhance braking stability, thereby ensuring smooth operation of the vehicle.

Anti Rolling Program (ARP)

The degree of vehicle roll can be calculated by means of signals from the wheel sensors by the anti rolling program to provide additional control of the wheels on the outside of the bend. When the vehicle is experiencing severe roll, the anti rolling program will quickly adjust the braking force distribution on both sides of the wheels, and reduce the torque output of the drive motor. In this way, the balance of the vehicle can be restored in the shortest possible time, avoiding the body from rolling over and ensuring the safety of the driver and passengers.

Brake Assist (BA)

During emergency braking, the brake assist system will increase the braking force and shorten the braking distance.

The emergency brake assist system can only help the driver increase the braking force and does not necessarily mean that it can avoid accidents, so it is important to always maintain a safe distance and drive cautiously.◀

Traction Control System (TCS)

TCS is used to prevent loss of traction force in the drive wheels. After the system detects the slipping of the drive wheels, it will apply brakes to the idle drive wheels to prevent them from spinning.

Hill-start Assist Control (HAC)

When starting on a ramp, the driver releases the brake pedal, and the Hill-start Assist Control (HAC) can maintain the braking force for about 2 seconds to effectively prevent rolling.

- The hill-start assist control function can only be activated when the parking brake is fully released.
- The hill-start assist control function only maintains the brake pressure shortly when the driver releases the brake pedal. If the accelerator pedal is not pressed or the parking brake is not pulled up, the vehicle may slip back on the slope after 2 seconds. Please drive carefully when starting.◀

Electric Power Steering (EPS)

The electric power steering system monitors the driving speed and adjusts the power assistance in real time to ensure the maneuverability of low-speed steering and the stability of high-speed steering, and improve the sense of safety.

If the steering is difficult or the Electric Power Steering (EPS) fault warning light on the instrument cluster lights up, contact a Geely Service Center in time for maintenance.

Pedestrian Warning System

When the low-speed external alert tone function is activated, an alert tone will be emitted to warn pedestrians and other drivers of the approaching vehicle whenever the car is in D Or R Gear and traveling under 30 km/h.

Click the following on the multimedia display in sequence: Vehicle Settings → Sound Settings → Spatial Sound, and then enable or disable selecting of sound effect for the Vehicle Sound for Pedestrian in the interface.

Tire Pressure Monitoring System (Direct)*

The Tyre Pressure Monitoring System (TPMS) monitors tyre pressure through sensors mounted on each wheel valve.

The tyre pressure monitor sensors relay the individual tyre pressure in real time which is displayed on the instrument cluster display.

- Low tyre pressure alarm
  When the low tyre pressure alarm is activated, the TPMS fault warning light lights up continuously until the alarm is dismissed. There will also be a prompt sound and pop-up on the alarm interface. The low tyre pressure alert is resolved after the tyres are inflated to the recommended tyre pressure value when they are cold.
- Sensor fault alarm
  When the sensor fault warning is triggered, the TPMS tyre pressure abnormality buzzer will sound an alert and a warning interface will pop up.
- TPMS signal abnormality alarm
  If the system detects abnormal signal from one or more of the tyre pressure sensors, the TPMS fault warning light will flash for 60 seconds, and stay on until the alarm is dismissed. There will also be a prompt sound and pop-up on the alarm interface.
- Multi-signal alarm
  When TPMS detects warnings for multiple tyres, the instrument cluster will alert based on the sequence of detection.
- High tyre temperature alarm
  If the sensors detect high tyre temperature, there will be a prompt sound and pop-up on the alarm interface.
- Rapid tyre pressure release alarm
  If the sensors detect a rapid drop in tyre pressure, there will be a prompt sound and pop-up on the alarm interface.

If the TPMS fault warning light is illuminated, it indicates that one or more tyres have abnormal tyre pressure. Park the vehicle as soon as possible, and inspect tyre pressure and inflate the tyre to a correct pressure value. The tyre pressure monitoring system of the vehicle can remind you of abnormal tyre pressure but it cannot substitute normal tyre maintenance.

Tyre pressure monitoring system self-learning

After performing tyre rotation, the tyre pressure monitoring system needs to be self-learned.

Prior to vehicle self-learning, lock the vehicle using the smart key for at least 20 minutes.◀

The self-learning methods are as follows:

1. Drive the vehicle at a speed of 30 km/h or more;
2. Driving time should not be less than 20 minutes, and temporary parking should not exceed 5 minutes;
3. If the tyre pressure monitoring system still fails to recognise the tyre pressure normally after repeating the above operations, please go to a Geely Service Center for maintenance.

- Tyre pressure needs to be adjusted seasonally, inflated in winter and deflated in summer. Tyres should be inflated when they are cold.
- It is normal for the tyre pressure alarm to occur when the vehicle is driven in low and high altitude areas, and the tyre pressure should be adjusted according to the tyre pressure alarm.
- When driving the vehicle in winter, if all four tyres are replaced with snow tyres (the sensors are not installed on the tyres), the instrument cluster will prompt that the sensors are missing and give a system failure alarm.◀

The tyre pressure monitoring system may work abnormally due to the following reasons:

- Installation of incompatible tyres or modification of wheels.
- Presence of fluid in the tyre or injection of tyre repair fluid.
- Driving the vehicle with anti-skid chains installed.
- Proximity to sites such as television stations, airports, etc. that generate strong radio waves or electrical noise interference.
- Installing accessories that cause interference to the vehicle radio receiver or electrical system, etc.◀

- The recommended tyre pressure value can be viewed from the tyre pressure label at the lower part of the left center pillar on the outside.
- Please check the tyre pressure regularly and make sure it is within the specified range.
- The TPMS cannot indicate dramatic tyre damage caused by external factors (such as a blowout) in advance, nor can it identify natural, uniform pressure loss over long periods of time in all tyres.
- When the vehicle is started, the information displayed on the tyre pressure monitoring interface of the combination instrument is the historical value. When the vehicle is driven at a speed of 30 km/h or above for a few minutes, the system will gradually update the tyre pressure information.◀

Tire Pressure Monitoring System (Indirect)*

The Tyre Pressure Monitoring System (TPMS) reminds the driver to check the tyre pressure by illuminating the tyre pressure monitoring system status indicator light.

If the TPMS status indicator is illuminated, it indicates that one or more tyres have abnormal tyre pressure. Park the vehicle as soon as possible, and inspect tyre pressure and inflate the tyre to a correct pressure value. The tyre pressure label pasted on the vehicle indicates the tyre pressure when the vehicle is cold. The tyre pressure monitoring system of the vehicle can remind you of abnormal tyre pressure but it cannot substitute normal tyre maintenance.

Tire pressure calibration resetting operation is required after performing the followings:

- After adjusting the inflation pressure of one or more tyres.
- After replacing or rotating any tyre/wheel.
- After performing wheel dynamic balancing
- When the ambient temperature changes by more than 40°C after tyre pressure is calibrated and reset.
- After every 6 months or 10,000 km driving.

Manual Calibration of Tyre Pressure Monitoring System

1. Inflate tyres to the recommended pressure (refer to the tyre pressure label located on the lower outer side of the left center pillar).
2. Click the following on the multimedia display in sequence: Vehicle Settings → My Vehicle → My Vehicle → Service and Maintenance, and click Resetting Tyre Pressure Monitoring in the interface.
3. After resetting the tire pressure monitoring system, drive the vehicle at a speed above 40 km/h for a few minutes, and the new tire pressure reference values will be set.

- The TPMS only provides a low tyre pressure warning and does not display actual tyre pressure values. Please check your tyre pressure regularly and maintain it within the recommended range.
- The TPMS cannot indicate dramatic tyre damage caused by external factors (such as a blowout) in advance, nor can it identify natural, uniform pressure loss over long periods of time in all tyres.◀

Tyre Pressure Monitoring System Fault

When the TPMS is faulty, the tyre pressure monitoring system status indicator will flash for several seconds and then remain illuminated, while the instrument cluster displays a fault message. The following conditions may cause TPMS malfunction:

- Installation of incompatible tyres or modification of wheels.
- Poor driving conditions such as severe road surfaces or prolonged unusual driving.
- Driving the vehicle with anti-skid chains installed.

- A non-original wheel speed sensor is installed.


Active Grille Shutter (AGS)

Active Grille Shutters (AGS) automatically control the grille opening degree to reduce unnecessary heat dissipation from the engine compartment. Maintaining the coolant within the optimal operating temperature range during driving, and enhancing vehicle mechanical performance while improving heater performance in low-temperature conditions. During high-speed driving, reduce air resistance, decrease power consumption, and improve range by closing the Active Grille Shutter.

In order to improve the battery life of the vehicle, the active grille shutter needs to be opened or closed according to the control strategy of the vehicle. Since the space at the rear of the active grille shutter is closed, foreign objects such as leaves may enter after opening. It is necessary to pay attention to cleaning the foreign objects at the rear of the active grille shutter in time every time the vehicle is maintained.◀

Introduction to Combined Driver Assistance System Sensors

Combined Driver Assistance System Sensors

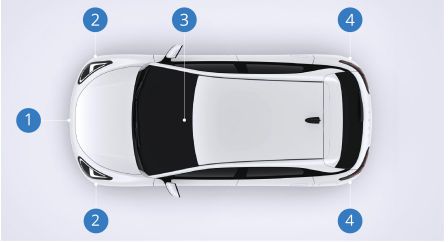

1. Front Medium-Range Radar
2. Front Side Medium-Range Radar
3. Front Camera
4. Rear Side Medium-Range Radar

When the vehicle is powered on, the combined driving assist needs to be initialized. During the initialization process, the sensors of the combined driving assist cannot function properly. ◄

Medium-Range Radar

The combined driving assist detects targets via medium-range radars.

- If the visual field of radar is dirty or blocked, the instrument cluster display will prompt a text and audio alarm to remind the driver to wipe the visual field of radar.
- Please keep the bumper surface clean.
- Do not dismantle or exchange the radars. ◄

Under the following situations, be sure to go to a Geely Service Center for professional calibration of radar:

- Radar has been removed.
- The toe-in and rear wheel camber have been adjusted during four-wheel alignment.
- After a collision.
- Combined Driving Assist Degradation or Abnormality. ◄

Camera

The combined driving assist recognises the lane boundary and detects the target via the camera.

- In order to protect the electronic components, the system function will be temporarily disabled when the camera is at extremely high temperature. The instrument cluster display will prompt in text. When the temperature drops sufficiently, the camera unit will restart and the system function will return to normal.
- If a system failure occurs in the camera, the instrument cluster display will prompt in text. Please visit a Geely Service Center for maintenance.
- Strong sunlight, reflection, and extreme light contrast may affect the detection function of the camera. ◄

System Limitations



- In adverse conditions such as rain, snow, fog, and sandstorms, radar or camera performance degrades, and some targets may be undetected or be detected too late. The driver must monitor the vehicle status and control the vehicle at all times.
- During daily use, keep the radar or camera clean. Their field of view must not be obstructed by contaminants (e.g., rain, snow, fog, condensation, frost, leaves, bird droppings, etc.), otherwise the performance of the Integrated Driver Assist System will be affected. The radar or camera has blind spots and range limitations. Objects beyond its field of view or at the very edge of its field cannot be effectively identified.
- Do not apply coatings, wax, paint, or install body kits on the external areas of radar and camera, as this may impair their performance.
- Under special environmental conditions, the performance of radar or cameras may degrade or they may stop functioning. Drivers should monitor the vehicle's status and take control of the vehicle at all times.
- Temporary malfunctions of the radar or camera are a normal reaction to specific road conditions. If the radar or camera surface is clean, driving the vehicle under normal road conditions for a period of time should restore normal operation. If it cannot be restored, please visit a Geely Service Centre for maintenance.
- The radar or camera will not react to animals, small vehicles (such as tricycles), vehicles with irregular appearance, pedestrians, oncoming and crossing vehicles. ◄



Do not modify the radar or camera. When the radar or camera is subject to strong vibration or slight impact, it may need to be re-calibrated. Camera performance may also be affected by deformation, damage, replacement, or tinting of the front windshield, leading to inaccurate detection. ◄

Adaptive Cruise Control (ACC)

When vehicle speed is below 130 km/h, the Adaptive Cruise Control (ACC) System detects the front vehicle using the front camera and other sensors to assist the driver in maintaining a set target speed or following the lead vehicle.

The driver can set the desired target speed or following gap time. When the system detects a vehicle ahead traveling slower than the set speed, it will maintain a proper following distance; when no slower vehicle is detected ahead or the vehicle ahead accelerates above the set speed, the system will maintain the preset driving speed.

ACC Is only an assistance system and cannot replace the driver in driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death. ◄

When the vehicle is powered on, ACC will start self-check, and the system is disabled at this stage. ◄

Function Selection


Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Intelligent Driver Assistance, and select the Adaptive Cruise Control (ACC) in this interface.

After turning on the Adaptive Cruise Control (ACC) on the multimedia display, the ACC can be activated through the OK button on the left side of steering wheel.

Instrument Cluster Information

Picture	Description
	Set speed and cruise system longitudinal control status indicator
	Vehicle Ahead Image
	Headway

Steering Wheel Control

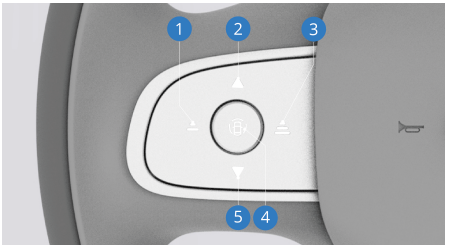

The cruise control buttons are on the left side of the steering wheel.

1. Headway - button: Short press to decrease the headway.
2. Speed Adjustment and Cruise Resume Button
   - Short press with function activated: the cruise speed increases by 5 km/h.
   - Long press with function activated: the cruise speed increases by 1 km/h continuously.

- When the function is not activated, press the button to resume and confirm the Adaptive Cruise Control (ACC) function.

3. Headway + button: Short press to increase the headway.
4. OK button: Press this button to activate or deactivate the Adaptive Cruise Control (ACC) function
5. Speed Adjustment Button
   - Short press with function activated: the cruise speed decreases by 5 km/h.
   - Long press with function activated: the cruise speed decreases by 1 km/h continuously.

Activation and Speed Setting

1. When the vehicle is stationary, activate and set the vehicle speed as follows:
   - Select the Adaptive Cruise Control (ACC) on the multimedia display. After the activation conditions are met, the cruise system longitudinal control indicator light on the instrument cluster display lights up in grey.
   - Depress the brake pedal or activate AUTO HOLD function.
   - Press the OK button or the speed adjustment and cruise resume button to activate ACC; The cruise system longitudinal control status indicator on instrument cluster display lights up in green.
   - When the brake pedal is released, ACC system can continue to keep the vehicle stationary.
   - The driver needs to press the speed adjustment and cruise resume button again or depress the accelerator pedal to make ACC control the vehicle to start. ACC controls the vehicle according to the set cruise speed.
2. When the vehicle is in motion, activate and set the vehicle speed as follows:
   - Select the Adaptive Cruise Control (ACC) on the multimedia display. After the activation conditions are met, the cruise system longitudinal control indicator light on the instrument cluster display lights up in grey.
   - Press the OK button or the speed adjustment and cruise resume button to activate ACC; The cruise system longitudinal control status indicator on instrument cluster display lights up in green. If the vehicle speed is below 30 km/h, the cruise control speed is set to 30 km/h. If the vehicle speed is between 30 and 130 km/h, the cruise control speed is set to the current vehicle speed.
   - Some models are equipped with cruise automatic speed limit assist function. If you have click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Intelligent Driver Assistance, and the Automatic Speed Limit Assist for Cruise Control function is turned on, the set speed will automatically adapt the recognised speed limit sign as the set speed, but it will not adapt the

speed limit higher than the set speed.
- ACC controls the vehicle according to the set cruise speed.

3. Push the speed adjustment and cruise resume button or speed adjustment button to set the desired cruise speed.

When the vehicle is stationary, the brake pedal must be depressed or the auto hold function activated to activate ACC. After ACC is activated, the driver needs to press the speed adjustment and cruise recovery button or depress the accelerator pedal to let ACC control the vehicle to start. ◄

To activate ACC, the following conditions must be met at least:

- ACC is selected.
- The gear is in D.
- Four doors, trunk, and hood are all closed.
- The vehicle is in motion, and the brake pedal is not applied.
- There is not any fault in the brake system.
- Front camera and front medium-range radar have no problems, such as high temperature, dirt or fault.
- Electronic Stability Control (ESC) system is active.
- Electric Parking Brake (EPB) is released.
- The driver fastens the seat belt.
- Hill Descent Control (HDC) is turned off.
- When there is no vehicle ahead in front of the vehicle, the speed of the vehicle must be greater than 15 km/h.

When the cruise automatic speed limit assist is turned on, there may be situations where the cruise speed does not change with the speed limit, such as the speed limit value is lower than the threshold value or the difference between the speed limit and the current target vehicle speed is greater than the threshold value. Due to the influence of light and the location of guide boards, there may be erroneous identification or missed identification of speed limits. The driver must not rely on the fusion system to determine the appropriate cruise speed and is responsible for selecting a suitable cruise speed based on actual road conditions.

During the speed limit fusion, the system will accelerate or decelerate according to the new set value. At this time, the driver should always keep an eye on the surrounding environment, and intervene at any time by depressing the accelerator pedal or operating the vehicle speed adjustment and confirmation button.

Under all circumstances, the driver should keep sufficient braking distance from the vehicle ahead, and be aware of relevant requirements of local highway traffic regulations on the minimum distance or the shortest time. It is the driver's responsibility to abide by the law.

Accelerate when using ACC

Use the following two methods to increase speed:

- If the ACC is already activated, press the speed adjustment and cruise recovery button to increase the vehicle speed.
- Use the accelerator pedal to increase the speed. When the accelerator pedal is

released, ACC continues to control the vehicle's speed for cruise control.

Decelerate when using ACC

If ACC is already activated, press the speed adjustment button to reduce the vehicle speed.

Adjust the headway

The headway has three levels: near, medium and far. Press the headway briefly to increase or decrease it.

Overtaking Assist Mode

In cruise mode, when following the vehicle ahead and turning on the left turn signal, ACC accelerates the vehicle before it reaches the overtaking lane to assist the driver overtake or change the lane.

To enable the overtaking assist mode, the following conditions must be met at least:

- There must be a target vehicle ahead.
- The current vehicle speed exceeds 60 km/h.
- The current lane line is dotted.
- The set speed should be high enough for a safe overtaking.
- Turn on the left turn signal.

In the overtaking assist mode, unexpected acceleration may occur in the following situations, which requires special awareness of the driver. Therefore, in the overtaking assist mode, the driver should be well prepared for sudden change of conditions and control the vehicle in time.

- The vehicle is approaching a turning exit, and the exit direction is the same as that of usual overtaking.
- Before the vehicle passes through and enters the overtaking lane, the speed of vehicle ahead decreases.
- The speed of vehicle in the overtaking lane decreases.

In the overtaking assist mode, unexpected deceleration may occur in the following situations, which requires special awareness of the driver. Therefore, in the overtaking assist mode, the driver should be well prepared for sudden change of conditions and control the vehicle in time.

- The speed of vehicle in the overtaking lane is lower than your vehicle speed.
- The longitudinal distance between the vehicle in the overtaking lane and your vehicle is close.
- The vehicle in the overtaking lane is large with long body, and parallel to your vehicle.



- In overtaking assist mode, the driver is required to manually control the lane change.
- Please note that this function can be enabled in more situations besides overtaking. E.g., when the left turn signal indicator is turned on to change lanes or enter another road, the vehicle will briefly accelerate. ◄

Start-Stop Mode

In the cruise following mode, if the vehicle ahead brakes and stops gradually, your own vehicle will follow the vehicle ahead to stop gradually, and keep a safe distance from it.

When the Driver Monitoring System is turned off:

- Within 30 seconds after stopping the following operation, the cruise will resume automatically if the vehicle ahead resumes traveling.
- If the vehicle ahead resumes after more than 30 seconds after stopping, the driver is required to depress the accelerator pedal or press the speed adjustment and cruise resume button to resume cruising.
- In ACC start-stop mode, if the driver actively exits ACC, the vehicle will not start automatically. If the accelerator pedal is pressed at this time, the vehicle starts, and the driver needs to take control of the vehicle and drive safely.

When the Driver Monitoring System is turned on:

- Within 5 minutes after stopping, if driver attention is focused and the vehicle in front resumes driving, the cruise will resume automatically.
- When following and stopping within 5 minutes, if the driver is distracted and the vehicle ahead resumes moving, press the accelerator pedal or the speed adjustment and cruise resume button to reactivate the cruise control.
- When it is more than 5 minutes after stopping, if the vehicle ahead resumes driving, the driver needs to depress the accelerator pedal or press the speed adjustment and cruise resume button to resume cruising.
- If the driver actively exits ACC, the vehicle will not start automatically. The driver needs to actively overtake the vehicle and depress the accelerator pedal to start the vehicle.

ACC cannot recognise stationary vehicles, and cannot brake against stationary vehicles.

ACC will have unexpected acceleration in the following situations. Please be highly alert and take active braking:

- When ACC system follows another moving vehicle and the target changes from a moving vehicle to a stationary vehicle, the ACC system will ignore the stationary vehicle and continue cruising at the speed set by the driver.
- When following the vehicle ahead to turn at low speed, the following target disappears due to the turning of vehicle ahead, so the ACC system will accelerate based on the set speed. ◀

Interrupt and resume ACC

If the driver has set the ACC to the desired vehicle speed and then steps on the brake pedal or presses the OK button on the left side of the steering wheel, the ACC will be deactivated. At this time, the set speed will be pre-stored and continue to be shown on the instrument cluster display. To activate the ACC and cruise at the speed set last time, press the speed adjustment and cruise resume button.

Deactivate ACC

- Depress the brake pedal to exit ACC.
- Press the OK button on the left side of steering wheel to exit ACC.


ACC relies on other systems to function, such as the Electronic Stability Control (ESC). If any of these systems stops working, the ACC will stop working. In case of deactivation, a sound signal is given and the instrument cluster display shows a text message. The driver must intervene to match the speed and distance of the vehicle ahead, otherwise the risk of an accident increases, potentially resulting in injuries or fatalities. ◄

Possible reasons for disabling the ACC may be (including but not limited to):

- Any door, hood, or trunk is opened.
- Driver seat belt is unfastened.
- The wheels lose road holding.
- The brake system performance is degraded or faulty.
- The parking brake is applied.
- The front camera and front medium-range radar are covered by wet snow or heavy rain.
- The Electronic Stability Control (ESC) system is functioning or turned off.
- Hill Descent Control (HDC) function is turned on.

System Limitations

The front camera has a limited detection range. In some cases, it may not detect vehicles or there may be a delay in detecting them.

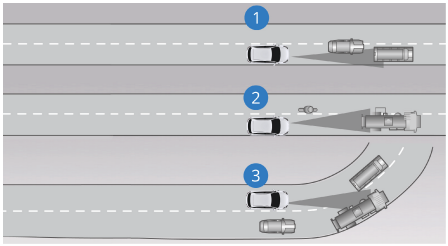

Detection problems may occur in the following situations:

1. Vehicle moves slowly along the driver's lane. The system can only detect the vehicle that has fully entered the driver's lane.
2. When the vehicle ahead is a large truck, the time of detecting the vehicle may be delayed.
3. When the driver enters or exits a curve on the road, detection problems related to the vehicle ahead may occur.

Under such circumstances, the driver should keep alert. Take emergency measures and temporarily deactivate ACC if necessary.

Apart from the above limitations, ACC may also encounter (but not limited to) the following situations:

- If the distance between the ACC-equipped vehicle and vehicle on the adjacent lane is too small (or the vehicle on the adjacent lane is too close to the lane of ACC-equipped vehicle), ACC system may react to the vehicle and apply braking.
- The change of vehicle posture due to excessive load in the vehicle will degrade or invalidate the target recognition of ACC. This causes the actual vehicle

speed to exceed the target speed or the road speed limit when driving downhill.

- When entering/exiting a curve, the target selection may be delayed or disturbed. ACC may brake unexpectedly or late.
- At a sharp turn or steep downhill road, ACC cannot detect the vehicle ahead normally due to the visual field limit of camera. This may lead to the acceleration of vehicle with ACC, requiring the driver to respond appropriately based on actual road conditions.
- ACC cannot recognise two-wheelers, three-wheelers, and vehicles carrying irregularly shaped loads, including but not limited to flatbed trucks, trailers, cement mixers, and highway maintenance vehicles. Recognition is also less reliable for animals, debris on the road, overturned vehicles, or individuals standing beside or behind a vehicle. Drivers must remain vigilant at all times, observe the road ahead, and be prepared to take control of the vehicle.
- ACC has difficulty detecting stationary or slowly moving vehicles, and cannot recognise vehicles or objects crossing the driving lane. During the use of ACC function, drivers should always pay attention to road conditions and vehicle status, and control vehicles in time.
- If the vehicle speed is high, and the left turn signal is turned on when overtaking from the left, ACC will accelerate the vehicle and shorten the distance to the vehicle ahead. If the vehicle enters the overtaking lane and there is no vehicle ahead, ACC system will gradually adjust speed to reach the set cruise speed.
- After the system requires the driver to take active control of the vehicle, if the vehicle continues to move, the driver must depress the brake pedal to brake.
- Structural modification of vehicle, such as lowering the chassis height or changing the front license plate mounting board, may affect ACC.
- In some cases (the speed of vehicle ahead is too low relative to own vehicle, a vehicle cuts into the lane at close range, or the vehicle ahead suddenly brakes, etc.), ACC system does not have enough time to reduce the relative speed. In such a situation, the driver must take control of the vehicle immediately.
- ACC cannot recognise stationary vehicles, and cannot brake against a stationary vehicle. ◄

Intelligent Cruise Control (ICC)

When vehicle speed is below 130 km/h, Intelligent Cruise Control (ICC) utilizes sensors such as the front camera to detect vehicles ahead, assisting the driver with cruise control and steering assistance. It also provides steering assistance based on lane markings on both sides, and issues alerts when the driver's movements deviate from the steering wheel.

ICC mainly provides driving assistance for the driver on highways or elevated roads with good road conditions. The driver should keep control of the vehicle at all times.

ICC is only a driver assistance system and cannot take the place of the driver in driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.◀

When the vehicle is powered on, ICC will start self-check, and the system is disabled at this stage.◀

Function Selection


Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assis → Intelligent Driver Assistance, and then select the Intelligent Cruise Control (ICC) function in this interface.

After turning on the Intelligent Cruise Control (ICC) on the multimedia display, the ICC can be activated through the OK button on the left side of steering wheel.

Instrument Cluster Information

Picture	Description
	Cruise System Longitudinal Control Status Indicator Light
	Cruise System Lateral Control Status Indicator Light
	Vehicle Ahead Image
	Lane lines
	Headway

Steering Wheel Control

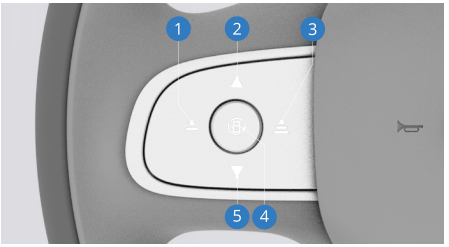

The cruise control buttons are on the left side of the steering wheel.

1. Headway - button: Short press to decrease the headway.
2. Speed Adjustment and Cruise Resume Button

- Short press with function activated: the cruise speed increases by 5 km/h.
- Long press with function activated: the cruise speed increases by 1 km/h continuously.
- Press this button when the function is inactive to resume and confirm the Intelligent Cruise Control (ICC) function.

3. Headway + button: Short press to increase the headway.
4. OK button: Press this button to enable or disable the Intelligent Cruise Control (ICC) function
5. Speed Adjustment Button
   - Short press with function activated: the cruise speed decreases by 5 km/h.
   - Long press with function activated: the cruise speed decreases by 1 km/h continuously.

Activation and Speed Setting

1. When the vehicle is stationary, activate and set the vehicle speed as follows:
   - Select the Intelligent Cruise Control (ICC) on the multimedia display. After the activation conditions are met, the cruise system lateral and longitudinal control status indicator light on the instrument cluster display lights up in gray.
   - Depress the brake pedal or activate AUTO HOLD function.
   - Press the OK button on the left side of the steering wheel or the speed adjustment and cruise resume button to activate ICC. At this time, the set cruise speed is 30km/h. The set speed indicator for the longitudinal control of the cruise system lights up in green on the instrument cluster display, and the status indicators for both lateral and longitudinal control of the cruise system also light up in green.
   - When the brake pedal is released, the intelligent cruise control (ICC) can continue to keep the vehicle stationary.
   - The driver needs to press the speed adjustment and cruise resume button again or depress the throttle pedal to make the intelligent cruise control (ICC) control the vehicle to start.
   - Intelligent cruise control (ICC) controls the vehicle according to the set cruise speed.
2. When the vehicle is in motion, activate and set the vehicle speed as follows:
   - Select the Intelligent Cruise Control (ICC) on the multimedia display. After the activation conditions are met, the cruise system lateral and longitudinal control status indicator light on the instrument cluster display lights up in gray.
   - Press the OK button on the left side of the steering wheel or the speed adjustment and cruise resume button to activate ICC. The indicator lights for the horizontal and vertical control status of the cruise system on the instrument cluster display will light up in green. When the vehicle speed is below 30km/h, the cruise set speed

shall be 30km/h; when the vehicle speed ranges from 30km/h to 130km/h, the cruise set speed shall be the current vehicle speed.

- Some vehicle models are equipped with the cruise automatic speed limit assist function. If you turn on this function by tapping Vehicle Settings → Driver Assist → Intelligent Driving Assistance in sequence on the multimedia display screen, the set vehicle speed will combine the recognized speed limit signs as the preset speed, while speed limits higher than the preset speed will not be adopted.

When the Adaptive Cruise Control (ACC) With Speed Limiter is activated, the Speed Limit Warning function is automatically activated.

- Intelligent cruise control (ICC) controls the vehicle according to the set cruise speed.

3. Push the speed adjustment and cruise resume button or speed adjustment button to set the desired cruise speed.

When the vehicle is stationary, the brake pedal must be depressed or the auto hold function activated to activate ICC. After ICC is activated, the driver must press the speed adjustment and cruise recovery button again or depress the accelerator pedal to let ICC control the vehicle to start. ◀

To activate the ICC, the following conditions must be met:

- ICC is on.
- The gear is in D.
- The vehicle is in operation.
- Four doors, trunk, and hood are all closed.
- The vehicle is in motion, and the brake pedal is not applied.
- There is not any fault in the brake system.
- The front camera has no problems such as high temperature, dirt or fault.
- Electronic Stability Control (ESC) system is active.
- Electric Parking Brake (EPB) is released.
- The driver fastens the seat belt.

Accelerate when using ICC

Use the following two methods to increase speed:

- If the ICC is already activated, an upward push of the speed adjustment and cruise recovery button can increase the vehicle speed.
- Use the accelerator pedal to increase the speed. When the accelerator pedal is released, ICC continues to control the vehicle's speed for cruise control.

Decelerate when using ICC

If ICC is already activated, pressing the speed adjustment button can reduce the vehicle speed.

Adjust the headway

The headway has three levels: near, medium and far. Press the headway briefly to increase or decrease it.

Hands-off Alert

When ICC is activated, it requires you to hold the steering wheel. If no hands are

detected on the steering wheel for an extended period, a relevant reminder message will appear on the instrument cluster display. When both hands are detected, the relevant reminder information will disappear, and the ICC resumes normal operation.

If the function detects that the driver has been in a disengaged state for a certain period of time, a level 1 driver disengagement alarm will be triggered.

The function detects that if the driver remains in a disengaged state for a certain period of time after the level 1 driver disengagement alarm is triggered, the level 2 driver disengagement alarm will be activated.

If the function detects that the driver remains in a disengaged state for a certain period of time after the level 2 driver disengagement alarm is triggered, the ICC will activate the hazard warning lights and control the vehicle to decelerate to 0 within the lane before disengaging the function, which will remain in effect until the driver reactivates the function.



- In roads with potholes, protrusions, and ups and downs, the driver disengagement alert warning may be delayed or interrupted.
- Lightly holding the steering wheel for an extended period may lead to a false driver disengagement alert alarm.
- When the vehicle speed is lower than 10 km/h, the driver disengagement alarm function is not activated.◀

Deactivate ICC

The following methods can disable ICC:

- Press the OK button on the left side of the steering wheel to exit ICC.
- Depress the brake pedal to exit ICC.

ICC relies on other systems to function, such as the Electronic Stability Control (ESC). If any such system ceases operation, the ICC will cease to function.

In case of deactivation, a sound signal is given and the instrument cluster display shows a text message. The driver must intervene to maintain proper speed and distance from the vehicle ahead.

ICC may be deactivated for the following reasons (including but not limited to):

- Any door, hood, or trunk is opened.
- Driver seat belt is unfastened.
- The wheels lose road holding.
- The brake system performance is degraded or fails.
- The parking brake is applied.
- The front camera is covered by wet snow or rain.
- The Electronic Stability Control (ESC) system is functioning.
- Driver Monitoring System malfunction or obstructed.
- Front wiper is operating too fast.

Turn Signal Stalk Lane Change Assist

When the vehicle is traveling at speeds of 65~130 km/h on closed roads such as highways or elevated roads, you can activate the lane change assist function by flicking the turn signal lever when there are no vehicles in the adjacent lane. After

activation, the Lane Change Assist feature of the Driver Assistance system will assist the driver in changing the vehicle's lane to an adjacent lane.

Engage the lever for lane change assist.

On the multimedia display, click in sequence: Vehicle Settings → Driver Assist → Intelligent Driving Assistance, then enable or disable the lever lane change assistance function on this interface. Due to regulatory requirements, this action can only be performed after shifting gears. For safety reasons, it is recommended to keep the vehicle stationary.

After the function is enabled, when the driver confirms through observation that lane changing can be performed legally, safely and appropriately, they can activate the lever lane change assist function by turning on the corresponding side turn signal to complete the lane change.

When the following conditions are met, the lever lane change assist will assist the driver in driving to an adjacent lane according to the direction indicated by the turn signal.

- The driver holds the steering wheel.
- No vehicles or obstacles are present within the planned path of the target lane.
- The visual field of the front camera is not blocked by pollutants.
- No other vehicles are detected in the blind spot.
- The driving speed is at least 65 km/h.

When you activate the overtaking assist function during lane change, the vehicle accelerates and approaches the vehicle ahead.

During lane changes, the lane markings on the instrument cluster reflect the status in real time: The original lane markings remain blue. The adjacent target lane markings turn blue when crossing the line; the blue markings disappear from the original lane after completing the lane change.

When the lever lane change assist function malfunctions, the instrument cluster will display a series of warnings. Therefore, when the lever lane change assist function is activated, pay attention to the instrument cluster and be prepared to take control of the vehicle.




- The lever lane change assist function assists the driver in driving the vehicle into another lane every time it is applied. Changing into another lane again requires activating the turn signal after the first lane change is performed.
- If the driver briefly turns on the turn signal to activate the driver assist function for changing to an adjacent lane, the turn signal continues to flash during the lane change. After a lane change succeeds or fails, the turn signal turns off automatically. If the driver fully turns on the turn signal to activate the driver assist function for changing to an adjacent lane, the driver needs to manually reset the light combination switch for the turn signal to turn off after the lane change is completed or fails.
- The driver has the responsibility to confirm that the lane change is safe and appropriate. Therefore, before the lane

change, always check the blind spots, lane markings, and surrounding road to ensure it is safe and appropriate to drive into the target lane.

- Never rely on the lever lane change assist system to determine the appropriate driving route. Pay attention to the road ahead and traffic conditions, pay attention to the surrounding area, check the instrument cluster for any warnings, and concentrate on driving. Be sure to take measures at any time and in a timely manner.
- Do not use the lever lane change assist on a series of sharp curves, on icy or slippery roads, or in bad weather conditions (such as heavy rain, snow, thick fog, etc.) that may obstruct the camera or radar's view.
- The lever lane change assist function only works when the ICC is activated.◀

System Limitations

The detection range of the front camera is limited, and in some cases, it may not detect vehicles or there may be a delay in detecting them.

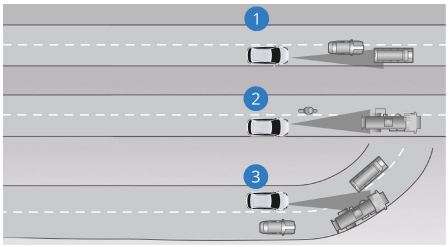

Detection problems may occur in the following situations:

1. Vehicle moves slowly along the driver's lane. The system can only detect the vehicle that has fully entered the driver's lane.
2. When the vehicle ahead is a large truck, the time of detecting the vehicle may be delayed.
3. When the driver enters or exits a curve on the road, detection problems related to the vehicle ahead may occur.

Under such circumstances, the driver should keep alert. Take emergency measures and temporarily shut down ICC if necessary.

The front camera has a limited detection performance. In some cases, the front camera may not be able to accurately determine the lane line and is vulnerable to environmental interference.

Lane line detection problems may occur in the following situations:

- The lane lines are not paved to state standards and are not recognizable.
- The lane lines have low visibility and contrast and cannot be recognized.
- The surface of the lane lines is covered with sand, water, snow, etc. and cannot be recognized.
- The wheel marks from vehicles ahead in rainy or snowy days, and wheel marks caused by braking operation of vehicles ahead may be recognized as lane lines due to the high contrast.
- The road dividers, curbs, etc., may be recognized as lane lines.
- Continuous lane line-like projections on a road, such as the shadow of a railing, may be recognized as lane lines.

In following situations, the driver must be especially alert:

- This icon appears when driving with ICC. You are in control of the vehicle. The system prioritizes driver input. Please observe your surroundings and control the steering.
- When the ICC is activated and confirmed to start with the vehicle stationary, if there are pedestrians, children, animals, two-wheeled vehicles, tricycles or obstacles ahead, the ICC function cannot detect and identify them, and there is a serious collision risk. The driver should activate ICC after confirming that the area in front of the vehicle is safe to control the vehicle to start off.
- If the left turn signal is turned on when overtaking from the left, ICC will accelerate the vehicle and shorten the distance to the vehicle ahead. If the vehicle enters the overtaking lane and there is no vehicle ahead, the ICC system will accelerate to the set cruise speed.
- ICC cannot detect the items loaded or accessories mounted on the target vehicle that protrude from its side, rear end or roof. If the vehicle ahead carries with the above-mentioned special load or equipment, always turn off the ICC when overtaking such vehicles.
- When driving with a trailer towed, the dynamic characteristics of ICC will be reduced.
- After the system requires the driver to take active control of the vehicle, if the vehicle continues to move, the driver must depress the brake pedal to brake.
- Structural modification of vehicle, such as lowering the chassis height may affect ICC.
- This icon appears when driving with ICC. You are in control of the vehicle. The system prioritizes driver input. Please observe your surroundings and control the steering.
- When ICC is enabled or disabled for the traffic light response function, and the vehicle is passing through intersections, it may inaccurately recognize other vehicles, crossing pedestrians, two-wheeled vehicles, etc., posing a risk of collision. Therefore, the driver must pay attention to road conditions at all times, hold the steering wheel, and be ready to take control of the vehicle at any time.◀

Under the following road conditions, the performance of ICC direction-assisted function will degrade or fail to work. The driver should keep alert:

- Road with insufficient curve radius.
- Road with no visible lane lines.
- Intersections of Roads.
- Roads with vehicle marks (e. g., tire marks).
- Roads with an increasing or decreasing number of lane lines.
- Roads that the original lane and the new lane have large difference.
- Roads with potholes, bumps, undulations.
- Construction Zones.
- Ultra-wide/ultra-narrow roads.
- Roads where the lane lines turn.
- Adverse weather conditions with reduced visibility.◀



- The ICC is more suitable for use on expressways and roads with restricted access, while the driver needs to concentrate on driving the vehicle and be able to take control of the vehicle quickly when an emergency occurs.
- ICC does not work for vehicles or objects crossing carriageway.
- The change of vehicle posture due to excessive load in the luggage area will degrade or invalidate the target recognition of ICC system.
- The ICC may not be able to react in time once there is a vehicle cuts in with low speed suddenly, so the driver should brake in time.
- When suddenly accelerating and approaching the vehicle ahead at high speed (an obvious speed difference with the vehicle ahead), the driver should brake in time.
- When driving on a steep downslope, it may be difficult to keep a proper distance from the vehicle ahead. In these situations, be particularly careful and always be ready to brake. The use of ICC under heavy load is strictly forbidden.
- ICC has a poor recognition rate for stationary or slowly moving vehicles, and cannot recognise oncoming vehicles. During the use of ICC, drivers should always pay attention to road conditions and vehicle status, and control vehicles in time.
- ICC fails to recognize two-wheelers, three-wheelers, and vehicles carrying irregularly shaped loads, including but not limited to flatbed trucks, trailers, cement mixers, and highway maintenance vehicles. Recognition is also less reliable for animals, debris on the road, overturned vehicles, or individuals standing beside or behind a vehicle. Drivers must remain vigilant at all times, observe the road ahead, and be prepared to take control of the vehicle.
- When ICC is in use, if the driver presses the accelerator pedal, the vehicle will be actively controlled by the driver, and respond to the driver's acceleration input. The speed control function of ICC will not work.
- When entering/exiting a curve, the target selection may be delayed or disturbed. ICC may brake unexpectedly or late.
- If the vehicle ahead suddenly brakes, ICC may fail to respond timely or react too slowly. In this case, active braking is required.
- At a sharp turn, such as a serpentine road, ICC cannot detect the vehicle ahead normally due to the limit of camera. This may lead to the acceleration of vehicle with ICC assist, requiring the driver to respond appropriately based on actual road conditions.
- When following a vehicle ahead to pass through an intersection, ICC may cause the vehicle's lateral position to shift due to the driving path of vehicle ahead. This may pose a side collision risk with vehicles driving in adjacent lanes,

requiring driver supervision and active control functions.

- When driving on a highway or main road entrance, the ICC is not able to change lanes at this time and there is a functional degradation due to the change in the road, and thus only adaptive cruise control (ACC) is available.
- The ICC is unable to work in complex road conditions such as heavily congested road conditions, changing and complex traffic, vehicles or pedestrians crossing, intersections, on-ramps, traffic diversion area, lost lane lines, etc., which require driver supervision and active control functions.
- When ICC is active, lightly resting a hand on or making slight adjustments to the steering wheel may cause unintended lane deviation. In such cases, the system will alert the driver to take active control of the vehicle through visual, audible, and steering wheel vibration warnings. The driver must remain alert and take appropriate actions to take active control of the vehicle.
- The ICC may recognise objects on road edges (walls, guardrails, curbstones, grass, greenbelts, asphalt seam joints) as lane lines to work accordingly.◀

Lane Keeping Assist (LKA)

The lane keep assist (LKA) consists of lane keep assist, lane departure warning and emergent lane keeping assist. When the vehicle speed exceeds 65 km/h, LKA can recognize lane lines, pedestrians, curbs, front/rear incoming vehicles, and calculate the distance from the vehicle to the left/right lane line and front/rear incoming vehicles via front camera and side barrier detection radars. When the vehicle deviates from the lane or is about to collide with pedestrians, vehicles in the adjacent lane, the system will give a corrective assist force or remind the driver to keep the vehicle in the lane.

LKA is only an assistance system and cannot replace the driver in driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.◀

When the vehicle is powered on, LKA will start self-check, and the system is disabled at this stage.◀

Function Composition

Lane Departure Warning (LDW)

Lane Departure Warning (LDW) warns the driver when the vehicle deviates from the lane unconsciously. Unconscious lane departure includes departure that has already occurred and the imminent lane departure.

Lane Departure Prevention (LDP)

When the vehicle approaches a lane line and there is a risk of deviation, the Lane Departure Prevention (LDP) assists the driver to control the vehicle back to the lane by applying torque to the steering wheel.

Emergency Lane Keeping Assist (ELKA)

Emergency Lane Keep Assist (ELKA) can help the vehicle back to its own lane in the following situations:

- The vehicle is about to rush out of the road or collide with the edge of roads.
- Unintentional deviation from the lane and there may be a collision with the opposite vehicle.
- Unintentional deviation from the lane and collision with the rear vehicle (applicable only to models equipped with side barrier detection radars).
- Unintentional deviation from the lane and there may be a collision with the pedestrians in the adjacent lane.



- When the Electronic Stability Control (ESC) is off, the Lane Departure Prevention (LDP) and Emergency Lane Keep Assist (ELKA) cannot work.
- The Emergency Lane Keep Assist (ELKA) cannot handle all situations under all traffic, weather and road conditions.
- This function cannot detect fences, railings or similar obstacles on the roadside.
- The Emergency Lane Keep Assist (ELKA) activates only when there is a high collision risk. Therefore, never wait for the function to perform intervention.
- The driver shall always keep their attention and judgment, ensuring that the vehicle maintains a safe speed, keeps an appropriate distance from other vehicles, and that current traffic laws and regulations are observed.◀

Function Settings

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Lane Keep Assist, and then enable or disable lane departure prevention and emergency lane keeping assist in the interface; No alarm, sound, and steering wheel vibration setting are available for the lane departure warning system. Due to regulatory requirements, this action can only be performed after shifting gears. For safety reasons, it is recommended to keep the vehicle stationary.

Instrument Cluster Information



The curvature of lane line may be detected inaccurately due to limited sensor performance. For example, a straight road is displayed as a curve.◀

For different models, the LKA-Related operational status information Displayed on the Instrument Cluster may appear in the following two formats.

Type I

Picture	Description
	Lane Keeping Assist (LKA) OFF Indicator Light
	Lane Keeping Assist (LKA) Fault Warning Light
	Lane lines

When the lane departure warning and lane keeping assist are enabled, the off indicator light of the Lane Keeping Assist (LKA) will not light up.

When both the lane departure warning and lane keeping assist are turned off, the indicator light of the Lane Keeping Assist (LKA) will light up in yellow.

When LKA has any fault, the Lane Keep Assist (LKA) malfunction warning light lights up in yellow.

When LKA does not detect lane lines, lane line 2 has no lane line display.

When LKA is not activated, the lane line 2 is displayed in grey.

When LKA is in standby status, the lane lines 2 on both sides are displayed in white.

When the lane departure warning system is activated, the lane lines 2 on the corresponding side are displayed in red.

When Lane Departure Prevention (LDP) is activated, the lane line 2 on the corresponding side is displayed in blue.

Type II

Picture	Description
	Lane Keeping Assist (LKA) Indicator Light
	Lane Keeping Assist (LKA) Fault Warning Light
	Lane lines

When lane departure warning or lane keep assist is activated, the lane keep assist (LKA) indicator light will illuminate in green.

When both lane departure warning and lane keep assist are turned off, the lane keep assist (LKA) indicator light will not illuminate.

When LKA has any fault, the Lane Keep Assist (LKA) malfunction warning light lights up in yellow.

When LKA does not detect lane lines, lane line 2 has no lane line display.

When LKA is not activated, the lane line 2 is displayed in grey.

When LKA is in standby status, the lane lines 2 on both sides are displayed in white.

When the lane departure warning system is activated, the lane lines 2 on the corresponding side are displayed in red.

When Lane Departure Prevention (LDP) is activated, the lane line 2 on the corresponding side is displayed in blue.

Hands-off Alert

When LKA is activated, the driver should always hold the steering wheel with both hands. If the system does not detect hands on the steering wheel when the Lane Keep Assist is activated for the first time, a visual reminder will appear on the instrument cluster, such as the lane lines turning blue. If the lane keep assist is activated again in the next period of time, and the system still does not detect hands on the steering wheel, the system requests and gives an audible warning, and relevant reminder is displayed on the combination instrument cluster.



- When both hands are detected, the reminder displayed on the instrument cluster will disappear.
- Abnormal tire pressure, incorrect wheel alignment parameters, inconsistent tires and incorrect tire model, etc., may result in abnormal performance of LKA. The driver shall use the assist system when the vehicle is in normal condition.◀

System Limitations

Under the following road conditions, the performance of LKA will degrade or fail to work. The driver should keep alert:

- Roads with heavy snow accumulation.
- Road with insufficient curve radius.
- Road with no visible lane lines.
- Intersections of Roads.
- Roads with vehicle marks (e. g., tire marks).
- Roads with an increasing or decreasing number of lane lines.
- Roads that the original lane and the new lane have large difference.
- Roads with potholes, bumps, undulations.
- Construction Zones.
- Ultra-wide/ultra-narrow roads.
- Roads with abrupt bends in lane lines.
- Adverse weather conditions with reduced visibility.

Collision Mitigation Support Front (CMSF)

The collision mitigation support front (CMSF) warns the driver of pedestrians, cyclists, and vehicles through sound, images and braking. The system assists the driver by taking steps to avoid or mitigate a collision when the driver brakes too late, applies too little braking force or does not brake at all. When the target ahead is a vehicle and the vehicle speed is between 4-130 km/h, the CMSF system is active. If it exceeds this range, the CMSF system is inactive. When the target ahead is a pedestrian or a two-wheeled vehicle and the vehicle speed is between 4 and 90 km/h, the CMSF system is active. If it exceeds this range, the CMSF system is inactive.

- CMSF is only a driver assistance system and cannot take the place of the driver in driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.
- Do not drive the vehicle toward people or objects for the purpose of testing the CMSF. Failure to do so will increase the risk of accidents and may result in injury or death.◀

When the vehicle is powered on, CMSF will start self-check, and the system is disabled at this stage.◀

Function Composition

Safety distance warning

The safety distance warning function is active in non-emergency situations. It is used to alert the driver that the distance from the vehicle ahead is too small when the vehicle speed reaches 65 km/h and above. At this time, the drivers should adjust their driving behavior and maintain a reasonable distance.

Forward Collision Warning (FCW)

When the vehicle speed reaches 10 km/h or above, the system determines that there is a potential risk of collision and will alert the driver through alarm sounds, alarm pictures displayed on the instrument cluster, short braking, etc.

The alarm timing for forward collision is divided into four levels: off, later, moderate and earlier.

Off: it is not necessary to give an alarm.

Later: The alarm distance is smaller, and the alarm time is relatively late.

Moderate: the alarm distance is moderate and the alarm time is between relatively late and relatively early.

Earlier: The alarm distance is far, and the alarm time is relatively early.

If the driver considers that the alarms are too frequent, a low alarm sensitivity can be selected, thus reducing the total number of alarms.

Dynamic Braking Support (DBS)

When the vehicle speed reaches 4 km/h or above, if the current braking force is too small when a dangerous situation occurs, the system will assist the driver to increase the braking force to avoid or reduce the collision.

Automatic Emergency Braking (AEB)

If the driver fails to brake effectively when a dangerous situation occurs, the system will perform automatic emergency braking in a timely manner to avoid or reduce a collision. Automatic emergency braking system can reduce speed by up to 60 km/h.

Function Settings

On the multimedia display screen, click sequentially: Vehicle Settings → Driver Assist → Safety Settings → Pre-Collision Assist, then select to enable or disable the automatic emergency braking function in this interface. Additionally, you can configure the alarm timing in the Forward Collision Warning Settings interface. Due to regulatory requirements, this action can only be performed after shifting gears. For safety reasons, it is recommended to keep the vehicle stationary. When shutdown is selected, the alarm timing will default to moderate after the vehicle is powered on next time.

CMSF is a safety system that is enabled by default in each powering on cycle.

When the Collision Mitigation Support Front (CMSF) system is faulty, the CMSF malfunction warning light on the instrument cluster If the indicator does not turn on, the driver should contact a Geely Service Center as soon as possible.◀

Function Activation

CMSF

CMSF can prevent or mitigate collisions with vehicles. Main application scene: rear-end collision during straight-line driving.

The forward collision warning function will alert the driver to react in time through sound, pictures on the instrument cluster and short braking when a collision risk is detected, reducing the risk of collision.

Pedestrian Collision Mitigation Assist

Pedestrian collision mitigation support can avoid or mitigate collisions with pedestrians. Main application scene: pedestrians crossing the road.

Cyclist Collision Mitigation Assist

Cyclist collision mitigation support can avoid or mitigate collisions with cyclists. Main application scene: cyclists crossing/rear-end collision.

Obstacle Detection

The obstacles detected by CMSF include passenger cars, trucks, buses, pedestrians, and cyclists.

Vehicles

CMSF detects most vehicles whether being stationary or traveling in the same direction as this vehicle.

Vehicles within a certain range can be detected at night only when the front combination lights are normally illuminated.

Pedestrians

The best working effect can only be achieved when the system detects accurate information about the body shape of pedestrians. This means that the system can be combined with standard human movement patterns to clearly identify information about the person's head, arms, shoulders, thighs, upper body, lower body, etc.

The system can detect pedestrians in contrast to the background, for example, the

colour of the pedestrian's clothing contrasts with the colour of the surroundings.

If the contrast is low, pedestrians are detected late or not at all, which means that warnings and braking are delayed or not possible.

The clothing worn is difficult to recognise as a body outline if the pedestrian is partially obscured. As a result, the system will not accurately detect pedestrians if they are less than 0.8 metres tall or if they are carrying larger objects, which means that the brake will not be possible.

Cyclists

The cyclist must be an adult and the bicycle must be designed for adults. The best working effect can only be achieved when the system detects accurate information about the contours of the human body and bicycle. This means that the system can be combined with standard human movement patterns to clearly identify information about the bicycles, head, arms, shoulders, thighs, upper body, lower body, etc.

If the cyclist is partially obscured, the background contrast is poor, or the bicycle is carrying large cargo, the system will not accurately detect cyclists, which means that the brake will not be possible.

System Limitations

CMSF may be subject to limitations under certain conditions.

Surroundings



- The brake distance becomes longer on wet roads, which reduces the anti-collision performance of the CMSF.
- The system may brake unnecessarily in complex driving conditions. For example, when driving on construction sites, at railway tracks, at road manhole covers, in underground garages, and in road conditions where spray or splash is present in front of the vehicle.◀

View of front camera



- The detection of the camera may be affected in certain scenarios, such as roads with guardrails, driving through tunnels, vehicles entering or exiting ahead, or on sharp curves.
- In some cases, the view of camera is limited. The system may detect vehicles, pedestrians or cyclists later than expected, or fail to detect them at all.
- The performance of the automatic emergency braking may be reduced or even unavailable when the camera is obscured or the camera function is limited.
- The headlights and taillights must be turned on and particularly bright to ensure that the vehicle can be detected at night.
- The alarms and brake interventions for pedestrians and cyclists are turned off at speeds above 90 km/h.◀

Driver intervention



- If the driver operates the accelerator pedal or makes a steering intervention during the automatic emergency braking process, the system will be inactive even if a collision cannot be avoided.
- The driver needs to apply greater force to the brake pedal during the automatic emergency braking process.
- The system is not in use when reversing. ◄



- This function is auxiliary and cannot cope with all weather and road conditions.
- The driver is recommended to read all the chapters related to this function in this manual to understand the factors such as function limitation and all the knowledge required before the use of this system.
- CMSF is no a substitute for the attention and judgment of drivers. The driver is always responsible for maintaining proper speed and distance, and complying with traffic laws and regulations.
- For safety reasons, the system is inactive if the driver is not wearing a seat belt.
- The CMSF system is usually in use in the background and is not noticed by the driver. When the system identifies a hazard, it warns or applies the brake to protect the passengers. False triggering may occur due to system performance limitations, so the driver must always pay close attention to their surroundings. To avoid false triggering, the braking time may be slightly later than expected, so the driver needs to respond in time instead of relying on the driver assistance function.
- The system will not react to animals, small vehicles (such as tricycles), vehicles with irregular appearance, cyclists, oncoming and crossing vehicles.
- For the effective targets recognised by the system, due to different vehicles, pedestrians, cyclists, scenes and road conditions, the system cannot always achieve the same performance.
- The function will not be activated when the vehicle is driving at low speed. ◄

Emergency Maneuver Assist (EMA)

When the driving speed is in the range of 50-120 km/h, the system detects that the vehicle is about to collide, and the steering force input by the driver is not enough to avoid it, the Emergency Manoeuvre Assist (EMA) will increase the steering force of the vehicle and assist the driver to avoid it.

EMA can be interrupted by operating the turn signal, accelerator pedal, or steering wheel.


EMA is only an assistance system and cannot replace the driver while driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.◀

When the vehicle is powered on, EMA will start self-check, and the system is disabled at this stage.◀

Function ON

The EMA function is an active safety assistance function and is enabled by default for every trip.

Function Activation

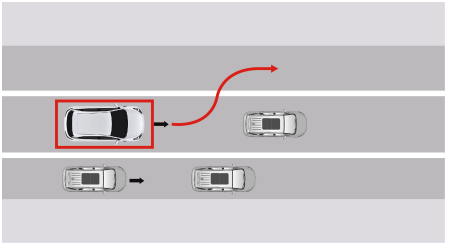

EMA works by increasing the driver's steering input only after the driver initiates an avoidance operation and only when the driver's maneuver is insufficient to avoid a collision.

While increasing the steering input, the function also helps drive the vehicle back in the right direction again after passing an obstacle if the driver intends to return to the original lane.

When the function is activated, a text prompt will be displayed on the instrument cluster to inform the status of this function.

EMA is capable of detecting vehicles, pedestrians, and riders.

Function Limitation

- When the speed exceeds the range of 50~120 km/h, the function will be turned off.
- The function does not work when a risk of collision in an adjacent lane is detected.
- The function is not available when the driven vehicle crosses the curb.
- The function is unavailable when the Electronic Stability Control (ESC) is unavailable or deactivated.

- Strong sunlight, reflection, and extreme light contrast may affect the detection function of the camera, resulting in system performance degradation or even inability to work.
- If the temperature inside the vehicle is too high, the camera may be temporarily turned off, and the function will not work properly.
- This function is auxiliary and cannot cope with all weather and road conditions.◄

Front Departure Alert (FDA)

The Front Departure Alert (FDA) function monitors the status of the vehicle ahead through a front camera. When a vehicle in front is detected and that vehicle moves a certain distance away, the system will alert the driver through text and sound that the vehicle ahead is departing if the following vehicle does not follow or the driver does not initiate movement.

FDA is merely an assistance system and cannot replace the driver's observation and judgment of traffic conditions. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.◄

If the camera is unable to detect the vehicle ahead, the FDA function will not work.◄

Function Activation/Deactivation

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Intelligent Reminders, and then enable or disable the front departure alert function in the intelligent reminder interface.

System Limitations

Under the following scenarios, FDA may not be activated, including but not limited to:

- There are pedestrians, bicycles, motorcycles, etc. in front.

- There are no vehicles ahead.
- The gear is not in D.
- The vehicle ahead is at a considerable distance from the ego vehicle.
- The stopping period for the vehicle ahead and ego vehicle is short.
- The front camera is obscured or when the front camera function is limited.◀

Traffic Sign Identification (TSI)

Traffic Sign Identification (TSI) obtains the speed limit information of current road via front camera and map, and prompts the driver of current road sign information via the instrument cluster in real time. If the vehicle exceeds the current speed limit of the road, the system will give an alarm in time to assist the driver’s proper driving.

When the vehicle is powered on, TSI will start self-check, and the function is not available at this stage.◀

Instrument Cluster Information

Picture	Description
	Speed Limit Sign

When the function acquires the current road's speed limit, it will display the corresponding speed limit via the instrument cluster.

- If the road speed limit sign is unclear, distorted, inclined, irregular, partially blocked or covered, etc., the recognition of camera will degrade, resulting in misrecognition or lack of recognition.
- When the map data is not updated or the positioning is inaccurate, the speed limit sign information ahead may not be displayed or the displayed speed limit information may be inaccurate.

- In case of other non-standard signs and positions, it may be identified as speed limit signs, resulting in misidentification. When vehicle positioning is affected, auxiliary road speed limit signs may be displayed when driving on the main road. ◄

- The traffic sign detection function is affected by the field of view of the camera, the relative position between the camera and the speed limit sign, etc. The traffic sign may be incorrectly identified or not identified, so do not rely on this function to determine the driving mode.
- When vehicle positioning is affected, auxiliary road traffic signs may be displayed when driving on the main road.
- In case of other non-standard signs and positions, it may be identified as traffic signs, resulting in misidentification. ◄

Speed Limit Alert

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Intelligent Reminders → Speed Limit Information Recognition, then select the alarm mode in the Speed Limit Alert interface. Due to regulatory requirements, this action can only be performed after shifting gears. For safety reasons, it is recommended to keep the vehicle stationary.

No alarm: Only the speed limit sign is displayed on the combination instrument cluster.

Blinking Icon: The speed limit sign in the instrument cluster blinks.

Blinking Icon & Sound Alert: the speed limit sign on the instrument cluster blinks accompanied by a sound alert.

If the road speed limit sign is unclear, distorted, inclined, irregular, partially blocked or covered, etc., the recognition ability of the front camera will be reduced, resulting in misidentification or identification failure. ◄

In case of other non-standard signs and positions, it may be identified as speed limit signs, resulting in misidentification. When vehicle positioning is affected, auxiliary road speed limit signs may be displayed when driving on the main road. ◄

The speed limit alarm function only serves as a speed limit reminder. The driver shall actively control the vehicle speed. ◄

Speed Limit Update Reminder

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Intelligent Reminders → Speed Limit Information Recognition, and then enable or disable the Speed Limit Update Reminder function in this interface.

Forward Cross Traffic Alert (FCTA)

The Front Cross Traffic Alert (FCTA) function monitors the approaching four-wheeled vehicles in front by the front side medium-range radar. When the vehicle drives forward (exiting the parking space, passing the intersection) and detects the danger of collision with the vehicle driving in front, the Front Cross Traffic Alert (FCTA) function gives an alarm and clearly and accurately transmits it to the driver to remind the driver to pay attention to the left and right vehicles. When the vehicle is running at low speed and there is a risk of collision with a vehicle crossing perpendicularly from the front side, the brakes can be applied when not in R To reduce the risk of collision.



- FCTA is only an assistance system and cannot replace the driver in driving. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.
- Do not drive the vehicle toward people or objects for the purpose of testing the FCTA. Failure to do so will increase the risk of accidents and may result in injury or death.◀



- When the vehicle is powered on, FCTA will start self-check, and the system is disabled at this stage.
- For safety reasons, the system is inactive if the driver is not wearing a seat belt.◀

Function ON

FCTA is an active safety assistant function that is enabled by default in each ignition cycle.

Instrument Cluster Information

The instrument cluster displays an alarm image, alerting the driver to pay attention to vehicles approaching from the left or right side.

System Limitations

FCTA may be subject to limitations under certain conditions.



- In some cases, the view of the radar is limited. The system may detect vehicles later than expected, or fail to detect them at all, resulting in a late or no warning from the system.
- In some scenes such as underground parking lots, due to the mirroring of pillars, etc., interactive systems such as instrument cluster will give alarm and graphic prompts on both sides.
- In an oblique parking lot scenario, due to the limited field of view of the radar, the system on one side may give late or no warning.

- The obstacles detected by FCTA include four-wheeled vehicles such as passenger cars, trucks, buses, pedestrians, and cyclists. The system only alerts four-wheeled vehicles posing cross-collision risks at intersections and parking spaces.
- The vehicle will not trigger braking in scenarios such as cruise control activation, vehicle turning, oncoming traffic, heavy pedestrian or vehicle presence, or nighttime driving.◄



- For the effective target recognised by the system, due to different vehicles, pedestrians, scenes and road conditions, the system cannot always achieve the same performance.
- When the steering angle and steering angle rate of vehicle exceed a certain limit, the system function will be limited.◄

Rear Side Radar Assist System

The rear side radar assist system uses the Side Obstacle Detection Radars installed inside both ends of the rear bumper to monitor the side and rear areas of the vehicle, enabling Lane Change Alert (LCA) (including Blind Spot Monitoring), Rear Collision Warning (RCW), Door Open Warning (DOW), and Rear Cross Traffic Alert (RCTA).

The rear side radar assist system is solely an assistance system and cannot replace the driver in operating the vehicle. Under all circumstances, the driver must maintain full control of the vehicle and bear full responsibility for its operation, driving in accordance with laws and regulations. Failure to do so will increase the risk of accidents and may result in injury or death.◄

When the vehicle is powered on, the rear side radar assist system will start self-check, and the system is disabled at this stage.◄


Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Pre-collision Assist and enable or disable the functions as demand in this interface. After the vehicle is powered off and restarted, the functions of LCA and RCW retain the settings before power-off; DOW and RCTA functions are enabled by default, and their settings remain unchanged as before power-off on some vehicle models.

The system will prompt the driver of driving safety via the on/flashing of blind spot

detection indicator on the exterior rearview mirror, instrument cluster prompt, sound alarm, flashing of hazard warning light, etc.
When the vehicle is started, the instrument cluster displays the system status: the blind spot detection indicator light illuminates to indicate normal system operation, while the blind spot detection malfunction warning light illuminates to indicate a detected fault requiring immediate inspection and repair.

Lane Change Assist (LCA)

The lane change assist function covers the blind spot and the rear area with fast approaching vehicles, to assist and alert the driver against blind spots and rear vehicles when driving, especially when turning or changing lanes. The lane change safety warning function operates within the vehicle speed range of 15-130 km/h.

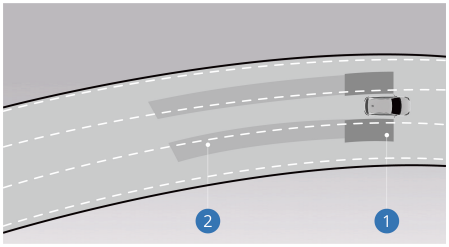

1. Blind Spot
2. Area with fast approaching vehicles



When the alarm condition is met, the blind spot detection indicator light on the exterior rearview mirror lights up or flashes. If the indicator and sound warning functions are turned on in advance in the multimedia display, the system will also give a sound warning.

Rear Collision Warning (RCW)

The rear collision warning function can monitor the targets behind the vehicle. When a vehicle is detected quickly approaching behind, the hazard warning light turns on to remind the rear vehicle to slow down or keep a safe distance. When the vehicle is stationary and a rear-end collision risk is detected, the braking can be triggered in all gears except reverse (R), to reduce the risk of slipping forward for the vehicle involved in rear-end collision and avoid secondary collision between the driven vehicle and the vehicle ahead.
The rear collision warning function works when the gear is not in R and the vehicle does not slip backwards. The detection of the rear approaching targets includes the targets (such as four-wheeled vehicles and two-wheeled vehicles).


Door Opening Warning (DOW)

When the vehicle is stationary or moving at low speed, the Side Obstacle Detection Radar detects moving targets approaching from the side and rear. When there is a potential collision risk upon opening the door, the blind spot detection indicator on the exterior rearview mirror lights up or flashes and gives a sound warning to remind the driver of the door opening risk.

The door opening warning function detects targets including four-wheeled vehicles, two-wheeled vehicles, and pedestrians running.

After the vehicle is powered off for 3 minutes or the vehicle is locked and powered off, the door opening warning function stops working.◀

Rear Cross Traffic Assist (RCTA)

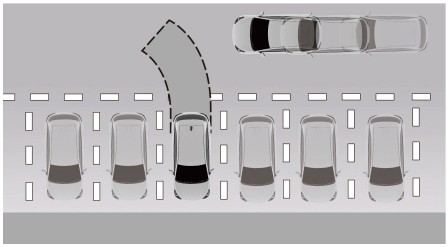

The Rear Cross Traffic Alert (RCTA) function uses the Side Obstacle Detection Radar to monitor approaching targets. When a vehicle, motorcycle, bicycle, or pedestrian is detected as posing a collision risk to the vehicle, the blind spot detection indicator on the corresponding side exterior rearview mirror will remain on or flash, accompanied by an audible alarm. At the same time, a red warning light wave will be displayed on the multimedia display's around view interface or parking assist function interface, clearly and accurately transmitting the alarm to warn of the danger. Some vehicles will also apply emergency braking when it is reversing and in a high-risk situation.



This function works when the vehicle is rolling in the R or N gear. When a potential collision is detected, the rear cross traffic assist function will provide the driver with a light (hazard warning on the exterior rearview mirror blind spot monitoring indicator/multimedia display) and audible (hazard warning sound from the speaker) alert to prevent the vehicle from colliding with a vehicle crossing laterally behind it as it leaves the parking area.

System Limitations

In the following situations (including but not limited to), the performance of the rear side radar assist system may be reduced or the system may not function properly, for example:

- Bad weather such as rain or snow.
- For smaller targets (pedestrians, bicycles, etc.).
- For stationary targets (vehicles, pedestrians, etc.).
- When driving on sharp bends and slopes.
- The relative speed between the rear vehicle and the driven vehicle is too high or too low.
- The rear vehicle approaches after changing lanes from other lanes.

Driver Monitoring System

The driver state monitoring system activates when the driver status monitoring function is activated and vehicle speed is above 20 km/h, and deactivates when vehicle speed is below 20 km/h.

The driver state monitoring system is able to alert the driver to maintain safe driving through visual, auditory, and tactile means when detecting specific behaviors.

Driver status monitoring is only an assist system and does not actively intervene in driving operations. Under all circumstances, the driver is responsible for maintaining a healthy and alert driving condition at all times.◀

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Intelligent Reminders to enable or disable the Driver State Detection function in the interface.

The driver fatigue detection function is designed to remind you to pay attention to driving safety, and to remind you who is distracted/fatigued driving to concentrate on driving carefully, and to stop and have a rest at the right time.


When the driver fatigue detection function is activated, relevant prompt information will be displayed on the instrument.

Fatigue warning performance degradation or functional failure may occur when the following conditions occur:

- The driver is wearing prescription glasses or sunglasses, with direct sunlight shining on the lenses.
- There is a strong sunlight shining at the camera.
- The driver's face is obscured by an object.
- The driver's face is out of the camera's field of view.
- The driver status monitoring camera is blocked.
- DMS Camera malfunction.◀

Introduction to Parking Assist System Sensors

Parking Assist Sensor

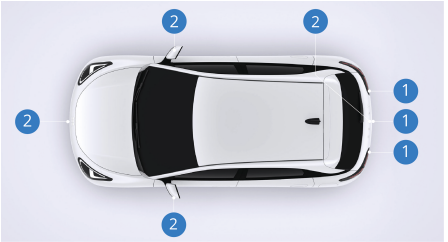

1. Parking Radar
2. Around View Monitor Camera*

Parking Radar

The parking radar on the rear bumper can detect objects up to 1.5m away from the rear of the vehicle.

Around View Monitor Camera*

The surround view monitor cameras are located around the vehicle body.

System Limitations

- Due to environmental factors, the detection performance of parking radar may be degraded in hot, extremely cold or humid weather.
- The parking radar system can only display the closest barrier when there are several barriers behind the vehicle on the same side. Please pay attention to the situation where the parking radar detects multiple obstacles when the vehicle moves.
- Please pay attention to the distance warning information during the parking process, otherwise unexpected situations may occur. When too close to an obstacle, alarm information may disappear due to blind spots in the parking radar detection. This is particularly common with obstacles that are extremely high or low.
- Parking radar and surround view monitor cameras may not detect obstacles beyond their detection capabilities (such as parking barriers, suspended objects like truck tailgates, trees, grass, thin poles, wire mesh, chains, ropes, wall pillars, fences, low obstacles, wave-absorbing materials, reflective objects, etc.), potentially causing false alarms or missed detections. Drivers must remain vigilant of their surroundings at all times to prevent accidents and property damage.
- Parking Radar and Around View Monitors have blind spots due to their mounting locations. The system may fail to detect obstacles that are too close to the rear of the vehicle, resulting in missed detections.
- When Parking Radar and Around View Monitors are covered by snow, water, frost, mud, dust, or other debris, or affected by noise or external sound interference, the system may not function effectively in detecting surrounding obstacles such as objects and pedestrians.
- When the vehicle is impacted or strongly vibrated, the position of Parking Radar and Around View Monitors may deviate, resulting in degraded system performance. In severe cases, the system will give a fault prompt. Then the

driver should contact a Geely Service Centre for maintenance as soon as possible.

- Keep the parking radar, surround view monitor cameras, and their surrounding areas clean to ensure proper system operation. Do not place or stick any objects in front of or around the parking radar and surround view monitor cameras. Otherwise, the system will not work properly.
- Do not apply films, wax, paint, or install body kits on the exterior areas of the parking radar and surround view monitor cameras, as this may affect their performance.
- In certain scenarios, such as roads with guardrails, inside tunnels, when vehicles are entering/exiting ahead, or on sharp curves, the visibility of Parking Radar and Around View Monitors may be restricted. Detection of vehicles, pedestrians, or cyclists may be delayed or the system may fail to detect them entirely, resulting in degraded or unavailable system performance.
- It is strictly forbidden to use a high-pressure washer to clean the Parking Radar and Around View Monitors. Instead, use a low-pressure water stream for rinsing and maintain a cleaning distance of at least 10 cm. ◄

Parking Assist Warning System

When the vehicle is traveling at speeds between 0-15 km/h, the Parking Assist Warning System can detect obstacles behind and on the rear sides of the vehicle, providing audible and visual warnings to alert the driver of a potential collision risk.

The Parking Assist Warning System cannot replace the driver's visual checks. If you do not pay attention to the surrounding conditions of the vehicle during parking, it may cause serious casualties and property damage. Even if the vehicle is equipped with a parking assist warning system, the driver should carefully observe whether there are obstacles before parking. ◄

Alarm volume setting

Click the following on the multimedia display in sequence: Vehicle Settings → Driver Assist → Safety Settings → Pre-collision Assist, and then select the Radar Alert Sound in this interface. The three optional alarm volumes are Low, Medium, and High.

System Performance

When the parking assist warning system is in use and obstacles enter the detection range, the detection results will be displayed on the multimedia display in colour blocks, with corresponding audio alerts. The beep sound indicates that there is an obstacle behind the vehicle. The closer the vehicle gets to the obstacle, the more rapid the beep sound becomes. When the distance is less than 0.3 meters, a continuous beep

sound will be heard and a prompt will be displayed on the multimedia screen.

System Limitations



- The parking assist warning system cannot detect objects below the bumper or vehicle, or objects too close or far away from the vehicle.
- The parking assist warning system may not be able to detect children, pedestrians, cyclists or pets.
- The parking assist warning system cannot detect tiny objects.◀

Rear View Camera System

The rear view camera system assists the driver in reversing by displaying the view behind the vehicle.

The driver must carefully observe the surroundings of the vehicle for any obstacles before reversing, otherwise it may lead to personal injury and property damage. The rear view camera system cannot substitute the driver's visual observation. Do not rely solely on it when reversing.

- There is a discrepancy between the distance displayed on the multimedia display and the actual distance.
- The reverse camera cannot detect objects outside of its visible range, such as those below the bumper or underneath the vehicle.
- The reverse camera may not be able to detect children, pedestrians, cyclists or pets.
- It is forbidden to use the rear view camera system during long-distance or high-speed reversing operations, or in areas with crossing traffic.◀

Reverse Assist Line

The reversing assist lines are dynamic trajectory lines that adjust their direction according to the turning angle of the steering wheel. When reversing, the reversing assist lines overlay the road surface behind the vehicle and move left or right as the steering wheel is turned. The direction they indicate aligns with the actual trajectory of the vehicle, helping the driver plan the reversing route.

System On/Off

When the vehicle is shifted into R gear, the reverse imaging interface is activated:

- When the shift lever is engaged in R gear, the rear view camera system is activated, and the image is displayed on the multimedia display.
- When the shift lever is moved out of R gear, the rear view camera system is deactivated, and the multimedia display switches back to the previously displayed interface.

Connection Interruption to Reverse Camera

When the connection to the reverse camera is interrupted, a pop-up window will appear on the multimedia display, indicating that the reverse camera connection is abnormal. Contact a Geely Service Centre immediately.

Surround View Monitor*

By displaying the images captured by the surround view cameras on the multimedia display, it allows the driver to monitor the video footage of the front, rear, left, and right sides of the vehicle in real-time from inside the vehicle, assisting the driver with parking.

Entering Around View Monitor Interface

- Click the around view monitor APP icon on the multimedia display.
- The surround view monitor can be turned on by voice input after the voice function is activated, such as by saying keywords like "Open the surround view monitor."
- Shift the gear to R gear to enter the surround view monitor automatically.
- If the preferred display function has been turned on in the Surround View Monitor setting interface, and the shift lever is in a position other than Reverse (R), toggle the shift lever.

Only when the vehicle speed is less than 30 km/h, will it enter the Surround View Monitor in the way above.◄

Exiting Around View Monitor Interface

- Touch the "Exit" button of around view monitor interface on the multimedia display.
- Shift the gear from R, N and D to P. If there is no operation within 5 seconds, the Around View Monitor exits.
- Access the surround view monitor by shifting into reverse gear (R). When the gear is not in reverse (R), the surround

view monitor exits when the vehicle speed exceeds 15 km/h.

- The Surround View Monitor can be turned off by voice input after the voice function is active, such as entering keywords Turn off the Surround View Monitor, etc.
- If the surround view monitor is turned on via toggling the indicator, and the view of surround view monitor is not switched by other operations (excluding the toggle of left/right indicator), when the indicator has returned to its original position, the surround view monitor exits.

Around View Monitor Interface

The driver can tap a specified area on the screen to display different views according to different needs.

Picture	Description
	Click to exit around view monitor interface
	Click to switch between 2D and 3D view effects
	Click to set the ordinary view display, transparent car model, steering linkage, uphill assist, and 3D surround effect functions
	Click to zoom in/out the surround view monitor interface
	Tap to turn the radar alert sound on or off.

In addition to the aforementioned function buttons, you can also directly click the angle of view icon on the front/rear of the surround view monitor vehicle model to quickly switch between different imaging perspectives.◀

System Limitations

- When using the around view monitor, pay attention to the surroundings of the vehicle. The system can only be used as an auxiliary means for the vehicle. Do not rely only on the around view monitor.
- The around view monitor camera performance can be affected by environmental factors, such as fog, rain and snow, night and other low visibility environments. In such environments, the around view monitor should be used carefully to ensure the safety of the surrounding environment before use.
- The around view monitor has visual blind spots and may not detect all obstacles around the vehicle.
- This vehicle adopts wide-angle fish eye cameras, and the imaging model is bowl-shaped, resulting in the stretching deformation of 3D images at the splices, and overlapping of objects at the far end of the edge.◀

Front Air Conditioning Control System



Turn on/turn off air conditioning

On the center console's air conditioning control panel, press the A/C ON/OFF button, turn on/turn off air conditioning.

You can also click icon in the A/C interface of the multimedia display to turn on/turn off the air conditioning system.

Enable/Disable the air conditioning automatic mode

It is possible to adjust the temperature buttons and select the temperature according to your perceived comfort level. If you press the AUTO button on the sub-instrument A/C control panel or click the AUTO icon on the A/C control panel of the multimedia display, the A/C will automatically control four functions, namely the recirculation/fresh air mode, air outlet mode, air volume and A/C, to achieve the desired temperature. At this point, if you manually adjust the air outlet mode or air volume, press the front windshield defrost/defog button, or press the AUTO button again, the AUTO indicator light will turn off, and the A/C will continue to automatically control the remaining functions that have not been manually adjusted, in order to achieve the desired temperature as much as possible. When the A/C is turned off, click or press the AUTO button to wake up the A/C and enter the fully automatic control mode; set the temperature to the state before the A/C.

Front Windshield Defrost/Defog

To quickly remove fog or frost on the windshield, direct air flow to the windshield. For optimum effect, remove all ice and snow from the windshield before defogging. In the defogging state, adjusting the air volume adjustment button will increase or decrease the air volume accordingly, and the air outlet mode will remain in defrosting mode.

When the front windshield defrost/defog function is operated, the A/C and automatic circulation functions (gray) will be automatically turned on. If A/C is turned off before entering the front windshield defrost/defog function, the air volume will be set to level 6; if the A/C is on and the air volume is less than level 6, the air volume will be adjusted to level 6; if the A/C is on and the air volume is equal to or greater than level 6, the air volume will remain unchanged. To maintain the defrost/defog effect, please do not turn off the A/C.

When the A/C is turned off, press the front windshield defrost/defog button on the sub-instrument panel air conditioning control panel , or click the icon on the A/C interface of the multimedia display, Then, the air conditioner is activated to perform the windshield defrost/defog function.

Recirculation and Fresh Air Switch

The recirculation and fresh air system has three modes: automatic circulation, recirculation, and fresh air modes. When toggling the circulation mode switch, the switching sequence follows this order: Automatic Circulation → Recirculation → Fresh air → Automatic Circulation. The recirculation/fresh air mode switching button on the A/C control panel of the auxiliary instrument panel lights up only when it is in the recirculation mode, and does not light up in the automatic circulation mode and the fresh air mode. Pressing this button allows manual switching between automatic, recirculation, and fresh air modes. When in automatic circulation mode, the damper in recirculation/fresh air modes automatically adjusts to the optimal setting based on the vehicle's interior and exterior conditions.

When the A/C is off, press the air recirculation switch button icon on the center console's A/C control panel , or click the icon on the A/C interface of the multimedia display, , and the air conditioner is still off, but the A/C system is switched between the recirculation and fresh air mode.

Enable/Disable Air Conditioning Cooling Mode (A/C)

Press the A/C button on the sub-instrument panel's A/C control panel, or tap the A/C icon on the multimedia display's A/C interface to activate the A/C cooling system. Then, the A/C button indicator comes on. Press/click this button again, the button indicator light turns off, and the cooling function turns off.

When the A/C is turned off, press/click the A/C button to activate the A/C.

Turn ON/OFF ECO Mode

Click the ECO button in the air conditioning interface on the multimedia display to enable or disable the A/C ECO mode.

Adjust Air Conditioning Temperature

In the air conditioning interface on the multimedia display, within the temperature control area, sliding upward lowers the temperature, while sliding downward raises it. Each adjustment step changes the temperature by 0.5 ° C. The temperature setting range is 16 - 28 ° C. When the temperature setting is higher than 28 degrees Celsius, it is HI, and when it is lower than 16 degrees Celsius, it is LO.

Adjust Air Conditioning Fan Speed

Click the air volume progress bar in the air conditioning interface on the multimedia display. Select the fan speed according to personal need.

Adjust Air Conditioning Air Outlet Mode

In the air conditioning interface on the multimedia display, click the defrost icon Icon, face vents Icon or floor vents Select the air outlet mode as face blowing, foot blowing, or windshield blowing according to personal needs.

In the air conditioning interface of the multimedia display, defrost, face and foot vent buttons for air outlet mode can be used separately or in combination as needed.◄

Exterior Rearview Mirror / Rear Windshield Defrost/Defog


Click the A/C interface on the multimedia display, and after clicking the exterior mirror/ rear windshield defrosting/defogging icon, turn on or off the exterior rearview mirror/ rear windshield defrost/defog function. When the exterior rearview mirror / rear windshield defrost/defog function is turned on, the button indicator lights up. Click this button again to turn on or off the exterior rearview mirror/rear windshield defrost/ defog function.

Front Windshield Electric Heating*

Click the front windshield electric heating on the A/C interface of the multimedia display icon, enable or disable the front windshield heating function.

- If the A/C performance is lower than expected, check whether there is dirt or insect accumulation on the surface of the radiator (located in front cooling module). Please go to a Geely Service Centre for cleaning.
- Placing a shield in front of the hood will reduce the airflow into the radiator thereby reducing the performance of the A/C.
- Don't let leaves or other debris block the air inlet.
- It is normal if you hear a sound from the blower inside the vehicle after locking it, and the sound is expected to last for about one minute. After A/C operation, it blows out the moisture from the evaporator and the air ducts to prevent odor from being generated after deposition.◄


Ambient Light / Temperature & Humidity / Rain / Sunlight Sensors*

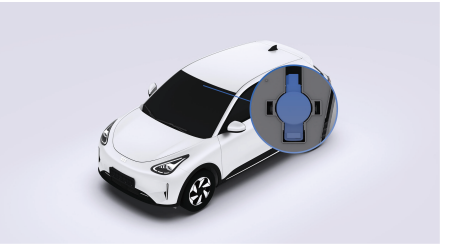

This sensor is used to control the interior temperature, automatic defrosting and defogging, automatic wiper operation, and the activation/deactivation of automatic lighting.

Keep the sensor area clean and avoid attaching labels or other foreign objects to prevent affecting the proper functioning of the sensor.◄

Ambient Light and Sunlight Sensor*

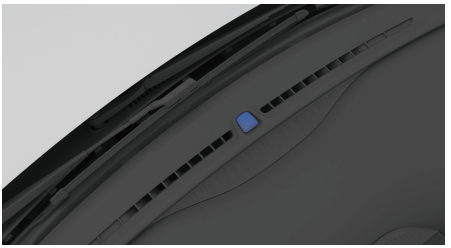


This sensor is used to control the automatic A/C on and off of the automatic headlamp.

Keep the sensor area clean and avoid attaching labels or other foreign objects to prevent affecting the proper functioning of the sensor.◄

Do not apply privacy films or high-opacity front windshield films, as they may reduce the windshield's light transmittance below regulatory standards, affecting vehicle inspection compliance and impairing visibility and driving safety. Also, it may block the ambient light sensor (located on the instrument panel), causing abnormal operation of the automatic low-beam headlights (e. g., premature activation or delayed deactivation) (the more light is blocked, the greater the impact), compromising the performance and user experience of automatic lighting functions.◄


Adjustment of Air Outlets

Front Air Outlet

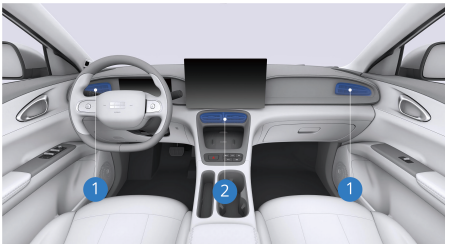

1. Side Air Outlet
2. Central Air Outlet

Rear Air Outlet

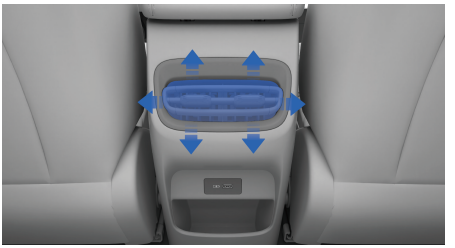

Adjust the wind direction by changing the up, down, left and right directions of the air outlet grille.

The air outlet can be closed by adjusting the blades.

A/C Settings

Click the following on the multimedia display in sequence: A/C → Settings. You can turn on or off the automatic defogging function (if equipped), winter car-locking anti-icing function (if equipped) and car-locking air conditioner self-drying function, and also set the car-locking air conditioner circulation function.

Automatic Defogging*

Automatically activates when fogging is detected on the windshield and front side windows.

Preventing ice buildup on windows after winter parking*

Smart short-term ventilation activates after locking the vehicle to reduce the risk of interior window icing at low temperatures.

A/C Recirculation Setting When Locked

You can set the air conditioner mode when locking the vehicle to outside circulation or inside circulation. If you choose outside circulation, the air conditioner will remain in outside circulation mode after locking the car to keep the air conditioner inside and outside the vehicle. When internal circulation is selected, the air conditioning maintains internal circulation after locking to isolate the interior from outside air. Do not leave people or pets inside the vehicle for an extended period.

A/C Auto-Dry When Locked

The vehicle will perform smart short-term ventilation after being locked, in order to reduce moisture and odors inside the cabin.

Desktop

Introduction to Desktop

Picture	Description
	Click the account center in the status bar of the multimedia display, and scan the QR code to log in to your account.
	Click the multimedia display screen system desktop icon to return to the system desktop
	Click the multimedia display APP icon to enter the application interface
	Click the vehicle settings icon on the multimedia display screen to enter the vehicle setting interface

Introduction to Quick Access Screen

Slide down from the top of the multimedia display to enter the quick access screen interface. From this interface, you can quickly activate various vehicle functions, including the fast configuration of common vehicle settings as well as adjustments for brightness and volume. Click the Edit icon Vehicle shortcut switch can be added or deleted. After editing, click "Finish" to exit.

Apps

App List

The application list interface provides various apps such as vehicle settings, maps, phone, gallery, etc., to meet the majority of scenarios during your vehicle usage. Meanwhile, the system is becoming increasingly sophisticated and gradually brings out more user-friendly applications.

Apple CarPlay

Apple CarPlay function enables safe, intelligent use of iPhone features while driving, including calls, messaging, music playback, etc.

Apple CarPlay supports iPhones with iOS 14 or later.

Apple CarPlay can be started by either:

- The mobile phone is connected to Apple CarPlay interface via the bluetooth of paired mobile phone to enable wireless function or USB cable connection.
- Click the Home icon of the car machine to return to the main interface. Click the Apple CarPlay icon in the main interface to re-enter the Apple CarPlay interface.

Apple CarPlay can be disabled with any method below:

- Disable Wi-Fi on your phone.
- Turn off Apple CarPlay.
- Select any option (e. g., Phone or Multimedia) on the interface of any paired devices.
- Click other devices in the list and disconnect Apple CarPlay after successful connection.

Android Auto

Android Auto allows you to safely and intelligently use Android's many features while driving, such as talking, sending and receiving messages, playing music, and more.

Android Auto supports all Android phones with Google Framework and Android 10.0 and above.

Android Auto can be turned on by either:

- The mobile phone is connected to the Android Auto interface via the bluetooth of the paired mobile phone to enable wireless function or USB cable connection.
- Click the Home icon to return to the main interface. Click the Android Auto icon in the main interface to re-enter the Android Auto interface.

You can turn off Android Auto by either:

- Disable Wi-Fi on your phone.
- Turn off Android Auto.
- Select any option (e. g., Phone or Multimedia) on the interface of any paired devices.
- Click other devices in the list and disconnect Android Auto after successful connection.

Phone

Click the telephone APP icon on the application program interface to enter the telephone interface.

You can select dial pad dialing or contact dialing on the telephone interface.

Tap to answer or decline calls on the multimedia display, and you can also hang up and answer calls by using the left and right selection buttons on the right side of the steering wheel.

Multimedia

Multimedia includes bluetooth music and USB music for your convenience.

Theme Customisation

Tap the Theme Customization app icon on the application interface to navigate to the theme customization screen.

You can change themes for the current desktop in the theme customization interface.

Safety Manager

Click the Security Manager APP icon on the application program interface to enter the safety butler interface.

Click privacy and permission on the security manager interface to view and set relevant permissions; Click Application Management to view application information and management.

Gallery

Click the gallery APP icon on the application interface to enter the first page of the gallery. You can view album images on the first page of the gallery, and view USB images when USB is inserted.

Account Center

You can click the account center avatar in the status bar of the multimedia display to enter the account center interface and scan the QR code to log in to your account.

Face Recognition Login

On the multimedia display, sequentially select: Account Center → Facial Recognition Registration.

Once you have registered your facial recognition information, the system will perform facial recognition when you enter the driver's seat and close the door. Upon successful recognition, it will automatically log you into the associated user account.

Account Management

You can manage your family accounts in the account management interface. After adding your family member's phone number as a family account, the data of this account on the vehicle end will be permanently saved, and the family account can also enjoy more functional experiences.

Vehicle Settings

Quick Controls

Click Vehicle Settings → Shortcuts on the multimedia display screen to enter the shortcuts interface.

In the Quick Controls interface, functions such as spatial sound effects, turning off the power, and the parking comfort function can be quickly set.

Voice*

Click Vehicle Settings → Voice Assistant on the multimedia display screen to enter the voice interface.

You can set functions such as voice control activation in the voice interface and also check privacy policies and terms. Other voice functions can be viewed by clicking on More Voice Skills.

You can wake up the Voice function in the following ways:

- Short press this button to turn on the Voice function.
- After the Voice wake-up function is turned on, it can be woken up by the wake-up word: "Hi, Geely".

When using Voice control the vehicle, always pay attention to the surrounding environment and the condition of the occupants inside the vehicle to avoid causing accidental injuries.◀

Display

Click Vehicle Settings→ Display on the multimedia display screen to enter the display interface.

On the display interface, you can set wallpaper, display mode, brightness adjustment and unit setting.

Sound Setting

Click Vehicle Settings → Sound Settings on the multimedia display screen to enter the sound setting interface.

In the sound interface, you can set spatial sound effects, volume adjustment, and notification sounds.

Spatial Audio

Click: Vehicle Settings → Sound Settings → Spatial Sound on the multimedia display screen to enter the spatial sound interface.

In the Spatial Sound interface, you can adjust the equalizer function.

Connection

Click Vehicle Settings → Connect on the multimedia display screen to enter the connection interface.

Wi-Fi and device can be set in the connection interface.

Wi-Fi: click to enter the Wi-Fi interface, and select corresponding Wi-Fi for connection after starting Wi-Fi.

Equipment: click to enter the equipment interface, and the system will automatically search the nearby bluetooth equipment after turning on the bluetooth, and then match the equipment according to the prompt.

My Vehicle

Click Vehicle Settings → My Vehicle on the multimedia display screen to enter My Vehicle interface.

In the My Vehicle interface, you can view the system version, my car, permissions and information, and reset functions.

- Name: click name to modify the vehicle name.
- Maintenance and Repair: Click Maintenance and Repair to check the remaining days and mileage for vehicle maintenance, and you can also enable or disable functions such as wiper maintenance mode, towing mode and tire pressure monitoring reset (if equipped).
- Vehicle identification number (VIN): can be viewed.
- Software Version: The software version can be viewed.
- Privacy and authority: click Privacy and authority to view and set relevant authority, and view and set authority management, application authority management, sensitive authority management, interconnection service and vehicle location information sharing on the privacy and authority interface.
- Legal Information: Click Legal Information to view the Privacy Statement and User Agreement.
- Remote Diagnostics: Enable or disable remote diagnostics.
- Service Experience Improvement: Enabling or disabling the service experience improvement behavior.
- Passive Safety Monitoring: Enable or disable the passive safety monitoring function.
- Network Reset: Click to reset the network.

- Restore Factory Settings: Click to bring up a confirmation pop-up window. Click "Restore" to execute the factory reset.

Charging Precautions

The following precautions must be observed to avoid high voltage electric shock or more severe injuries:

- The vehicle charging port generally does not have high voltage when not charging, but it has a detection function. In order to prevent accidental electric shock, it is strictly forbidden to use fingers or other metal and other conductive parts to reach into the charging port hole.
- For owners who have an implanted cardiac pacemaker or cardiovascular defibrillator, please do not stay in vehicle or enter the vehicle to get things during charging. Otherwise, it may affect the function of electronic medical units and cause personal injury or death.
- Before charging the vehicle, please check whether there are water, foreign objects or other factors affecting charging in the charging socket. If so, please clean it before charging.
- Please check the charging cable before charging, and do not use charging cables with damaged surfaces or housing.
- Do not remove or modify the charge equipment or relevant ports without permission.
- Never allow a child to perform charging operation.
- In case of sudden changes in weather (strong wind, rain/snow, thunderstorm) during charging, check whether the charging plug is secure and dry in a timely manner. Do not touch the charging cable and vehicle body at lightning.
- If there is damp near the charging port during charging, please disconnect the power supply to ensure safety, then disconnect the plug at the power supply side (do not touch the metal sheet of the charging plug with hands or other parts of the body, to avoid safety accidents), then pull out the charging plug at the vehicle side. Use insulating gloves if necessary, and contact a Geely Service Centre for inspection and confirmation as soon as possible.
- If an abnormal odour is emitted from the vehicle during charging, please stop charging immediately.
- When charging, do not squeeze the charging cable.
- Do not unplug the charging cable until the charging process has ended, preventing arcing generated at charging port.
- After charging, do not disconnect the charging connection device while your hands are wet or standing on the floor with water.
- Please ensure that the charging connection device is fully disengaged from the vehicle charging port before driving the vehicle.
- To ensure electrical safety, a circuit breaker must be installed on the power supply side.
- Slow charging (AC charging) must be done using the supporting charging cable that is connected to a standard three-prong outlet that complies with national standards. The power supply socket must be wired strictly by following the

single-phase three-wire system standard. A reliable connection of the ground wire is the absolute prerequisite for safe charging.

- It is prohibited to use a grounding device as an adapter for charging, multiple power strips connected in series to extend the cable, or a common socket or line with multiple high-power electric devices.◀

It is recommended that the power battery be fully charged at least once a week or fully charged in time according to the full charge reminder, which will help ensure that the vehicle accurately displays the remaining power.◀

Charging Operation

Please use charging equipment that complies with national standard requirements. Otherwise it may cause malfunction or fire, resulting in casualties.◀

- Before charging, confirm that the charging station complies with the latest national standards. When using a charging station, be sure to follow the relevant regulations of the charging facility.
- Due to variations in manufacturers' interpretations of China's national charging standards, you may encounter situations where specific charging stations fail to charge your vehicle. If this occurs, please try reinserting the connector or switching to an alternative charging station.◀

AC Slow Charging

Steps

1. Park the vehicle and shift into Park (P);



2. Press the charging lid to open and remove the charging interface protective cover;
3. Unplug the dedicated AC charging cable from the charging unit;

4. Insert the charging cable into the AC charging interface of the vehicle body;
5. Initiate the charging by referring to the charging unit;
6. After being fully charged or when charging needs to be finished, unlock the vehicle first and pull out the charging cable while pressing the charging unit switch;
7. Close the vehicle AC charging interface protective cover and the AC charging port cover, and return the charging gun to its original position on the charging pile.

Scheduled Charging


Click the following on the multimedia display in sequence: Apps list → Energy → Scheduled Charging, set the charging time on the scheduled charging interface. You can also set the AC charging current limit on the Energy Centre interface.

Scheduled charging only supports AC slow charging.◀

DC Fast Charging

Steps

1. Park the vehicle and shift into Park (P);

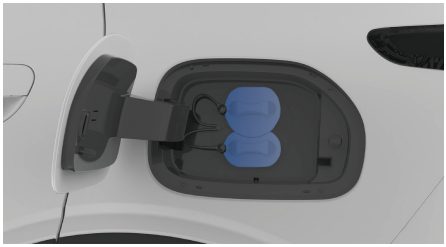

2. Press the charging lid to open and remove the DC charging interface protective cover;
3. Remove the dedicated DC charging cable from the charging unit;
4. Insert the DC charging cable into the DC charging interface of the vehicle body;
5. Initiate the charging by referring to the charging unit;
6. After the vehicle is fully charged or when charging needs to be ended, follow the charging pile instructions to end charging, then press the charging gun switch and pull out the charging gun.
7. Close the DC charging interface protective cover and charging port cover, and re-plug the charging cable back into the original position of the charging unit.

Always adhere to the operating procedures of the DC fast charging pile when initiating or terminating the charging process. Under no circumstances should the DC fast charging plug be arbitrarily inserted or removed during the charging cycle.◀

- Push in the right area of the charging lid to open the charging port.
- At normal temperature, the opening angle of the charging port cover is relatively large, while it is smaller at low temperature.◀

Charging Time

Estimated charging time, charging power and remaining charging time may vary due to different factors, including current state of charge, ambient temperature, power battery

temperature, vehicle load, power battery condition, power grid condition, charging station power rating, etc.



- When the power battery temperature is too high or too low, the system will cool or heat the battery during charging with a charging station. As a result, charging time may be extended and the energy deliveredby the charging station may increase. This is normal.
- You may use comfort functions such as air conditioning and multimedia while the vehicle is charging. While the vehicle is charging (especially in AC slow charging), avoid operating the air conditioning or heater at high settings to reduce power consumption and minimize impact on charging time.
- Some DC charging stations will automatically terminate charging when the power battery reaches approximately 95% state of charge. Specific behavior depends on the DC charging station strategy. For details, consult the operator or charging station.
- Charging power and estimated remaining charging time are affected by external environment, power battery condition, power grid condition and other factors. The values are for reference only.
- Lock the vehicle during prolonged charging.
- When the vehicle is plugged in to charge at extremely low temperatures, the power battery will enter the preheating stage first, which may consume some power, which is a normal phenomenon. After the preheating is completed, it will automatically switch to the charging state.◀

Energy Center

Super Range

Click the following on the multimedia display in sequence: Apps List → Energy → Extended Battery Range, and then enable or disable the Super Endurance function in this interface.

This function switches the drive mode to ECO, limiting or turning off some vehicle comfort features, reducing energy consumption, and increasing the pure electric driving range (available only for this driving session).

After the function is enabled, users can readjust settings such as the A/C. If all options are operated again, this function will exit.

After the function exits, the driving mode, A/C, seat comfort (if equipped), ambient light (if equipped), and multimedia applications will remain in their current state. If the Super Endurance is turned off directly via the switch, the options that are not operated will revert to the state before the startup, and the speed limit of 90 km/h will be lifted.



- After activating the 90 km/h speed limit, if you engage the adaptive cruise control (ACC) or intelligent cruise control (ICC), the 90 km/h speed limit will be deactivated. Please drive with caution.
- After activating the 90 km/h speed limit, if an emergency overtaking operation is required, depressing the accelerator pedal all the way will temporarily override the limit.
- When the battery is low, the power and A/C performance will be reduced, and the vehicle cannot be parked for a long time. Please make sure to charge it timely.◀

Scheduled Departure

Click the following on the multimedia display in sequence: Apps List → Energy → Schedule a Trip, and then you can set the departure time, and enable or disable the battery temperature maintenance and cabin comfort functions in this interface.

After turning on the battery temperature maintenance, when the trip reservation time approaches, the vehicle will adjust the temperature of the battery through the AC charging unit and the power battery’s power, reducing power consumption during driving and increasing the driving range.

After turning on the cabin comfort, when the trip reservation time approaches, the vehicle will turn on the A/C, seat heating (if equipped) and other functions through the AC charging unit and the battery’s power to create a comfortable ride experience.

External Power Supply

The external power supply function can output the power stored in the power battery as 220V battery, allow the external electrical appliances to be used.

To utilise the external power supply follow the below instructions:

1. Push in the left area of the charging lid to open and remove the charging interface protective cover.

2. Plug in a compatible Vehicle to Load cable to the vehicle and plug in the appliance.
3. Click the following on the multimedia display in sequence: Apps List → Energy → Extended Battery Range, and then you can enable the Power Supply to Device function in this interface.



- Plug/unplug the connector of power supply equipment vertically as carefully as possible to prevent damage to vehicle or power supply equipment. The current specifications for used household electrical equipment or transfer cables shall not be lower than the rated current marked on the power supply equipment.
- When the power level of the vehicle is too low, in order to prevent the vehicle from being unable to start due to the low power, the vehicle will not supply external power.◄

The power supply equipment is only used to provide electric energy output, and it is not allowed to connect other external charging equipment or external electrical appliances whose rated power exceeds that of the power supply equipment, especially if the power supply equipment has been connected to the AC charging interface of the vehicle. Otherwise it may cause damage to the vehicle and power supply equipment.◄

Regular Maintenance

It is recommended to pay attention to the vehicle status regularly to keep your vehicle in the best condition.

Door Check

The door check needs to be applied with grease regularly; otherwise, there may be abnormal noise when opening and closing the door.


Replacement of Key Battery

Replacement of Smart Key Battery

The battery in the smart key should be replaced when the vehicle cannot be remotely controlled due to a shortened remote control distance, or the smart key cannot be recognised by the vehicle due to low battery power.



1. With the rear cover of he smart key facing upward, insert a flathead screwdriver into the side opening at the rear end of the key. Then, grip the handle and pry open the rear cover;

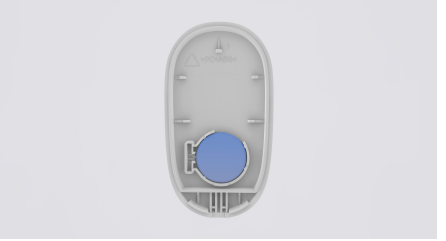

2. Replace with new battery, and pay attention to keep the positive terminal of the battery facing the back cover. Smart key battery model: 3V, CR2032;
3. Reassemble the two halves of smart key cover.

- Replacing the battery yourself may damage the key. If necessary, it is recommended to go to a Geely Service Centre for replacement.
- If the replaced key still cannot be used, contact a Geely Service Centre for maintenance.
- To prevent children from swallowing the replaced battery, keep the battery out of the reach of children.
- When installing the battery, always ensure correct alignment of the positive and negative posts. Before installation, wipe the battery surface clean; otherwise, it may affect the battery's service life.◀

Dispose used batteries according to local regulations to avoid damaging the environment.◀

Hood Opening and Closing

- Before performing any operation in the front compartment, the vehicle must be placed in the OFF position.
- To prevent damage to the front hood or front windshield wiper blades, ensure the wiper arms are not raised before opening the hood. ◀

Hood unlocking

Unlocking hood with smart key




Long press the frunk button on the smart key to unlock the hood.

Unlocking hood by swiping down from the top of the multimedia screen

Swipe down from the top of the multimedia screen and click the frunk opening button to unlock the hood.

Unlocking hood from inside

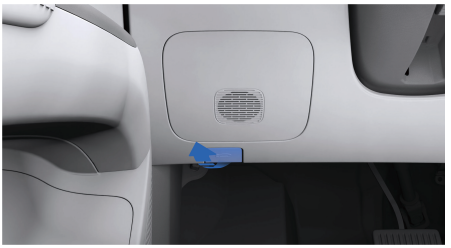

Pull the hood opening handle located on the lower left side of the driver instrument panel to unlock the hood.

Opening hood



1. Press the hood lock safety hook in the direction of the arrow shown in the figure after the hood is unlocked;



2. Lift the hood.

Closing Hood

Before closing the hood, it is required to check if any tools, rags, etc. have been left in the front compartment, and make sure that all filler caps are closed. ◄



1. Drop the hood down slowly and press the front edge of the hood until a clicking sound is heard, which indicates that the hood is locked;
2. After the hood is closed, verify that it is fully locked by trying to lift the front edge of it.

If it is not completely locked, open the hood again, and then close it. Do not directly push down with extreme force.

Do not drive the vehicle with the hood not properly closed. ◄

Coolant



Be sure to park the vehicle on flat ground when inspecting the coolant level. Check that the coolant level in the coolant expansion tank is between the MAX and MIN marks. If the coolant level is below the MIN mark, it is recommended to visit a Geely Service Centre to refill the coolant.
Before opening the pressure cap of coolant expansion tank, ensure the cooling system (including the pressure cap of coolant expansion tank and the upper hose of radiator) has completely cooled down.

Never open the coolant reservoir cap when the engine compartment is hot. This prevents high pressure inside the reservoir from causing coolant to spray out and injure you when the cap is opened. Dispose used coolant in accordance with relevant environmental protection laws.◄

- When operating vehicles in cold regions, ensure the coolant's freeze protection meets local low-temperature requirements to prevent the cooling system from freezing in cold conditions.
- Fill coolant with special tools to prevent liquid from flowing into the distribution box.
- Please refill the ethylene glycol-type coolants certified by Geely. Damage or failure caused by the use of inferior coolant or non-compliant coolant mixture is not covered by Geely's warranty.◄

Brake Fluid



Check the brake fluid level from time to time. Make sure that the brake fluid level remains between the MAX and MIN marks.

If the brake fluid level is lower than the MIN scale mark, unscrew the reservoir cap and slowly pour in the brake fluid to prevent the brake fluid from overflowing. In case of accidental overflowing, it should be removed immediately, otherwise the parts in the compartment will be damaged.

- Brake fluid is harmful to human body. In case of accidental contact, rinse immediately with plenty of water. If the brake fluid is consumed, consult a doctor immediately.
- Brake fluid leakage causes the brake fluid level to drop. Visit a Geely Service Center for maintenance as soon as possible.
- Apply the brake fluid of the manufacturer and brand designated by Geely; otherwise it will seriously damage the parts of the brake hydraulic system and affect the braking performance and distance.◀

- If you notice a loose brake pedal or significant loss of brake fluid, please contact a Geely Service Centre immediately. Driving in these situations may result in increased braking distance or complete brake failure.
- Please use new brake fluid in an airtight sealed bottle. Never use brake fluid from a used or opened container. Brake fluid absorbs moisture and reduces braking performance.
- If brake fluid accidentally splashes onto the paintwork during refilling, wipe it off immediately to prevent damage to the vehicle's paint finish.◀

Washer Fluid

Replenishing Washer Fluid



Open the filler cap with a washer sign printed on it, and add the appropriate amount of washer fluid.

- The freezing point of washing liquid shall be at least 10 ℃ lower than the local minimum temperature.
- It is strictly forbidden to add liquids such as soapy water instead of washer fluid, otherwise the paintwork of the vehicle body may be damaged. It is recommended to use qualified windshield glass washer fluid.
- Do not use the windshield washer function when the washer fluid reservoir is empty, as this may damage the washer system.◀

Replacement of Wiper Blades

- Grease, silicon and petroleum products will weaken the wiping effect of wiper blades. Wash wiper blades with warm soap water and regularly check their condition.
- Wash and clean the front windshield frequently, and avoid using wiper blades to wipe sand on the front windshield. This prevents influence on the wiping effect of wiper blades and the service life.
- Replace the wiper blades if the rubber is hardened or cracked, or if the wipers leave scratches on windshield or cannot wipe a certain area.
- Clean the front windshield regularly with approved windshield washer fluid, and ensure that the front windshield is thoroughly cleaned before replacing wiper blades.
- Use wiper blades of the same specification as the original wiper blades.
- Before activating the wiper repair mode, ensure the wiper blades are not frozen to the windshield.◀

Replacement of Front Windshield Wiper Blades


1. When the vehicle is stationary and the wiper lever is in ⁻ position, click the following on the multimedia display in sequence: Vehicle Settings → My Vehicle → Service and Maintenance → Wiper Maintenance Mode. Then, enable the front wiper maintenance mode on

this screen, and the wipers will automatically move to the replacement position;

When the front wiper or front windshield washer function is activated, the front wiper returns to its original position.

2. Pull the windshield wiper blade away from the windshield;

While the front windshield wiper blade is erect, do not open the hood. Otherwise, it will damage the wiper blade or hood.

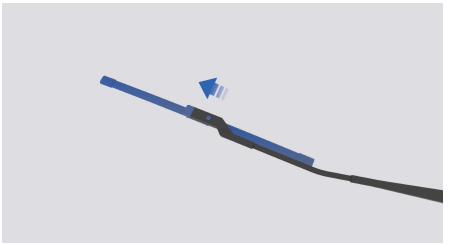


3. While pressing the wiper blade clip, pull the wiper blade along the arrow direction to separate it from wiper arm;
4. Take off the wiper blades;

When the front windshield wiper blade is not correctly mounted, the front windshield will be damaged if the wiper arm gets in touch with the front windshield. Damage caused thereby is not covered by warranty.

5. Install the wiper blade in the reverse sequence of steps 2 to 4.
6. Turn off the front wiper maintenance mode so that the front wiper is recovered to the original position.

Replacement of Rear Windshield Wiper Blades

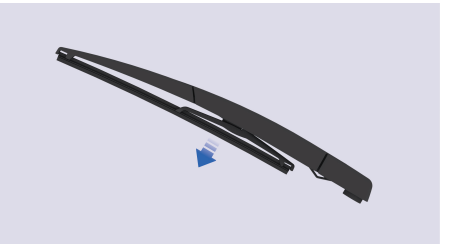

1. Pull the rear windshield wiper blade away from the rear windshield;
2. While pressing the wiper blade clip, pull the wiper blade along the arrow direction to separate it from wiper arm;
3. Install rear windshield wiper blade in the reverse sequence of steps 1 to 2.

Maintenance of Low-Voltage Battery



The vehicle is equipped with maintenance-free low-voltage battery. Open the front engine hood and remove the right cover plate to see the battery.

The low-voltage battery posts, terminals and related accessories contain lead and lead compounds, which may be harmful to health. Neutralise with soap and rinse thoroughly with water after contact.◀

To extend the service life of low-voltage battery and ensure the normal operation of electrical system, the following suggestions are given:

- When driving in a cold region, prevent the low-voltage battery from full discharge to avoid electrolyte freeze.
- Avoid overcharge or long-term power loss of the low-voltage battery.
- In case of undervoltage of low-voltage battery, charge it via exterior power supply.
- Keep the low-voltage battery away from heat source and open fire. When it is charged or used, ensure the ventilation to prevent burning and injury.
- The low-voltage battery shall be installed securely in vehicle with minimal vibration.
- Inspect whether the clamps of low-voltage battery terminals are secure and well contacted, so as to avoid sparks which may cause the low-voltage battery to combust. The oxides and sulfates produced by the low-voltage battery clamps must be scraped off and coated with vaseline.
- As there will is slight current consumption in the vehicle circuit system when parking, leaving the vehicle stationary for a long time will cause the low-voltage battery to run out of power. Therefore, if the vehicle is to be stored for a long time, the black negative (-) cable should be unplugged from the low-voltage battery to prevent the battery from discharging.
- The vehicle should be stored in a cool, ventilated, clean and dry environment. If the vehicle is parked in an enclosed and humid environment for a long time, the rust and aging of vehicle parts will be accelerated.◀

Low-Voltage Battery Warning Label and Instructions

Picture	Description
 	Caution - Corrosion: This product contains hazardous chemicals such as acids, alkalis, salts, and oxidants, which pose a corrosion risk in case of any fault.
 	Caution: Explosion Risk This product may explode if subjected to violent external force. Please exercise caution.
 	Keep out of reach of children: This product must be kept away from children.
	No open flames: Strictly prohibit open flames and high-temperature equipment in the vicinity during product use.

Picture	Description
	
 	Read the instructions carefully: Before using this product, please refer to the manual first.
 	Wear safety goggles: Safety goggles must be worn when operating this product.

- Do not touch the positive and negative poles of the low-voltage battery with both hands at any time and contact the positive and negative poles with conductors.
- Low-voltage battery liquid is corrosive. If it accidentally enters the eyes or skin, please immediately flush with plenty of water and send to a doctor.◀

Replacement of Low-voltage Battery

When replacing the low-voltage battery, be sure to use the low-voltage battery of the same model and specifications. Contact a Geely Service Centre for removal, replacement and installation of the low-voltage battery.



- Different models of low-voltage batteries have different terminals. The mismatch between the low-voltage battery terminals and the wiring harness terminals will lead to failure to tighten, and there is a risk of breaking down.
- An overheating failure by the low-voltage battery may produce harmful gases, please leave the vehicle as soon as possible.◀



After the low-voltage battery is replaced, give the used low-voltage battery to a Geely Service Centre for disposal, or deliver it to the collection depot meeting relevant environmental protection laws. There is highly corrosive toxic substance in the low-voltage battery. Please keep the battery upright when transporting and storing.◀

Power Battery

As one of the main power sources, the power battery can be charged and discharged multiple times. Charging methods mainly include external power supply charging and energy recovery charging.

Power Battery Maintenance

The traction battery is one of the critical components of the vehicle. Please observe the following precautions during use.

1. Moisture-proof and water-proof
   The power battery contains many high-voltage control circuits and individual cells. Therefore, make sure that the power battery is never exposed to liquids or humid/moist air.
2. Environmental heat insulation
   When the vehicle is parked, the surrounding area should be insulated, ventilated and kept away from combustibles to prolong the service life of the power battery and improve the safety performance of the power battery.
3. Shock-proof and impact-proof
   Please drive carefully when the road conditions are poor to prevent the power battery from colliding with hazards, so as to avoid damage to the power battery.



- The power battery is a high-voltage energy storage device, which is dangerous. Non-professionals and improper operation may cause serious

consequences such as electric shock, burning and explosion.

- It is strictly forbidden for non-professional personnel to install, repair and use power batteries beyond their intended use, and it must be operated by professional technicians from a Geely Service Centre. Warranty will not be given for damage to the power battery and other losses caused by using the power battery not in accordance with the specified requirements or exceeding the specified scope of use.
- Do not park the vehicle in environments with excessively high or low temperatures.
- Avoid rapid acceleration and overloading to reduce high-current discharging of the power battery and extend its service life.
- Avoid excessive use of high-power DC Fast charging for the vehicle, as it will impact the service life of the power battery.◀

Power Battery Recycling

The waste power batteries need to be properly recycled. In the process of vehicle service and maintenance, power batteries that meet the following conditions are deemed to be recycled:

1. In the process of repairing and maintaining the power battery by a Geely Service Centre, the capacity and status of the power battery shall be measured. For power batteries that require to be recycled according to relevant laws and regulations, Geely shall assume the main responsibility and recycle them according to the current market conditions.
2. If the power battery is deemed unusable on the vehicle, it may be recycled and subject to cascade utilisation if the relevant requirements are met.
3. If the power battery is seriously failed or damaged and cannot be used for cascade utilisation, it will undergo the recycling process.

The power battery recycling process is: recycling and subsequent processing by a Geely Service Centre or a third-party recycling agency designated by Geely.

Do not sell, transfer, or modify the power battery. The Geely Service Centre shall be responsible for recycling the power battery in case of accidents.◀

If the power battery is not properly recovered, the following cases may occur and result in serious personal injury or death:

- Illegal scrapping or disposal of power batteries will harm the environment, and people may suffer electric shock from touching high-voltage parts.
- If the power battery is improperly used or modified, accidents such as electric shock, heat, smoke, explosion and electrolyte leakage may occur.◀

Maintenance of Tires

Tire selection significantly impacts a vehicle's driving performance, with tire type, size, pressure, and proper maintenance being critical factors determining overall vehicle performance.

Tire Inspection

When to Check the Tyres

Inspect tyres at least once every month.

How to Check the Tyres

Check the tyre pressure with a tyre pressure gauge and check the pressure only when the tyre is cold.

Unscrew the valve cap from the tyre valve, press the tyre pressure gauge firmly onto the valve and take the pressure reading.

If the cold tyre pressure meets the recommended pressure value on the tyre pressure label, no adjustment is required. If the tyre inflation pressure is too low, inflate it to the recommended pressure value. If the tyre inflation pressure is too high, press the metal valve core of the tyre valve to deflate it, and then check the tyre pressure again using the instrument cluster or a tyre pressure gauge.

Be sure to install the valve cap back on the valve core, as valve caps keep dirt and moisture out.◀

Tire Maintenance

Proper inflation pressure and good driving habits extend tire service life.

- Regularly check tires for damage (cuts, cracks, bulges, etc.), and periodically inspect for abnormal wear.
- Avoid exposing tires to grease, oil, or fuel.
- After replacing tires, drive at moderate speeds for a period of time.
- Avoid sharp turns or sudden acceleration.
- After removal, store the wheel or tire in a cool, dry, and dark location. Do not place it near solvents, gasoline, engine oil, or similar substances.

Tire Wear



The tread wear indicator will appear when the tyre is worn to 1.6 mm or less of tread. Tyres should be replaced as soon as tyre wear has reached its limit.

If uneven tyre wear is found, or some continuous vibration is felt while driving, contact a Geely Service Centre for inspection. Conduct tyre dynamic balancing when installing new tyres.

If tyres with shallow tread patterns or exposed tread wear indicators are used continuously, it will lead to extended braking distance, steering failure, tyre breakage, etc., which can easily cause accidents.◀

Dispose used tyres in accordance with relevant environmental protection laws.◀

Tire Pressure

Type I



Type II




This vehicle has a tyre pressure label attached. The label is located on the outer side of the left center pillar, indicating the pressure for the front and rear tyres.

Tyres can work effectively only when they have correct inflation pressure. Under-inflation or over-inflation may adversely affect the service life of the tyres and the handling performance of the vehicle, causing the vehicle to lose control. ◄

Tire Rotation

The tyres should be rotated every 10,000km.

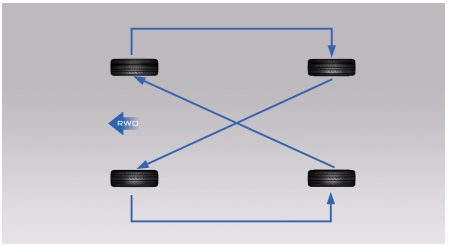

Carry out correct rotation according to the sequence shown in the figure. Adjust inflation pressure of front/rear tyres as shown in tyre pressure label on the vehicle after each rotation.

The wheels need to be installed correctly. After tyre rotation, adjust the tyre pressure.◄

Wheel Alignment and Wheel Balance

It is necessary to inspect wheel alignment if abnormal wear of tyres or deviation is found. It is necessary to re-balance wheels if the vehicle shakes when driving on a smooth road. Contact a Geely Service Centre as soon as possible.

Exterior Cleaning

Washing the vehicle frequently helps to protect the appearance of the vehicle. When washing the vehicle, turn the power supply OFF and put the vehicle in a cool place. Do not wash it under direct sunlight. If the vehicle is exposed to sunlight for a long time, it is necessary to wait for the exterior of the vehicle body to cool down before cleaning it.

When using an automatic car washer, be sure to follow the instructions of the car washer operator.

Windows and Exterior Rearview Mirrors

Regularly clean windows and exterior rearview mirrors using glass cleaner and a microfiber cloth. Avoid direct sunlight to ensure streak-free clarity.

Wiper Blades

Place wiper blades in service mode. Wipe them with a clean cloth and cleaner to ensure they are clean and free from wear.

Rim

Use a soft brush to clean wheel rims and rinse with a water jet.

Exterior Plastic Trim

Do not use dry, coarse, or stiff cloths to clean exterior plastic trim. Avoid scraping, as this may scratch or damage the surface.

Clean exterior plastic trim with a lint-free damp cloth and neutral (dedicated) vehicle cleaner.

Paint Care

Waxing

Regular waxing protects the paint finish and helps keep it looking like new. When water no longer beads up but sheets off the clean painted surface, it is time to wax the vehicle. Even though wax-based solutions are often used during car washes, we still recommend waxing your vehicle at least once a year to protect the paint.

Polishing

When water spots, rough texture, scratches, or a dull finish appear on a vehicle's surface, it can be polished to restore its shine and smoothness.

First, polish with a polish compound, then apply liquid wax or solid wax. Please carefully follow the instructions on the packaging.



- To prevent damage to the vehicle paint, the corrosive substances (bird droppings, resin, insects, asphalt spots, paving salt, industrial dust, etc.) should be cleared immediately. If necessary, use industrial alcohol to remove asphalt spots and obstinate oil stains, and then immediately wash with water and mild neutral soap solution to remove alcohol.
- It is forbidden to use chemical solvents containing ethanol or strong detergents to scrub the exterior lamp cover to avoid damage to the exterior lamp cover.
- It is forbidden to clean the exterior light cover of the vehicle whose surface is hot or exposed to direct sunlight. It is

necessary to wait for the exterior of the vehicle body to cool down before cleaning the exterior light cover of the vehicle to avoid damage to it. The external vehicle light cover can prevent external impacts.

- The front bumper upper trim strip assembly adopts an advanced and environmentally friendly hot stamping process, and the decorative film on the surface of the trim strip is susceptible to damage and discoloration from adhesive substances. But it has no impact on normal vehicle use. If you have a need to apply a vehicle wrap, please use protective film to completely cover and protect the grille before applying the wrap.◀

Cleaning Vehicle with High-pressure Washer

- Before washing the vehicle, check and ensure that the vehicle charge port lid is properly closed.
- Be sure to clean the vehicle in strict accordance with the instructions for use of the high-pressure washer, paying special attention to the working pressure and spraying distance. If a pressure washer is used, the nozzle must be at least 30 cm away from the body surface. Keep the nozzle moving and do not spray water constantly at one position. High-pressure water flowing into the vehicle parts may cause damage. Do not spray the nozzle towards the charging port.
- Do not use cluster nozzles to clean the vehicle.
- Never flush with the nozzle directly or indirectly targeting inside the front compartment. High-pressure water flow can cause damage to the electrical components in the front compartment or cause some parts to not work normally.
- Do not aim the nozzle at the connector of the chassis and flush (especially the orange high-voltage harness connector).
- Do not clean the front camera and sensor with a high-pressure washer or a steam washer, to avoid damage.
- Do not spray to wash the painted bumper and soft parts such as rubber hoses, plastic parts, and insulating materials at close range.

Cleaning Vehicle with Automatic Car Washer

- Before automatic car washing, please check with the car washer operator for any additional parts mounted on vehicle, and follow the professional advice provided by the operator.
- Fold the exterior rearview mirrors before washing the vehicle.
- The strength of the paint of vehicle body can withstand the washing of the automatic washer, but the impact on the paint must be noted. The influence mainly depends on the structure of the washer, the cleaning brush, the filtering state of cleaning water, and the type of cleaning agent and wax solvent. If the paint surface of the vehicle body is darkened or scratched after washing, the operator should be notified immediately to make corrections.

- When choosing an automatic car washer to clean the vehicle, give priority to a non-contact car washer. This type of the car washer does not have any part (brushes, etc.) that may touch the vehicle surface.

Interior Cleaning

Regular vehicle interior cleaning helps to improve the environment inside the vehicle. Dust and dirt may accumulate on the interior, and cause damage to carpet, fabrics, leather and plastic surfaces. Stains should be cleaned quickly, especially on light-coloured interior trims, as they may become permanent rapidly under extreme heat.

Clear the dust on small buttons and knobs with a soft brush.

Only use professional cleaning agents to clean the interior trim surface of vehicle, or it may cause permanent damage to the vehicle. To avoid spraying excessively, it is necessary to spray cleaner on the cleaning cloth directly. It is necessary to wipe the cleaner off immediately if it is sprayed on the surface of other objects in the vehicle by accident.

The temperature of baking gun used to paste the glass protective film is extremely high. Note that the baking gun should never bake the interior trims when the protective film is being pasted, or the interior trims will be damaged. Adequate waterproof protection should be taken before pasting to prevent water stains from flowing into the vehicle through gaps and causing electrical failure.

When cleaning the glass surfaces on the vehicle, do not use abrasive cleaning agent, or the glass will be scratched or the rear windshield defogger will be damaged. Only soft cloth and glass cleaner can be used.

Detergent contains solvents which may coagulate on vehicle interior trims. Read

and comply with all safety instructions on labels before using detergent.

Open the doors and windows to keep good ventilation when cleaning vehicle interior trims.

Note the following when cleaning the interior trims:

- Do not get rid of dirt on trim surface with a knife blade or other sharp objects.
- Do not use a scrubbing brush to avoid damaging the interior surface of the vehicle.
- Do not press hardly or use a cleaning cloth to wipe with great force. Wiping hard cannot improve cleaning effect but will damage the interior trims.
- Only use moderate neutral soap. Avoid using strong detergent or degreasing soap. Too much soap will leave stains and absorb dirt.
- Do not soak interior trims when cleaning.
- Do not use organic solvents such as naphtha or alcohol, as they will damage interior trims.
- Avoid spraying cleaner directly onto components with electrical buttons and controls.

Fabric/Carpet

Clean dust and scum with vacuum cleaner fitted with soft brush head. For stubborn stains, try to remove them with fresh water or soda water first. Choose an appropriate method to remove stains before cleaning:

- For liquid stains: Wipe residual stains gently with tissue, so that the stains can fully saturate and get absorbed by the tissue.
- For solid dry stains: Remove as much as possible by hand and then remove with a vacuum cleaner.

Cleaning steps:

1. Soak the clean lint-free white cloth in water or soda water.
2. Wring the cloth to remove residual moisture.
3. When removing stains, scrub gently from edges to the middle until no more stain marks are left on the cloth.
4. If stains cannot be wiped off thoroughly, repeat the above cleaning operations with mild soap water.

If stubborn stains still cannot be removed thoroughly, use synthetic fabric cleaner or detergent. Test for colour fastness on an inconspicuous position in the vehicle before using these products. If the cleaner cleans well, it can be used to clean the entire surface. After cleaning, the tissue can be used to absorb residual water on fabrics or carpets.

Leather Cleaning

A soft cleaning cloth dipped in water can be used to remove dust. To clean more thoroughly, use a soft cleaning cloth dipped in neutral soap water. Let the leather dry in air, do not dry it by baking, and do not clean leather with steam.

Do not use detergents or polishes on leather, or the appearance and feel of the vehicle interior trims may be permanently changed. Do not use silicon-based, wax-based or organic solvent-containing products to clean the vehicle interior trims, which may cause uneven gloss of leather

and affect the appearance of the interior trims. Do not use shoe polish on leather.

Seat Belt

Use a sponge soaked with neutral (dedicated) vehicle cleaner to clean the seat belt.

Instrument Panel and Other Plastic Surfaces

Do not use detergents or polishes on plastic surfaces, otherwise it may change the appearance and hand feel of interior trims permanently. Some commercially available products may enhance the glossiness of instrument panel and thus cause reflection on front windshield, which may severely affect the visual field of front windshield.

Do not use any cleaning agents containing alcohol or strong oxide chemicals to wipe the interior trims.◀

Replacement of Bulbs

Bulb Specification

Component Name	Bulb Name	Bulb Type	Power
Rear Fog Light	Rear Fog Light	P21W	21W

- The bulb type for other components is LED.
- Bulb replacement typically requires removal of certain vehicle components, therefore specialized technical skills are necessary to perform this procedure. It is recommended to go to a Geely Service Centre for bulb replacement.
- When there is a temperature difference between the inside and outside of the front/rear combination light shade, such as in rainy days or when washing the vehicle, there may be temporary fogging in the light shade. This is natural. The fog will dissipate after the lights are turned on for a short time. If it does not dissipate, contact a Geely Service Centre.◄


Inspection or Replacement of Fuses

If any electrical components are not working, it is possible that the fuse has blown. If this happens, it is recommended to check as per the below and replace the fuse if necessary:

1. Switch the vehicle power to OFF and turn off all electrical equipment, disconnect the negative cable of the low-voltage battery;



2. Clamp the fuse head with fuse clip to remove the fuse, and check whether the metal wire is blown;

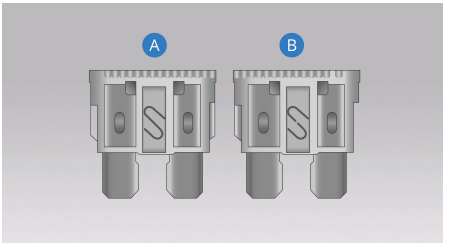

A- Intact fuse
B- Blown fuse


Do not try to repair any blown fuse. Do not substitute any blown fuse with a fuse of different colour or amperage, otherwise the electric system will get damaged or cause fire due to overload of wires.◀

3. Replace with a new fuse of the same model and specification. If the fuse blows immediately after replacement, contact a Geely Service Centre as soon as possible.

The colour indicates the amperage of fuse. This amperage is also marked on fuse.◀

Contact with liquid may damage electric components in the vehicle. Be sure to secure the covers of all electrical components.◀

Front Compartment Fuse Box

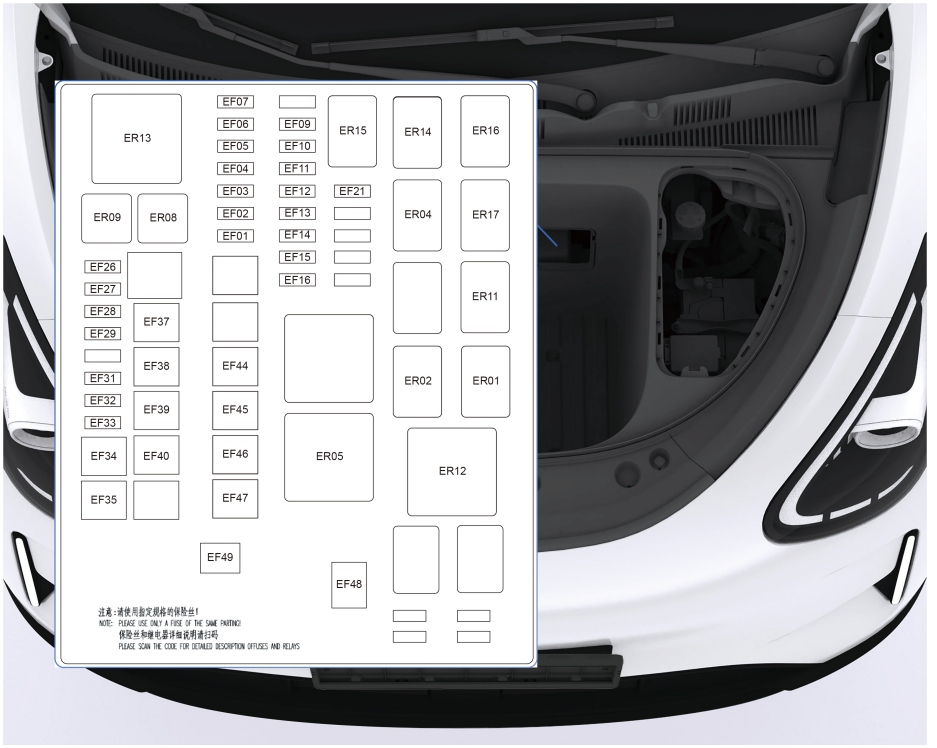


Fuse No.	Name	Ampere Value	Description
EF01	EXTENSIBLE PROPULSION CONTROL UNIT XCU	10A	-
EF02	HIGH VOLTAGE BATTERY	10A	-
EF03	EXTENSIBLE PROPULSION CONTROL UNIT XCU	10A	-
EF04	BRAKE PEDAL SENSOR	5A	-
EF05	FRONT/REAR WINDOW WASHER PUMP	15A	-
EF06	ELECTRIC VEHICLE COMMUNICATION CONTROLLER EVCC	5A	-
EF07	HORN1&HORN2&ER08 COIL	15A	-
EF09	HIGH VOLTAGE BATTERY&ELECTRIC VEHICLE	5A	-

Fuse No.	Name	Ampere Value	Description
	COMMUNICATION CONTROLLER EVCC		
EF10	ACTIVE GRILLSHUTTER MODULE AGM	5A	-
EF11	ER12/ER13 COIL	5A	-
EF12	EXTENSIBLE PROPULSION CONTROL UNIT XCU	5A	-
EF13	ELECTRIC DRIVETRAIN COOLANT PUMP EDCP	15A	-
EF14	BATTERY COOLANT WATER PUMP 1	15A	-
EF15	HIGH VOLTAGE COOLANT HEATER HVCH&ELECTRIC AC COMPRESSOR	7.5A	-
EF16	HVAC COOLING SHUT OFF VALVE&CHILLER SHUT OFF VALVE	5A	-
EF21	HEATED REAR VIEW MIRROR LEFT&HEATED REAR VIEW MIRROR RIGHT	10A	-
EF26	LEFT HOOD LATCH&ER09 COIL	15A	-
EF27	ER11/ER16 COIL&ER04/ER17 COIL&ER02 COIL	5A	-
EF28	ER14/ER15 COIL&WINDSCREEN WIPER MOTOR WWM	30A	-
EF29	ZONE CONTROLLER UNIT DRIVER ZCUD	25A	-
EF31	REAR WIPER MOTOR	15A	-
EF32	FRONT SEAT PASSENGER	30A	-
EF33	SIDE OBSTACLE DETECTION LEFT SODL&SIDE OBSTACLE DETECTION RIGHT SODR&FRONT SIDE RADAR RIGHT FSSR&FRONT SIDE RADAR LEFT FSRL	5A	-
EF34	HEATED REAR WINDOW&EF21	25A	-
EF35	HEATED WINDSCREEN&ER01 COIL	40A	-
EF37	ZONE CONTROLLER UNIT DRIVER ZCUD	30A	-
EF38	INLINE HVAC MAIN CONNECTOR	40A	-
EF39	ELECTRONIC FAN CONTROL MODULE EFCM	30A	-
EF40	ELECTRONIC FAN CONTROL MODULE EFCM	40A	-
EF44	POWER OPERATED TAILGATE POT	25A	-

Fuse No.	Name	Ampere Value	Description
EF45	BRAKE CONTROL MODULE BCM	40A	-
EF46	BRAKE CONTROL MODULE BCM	60A	-
EF47	HEATED WINDSCREEN	40A	-
EF48	POWER STEERING CONTROL MODULE PSCM	100A	-
EF49	DCDC+	200A	-

Interior Fuse Box

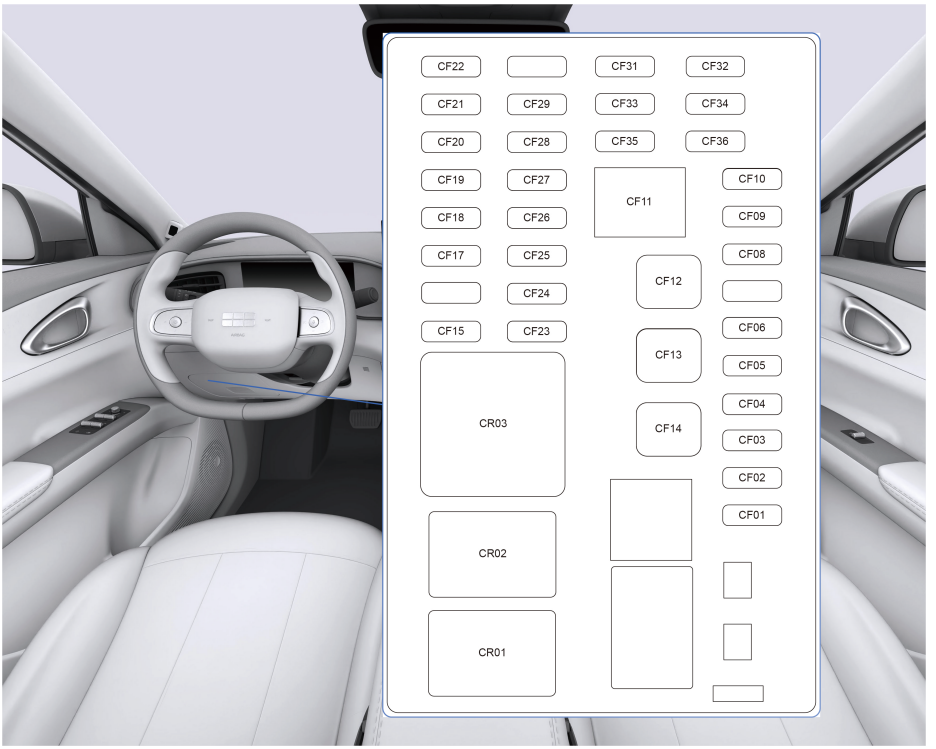

Fuse No.	Name	Ampere Value	Description
CF01	ZONE CONTROLLER UNIT DRIVER ZCUD	25A	-
CF02	ZONE CONTROLLER UNIT DRIVER ZCUD	25A	-
CF03	DRIVER INFORMATION DISPLAY	5A	-
CF04	ZONE CONTROLLER UNIT PASSENGER ZCUP	25A	-
CF05	DIAGNOSTIC SOCKET OBD II&ETC UNIT&ETC UNIT 2	10A	-
CF06	ZONE CONTROLLER UNIT PASSENGER ZCUP	25A	-
CF08	ACTIVE SAFETY DOMAIN MASTER ASDM	5A	-
CF09	DISPLAY HEAD UNIT MODULE DHU	20A	-
CF10	FRONT SEAT DRIVER	30A	-

Fuse No.	Name	Ampere Value	Description
CF11	CF31/CF32/CF33/CF34/CF35/CF36	30A	-
CF12	ZONE CONTROLLER UNIT PASSENGER ZCUP	25A	-
CF13	ZONE CONTROLLER UNIT PASSENGER ZCUP	30A	-
CF14	ZONE CONTROLLER UNIT DRIVER ZCUD	25A	-
CF15	ZONE CONTROLLER UNIT PASSENGER ZCUP	5A	-
CF17	STEERING WHEEL MODULE SWM	15A	-
CF18	INSTRUMENT PANEL ILLUMINATION PASSENGER&FRONT DOOR AMBIENT LIGHT FRONT LEFT&FRONT DOOR AMBIENT LIGHT FRONT RIGHT&VIDEO RECORDER	5A	-
CF19	WIRELESS PHONE CHARGER WPC	7.5A	-
CF20	LH HEADLAMP UNIT&RH HEADLAMP UNIT	5A	-
CF21	VANITY MIRROR ILLUMINATION LAMP LH SUNVISOR&VANITY MIRROR ILLUMINATION LAMP RH SUNVISOR&OVERHEAD CONSOLE OHC	5A	-
CF22	SUN SENSOR SLS&OCCUPANT MONITORING CAMERA OMC&DRIVER MONITORING CAMERA	5A	-
CF23	ZONE CONTROLLER UNIT DRIVER ZCUD&ZONE CONTROLLER UNIT PASSENGER ZCUP&STEERING WHEEL MODULE SWM&EXTENSIBLE PROPULSION CONTROL UNIT XCU	5A	-
CF24	SUPPLEMENTARY RESTRAINT SYSTEM SRS	5A	-
CF25	ACCELERATOR PEDAL SENSOR	5A	-
CF26	POWER STEERING CONTROL MODULE PSCM&BRAKE CONTROL MODULE BCM	5A	-
CF27	ETC UNIT&ETC UNIT 2	5A	-
CF28	FORWARD LOOKING RADAR FLR&PARKING ASSISTANCE SENSOR 1 REAR LEFT OUTER (PAS)&PARKING ASSISTANCE SENSOR 2 REAR LEFT INNER (PAS)&PARKING ASSISTANCE SENSOR 4 REAR RIGHT OUTER (PAS)	5A	-
CF29	USB CHARGING PORT TUNNEL REAR&USB	10A	-

Fuse No.	Name	Ampere Value	Description
	CHARGING PORT FRONT LEFT		
CF31	VIDEO RECORDER&DOCKING STATION ALCOHOL LOCK SENSOR	7.5A	-
CF32	TELEMATICS AND CONNECTIVITY ANTENNA MODULE TCAM	5A	-
CF33	CR01/CR02/CR03 COIL	5A	-
CF34	RAIN AND LIGHT SENSOR MODULE RLSM&DRIVER DOOR SWITCHES DDS&CENTER CONSOLE SWITCH MODULE CCSM&INTERIOR RADAR MODULE REAR IRRM	5A	-
CF35	CENTER CONSOLE DISPLAY&DAB FM RADIO RECEIVER	7.5A	-
CF36	STEERING WHEEL MODULE SWM	5A	-

Emergency Equipment

Hazard Warning Light



The hazard warning light is located on the control panel of the sub instrument panel.

Under special circumstances when the vehicle needs to be decelerated or stopped in an emergency, press the hazard warning light switch. Then the indicator on the switch flashes along with the left and right turn signal indicators to warn others. Press the hazard warning light switch again to turn off the indicator light on the switch and the turn signal lights on both sides.

Reflective Safety Vest



Reflective Safety Vest is placed in the glove box, which can be seen when you open it.

In case of an emergency, the driver should wear a reflective safety vest before getting out of the vehicle to ensure personal safety.◄

Warning Triangle



The warning triangle is placed in the trunk and can be seen by pulling open the trunk.



On regular roads, the warning triangle should be placed 50m-100m behind the vehicle. On the highway, the warning triangle should be placed more than 150m behind the vehicle. In rainy or foggy weather, the distance shall be increased to 200m.

When a vehicle malfunctions or is involved in an accident, first turn on the hazard lights. Before exiting the vehicle, put on a reflective vest and place the warning triangle at the required distance.◄

Tyre Repair Kit

When a tyre loses air due to a puncture, you can use a rapid tire repair kit to temporarily seal the puncture in the tire's surface.

Park the vehicle on a solid surface where there is no traffic hazard and it is easy to repair your tyres safely. Turn on


the hazard warning light and place a warning triangle at the specified position.◀

To prevent the vehicle from moving, it is necessary to take the following measures:

- Activate the parking brake.
- Place the vehicle in Park (P) or Neutral (N).
- Do not allow any occupant to left in the vehicle.
- Before using the tyre repair kit, place stoppers in front and rear of the remaining tyres.◀

- The tire repair kit is only suitable for tires with punctures in the tread area. If the tyre has large crack, split or similar damage, the tyre repair kit cannot be used to seal the tyre.
- The sealing fluid tank must be replaced before its expiration date, and after every tyre repair.
- The tire repair kit must be stored out of the reach of children.
- Drive carefully and avoid sudden steering and emergency braking. Slow down and safely stop if you feel abnormal vibrations or noises while driving.◀

Tyre repair kit location

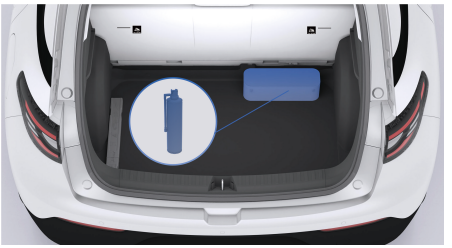

The tyre repair kit is located in the on-board tool kit on the trunk lid.



1. Tyre Sealant Switch
2. Tyre Sealant Hose
3. Tyre valve connector
4. Tyre sealant tank

Use a tire repair kit



1. Remove the tyre repair kit quickly;
2. Shake the tyre sealant bottle;

Do not break the seal of the sealing fluid tank before use. The seal will be opened automatically when the switch is rotated.◀

3. Unscrew the valve cap from the tyre valve stem and keep it in a safe place;
4. Unscrew the valve cap of the tyre sealant tank;
5. Connect the tyre connection valve with the tyre valve, and tighten them clockwise;
6. Hold the tank upside down and turn the red valve clockwise to begin automatic inflation;

The tyre sealant can irritate the skin. If it is in contact with the skin, wash immediately with soap or water.◀

7. When inflation reaches full capacity, turn the red valve counterclockwise to close it, then disconnect the connection valve;
8. Drive 3 ~ 10 km immediately at a speed of no more than 80 km/h and use the sealing fluid to evenly seal the tyres.

After repairing the tyre with the tyre repair kit:

- The driving speed should not exceed 80 km/h.
- The driving distance should not exceed 200 km.
- Visit a Geely Service Centre as soon as possible for tyre repair or replacement.◀


Emergency Unlocking of Door

Using Mechanical Key to Lock/ Unlock

- When the smart key or the vehicle powers off, a mechanical key can be used to lock/unlock the door.
- After the anti-theft alarm is triggered by opening the door with the mechanical key, it is necessary to use the smart key to unlock the door.◀


Driver Side Door

1. Taking out Mechanical Key;

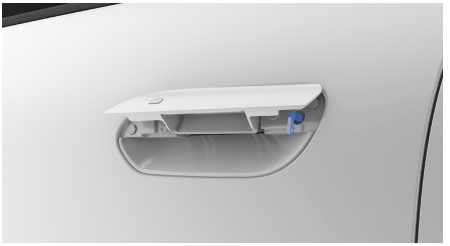

2. Pull the driver's side door handle and insert the mechanical key into the driver's side door lock. By inserting and turning the mechanical key, you can unlock and lock the vehicle. After unlocking, remove the mechanical key and then pull the door handle to open the door.

Front or rear door locking

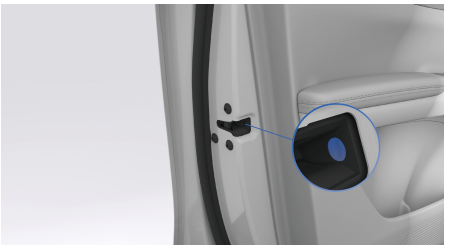

1. Insert the mechanical key into the black knob of the door lock for rotation;
2. Take out the mechanical key and close the door to complete the locking.

Emergency Unlocking of Trunk

Type I

1. Fully fold the rear seat backrest if possible;
2. Access the cover plate for trunk emergency opening device on the trunk interior trim panel;



3. Lift the trunk emergency opening device cover;



4. Toggle the switch counterclockwise to open the trunk.

Type II

1. Fully fold the rear seat backrest if possible;
2. Access the cover plate for trunk emergency opening device on the trunk interior trim panel;



3. Lift the trunk emergency opening device cover;



4. Toggle the switch clockwise to open the trunk.

Emergency Unlocking of Charging Cable



If the charging cable cannot be pulled out, try the following methods to unlock it:

1. Open the trunk door and lift the left cover plate;
2. Pull the emergency charging port cable located on the left side of the trunk to unlock the charging cable.


If the charging cable still cannot be removed, stop charging immediately and contact a Geely Service Centre.◄

Jump Starting

Do not start the vehicle by pushing or pulling; and use only a low-voltage battery for jump starting. ◄

If the vehicle cannot be started due to depletion of low-voltage battery, another vehicle and jumper cable can be used to start the vehicle. ◄

1. Turn the power supply to OFF. Turn off all lights and electric accessories, except hazard warning light (if necessary);
2. Open the hood, remove the right-side panel, and locate the low-voltage battery.

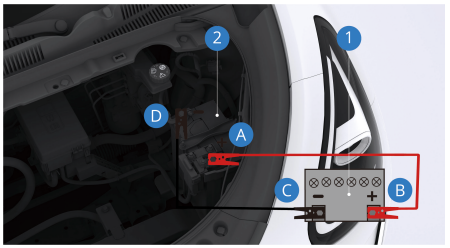

1. Charged low-voltage battery
2. Discharged low-voltage battery

3. Connect one end of the red positive cable to the positive (+) terminal (A) of the discharged low-voltage battery;
4. Connect the other end of the red positive cable to the positive (+) terminal (B) of the charged low-voltage battery.
5. Connect one end of the black negative cable to the negative (-) terminal (C) of the charged low-voltage battery.
6. Connect the other end of the black negative cable to the negative (-) terminal (D) of the discharged low-voltage battery;
7. Try to start the vehicle whose low-voltage battery is depleted. If the vehicle still can not be started after several attempts, contact a Geely Service Centre.

Be sure to ensure that the jumper cables can meet the current and voltage requirements for the jump-start. If the jumper cable is connected or removed in wrong order, an electrical short circuit may occur and the vehicle may be damaged. Repairs resulting from this are not covered by the warranty. Therefore, it is necessary to connect or remove jumper cable in the correct order, and ensure cables will not touch each other or contact other metal. ◄

To disconnect the jumper cables between the two vehicles, it is required to:

1. Disconnect the black negative (-) cable from the low-voltage battery on discharged vehicle.
2. Disconnect the black negative (-) cable from the low-voltage battery on live vehicle.
3. Disconnect the red positive (+) cable from the low-voltage battery on live vehicle.
4. Disconnect the red positive (+) cable from the low-voltage battery on discharged vehicle.

- Cooling fans and other operating components of the drive motor may cause personal injury. Regardless of whether the drive motor is operating or not, it is forbidden to touch the cooling

fan and drive motor with hands, clothing, and tools.

- Gas may leak from the low-voltage battery during charging or jump starting. There is a risk of explosion at this time. Be sure to keep the low-voltage battery away from sparks, open flames, and other flammable objects.
- The use of open fire near low-voltage battery may ignite the gases in battery and cause severe casualties. The fluid in the low-voltage battery is corrosive and can cause serious damage to eyes and skin. In case of accidental contact, rinse immediately with plenty of water and consult a doctor immediately.
- When connecting and removing jumper cables, do not twine the cables with fans, belts, etc.
- Ensure that each cable is properly connected and that the ends are kept at a distance from each other to avoid contact between the positive and negative terminals. Failure to follow the above steps will result in repair that is not covered by the warranty.
- Take care that the positive and negative terminals are not reversed when connecting the power supply. Otherwise, it may cause high-voltage system fault and the vehicle will not start.
- If the vehicle still can not be started after several attempts or the low-voltage battery often runs out of power, please contact a Geely Service Centre. ◄

Overheating of Drive Motor or Motor Controller

Overheating of the drive motor or motor controller may mean that the coolant temperature is too high, which should be handled according to the following procedure:

1. Drive the vehicle safely off the road, stop and turn on the hazard warning lamp, shift the gear into Park (P), and press the electronic parking brake switch on the multimedia display. Turn off the A/C.
2. Visually check whether there is obvious coolant leakage under the radiator, hose or vehicle. It is normal if there are water drops from the working A/C.
3. If the coolant leaks, stop using the vehicle immediately. Contact a Geely Service Centre as soon as possible.
4. If there is no obvious water leakage, check the coolant reservoir. If it has dried up, fill the coolant expansion tank with coolant to about half while the vehicle is started.
5. If there is no coolant leakage and the coolant level in the expansion tank is normal, contact a Geely Service Centre.
6. Once the coolant has cooled to normal temperature, recheck the coolant level in the coolant expansion tank. Add coolant to half if needed. A significant loss of coolant indicates a leakage in the system. Contact a Geely Service Centre as soon as possible.
7. After the vehicle is parked in summer, the cooling fan usually operates automatically even for a long time. This

is normal. The cooling fan will be automatically turned off after the temperature of drive motor or motor controller drops where the cooling fan does not need to work.

In order to avoid personal injury, the hood should remain closed until there is no vapour. The outflow of vapour or coolant indicates a high pressure. Keep personnel away from the rotating cooling fan.◄

When the warning message "Power battery thermal runaway, please stay away from the vehicle immediately and call the emergency call" appears in the instrument cluster, get away from the vehicle immediately and call emergency services.◄

Recovering from a Stuck Vehicle

When the vehicle is stuck in snow, mud pit, sands or other soft roads, please evacuate as per the following steps:

1. Observe the surroundings of the vehicle to ensure that there are no people or obstacles;
2. Turn the steering wheel to the left/right to grind the area around the front wheels;
3. Engage the Gear D or R to move the vehicle forward and backward slowly;
4. If the vehicle remains stuck after several attempts, seek professional towing services.

When using Forward and Backward Movement to drive the vehicle out of the pit, it may suddenly rush forward or backward. The driver must keep alert at all times to avoid casualties.◄

Emergency Call (E-call)*

The Emergency SOS Switch is located on the front interior light on the roof.



1. SOS switch
2. SOS Switch Indicator Light

In case of emergency, you can call for help in the following ways:

- Manual Call: long press the SOS switch for 2 to 8 seconds and then release it. The system will call for rescue.
- Automatic Call: In case of collision, the controller detects the air bag explosion signal and the system automatically calls for rescue.

When the emergency call (E-call) system is activated, the SOS indicator light will indicate the system status and call status accordingly. After the system is started, it will send the location of the vehicle collision accident, the direction of vehicle travel, vehicle data, etc. to the public service center, and at the same time make an emergency call. The background agent confirms the accident information and requests rescue services from the Public Service Centre. After the relevant information is confirmed, the call ends.

The following situations (including but not limited to) may lead to the emergency call (E-call) system unable to work normally:

- Faulty or damaged audio equipment.
- The communication signal is weak, interfered, shielded, etc.
- Damaged GPS equipment or areas with weak signal (such as underground garages, tunnels, mountains, etc.) may not locate the vehicle location.
- When the air bag is not deployed in a slight collision or abnormal situation, it may not automatically trigger the emergency call. The emergency call can be made manually or in other ways.
- If the emergency call cannot be made by manual call, please use other mobile communication.
- Due to riots, fires, floods, storms, explosions, war, governmental actions, orders from judicial or administrative authorities, social conditions, or other force majeure events, emergency rescue services may become unavailable.◀

Emergency Evacuation of Personnel

Evacuation After Door Unlocking



The front doors unlock with a single pull of the interior door handle, while the rear doors require two pulls to unlock.

- If the rear door can not be opened, the child safety lock may be active. It needs to be opened from the outside of the vehicle or the glass needs to be lowered to extend the hand from the outside to open.
- When all the doors cannot be opened, a sharp and hard object can be used to strike the corners of the door glass to escape by breaking the window.◀

Power Battery Damage and Fluid Leakage


The power battery contains electrolytes. To prevent accidental injury, be sure to observe the following precautions:

- In case of inhalation of electrolyte or fumes, it may cause respiratory irritation. Inhalation of vapours may cause irritation of the upper respiratory tract and lung, it is necessary to breathe fresh air and seek medical attention immediately.
- Skin contact with electrolytes or fumes may cause skin irritation and/or chemical burns. Immediately change contaminated clothing and rinse the skin with plenty of water or soapy water for more than 15 minutes, then seek medical attention immediately.
- Prolonged skin contact with electrolytes may cause inflammation through skin absorption.
- Eye contact with electrolytes may cause severe irritation and chemical burns. Immediately open the upper and lower eyelids and flush the eyes with plenty of water for more than 15 minutes, then seek medical attention immediately.
- Electrolytes are volatile and flammable, so pay attention to fire prevention and ventilation.
- In the event of an electrolyte leakage, wear appropriate personal protective equipment and clean up any spilled electrolytes with a dry cloth. Ensure thorough ventilation of the area.◀

If electrolyte leakage or any problem or damage to the power battery housing is

observed, rescue personnel must wear personal protective equipment and must not touch the electrolyte with their hands. Lime powder can be used to dilute and neutralise the electrolytes. Water cannot be used for dilution. The neutralization process maintains the thermal stability of the power battery without draining its power.

Vehicle Evacuation from Accident Scene

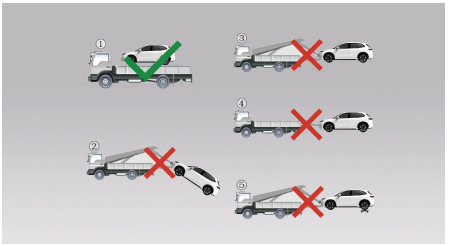

In case of dragging the vehicle after the accident, pay attention to the following matters:

- Use the drag method shown in ① for flat devices. Do not use the drag methods shown in ②③④⑤.
- Place the power supply of the vehicle in OFF before towing, turn on the hazard warning lights, close the door and lock the mechanical lock. No personnel should remain inside the vehicle during towing.

Towing Eye

The towing eye is only used for road rescue and shall not be used for other purposes. When towing the vehicle with towing eye, observe the following precautions to prevent serious injury or even death.


- Ensure that the towing eye is screwed firmly into the mounting hole to prevent slipping during towing.
- When towing the vehicle with the towing eye, ensure that the personnel around keep a safe distance from the vehicle.
- Do not use a towing chain/belt on the towing eye. The towing chain/belt may break.

- It is not allowed to use the towing eye to tow the vehicle on off-road surfaces or roads with obstacles.
- When using a towing eye for vehicle towing, start the towing vehicle smoothly and slowly to prevent shock loading due to excessive pulling force.
- When using the towing eye, make sure to use the appropriate equipment that complies with traffic regulations (such as a rigid tow bar or tow rope), so as to tow the vehicle to the nearest maintenance point on the ground for a short distance.
- When extracting a stuck vehicle using the towing eye, tow only from directly ahead to align direction with force. Never tow at an angle.◀

The towing eye may be used to tow the vehicle onto a flatbed trailer in specific situations.

- The vehicle position and ground clearance determine flatbed towing feasibility.
- Steep ramps or insufficient ground clearance may cause damage to the vehicle during towing with the towing eye.
- Use the towing lifting apparatus to lift the vehicle if necessary.◀

Towing Eye Position

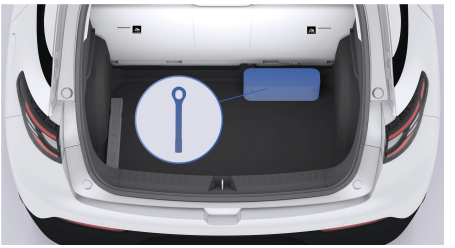

The towing eye is placed in the trunk tool bag and can be seen by opening the trunk.

Installing the Towing Eye in the Front



1. Press the traction hole cover plate located on the right side of the front bumper;



2. Screw the towing eye into the mounting hole and tighten it with the tool to ensure that the towing eye is fully tightened.

Installing the Towing Eye in the Rear



1. Open the traction hole cover plate located on the right side of the rear bumper;



2. Screw the towing eye into the mounting hole and tighten it with the tool to ensure that the towing eye is fully tightened.

Trailer Mode

Click the following on the multimedia display in sequence: Vehicle Settings → My Vehicle → Service and Maintenance → Trailer Mode, and turn on or exit the Trailer Mode in the interface.

- If the status indicator of the electric parking brake system (EPB) lights up after the Trailer Mode is on, it indicates that the electric parking brake system is faulty. Please contact a Geely Service Centre.
- If the Electronic Parking Brake system cannot be enabled, the rear wheels should be locked as needed to prevent the vehicle from moving.
- Before turning on the Trailer Mode, make sure the vehicle is in a stable condition to avoid accidents caused by slipping. It is necessary to shift into Park (P) and depress the brake pedal to start the Trailer Mode.
- After the towing is finished, it is necessary to exit the Trailer Mode in time and reset the vehicle by locking it or restarting the vehicle to ensure that the vehicle is in normal condition.◀

Temporary Storage for Accident Vehicles


If the accident vehicle needs temporary storage, the high-voltage system must be disconnected. Please refer to the High-voltage Cut-off Method chapter. Also, stick high-voltage warning labels and place high-voltage warning signs on the vehicle to remind pedestrians that touching the vehicle is strictly forbidden. Failure to do so could result in serious personal injury or death.



Special attention should be paid to the following conditions when storing the vehicle:

- Never park the vehicle in places with high temperature heat sources.
- Vehicles should be placed in a clean and dry environment with evacuation routes kept clear.
- It is forbidden to disassemble the power battery assembly at will, or to knock it with other heavy objects, or to puncture any part of it with a sharp object; it is strictly forbidden to use metal to directly connect the positive and negative poles of the power battery assembly; avoid contact with corrosive objects and prevent an external short circuit of the power battery.
- After a vehicle is waterlogged, caught on a fire, or hit, the vehicle should be stored in an open area due to the possibility of re-ignition. A safety zone of at least 15m around the vehicle should also be set up to prevent human-vehicle contact.◀

Vehicle Identification Number

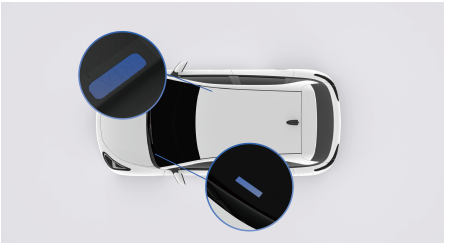

The vehicle Identification Number (VIN) is engraved on the body cross member under the front passenger seat. It can be seen by moving the seat backward to the end and lifting the carpet.

There is a VIN code on the body bracket in the lower left corner of the front windshield, which can be seen through the front windshield.


The VIN is always required when contacting a Geely Service Centre. If the VIN on the vehicle body is damaged, contact a Geely Service Centre.◄

The Vehicle Identification Number can be read with a Geely Auto diagnostic scanner at a Geely Service Centre. Specific steps are as follows:

1. The vehicle power is switched to OFF;
2. Connect Geely Auto diagnostic scanner to the OBD diagnostic interface;
3. Activate the diagnosing program. Start the vehicle, and touch "Welcome" to enter the interface;
4. Read the VIN automatically.

If the above methods are needed to read the Vehicle Identification Number, the data should be read through a Geely Service Centre, otherwise it may cause damage to the vehicle.◄

Vehicle Identification Label

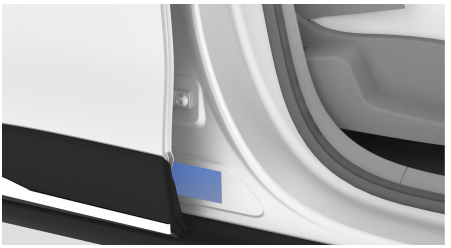


This label contains VIN and other information.

Front Compartment Operation Warning Label



The front compartment working warning label is located inside the front compartment. It includes refrigerant type, refrigerant filling quantity, CO2 equivalent, and global warming potential (GWP) information.

Drive Motor Code

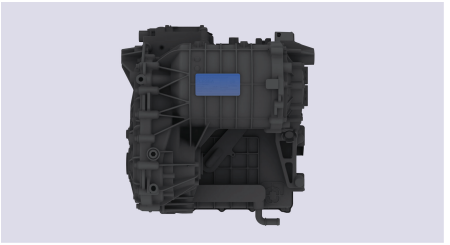

The drive motor code/identification is located in the upper middle of the electric drive system.

Main Vehicle Dimension Parameters

Item	Unit	Parameter
Vehicle Length	mm	4135
Vehicle Width	mm	1805
Vehicle Height	mm	1580

Vehicle Mass Parameters

Item	Unit	35.35kWh	47.14kWh
Curb Mass	kg	1290	1365
Front Axle Curb Mass	kg	634	665
Rear Axle Curb Mass	kg	656	700
Maximum allowed total mass	kg	1680	1755
Front Axle Full Load Mass	kg	746	777
Rear Axle Full Load Mass	kg	934	978

Powertrain Performance

Item	Unit	35.35kWh	47.14kWh
Drive Type	-	Rear-engine, rear-wheel drive	Rear-engine, rear-wheel drive
Maximum Vehicle Speed	km/h	130	130
Maximum Gradeability	%	30	28

Power Battery Parameters

Item	Unit	35.35kWh	47.14kWh
Type	-	LFP battery	LFP battery
Rated voltage of power battery system	V	290	386
Rated capacity of power battery system	Ah	122	122

Drive Motor Parameters

Item	Unit	35.35kWh	47.14kWh
Model	-	TZ160XS003	TZ160XS002
Type	-	Permanent magnet synchronous motor	Permanent magnet synchronous motor
Rated Power	kW	25	30
Peak power	kW	60	85
Rated torque	N•m	70	70
Peak torque	N•m	150	150
Rated speed	r/min	3410	4100
Peak speed	r/min	12600	12600

Tire Parameters

Item	Parameter
Tyre Size	205/60 R16
Dynamic Unbalance Quantity	⩽8g
Pressure of Front Tyres	250kPa
Pressure of Rear Tyres	250kPa

Wheel Alignment Parameters

Item	Parameter
Camber of Front Wheel	-16.8′ ±45′ (left-and-right difference 0±45′)
Camber of Rear Wheel	-70.2′ ±45′ (left-and-right difference 0±45′)
Kingpin Inclination Angle	12.92°±0.75° (left-and-right difference 0±0.75°)
Caster Angle	4.86°±0.5° (left-and-right difference 0±0.5°)
Front wheel toe-in (one side)	7.5′ ±3′ (left-and-right difference 0±3′)
Rear wheel toe-in (one side)	6′ ±3′ (left-and-right difference 0±3′)

Recommended Fluids and Capacities

Item	Specification	Capacity
Brake Fluid	DOT4	0.7L
Windshield Washer Fluid	-	5.0L
Drive motor and power battery coolant	Geely authorised glycol type coolant	6.4L/6.8L

Index

A

A/C Settings 139
Active Grille Shutter (AGS) 93
Adaptive Cruise Control (ACC) 97
Adjustment of Air Outlets 138
Adjustment of Driver Seat 45
Adjustment of Exterior Rearview Mirrors 50
Adjustment of Front Passenger Seat 71
Adjustment of Front Seat Headrests 72
Adjustment of Interior Rearview Mirror 52
Adjustment of Rear Seat Headrests 73
Adjustment of Rear Seats 71
Adjustment of Steering Wheel 46
Airbag Deactivation 24
Anti-theft System 40
Apps 141
Automatic Unlock and Lock 37

B

Brake Fluid 157
Brake System 86

C

Central Unlock and Lock 36
Charging Operation 148
Charging Precautions 147
Child Safety Lock 31
Collision Mitigation Support Front (CMSF) 116
Coolant 156

D

Deployment of Airbags 23
Desktop 141
Door Open 37
Drive Mode 81
Drive Motor Code 195
Drive Motor Parameters 197
Driver Monitoring System 128
Driving Instructions 75

E

Electric Power Steering (EPS) 89
Emergency Call (E-call)* 187
Emergency Equipment 179
Emergency Evacuation of Personnel 188
Emergency Maneuver Assist (EMA) 120
Emergency Unlocking of Charging Cable 183
Emergency Unlocking of Door 181
Emergency Unlocking of Trunk 182
Energy Center 151
Energy Recovery 84
Exterior Cleaning 166
Exterior Lighting 57
Exterior Overview 12
Exterior Rearview Mirror Folding/ Unfolding 51

F

Forward Cross Traffic Alert (FCTA) 124
Front Air Conditioning Control System 135
Front Compartment Fuse Box 173
Front Compartment Operation Warning Label 194
Front Compartment Overview 15
Front Departure Alert (FDA) 121
Front Seat Heating* 73
Front Storage 41
Frunk Storage 43

G

Gear Shift 80
Graphical Information 10

H

Hood Opening and Closing 154
Horn 46

I

Inspection or Replacement of Fuses 172
Installation of Child Restraint System 29
Instrument Cluster Overview 61
Intelligent Cruise Control (ICC) 104
Intelligent High Beam Control (IHBC) 59
Interior Cleaning 168
Interior Fuse Box 176
Interior Lighting 58
Interior Overview 13
Introduction to Combined Driver Assistance System Sensors 95
Introduction to Parking Assist System Sensors 129

J

Jump Starting 184

K

Key Unlock and Lock 33
Keyless Unlock and Lock 35

L

Lane Keeping Assist (LKA) 112

M

Main Vehicle Dimension Parameters 196
Maintenance of Low-Voltage Battery 160
Maintenance of Tires 164

N

Notes to Owners 5

O

Occupant In–Vehicle Detection 38
Overheating of Drive Motor or Motor Controller 185

P

Parking Assist Warning System 130
Parking Brake 84
Pedestrian Warning System 89
Power Battery 162
Power Battery Damage and Fluid Leakage 188
Power Battery Parameters 196
Power Supply Mode 78
Powertrain Performance 196
Preface 1
Prompt Information 9

R

Rear Side Radar Assist System 125
Rear Storage 42
Rear View Camera System 131
Recommended Fluids and Capacities 198
Recovering from a Stuck Vehicle 186
Regular Maintenance 153
Replacement of Bulbs 171
Replacement of Key Battery 153
Replacement of Wiper Blades 158

S

Seat Belt Overview 17
Selection of Child Restraint System 25
Service Brake 82

Start Procedure Operation..... 79
Steering Wheel Buttons 48
Steering Wheel Heating*..... 47
Sun Visor and Vanity Mirror 70
Surround View Monitor*..... 132

T

Temporary Storage for Accident Vehicles 192
Three-Point Seat Belt..... 18
Tire Parameters 197
Tire Pressure Monitoring System (Direct)* 90
Tire Pressure Monitoring System (Indirect)* 92
Traffic Sign Identification (TSI) 122
Trunk Opening and Closing 38
Trunk Storage..... 44

U

Use of Child Restraint System..... 28
Using Wipers..... 54

V

Vehicle Evacuation from Accident Scene 189
Vehicle Identification Label 194
Vehicle Identification Number..... 193
Vehicle Mass Parameters 196
Vehicle Parking..... 83
Vehicle Search 33
Vehicle Settings 143

W

Warning Light and Indicator Light..... 63
Washer Fluid 158
Wheel Alignment Parameters..... 197
Window Opening/Closing..... 52
Wired Charging..... 67
Wireless Charging*..... 68

Geely Global Customer Voice Channel



Geely highly values the voice of our customers and is dedicated to better serving our customers. Your satisfaction with your vehicle and Geely service is our top priority.

To quickly follow up and solve your problems related to vehicle maintenance, usage and warranty and other after-sales issues, you can contact your local official Geely dealers.

However, if there is something that your Geely dealer cannot assist you with or you would like to send comments or questions directly to Geely, please contact the **Geely Global Customer Voice Channel**.

Sending email to Geely global official mailbox
<globalservice@Geely.com>

Thank you for choosing and trusting Geely!