
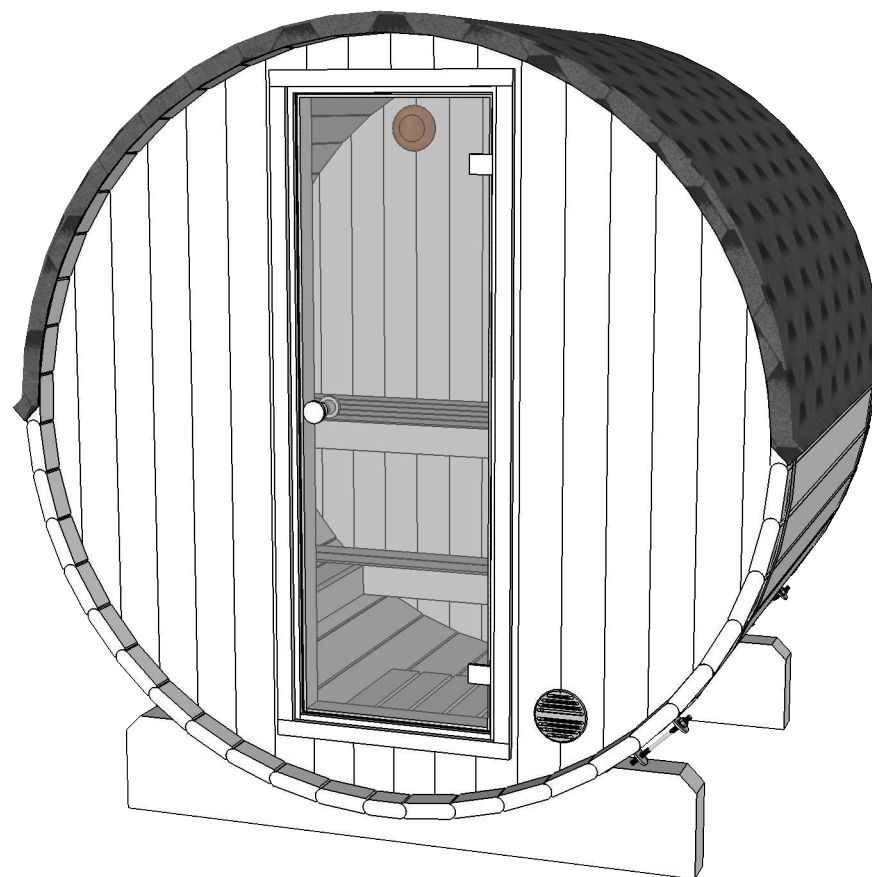


Sauna 160, Ø200


**Please read whole manual
before You start.**

**All given measurements are
in millimeters.**

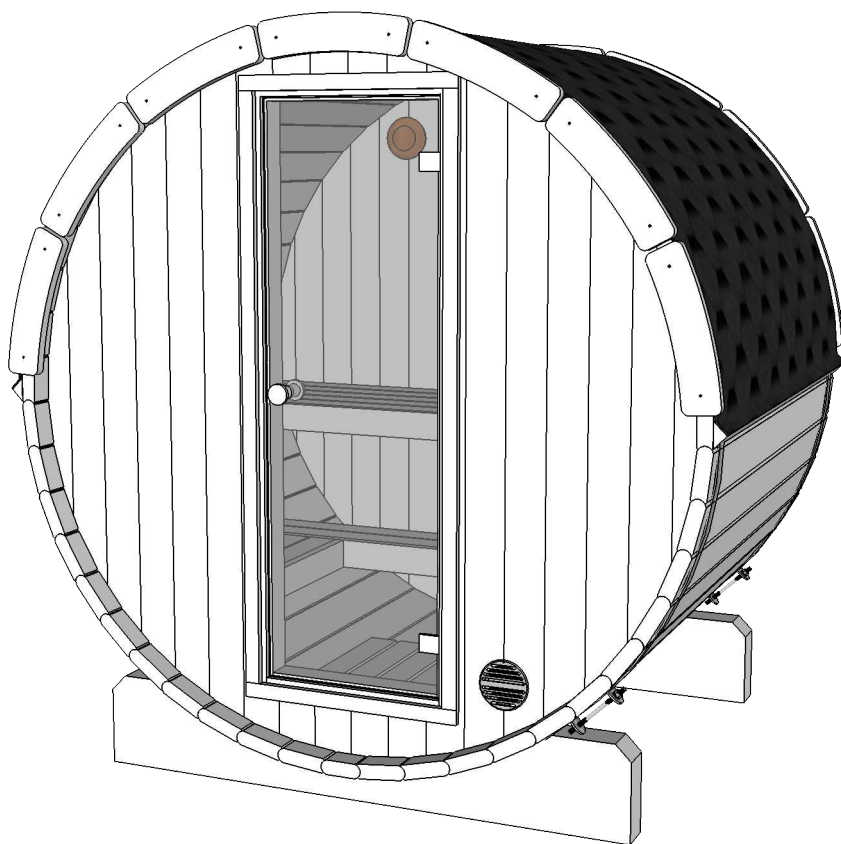








Sauna 160, Ø200

Details list nr.1



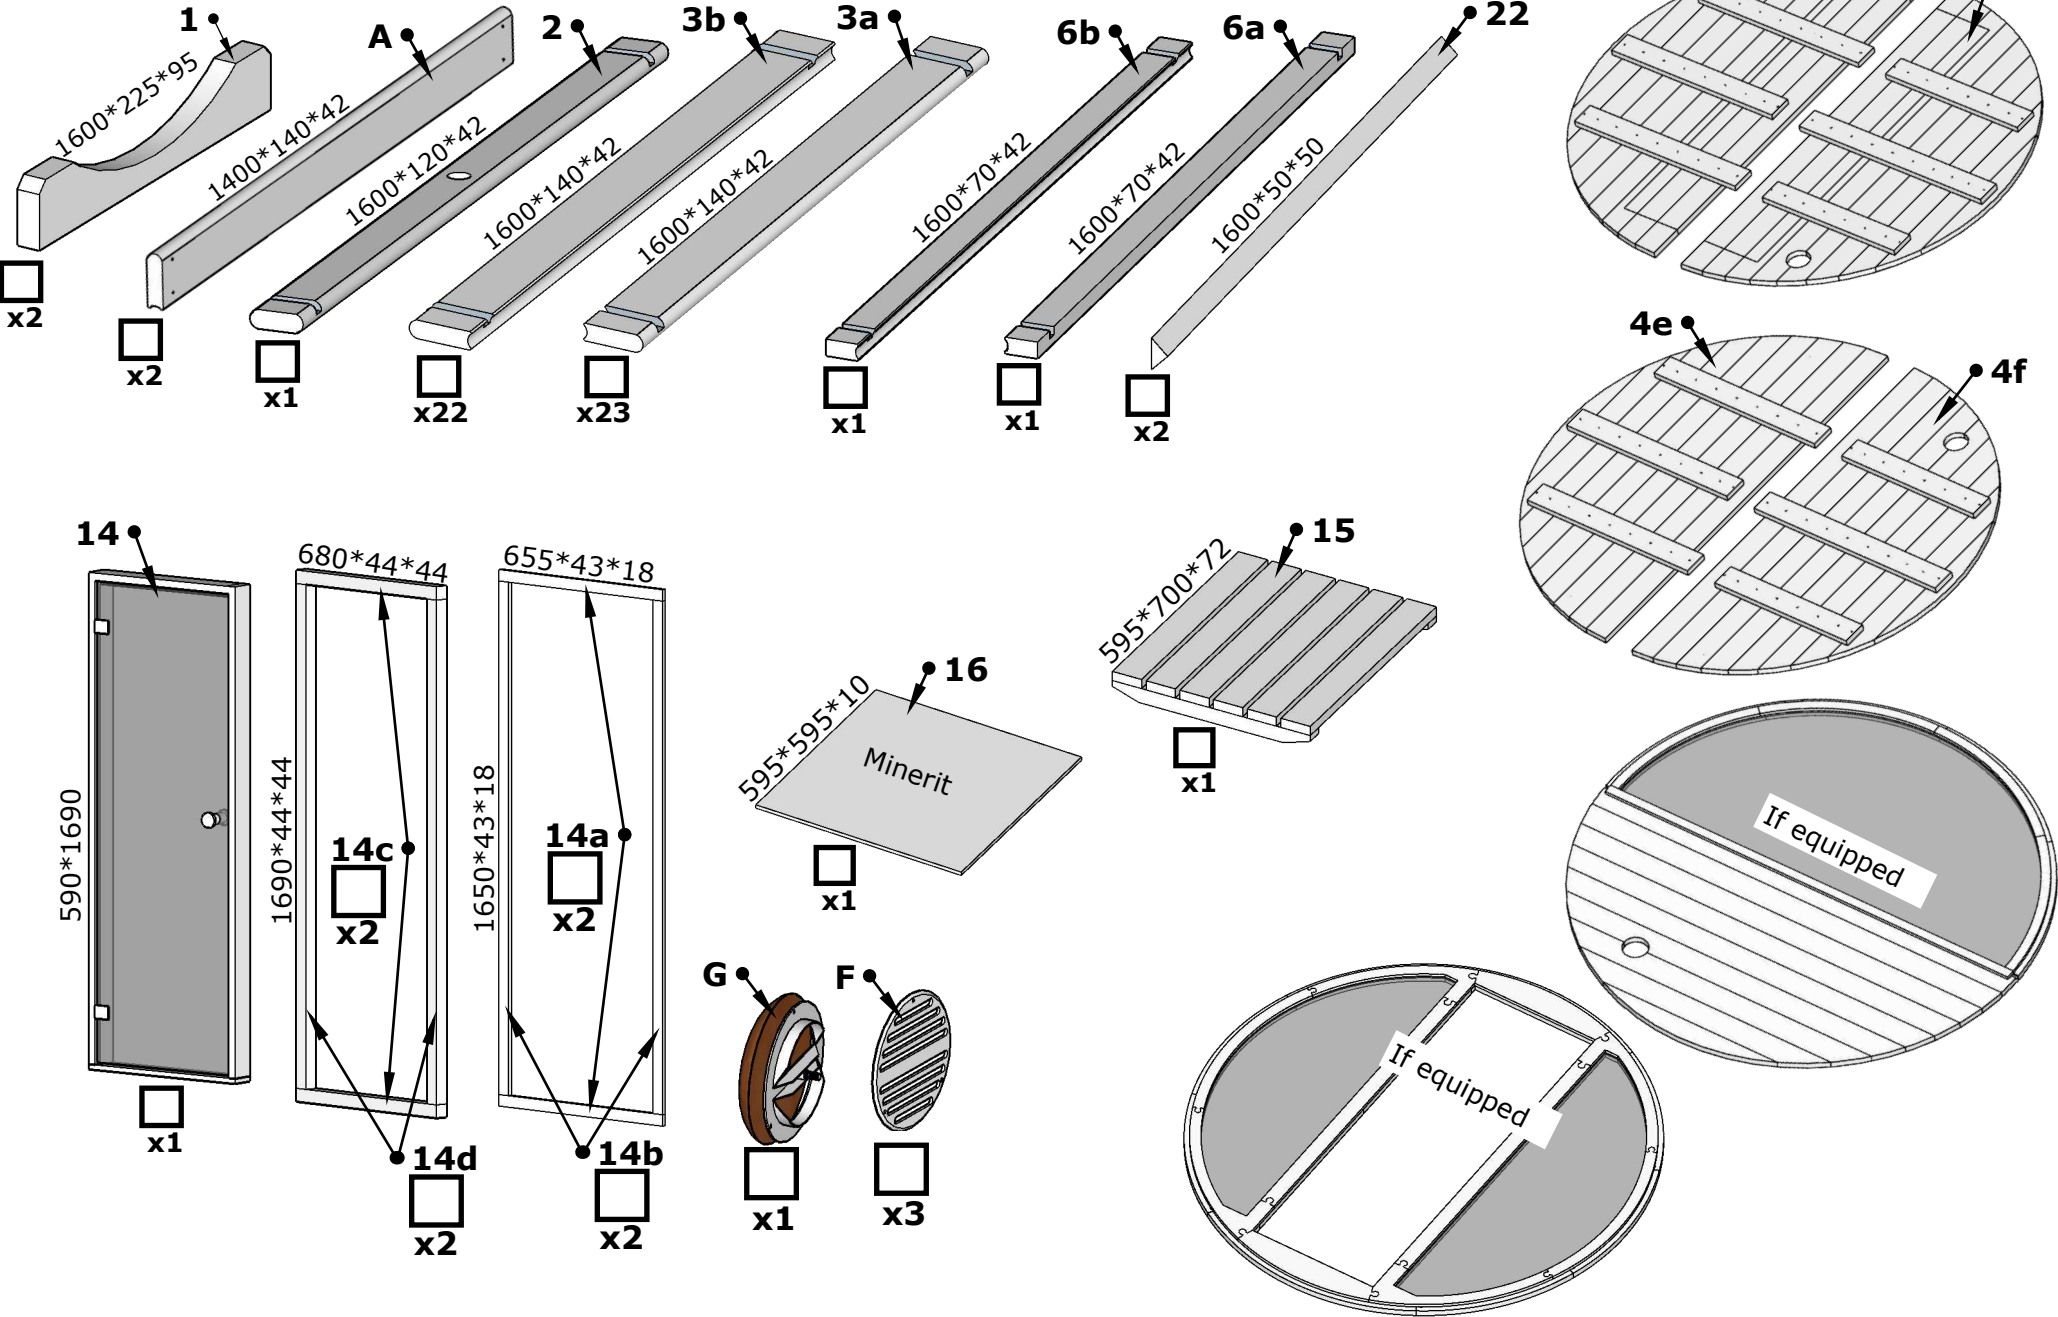


Sauna 160, Ø200

Details list nr.2

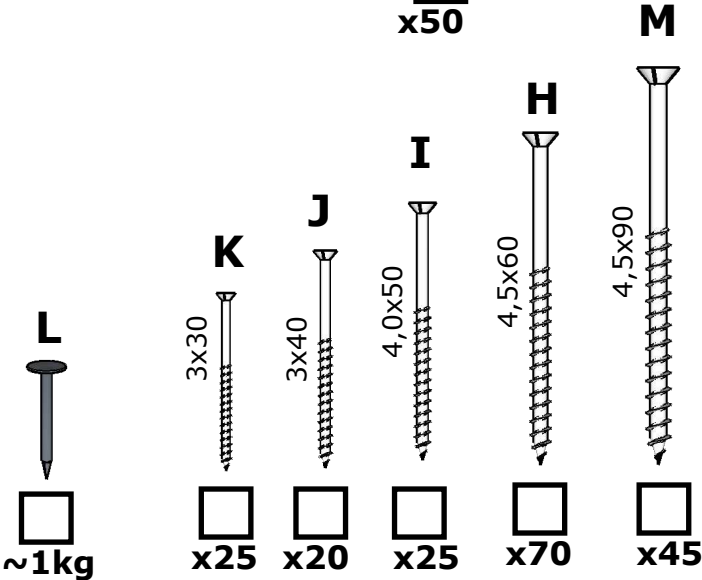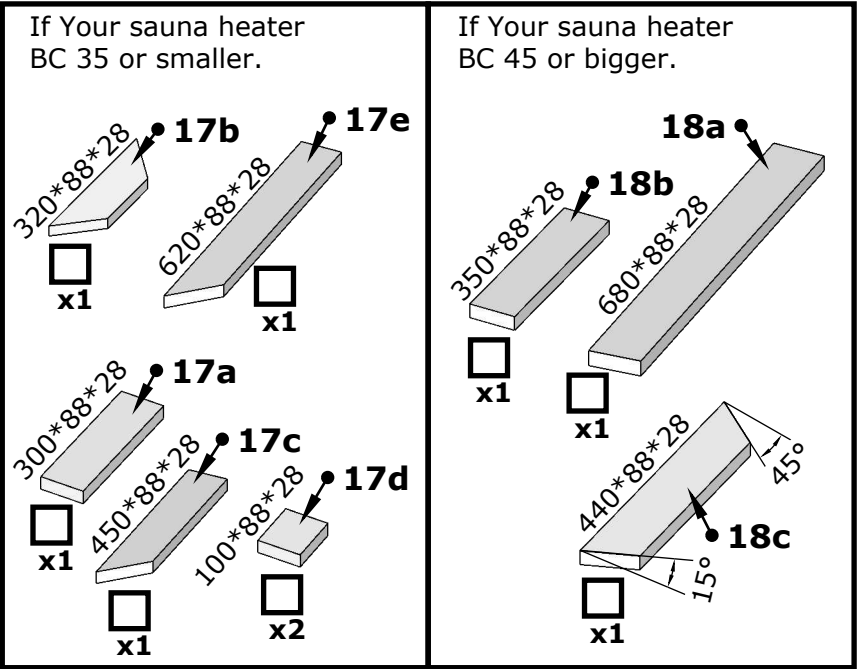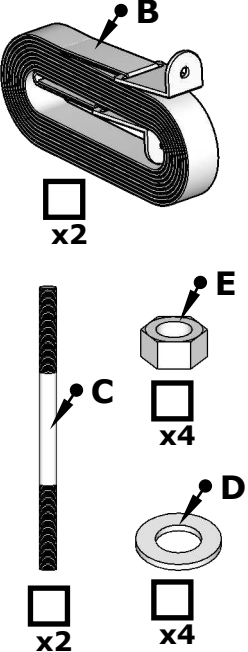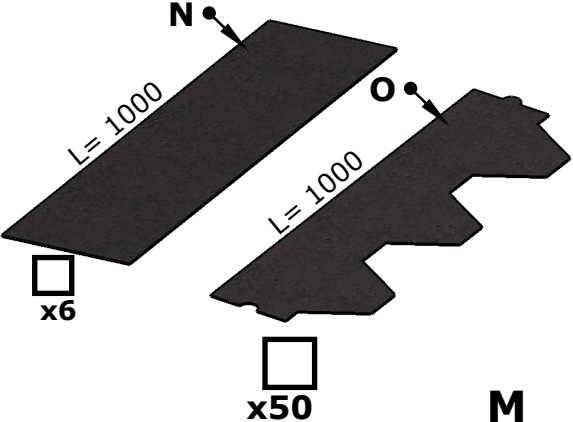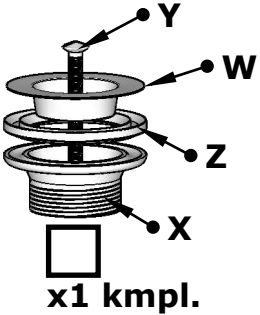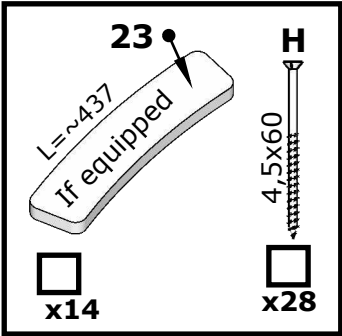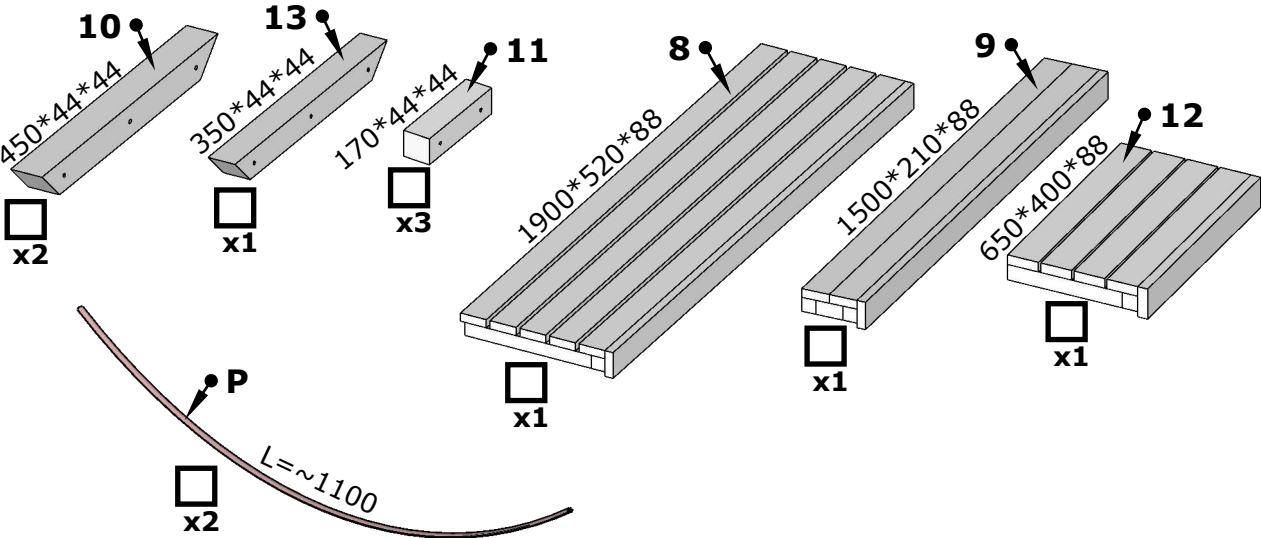


Sauna 160, Ø200

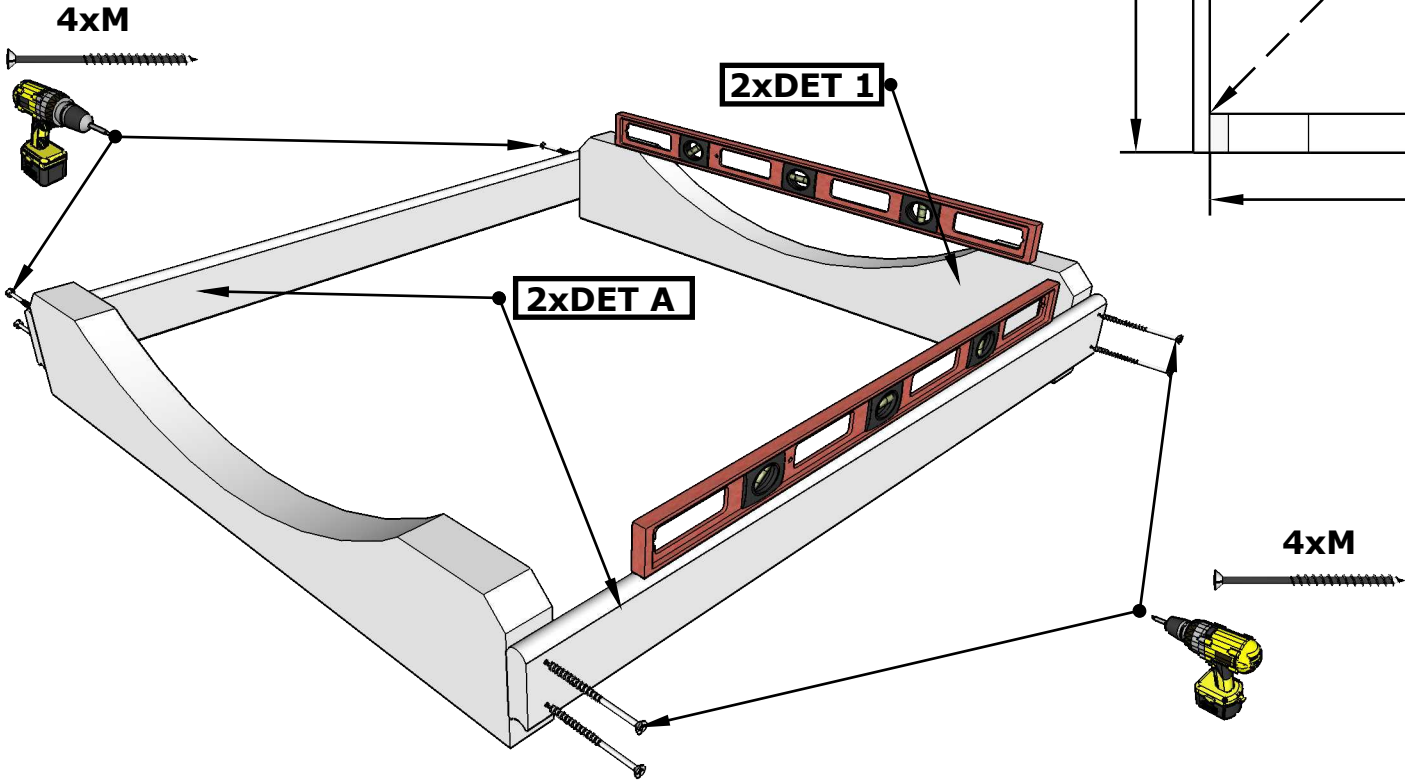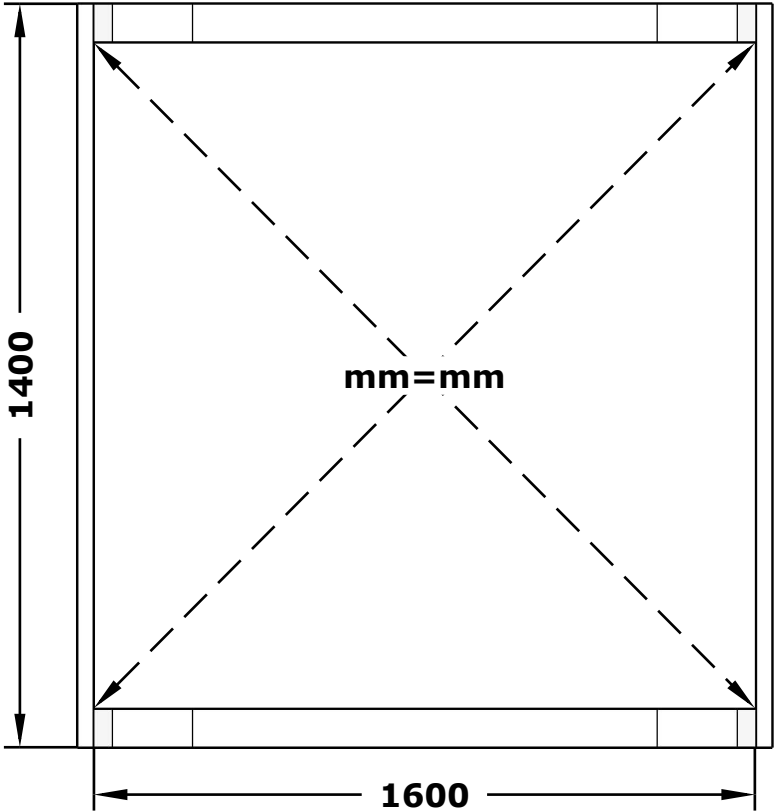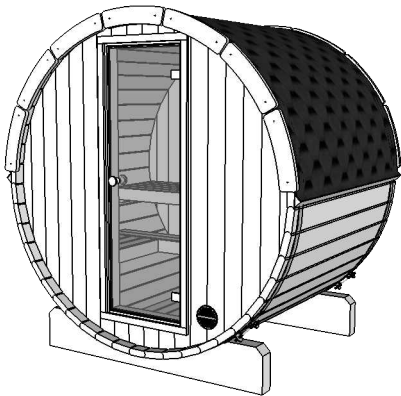


1.




Sauna 160, Ø200

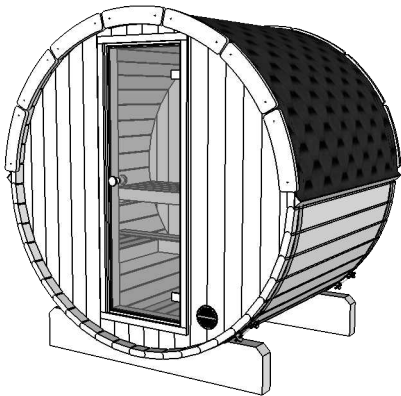

4 x DET 3a
4 x DET 3b


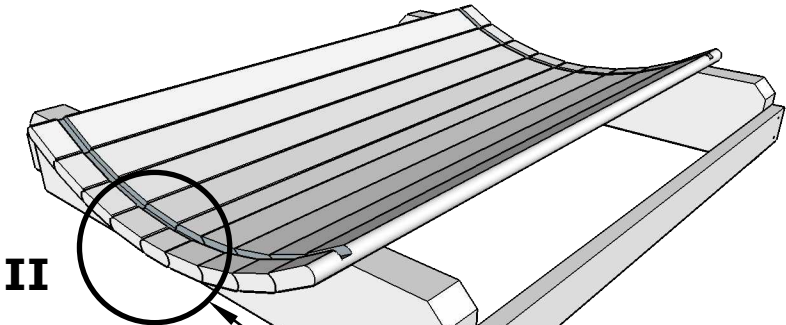


II


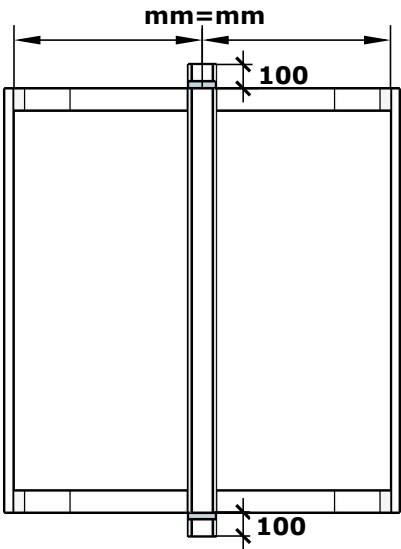
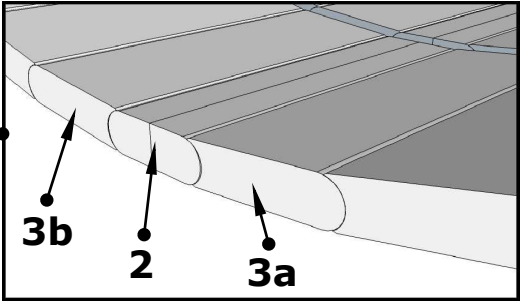
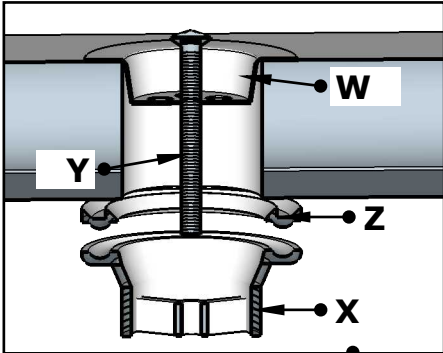


I



1x DET 2

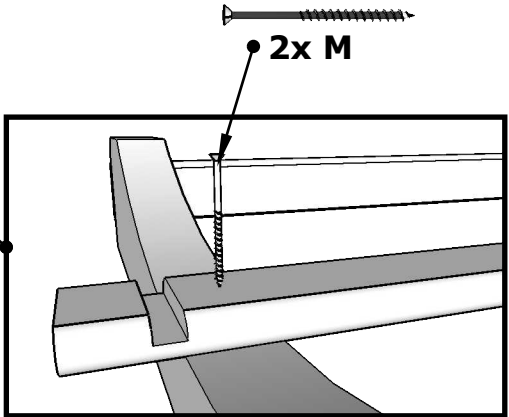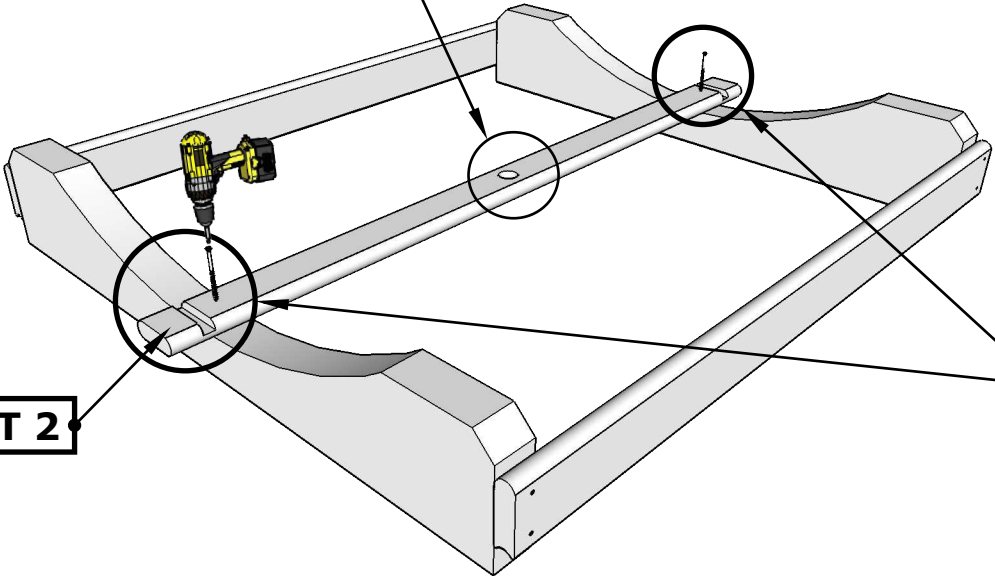






Sauna 160, Ø200

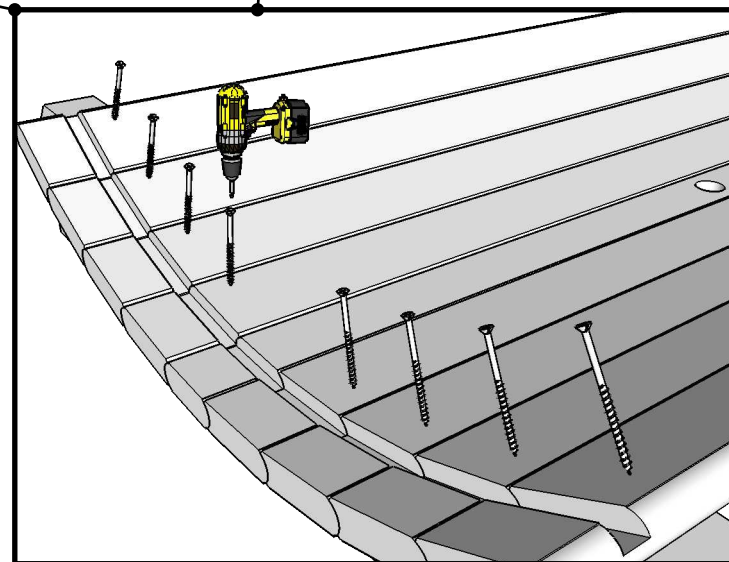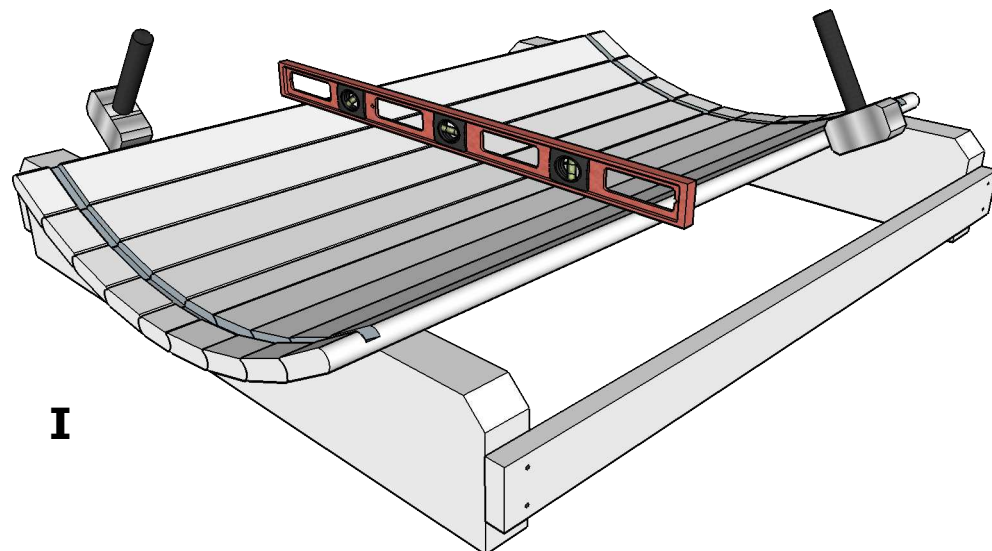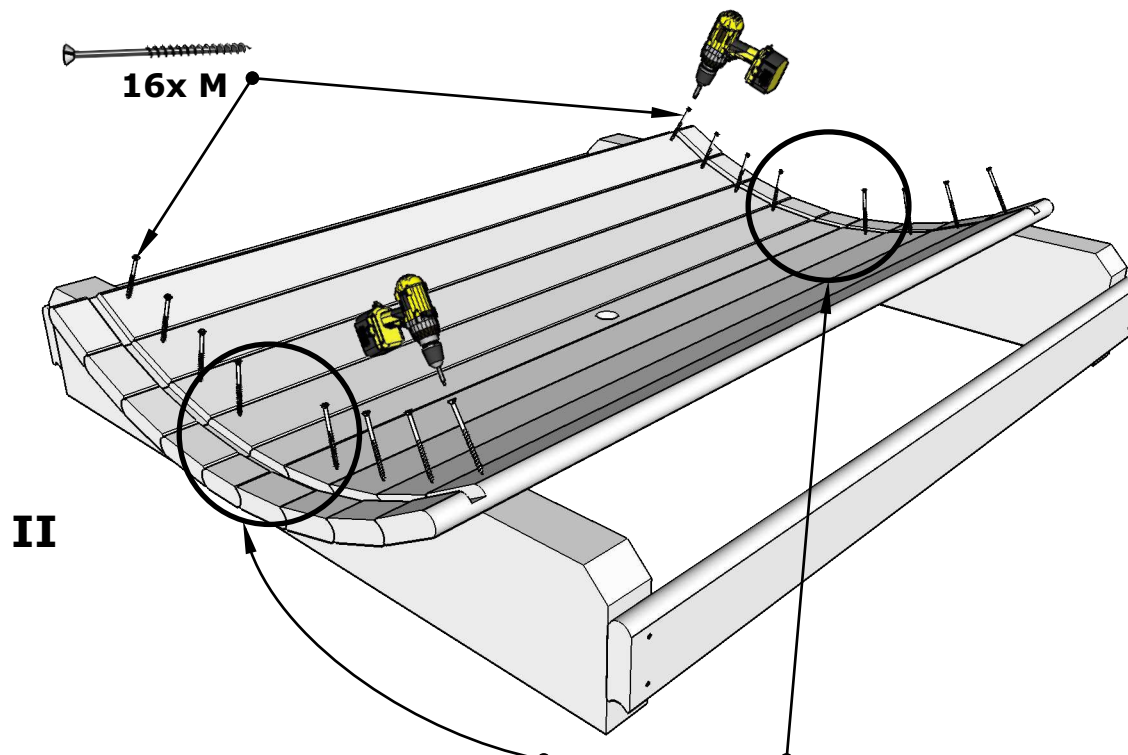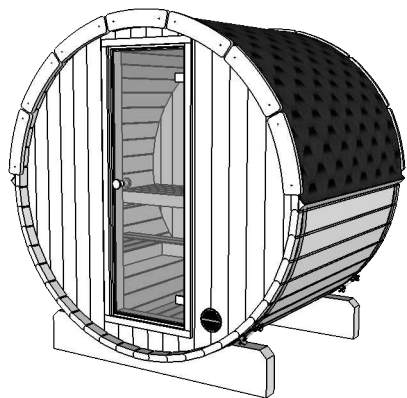

Sauna 160, Ø200

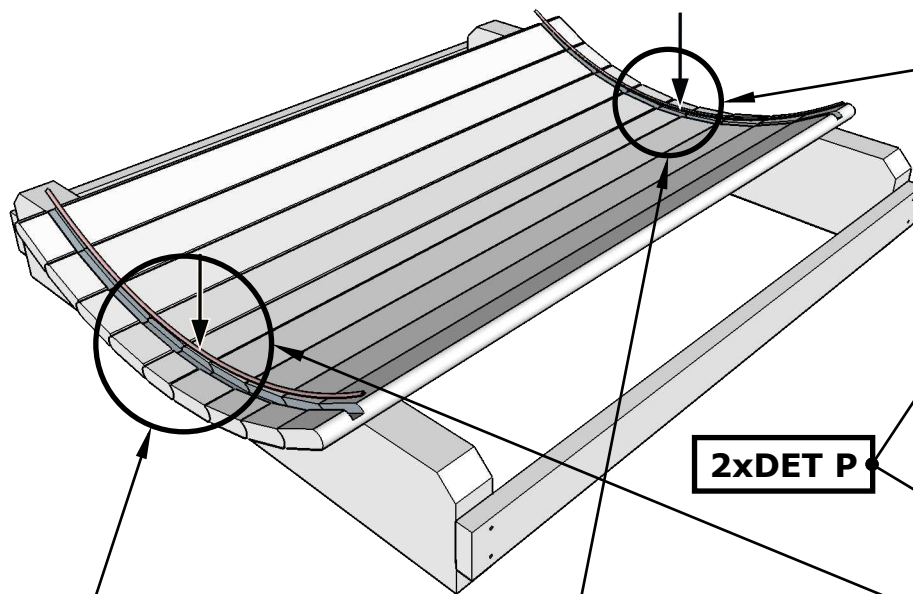
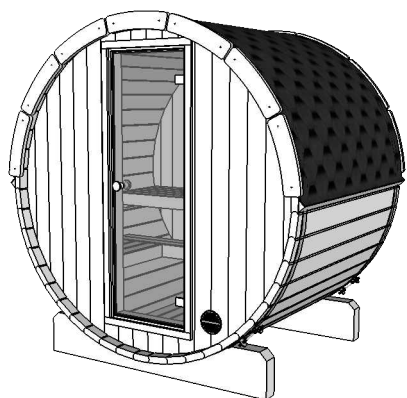


**Drill 2 holes into
DET 2 Ø10mm.**

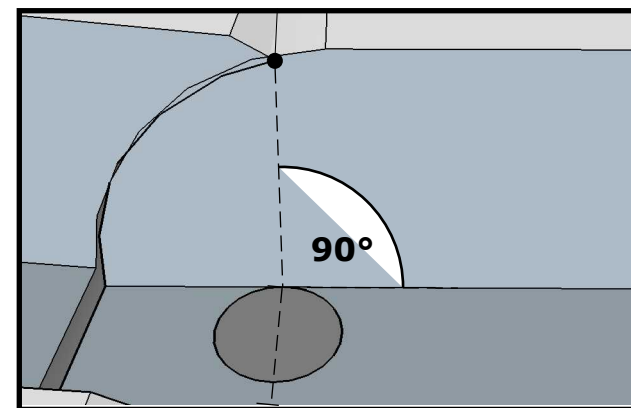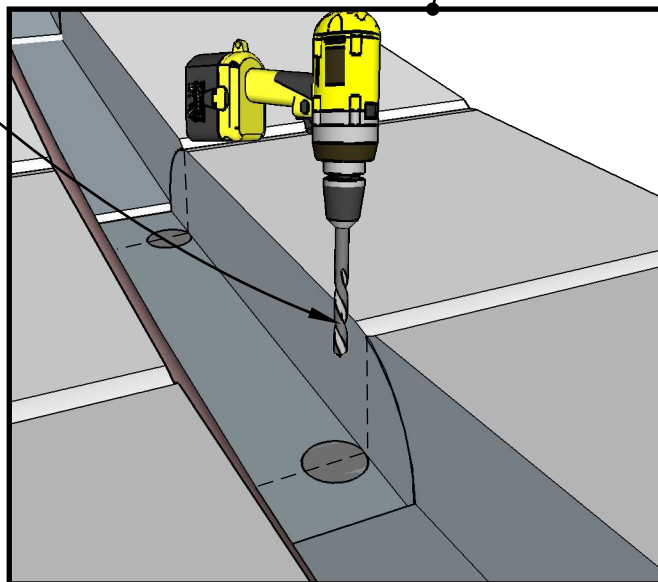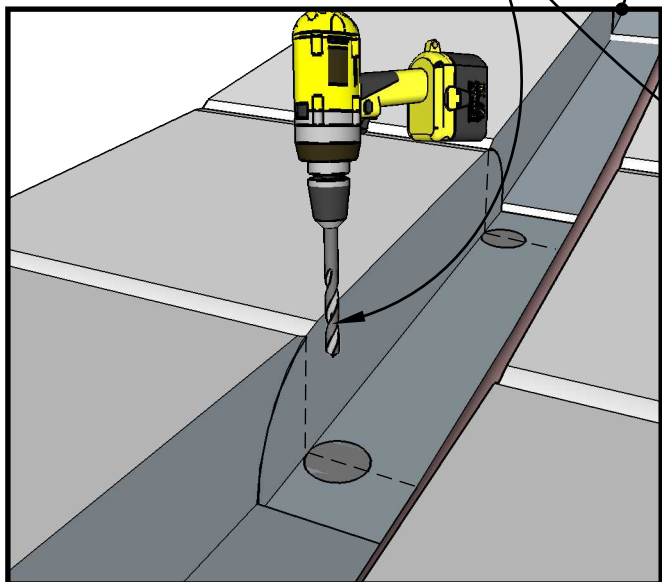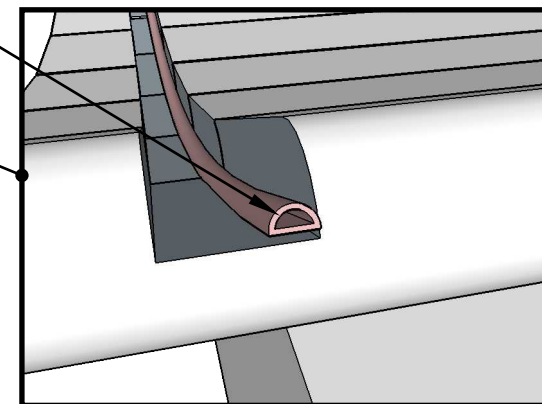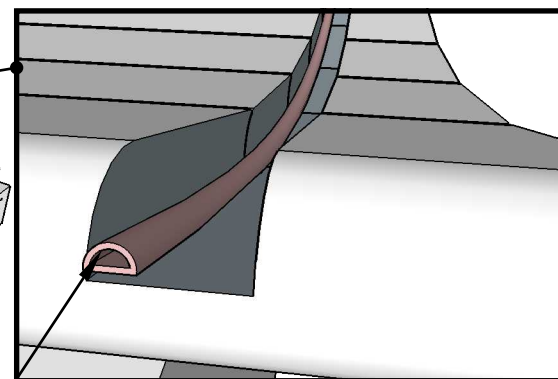



3a.

Sauna 160, Ø200

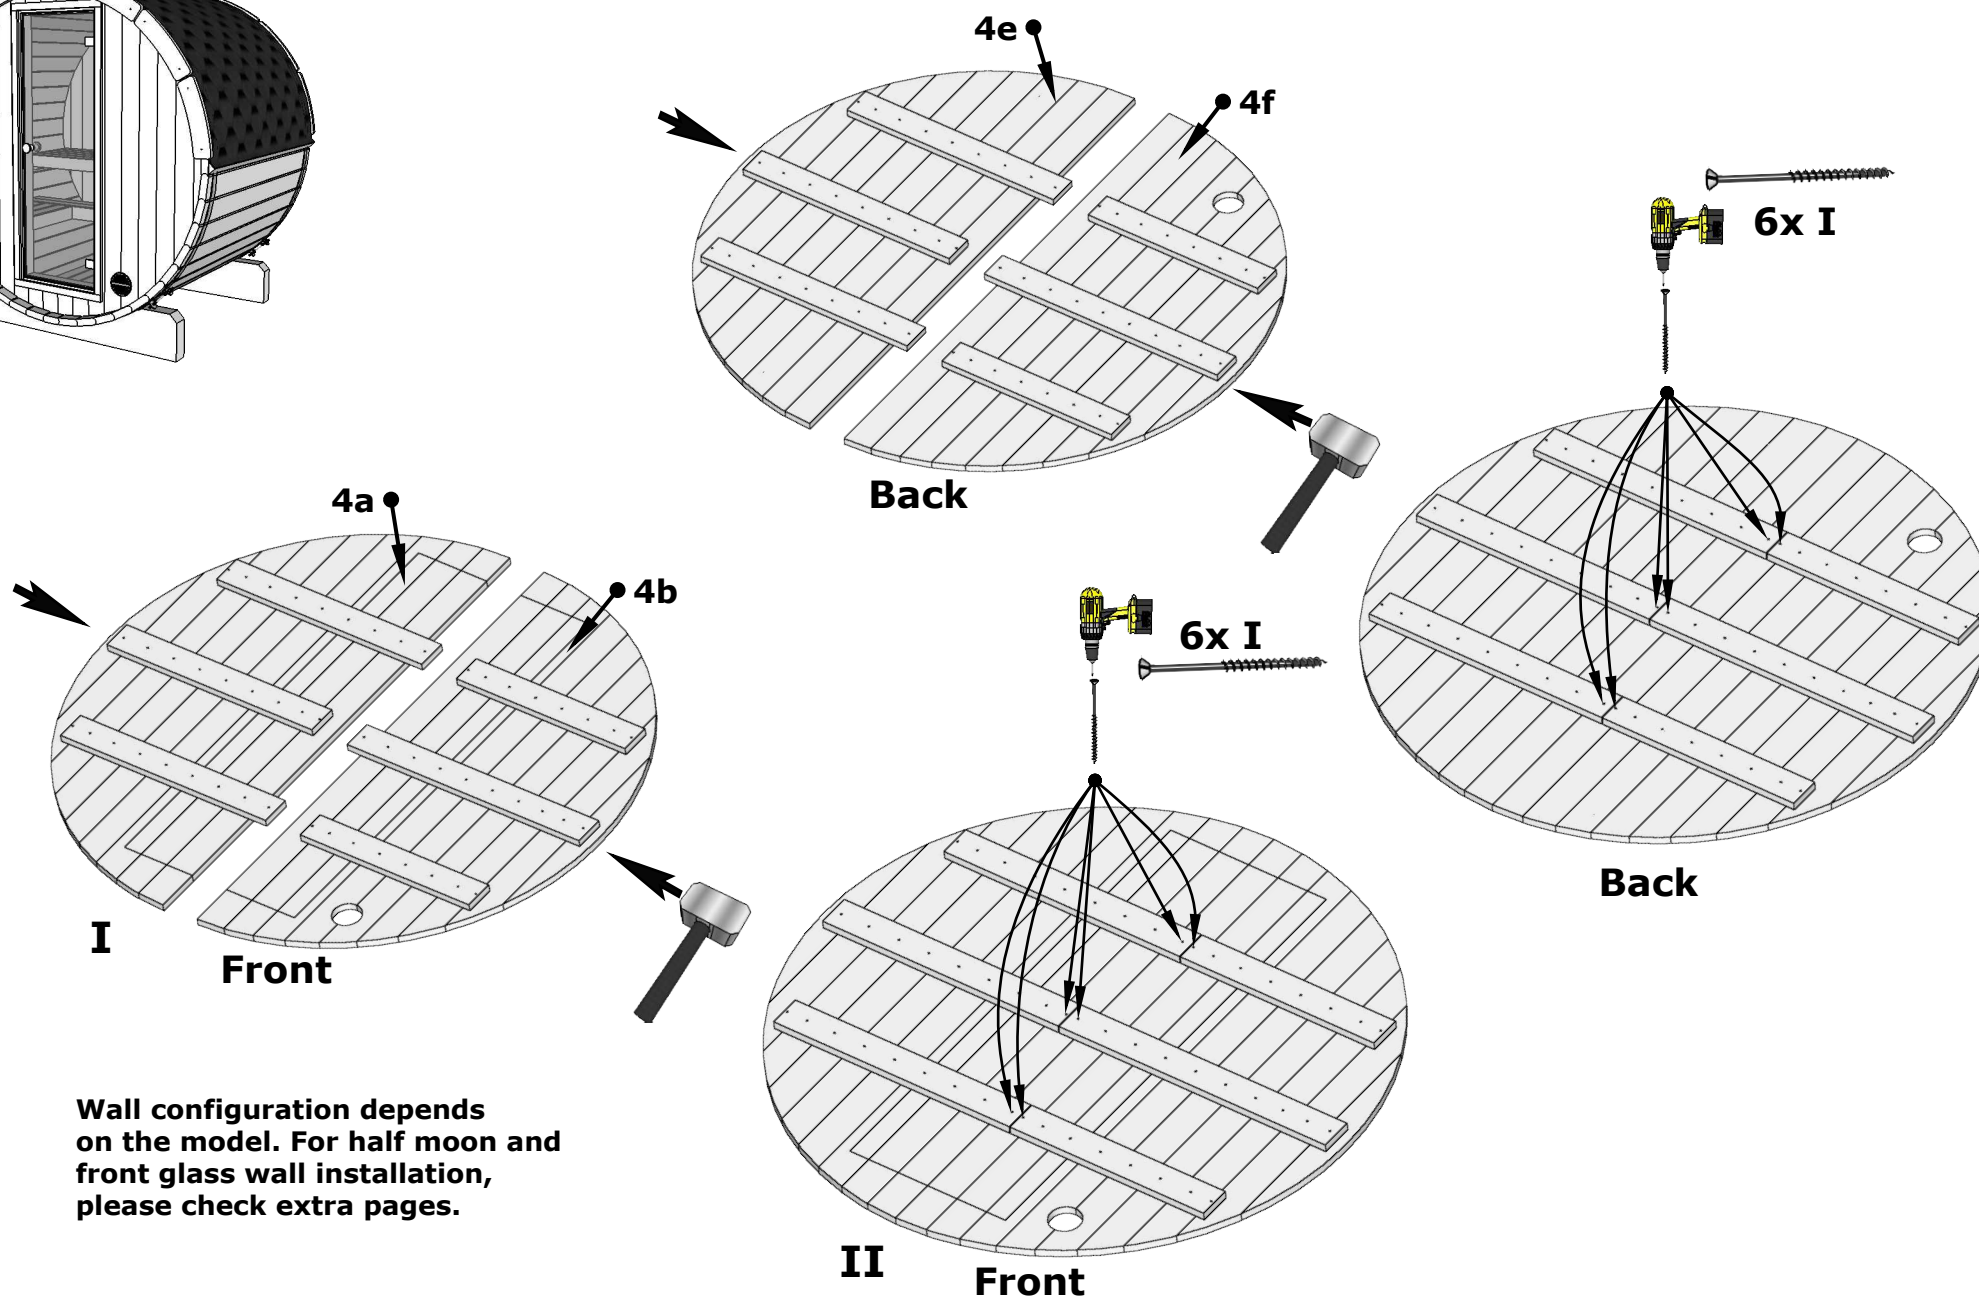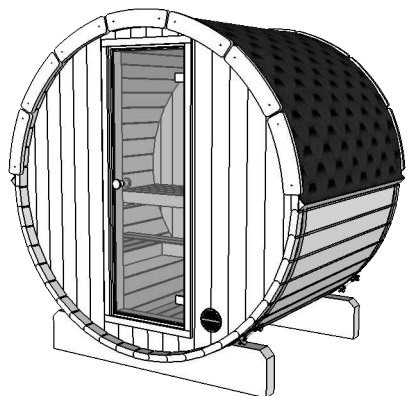

Wall configuration depends on the model. For half moon and front glass wall installation, please check extra pages.

Sauna 160, Ø200

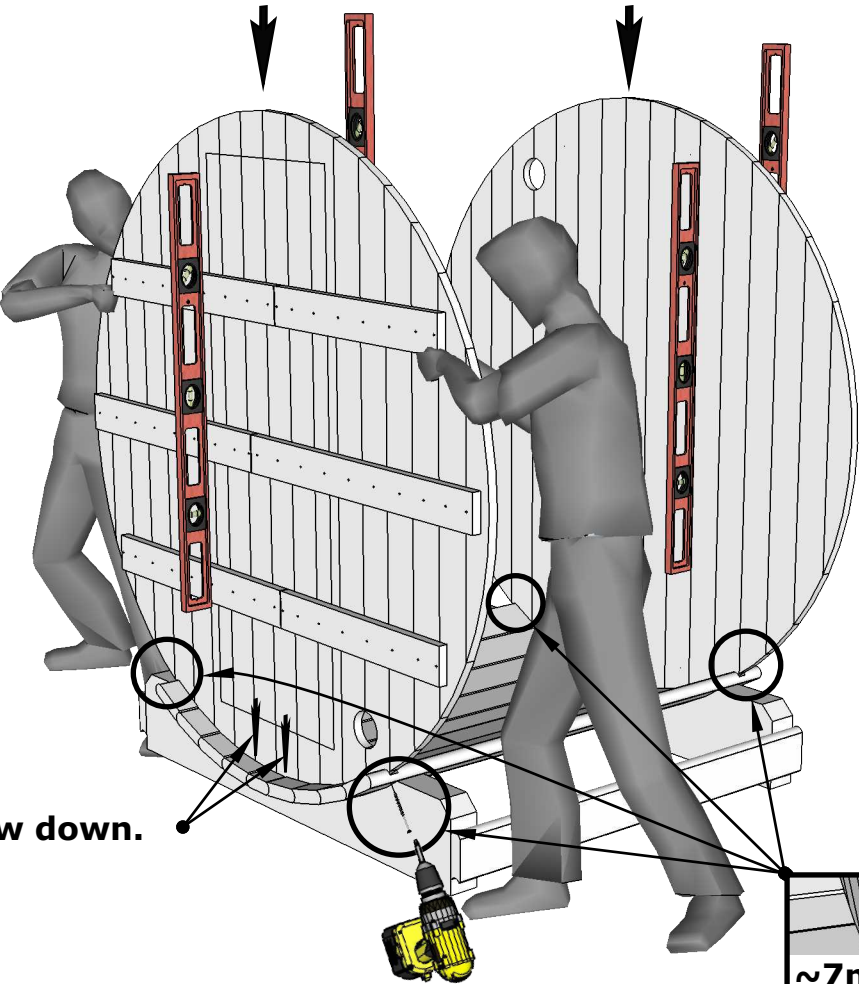
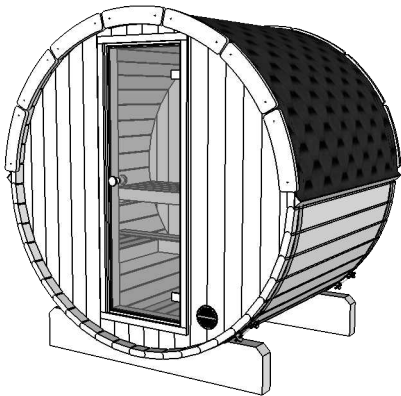


Use waterlevel.


NB! Arrow down.

Wall configuration depends on the model.


Important!
Keep distance!

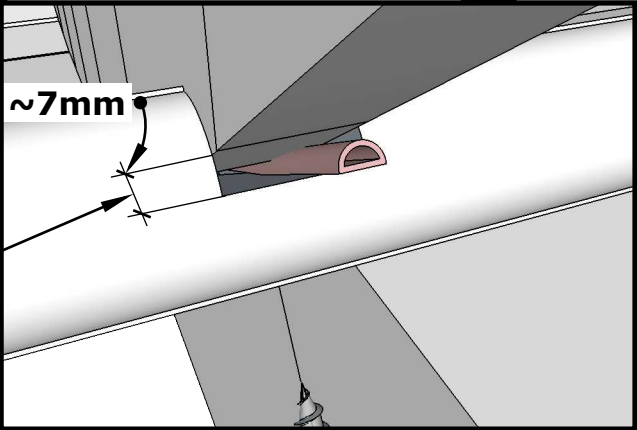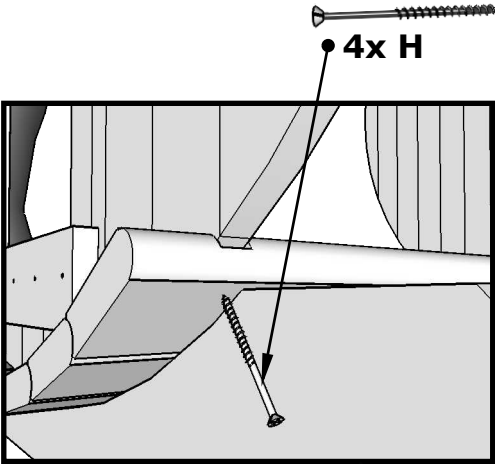


Sauna 160, Ø200

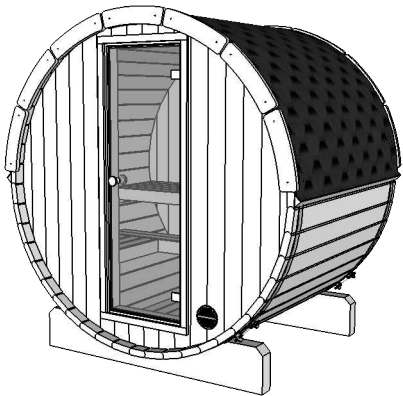



Check page 6A

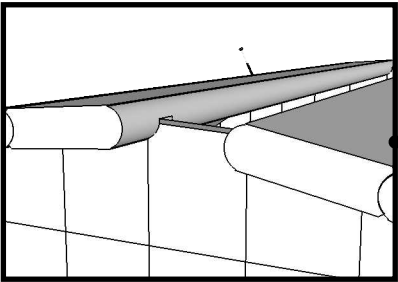

11x DET 3a
10x DET 3b

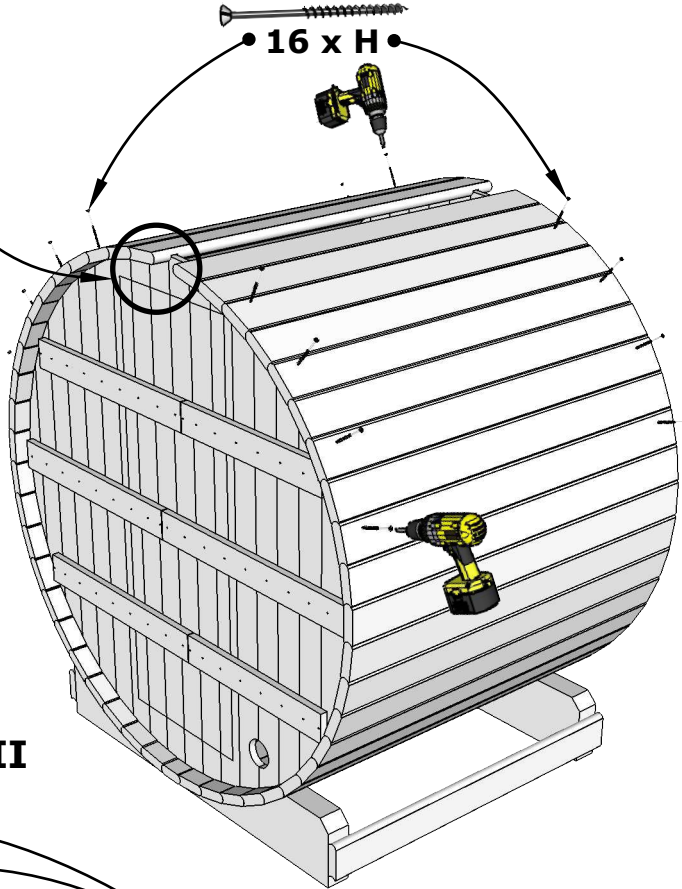


II

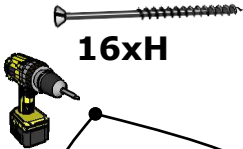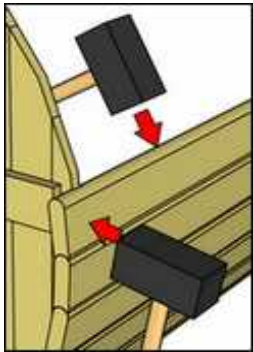


8x DET 3a
8x DET 3b

I


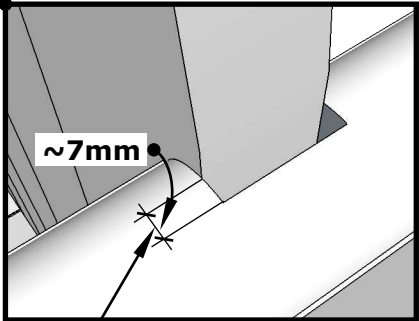


Important!
Keep distance!


Sauna 160, Ø200

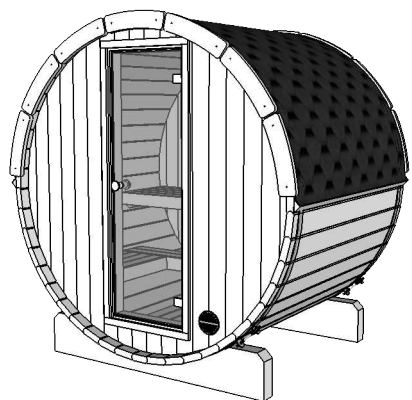




Important !!!

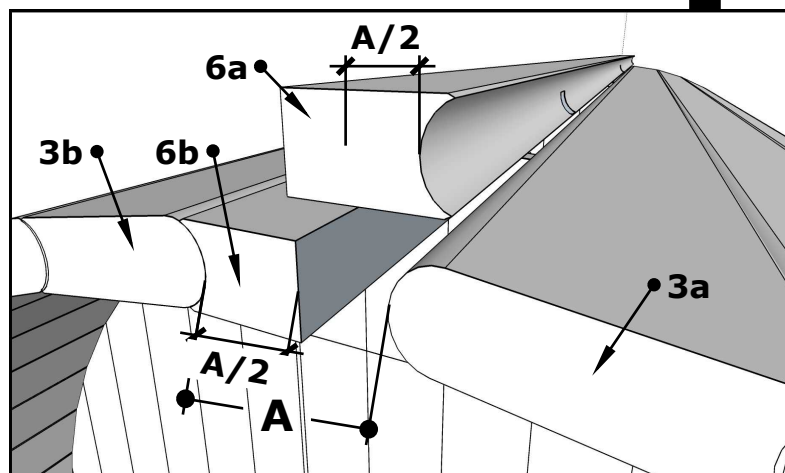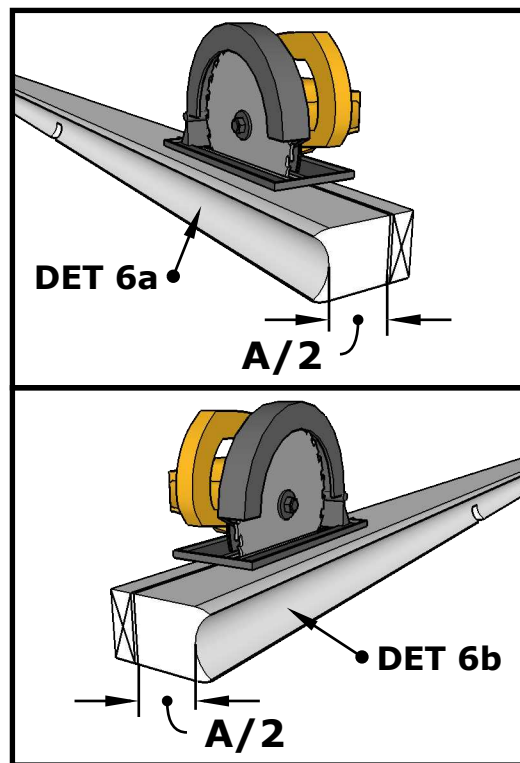


6a.

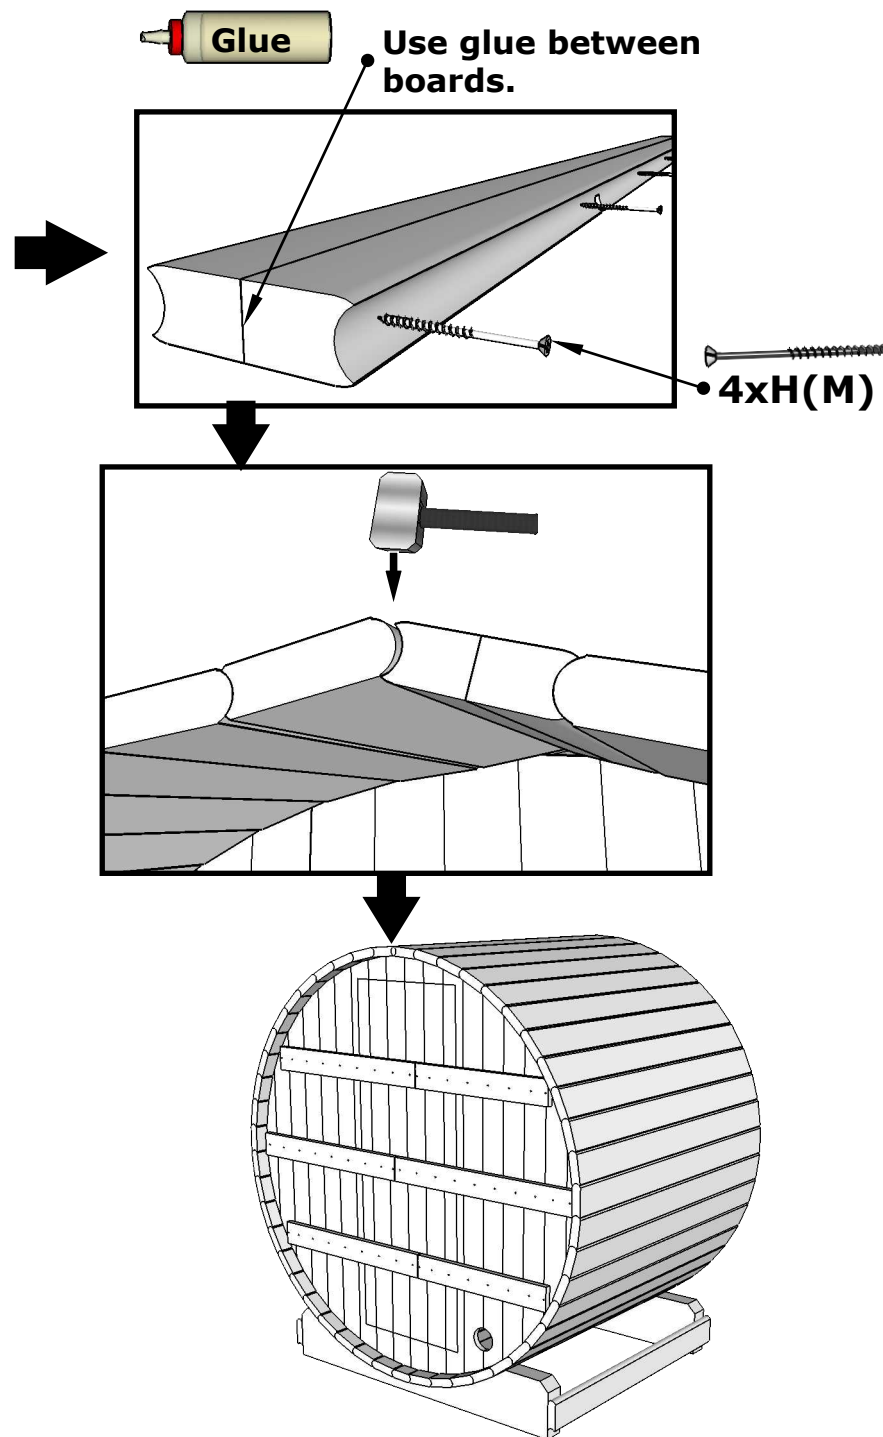


Sauna 160, Ø200

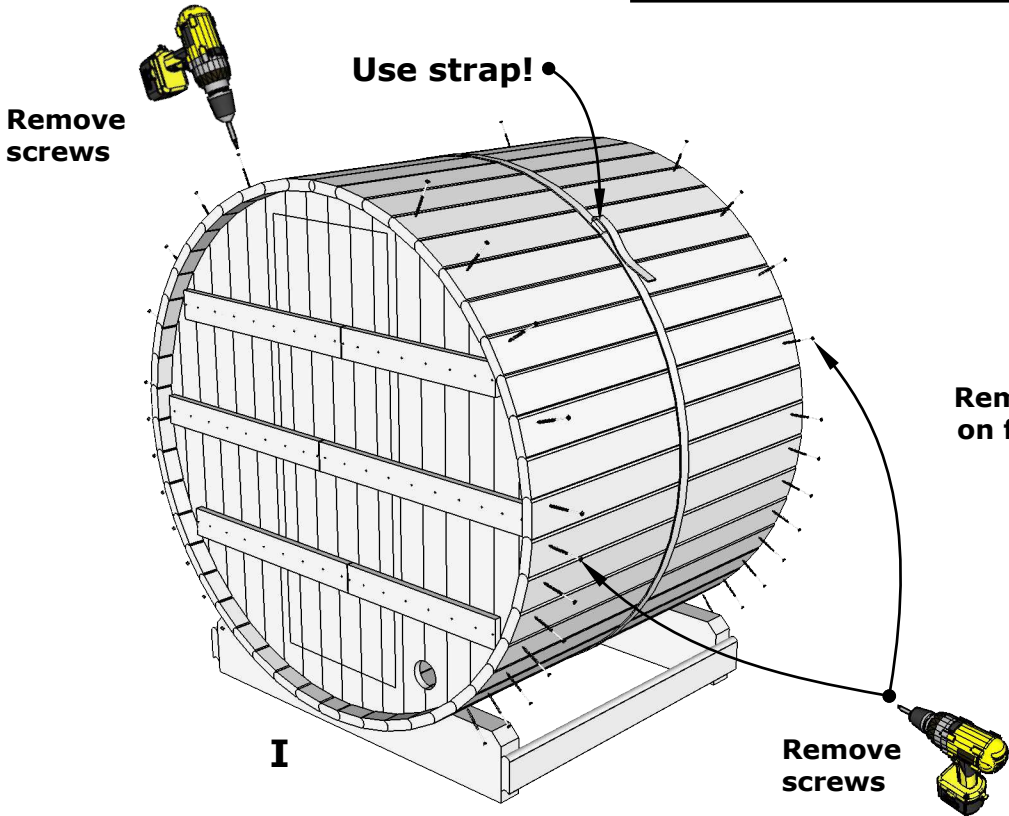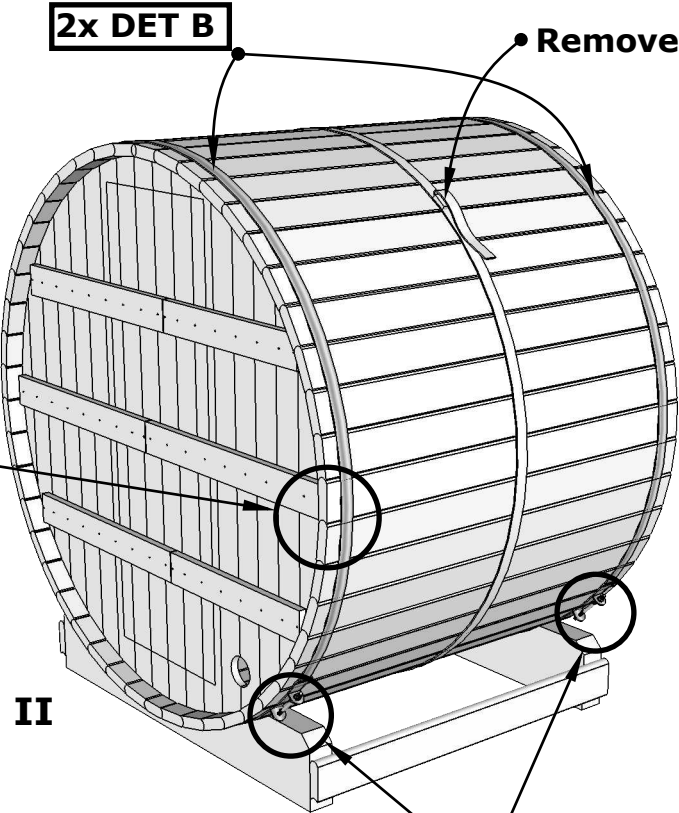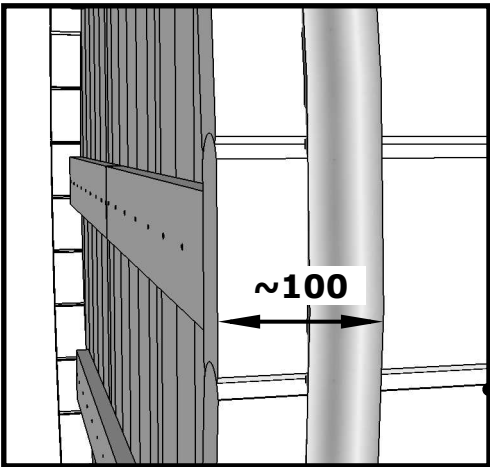


Important!
Remove screws and use them on further sauna installation!

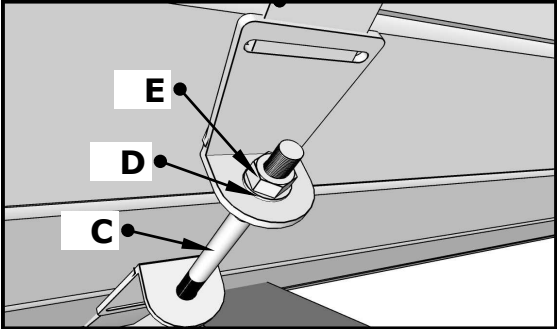


During assembly and retightening the threaded rods, use oil (Würth HPS 1400 or similar) to avoid "cold welding" and it is also easier tightening.



Sauna 160, Ø200

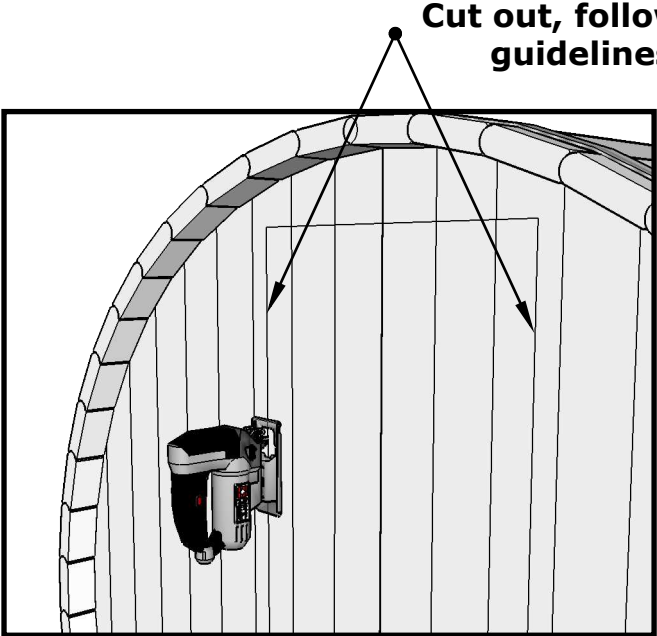


Cut out, follow the guidelines.

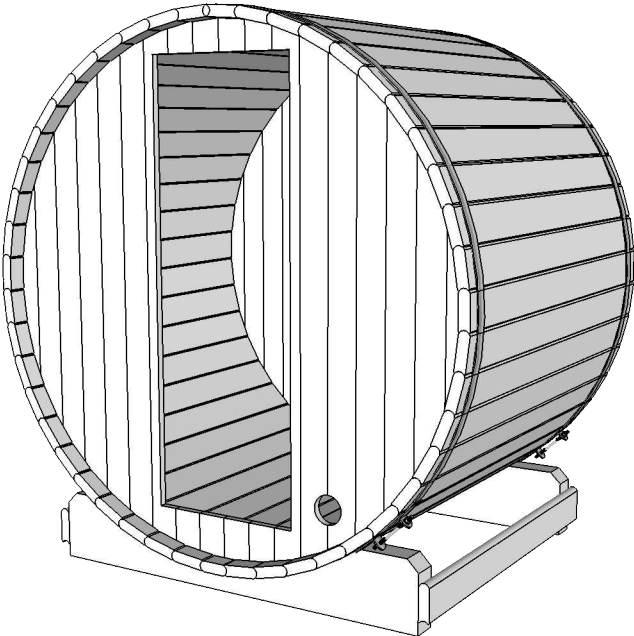


II

Remove all brackets.


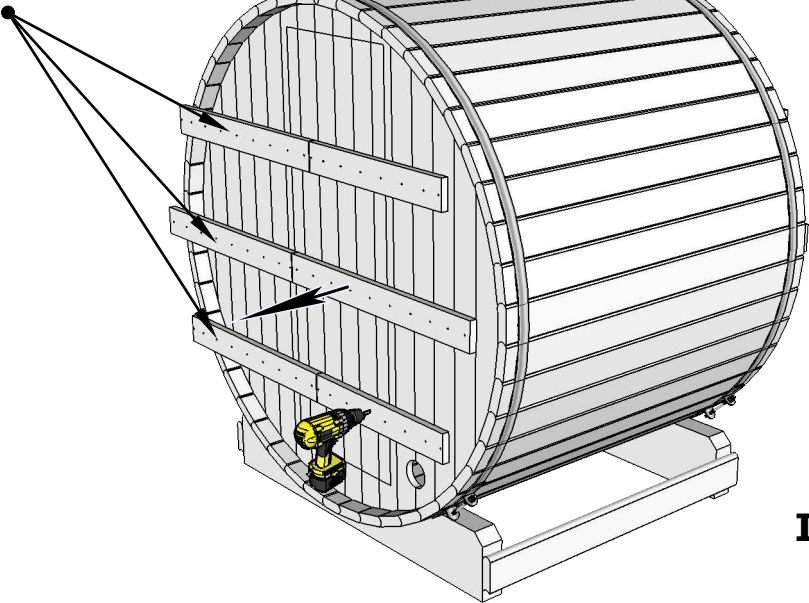


I



Remove all brackets.

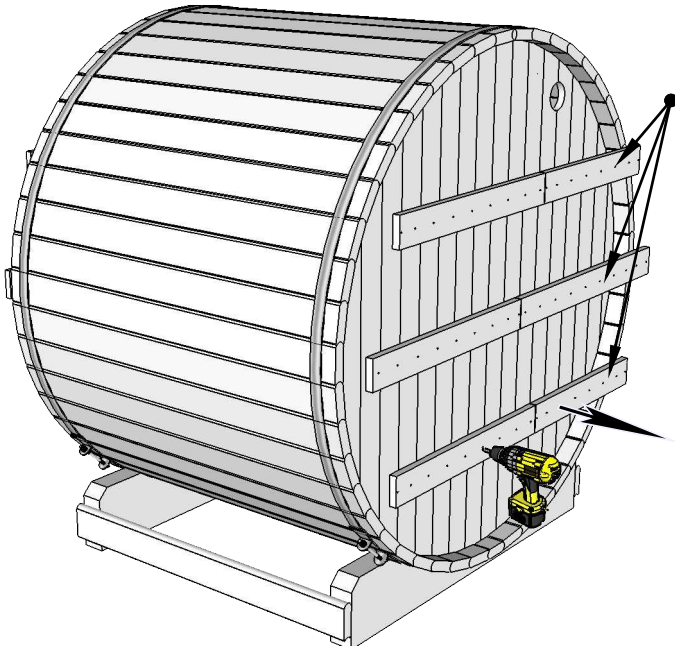

Sauna 160, Ø200

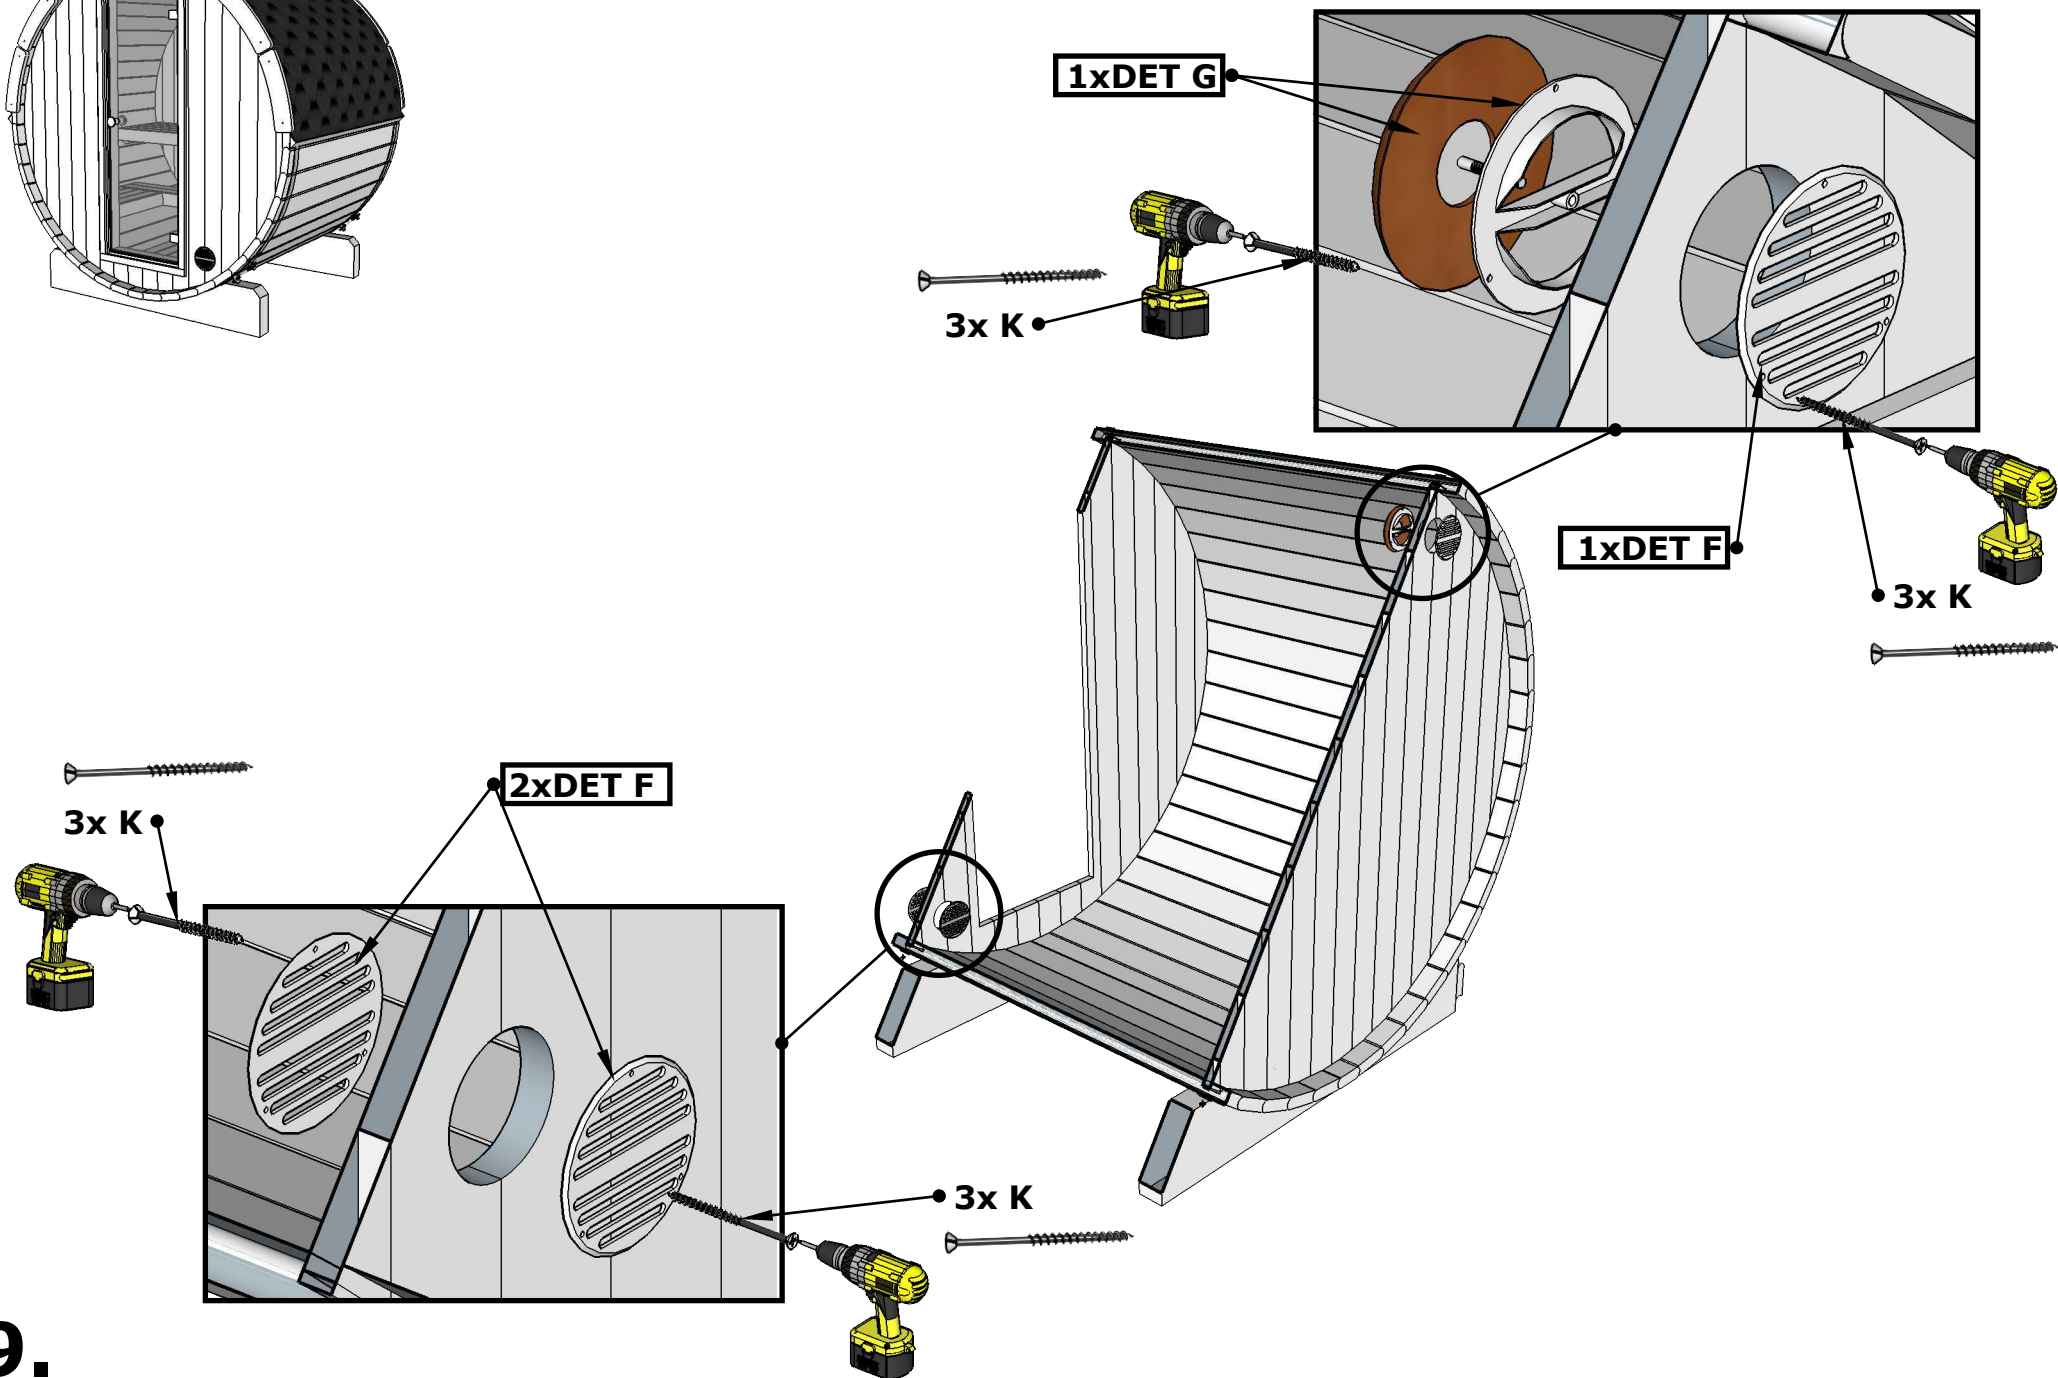
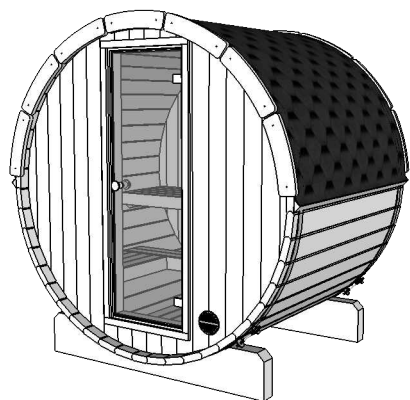


Sauna 160, Ø200

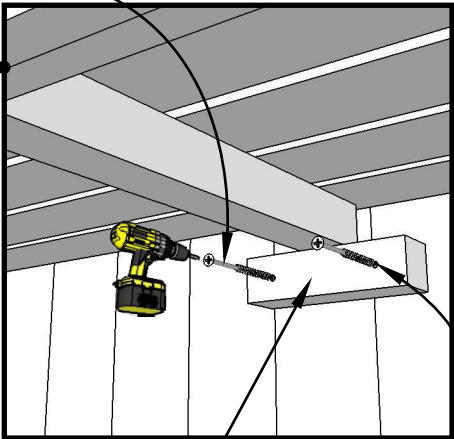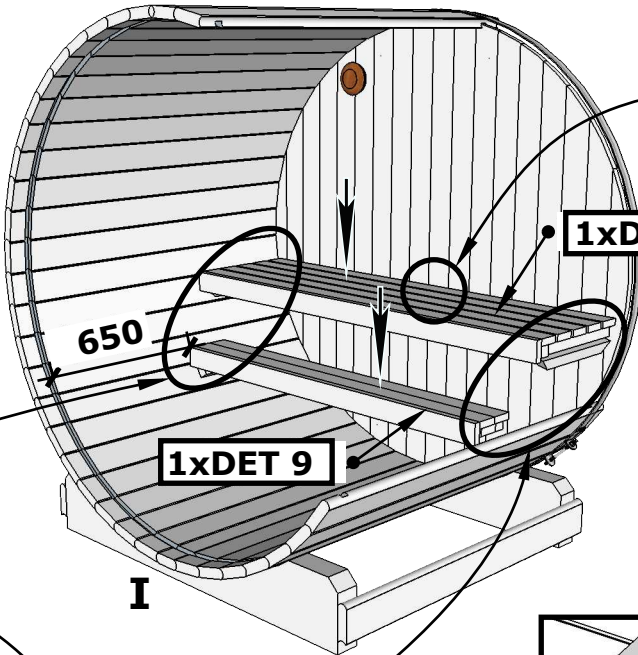


1xDET 11

Drill hole Ø4mm
before screw

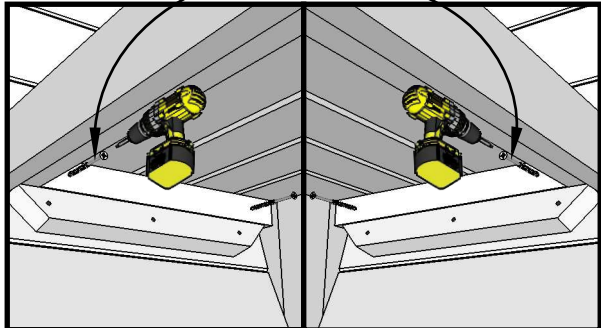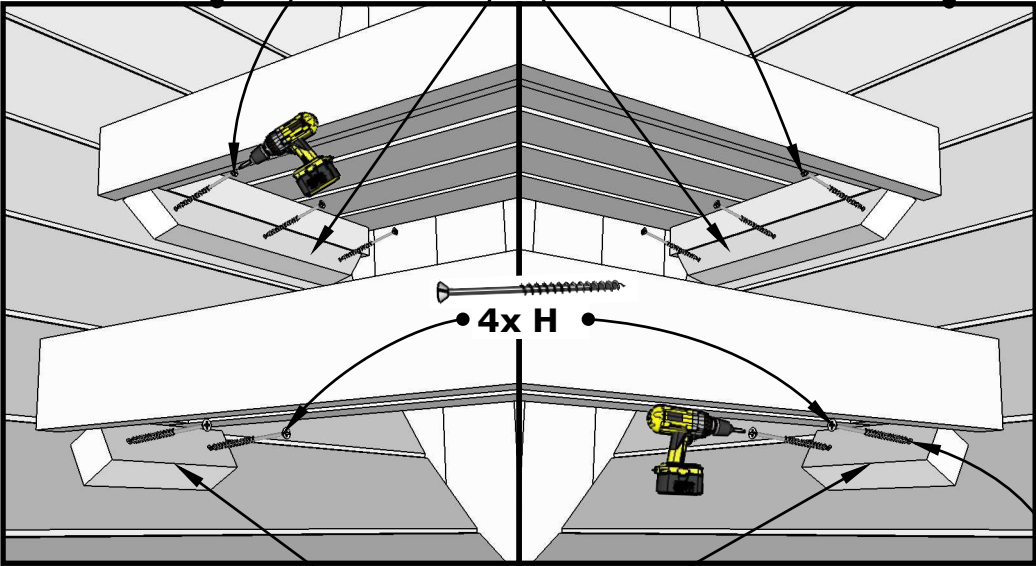






4x M

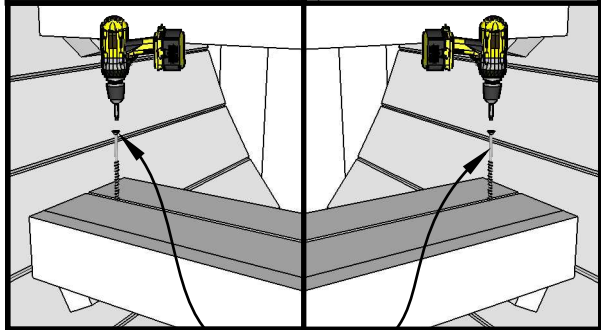

2x H

Drill hole Ø4mm
before screw

Sauna 160, Ø200

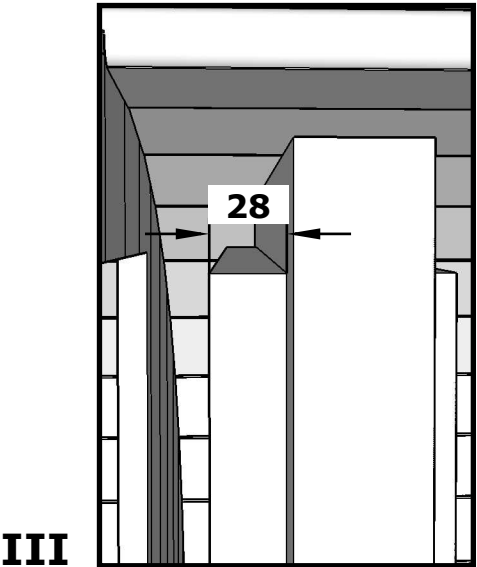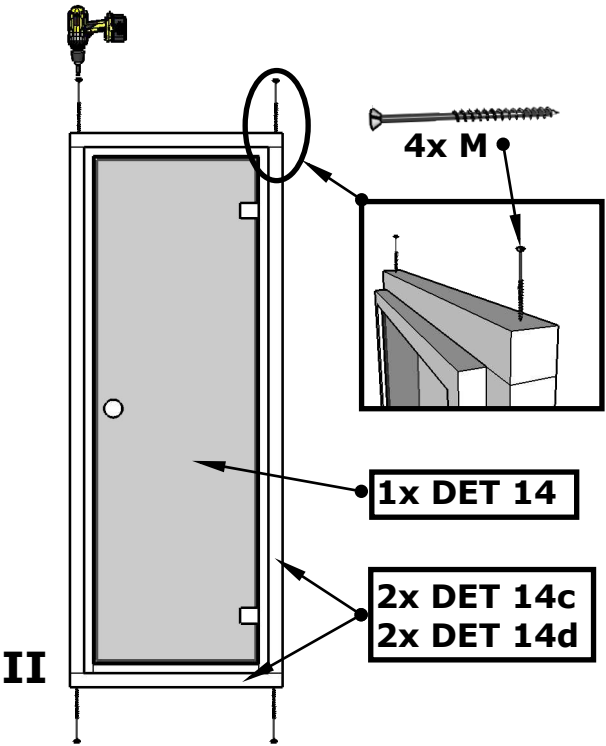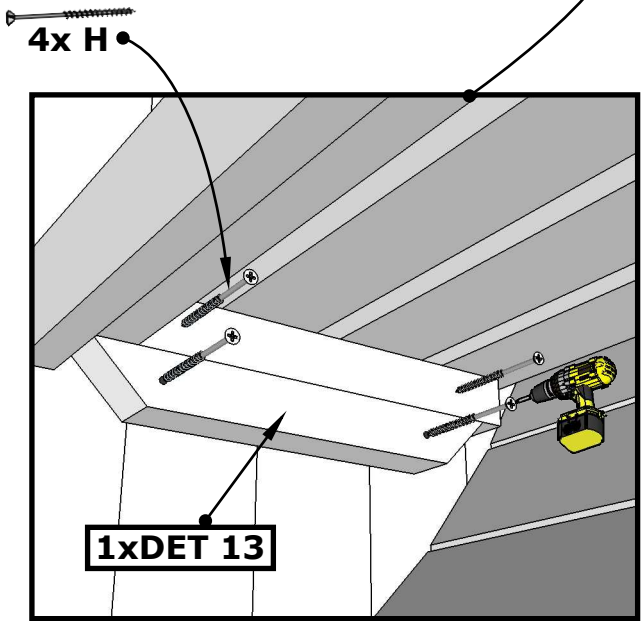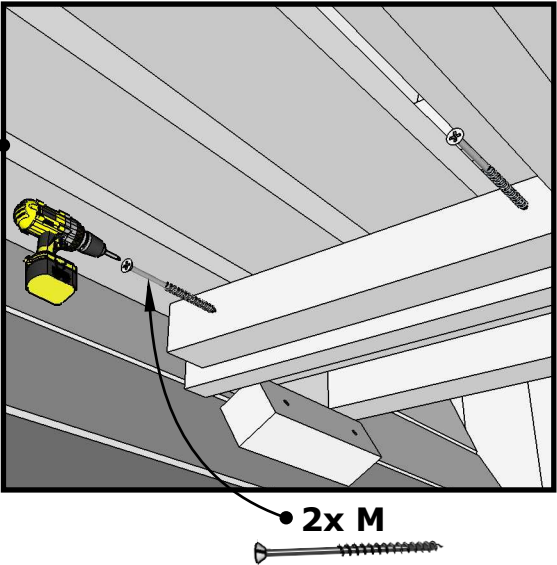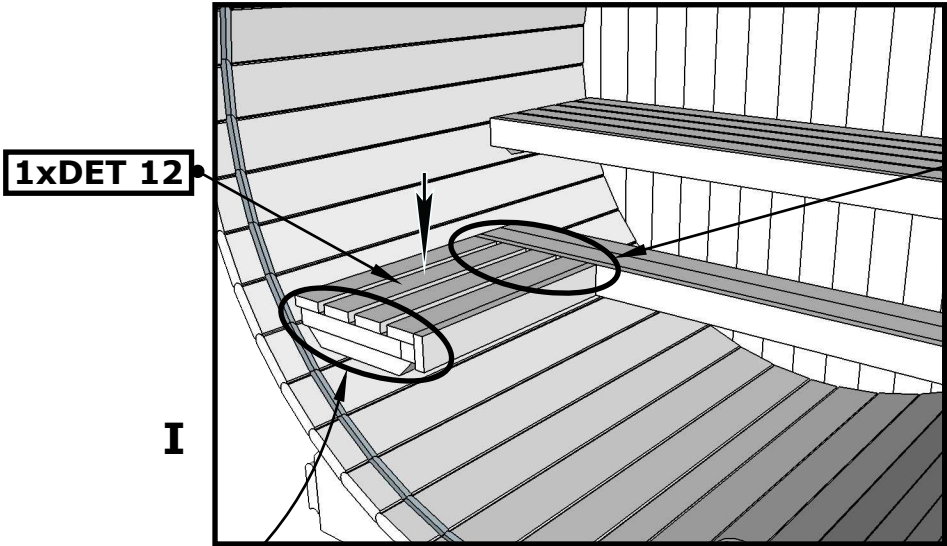


Sauna 160, Ø200



Use waterlevel for door installation.


NB! Place door from inside.

1x DET 14

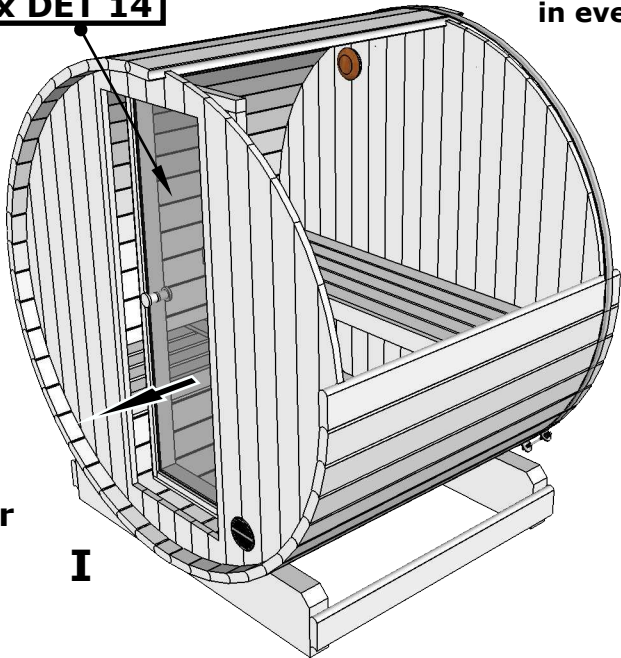

Horizontally fix screw in every board.

II

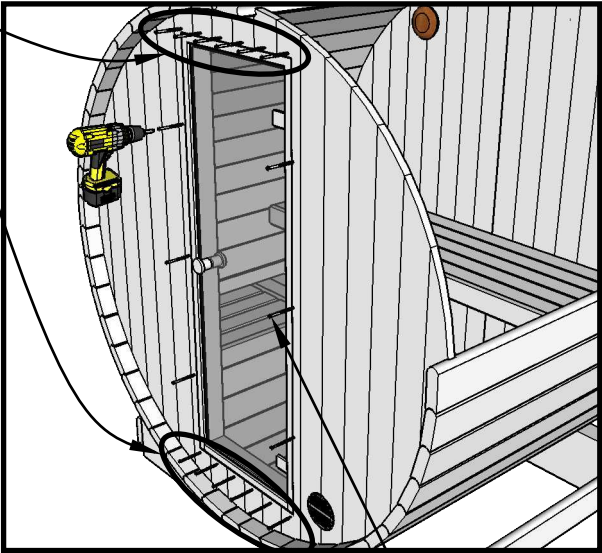

18x H




14x J

Push door against the wall and fix it from other side.


8x H

2x DET 14a
2x DET 14b


III

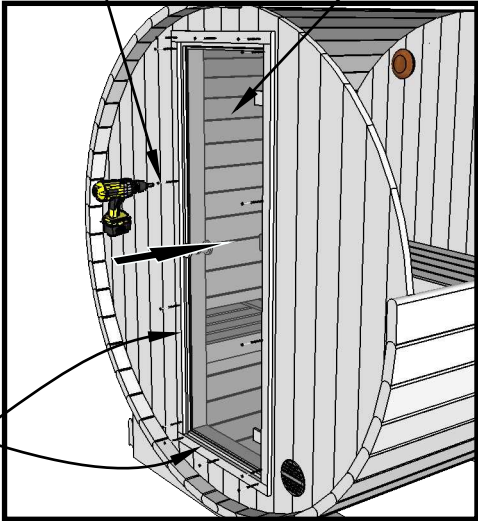

IV

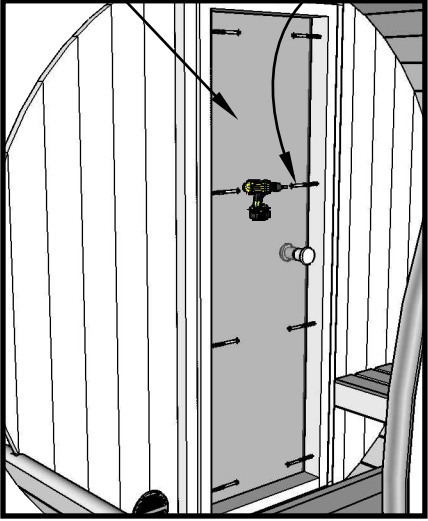


V

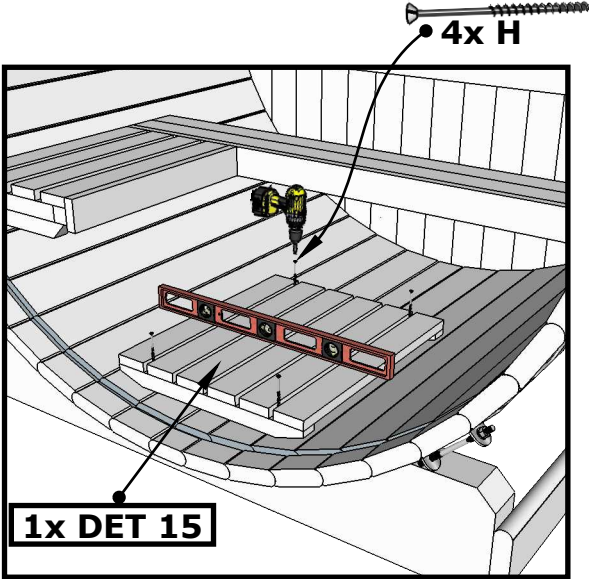

1x DET 15


Sauna 160, Ø200

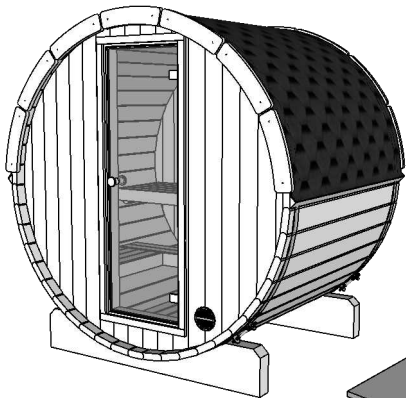


1x DET 16

I

7x K

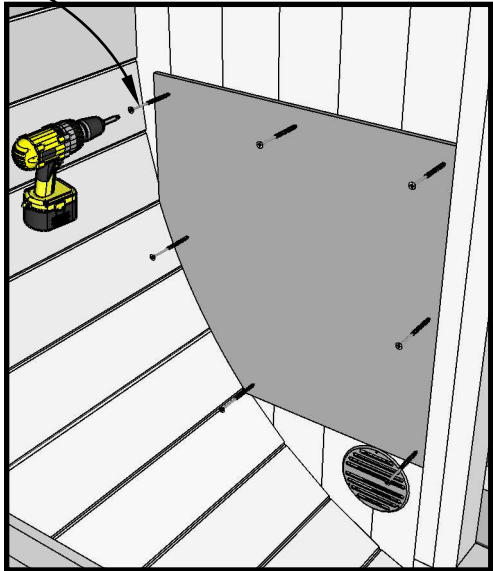


If Your sauna heater BC 35 or smaller.

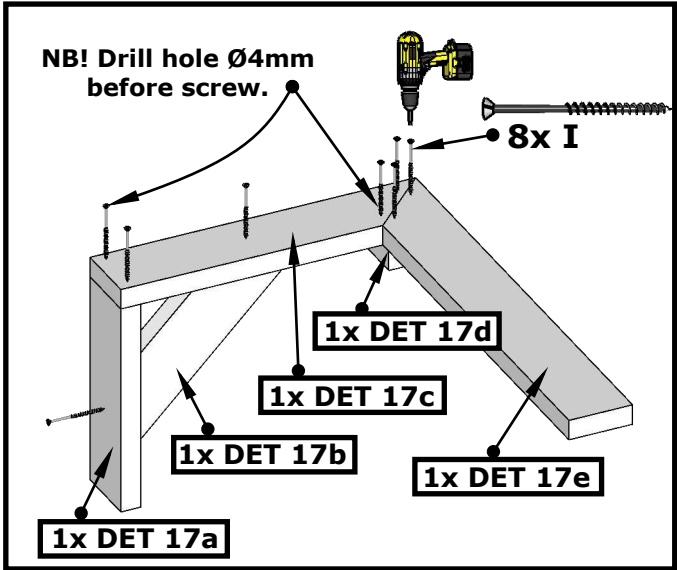


II

If Your sauna heater BC 45 or bigger.

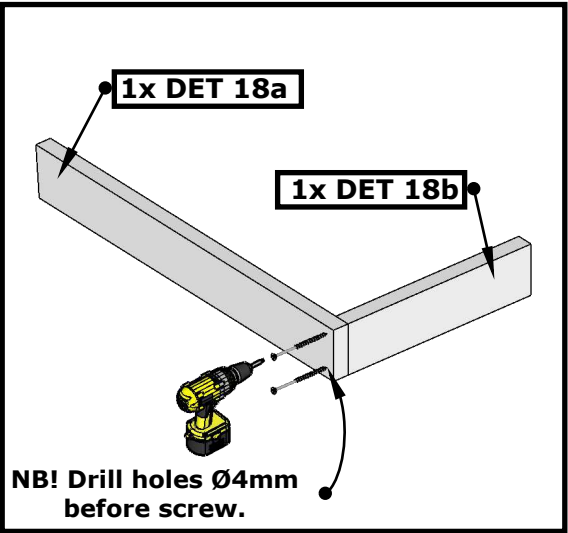


NB! Drill holes Ø4mm before screw. NB! Place sauna heater first.

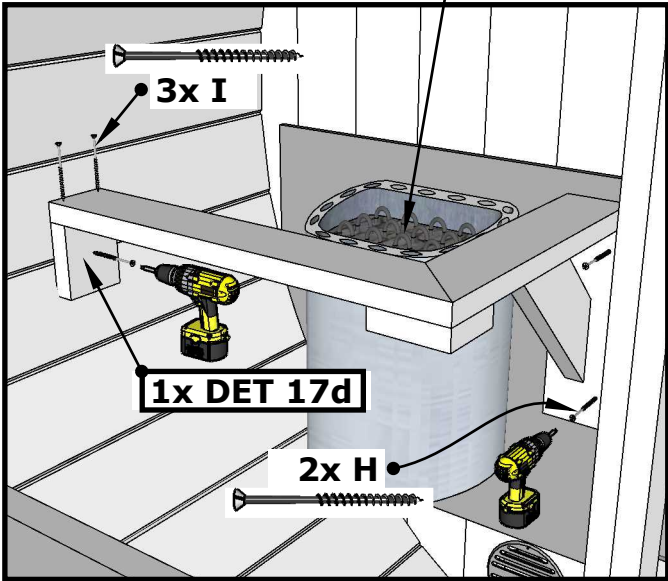

If Your sauna heater BC 35 or smaller.

NB! Drill holes Ø4mm before screw.

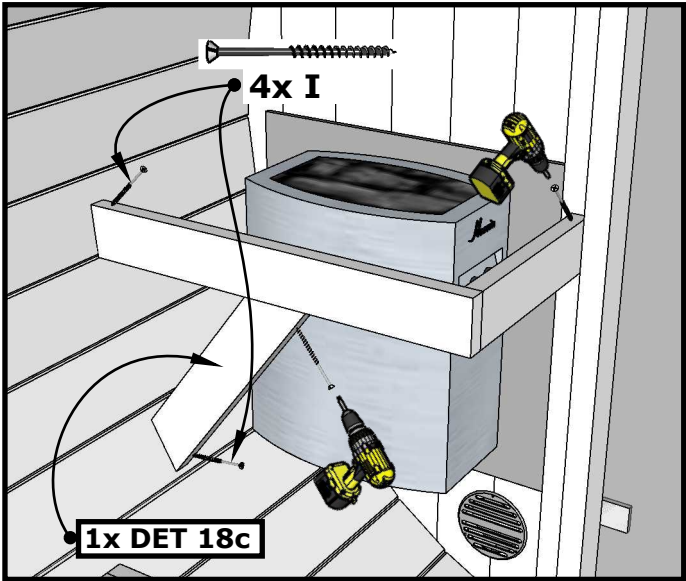

If Your sauna heater BC 45 or bigger.


Sauna 160, Ø200




Model with endboards.

NB! Check also shingles installation manual inside shingles packages.

II

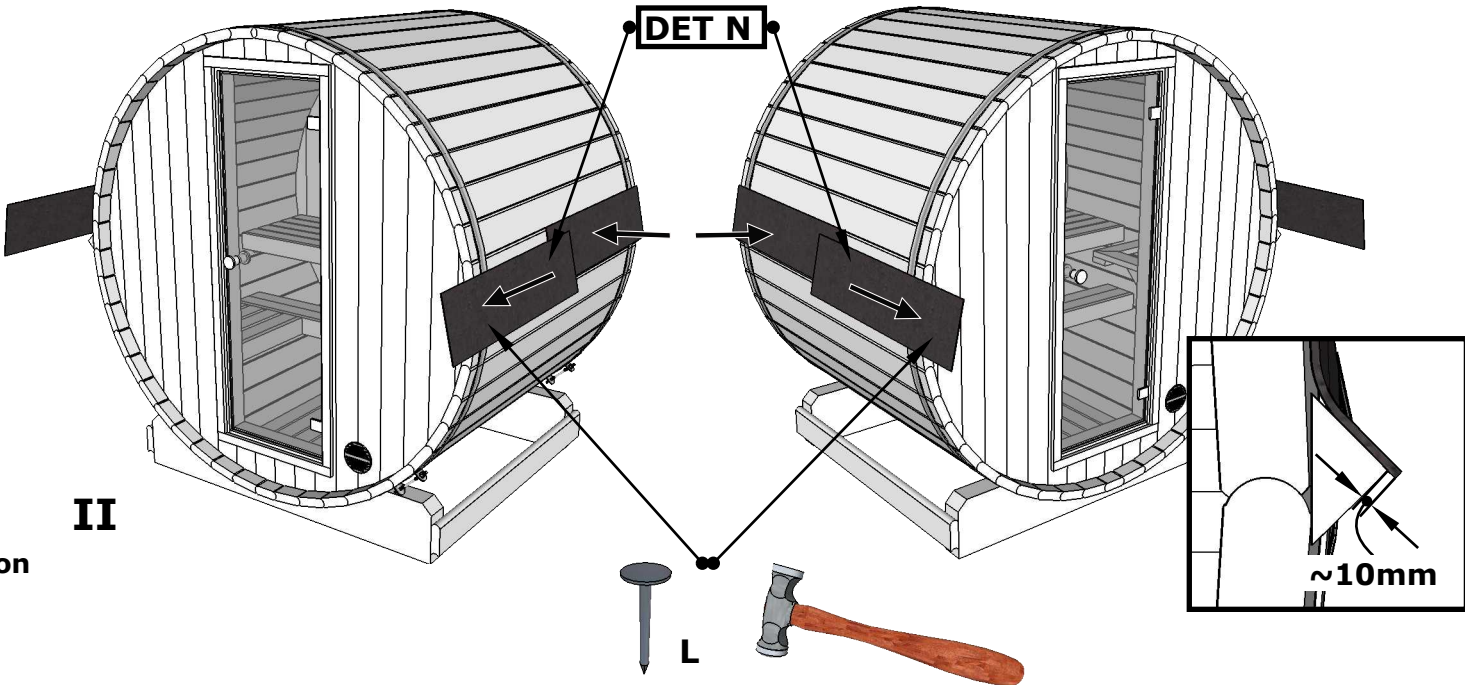

I

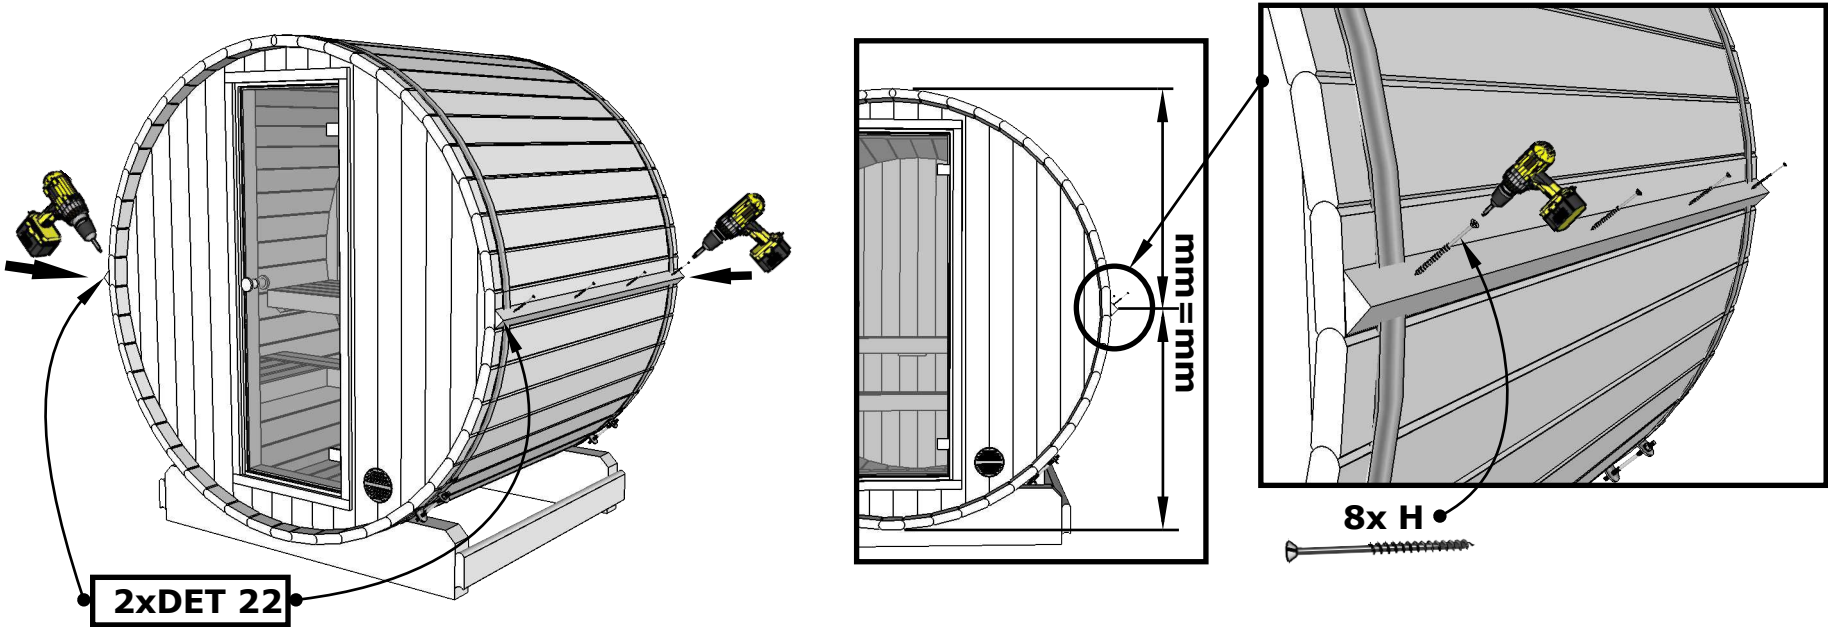



Sauna 160, Ø200



Model with endboards.


NB! Check also shingles installation manual inside shingles packages.

II

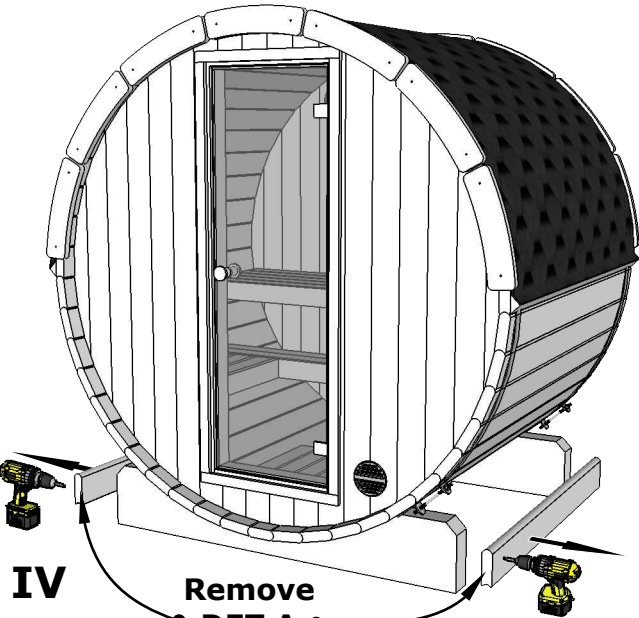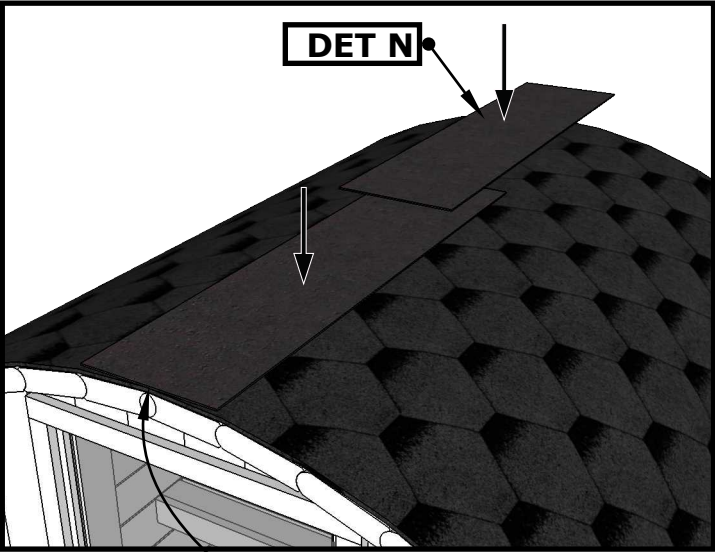


IV

Remove
DET A

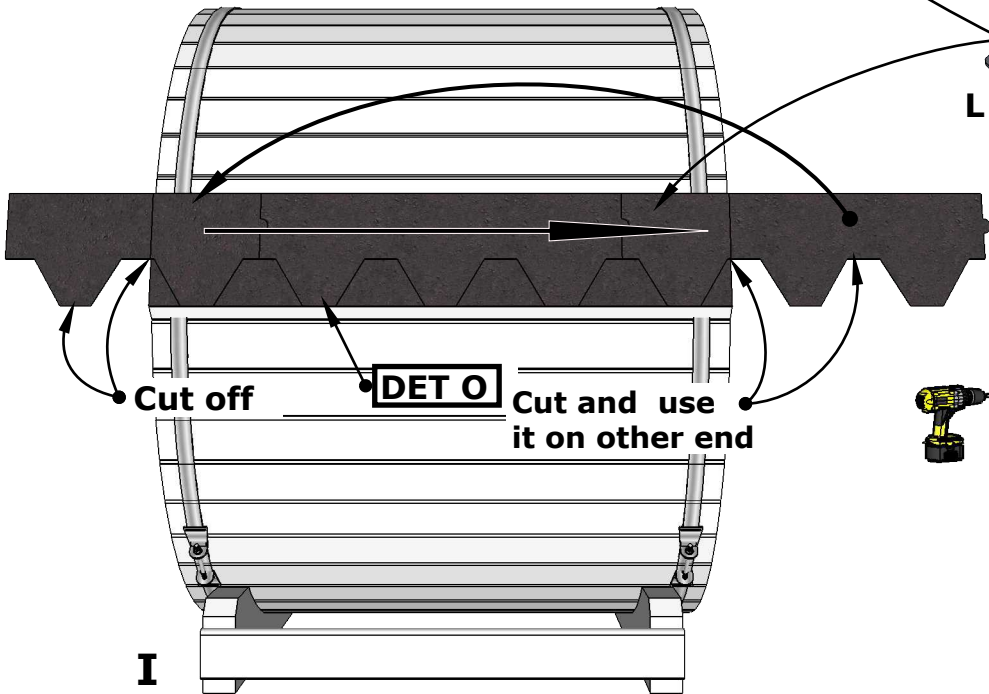


I

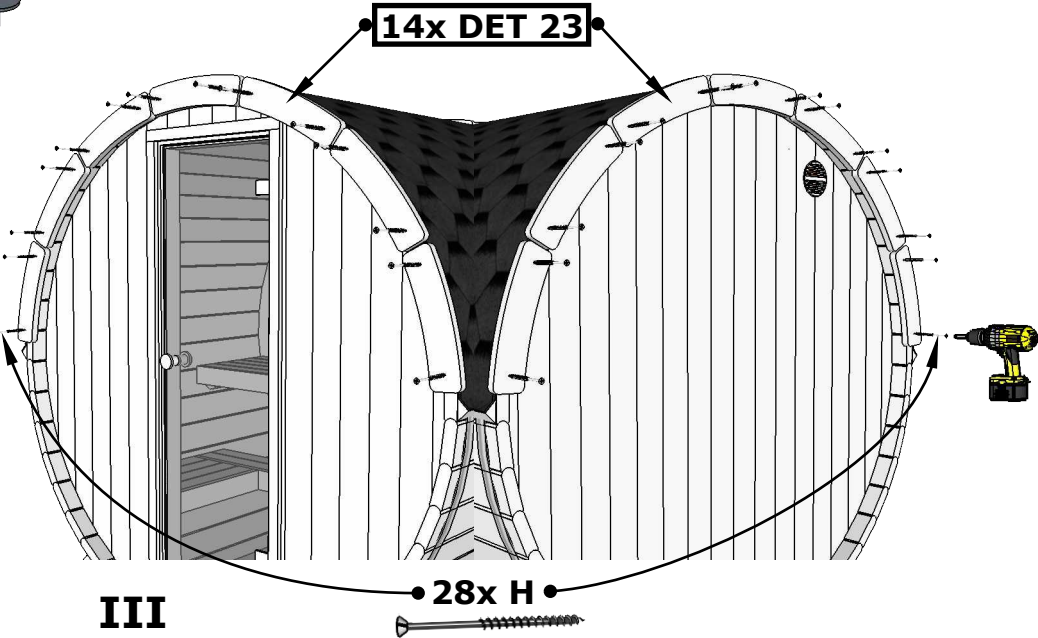

III



Sauna 160, Ø200

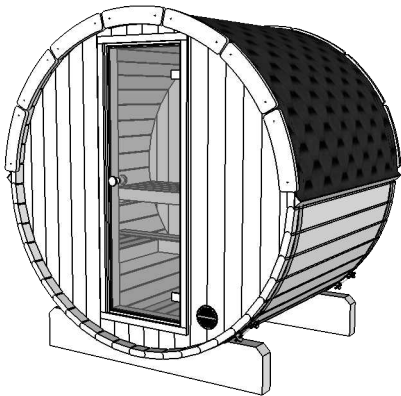


Model without endboards.

NB! Check also shingles installation manual inside shingles packages.


II

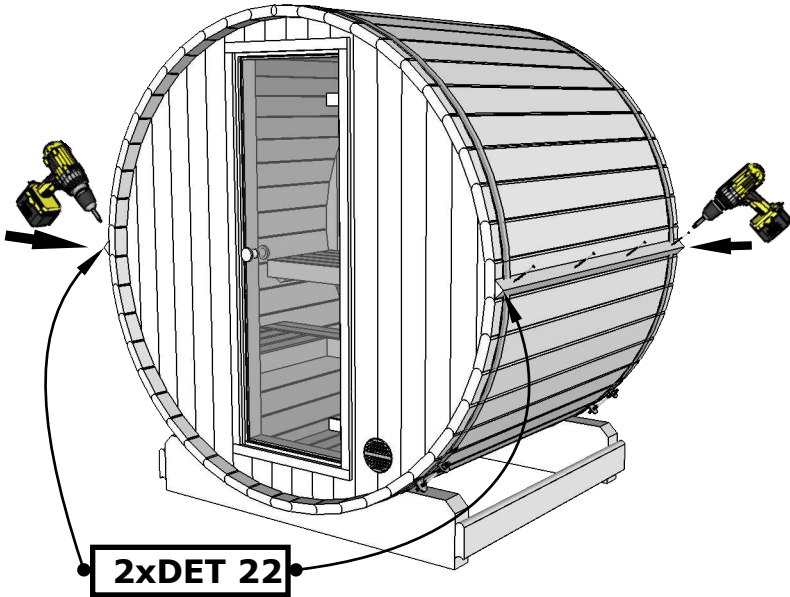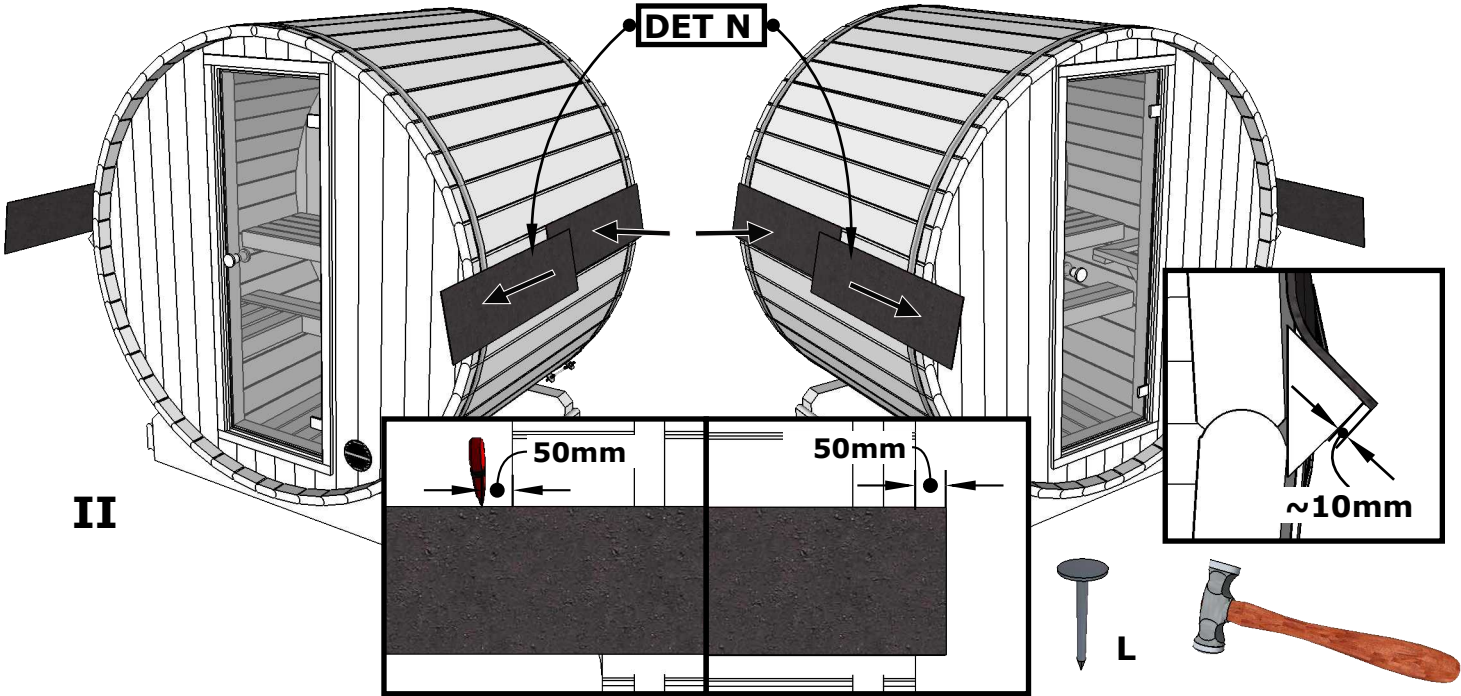

I

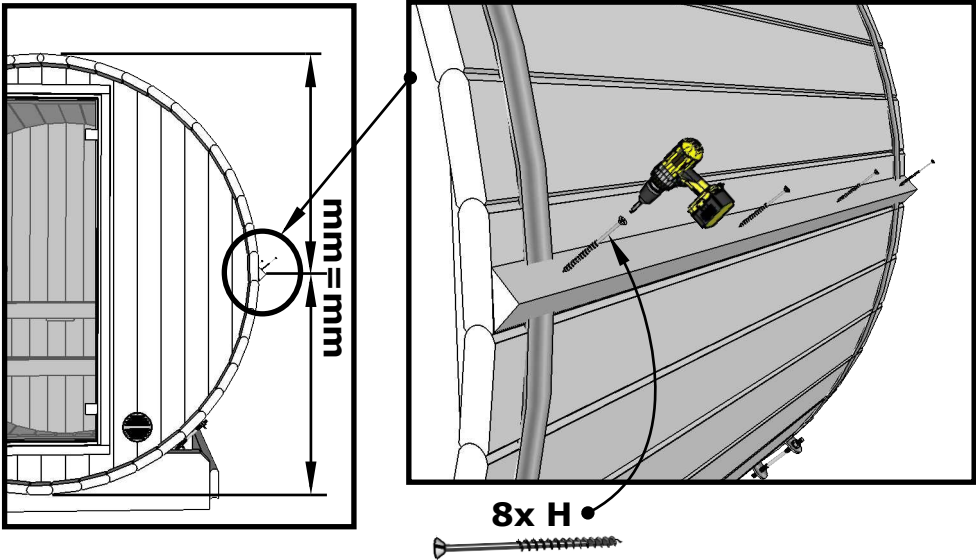


Sauna 160, Ø200

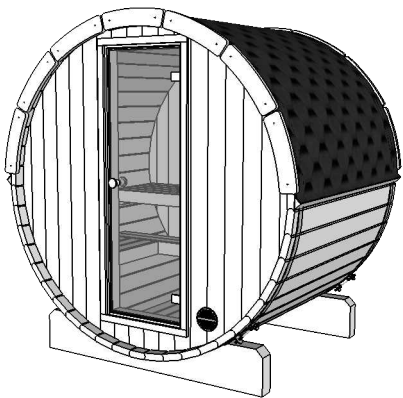


Model without endboards.

NB! Check also shingles installation manual inside shingles packages.


II

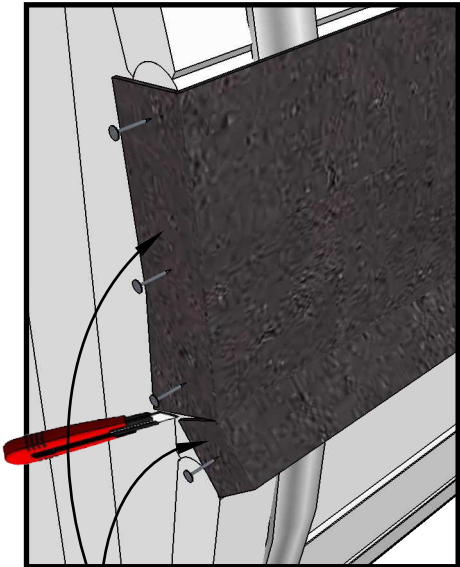


Bend overlap to the edge and fix with clout nails

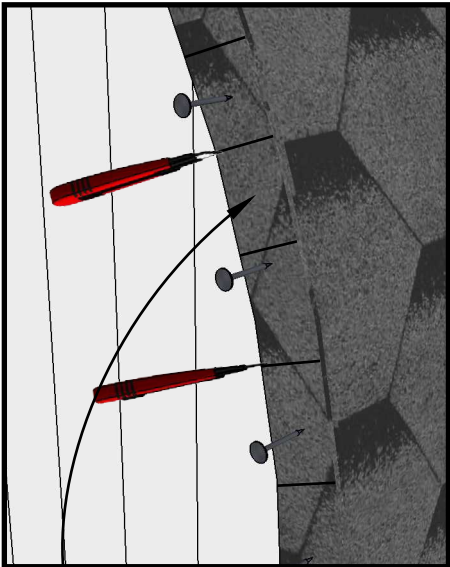

Bend overlap to the edge and fix with clout nails

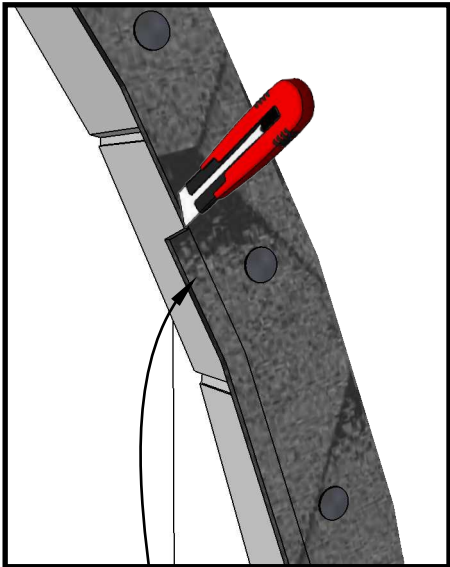


Cut off

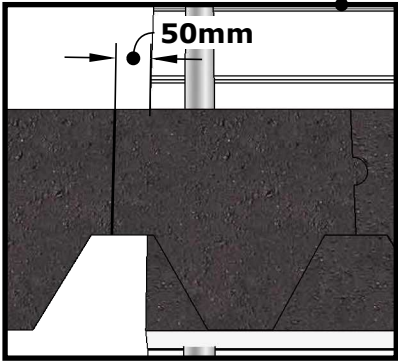


Cut off


I

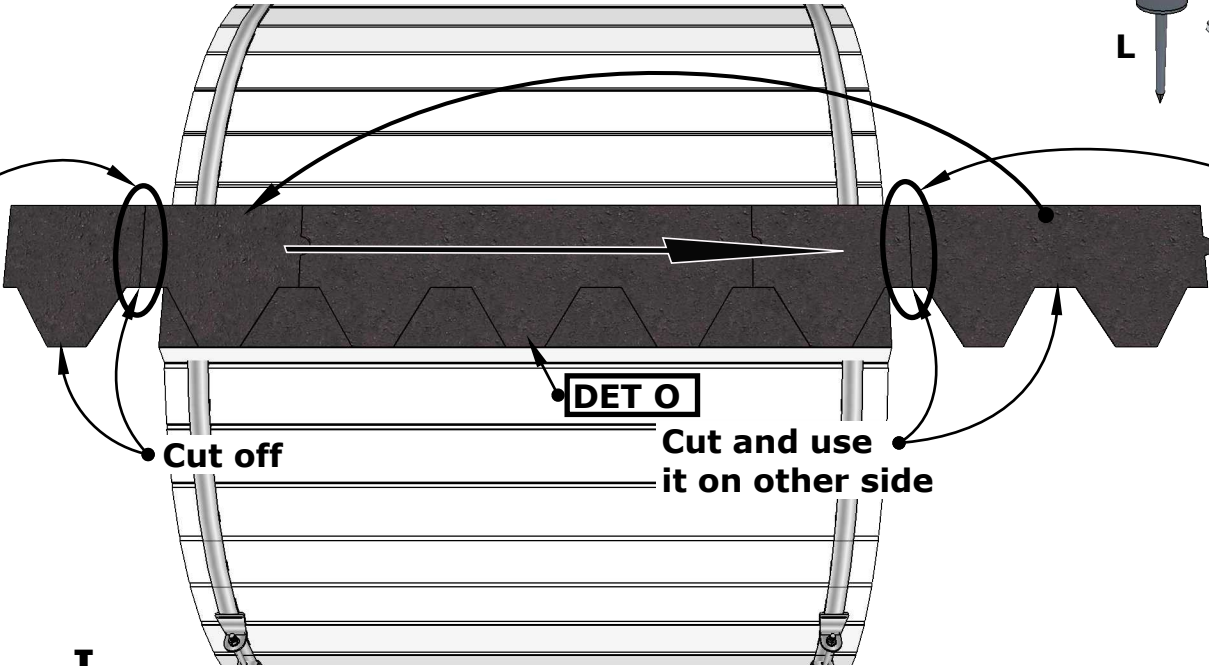

Cut and use it on other side


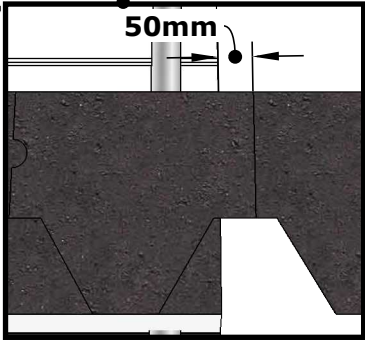


Sauna 160, Ø200

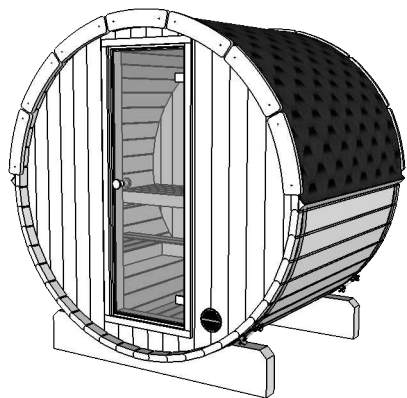


Model without endboards.

NB! Check also shingles installation manual inside shingles packages.

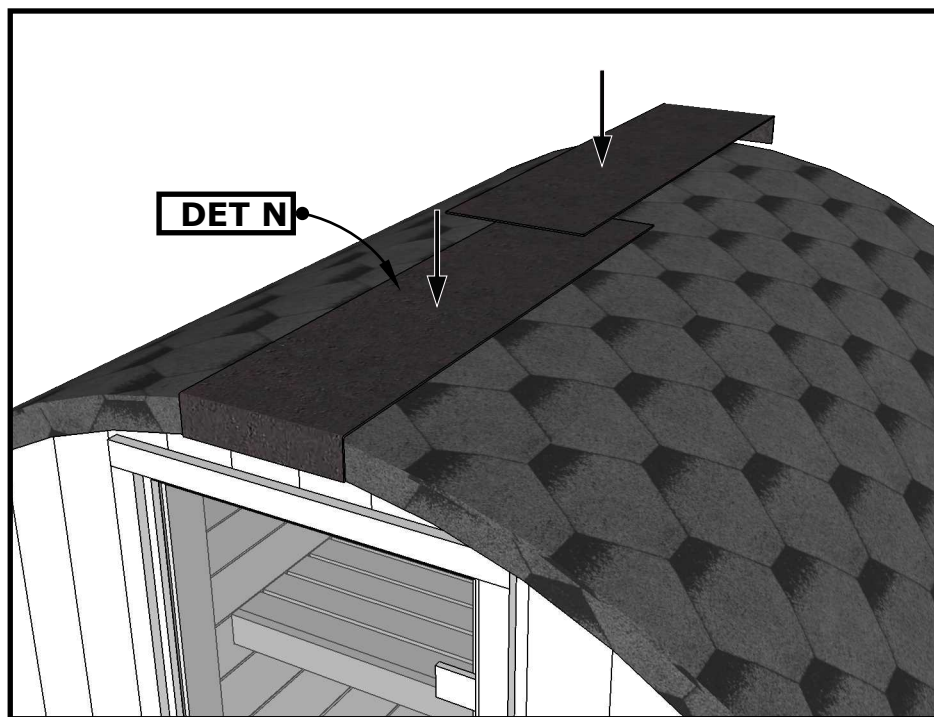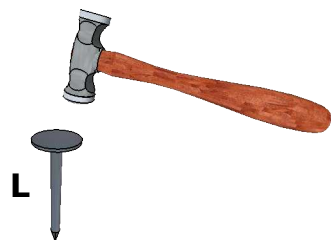


I

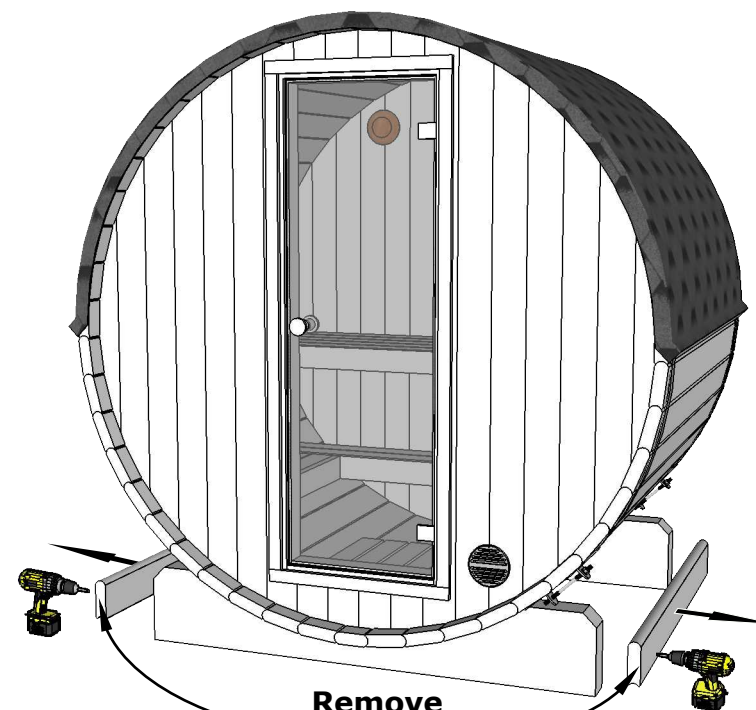


II

Glass Wall mounting Ø200

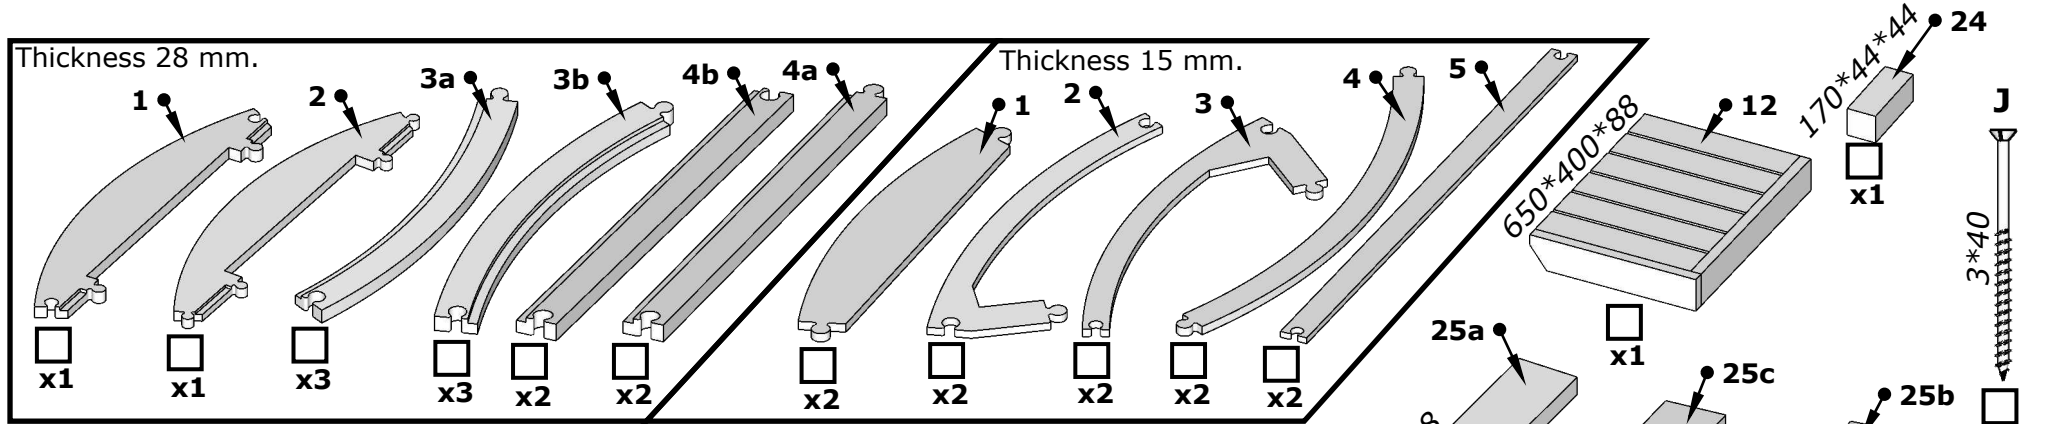


Baseframe 28mm.

Use piece of wood to protect plywood


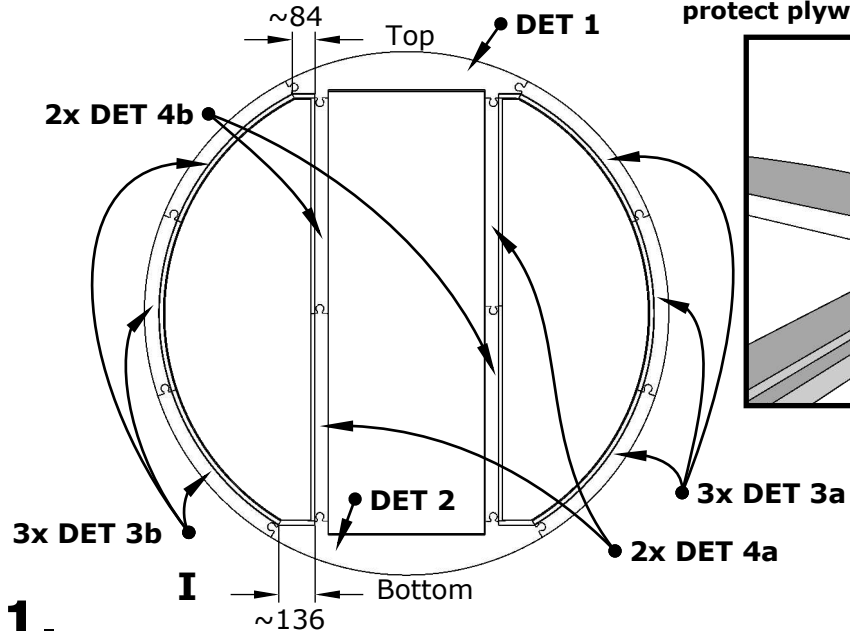


1.



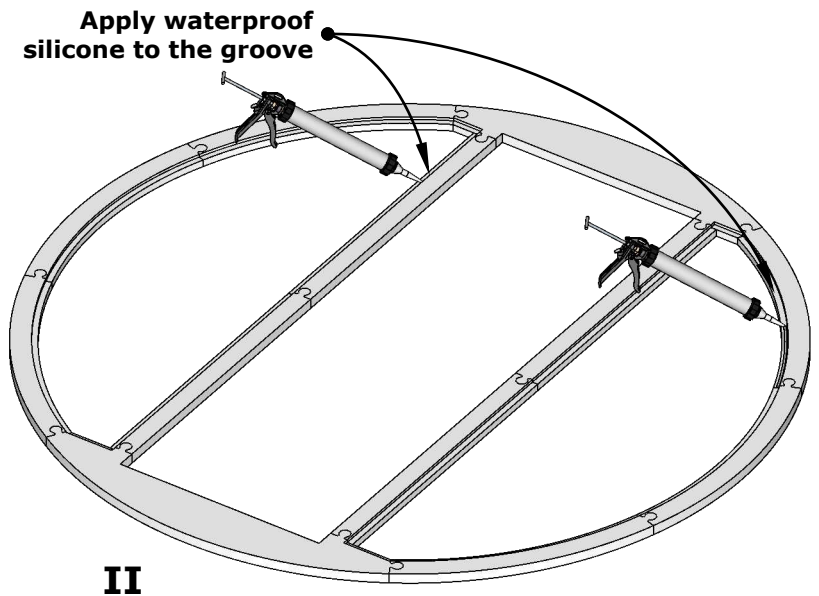


II





Glass Wall mounting Ø200

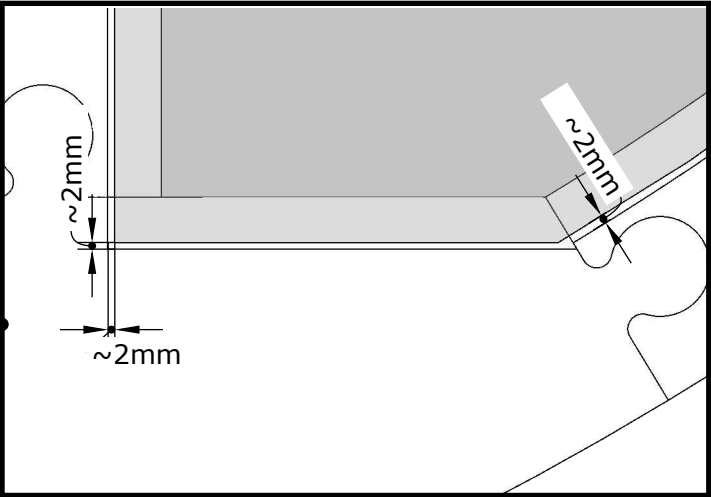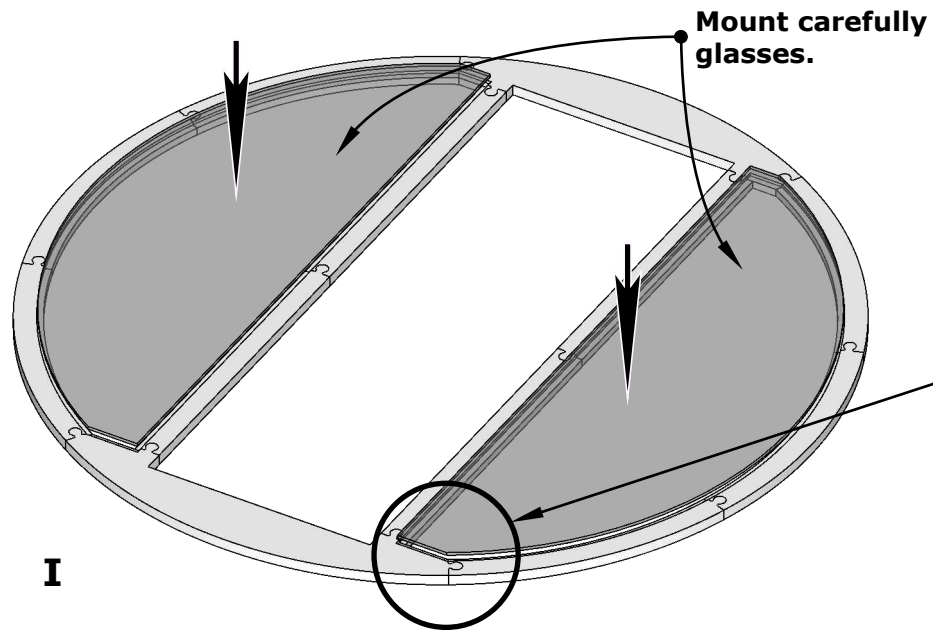

Coverframe 15mm.

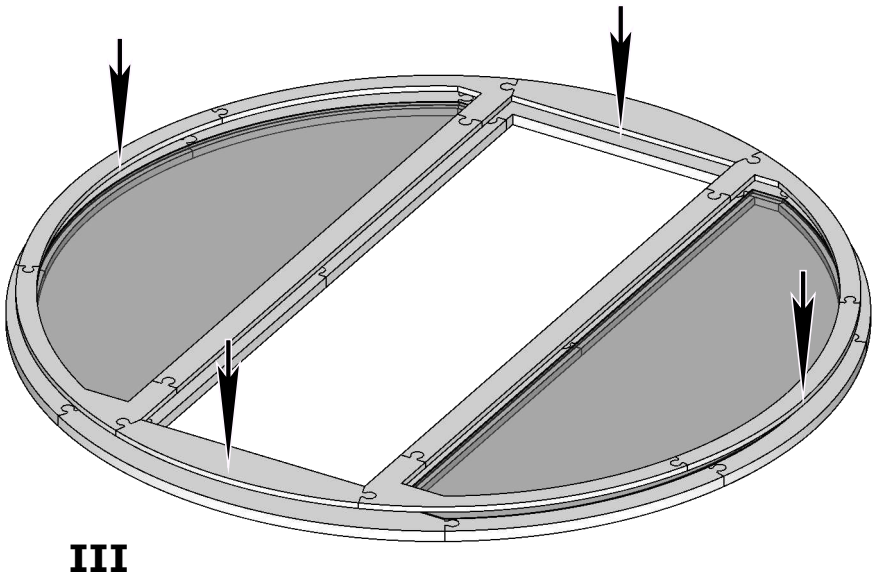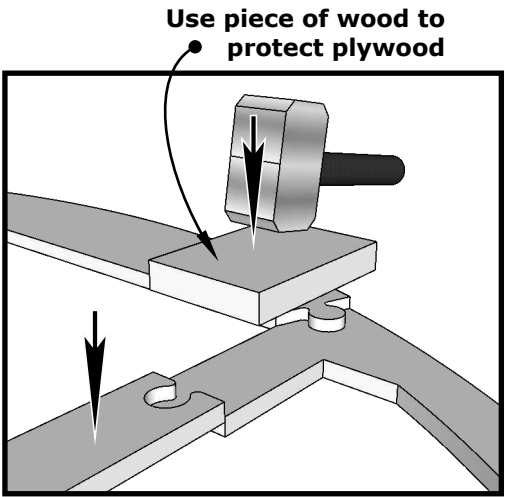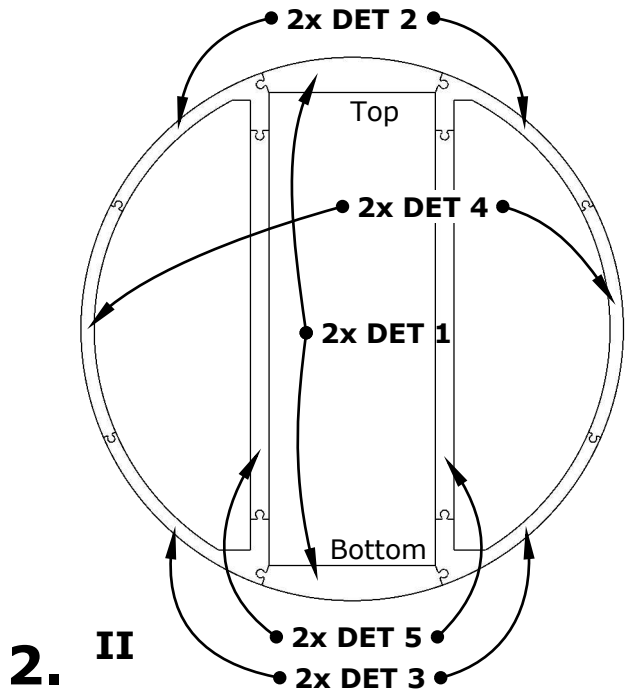


Glass Wall mounting Ø200

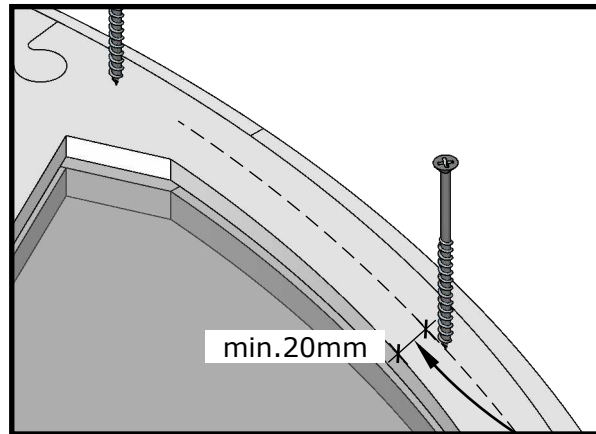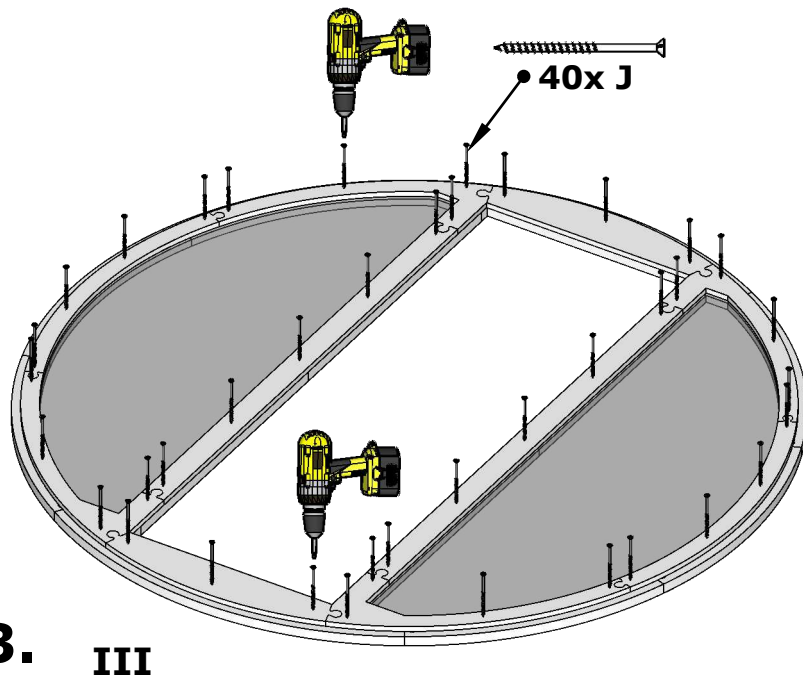
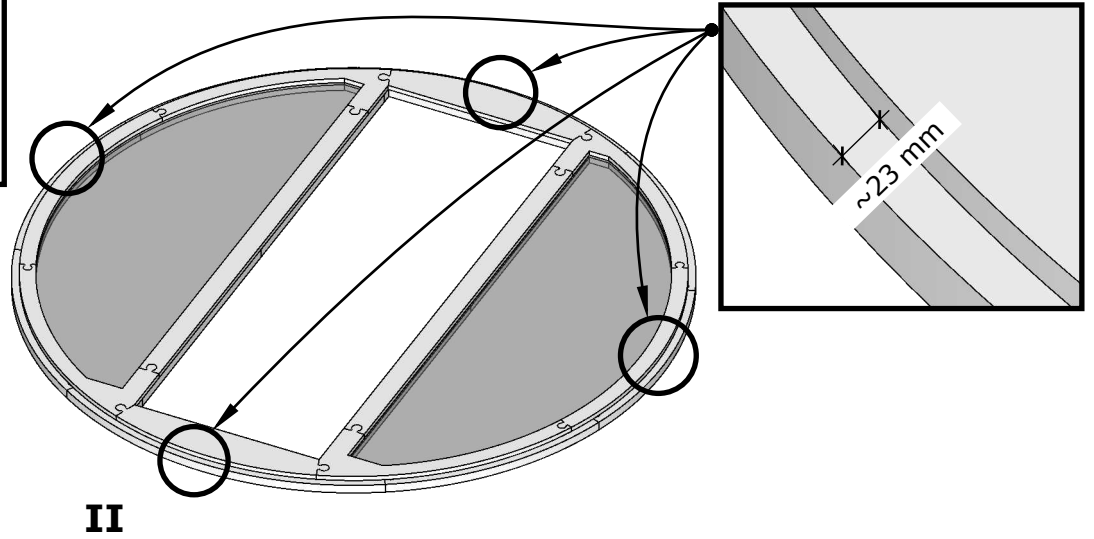
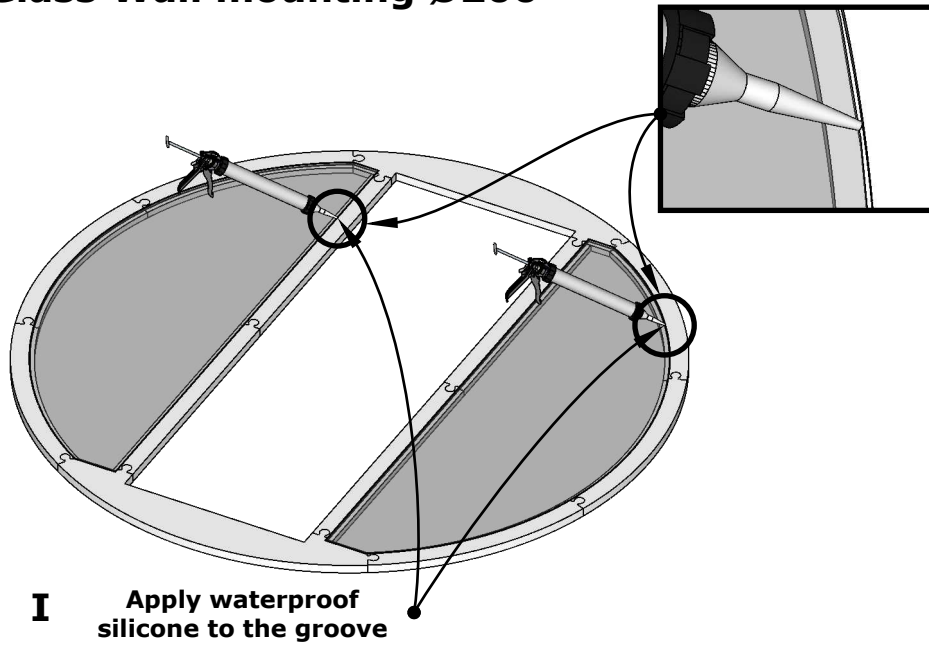


**Please be careful!!!
Do not hit the glass
with the screw.**


Glass Wall mounting Ø200

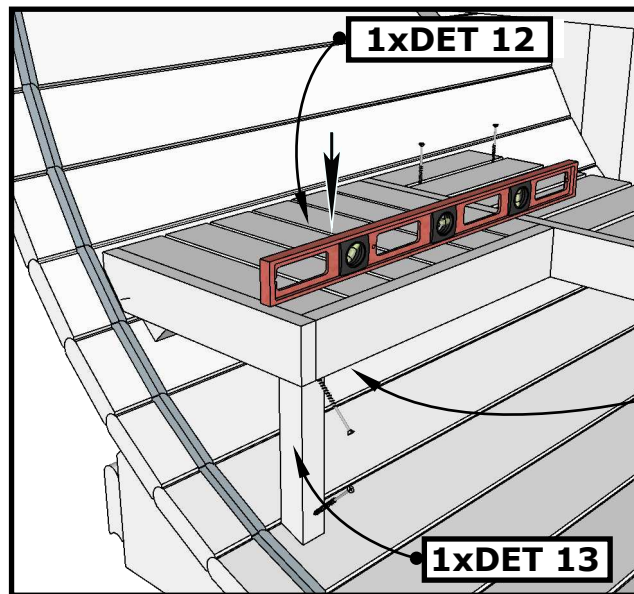

I Cut DET 13 on right size.

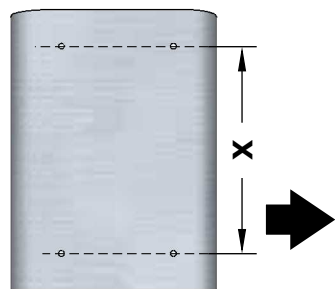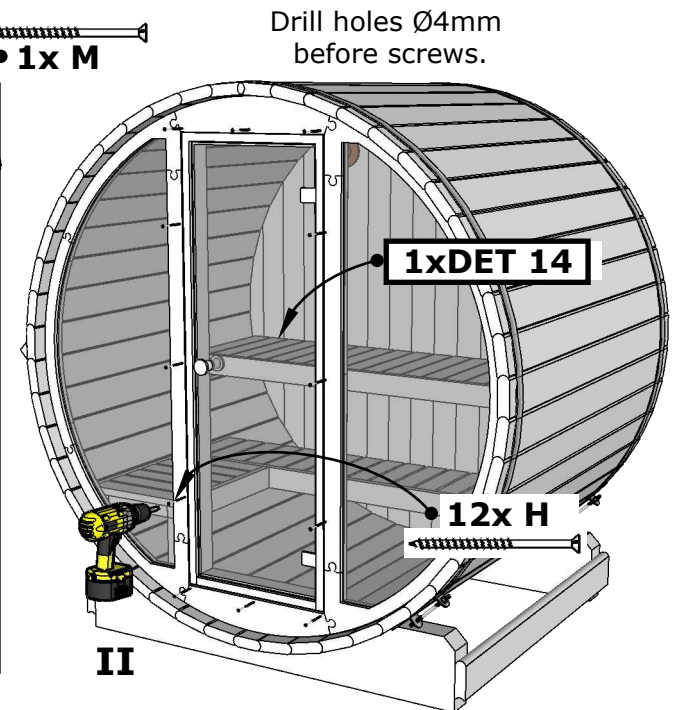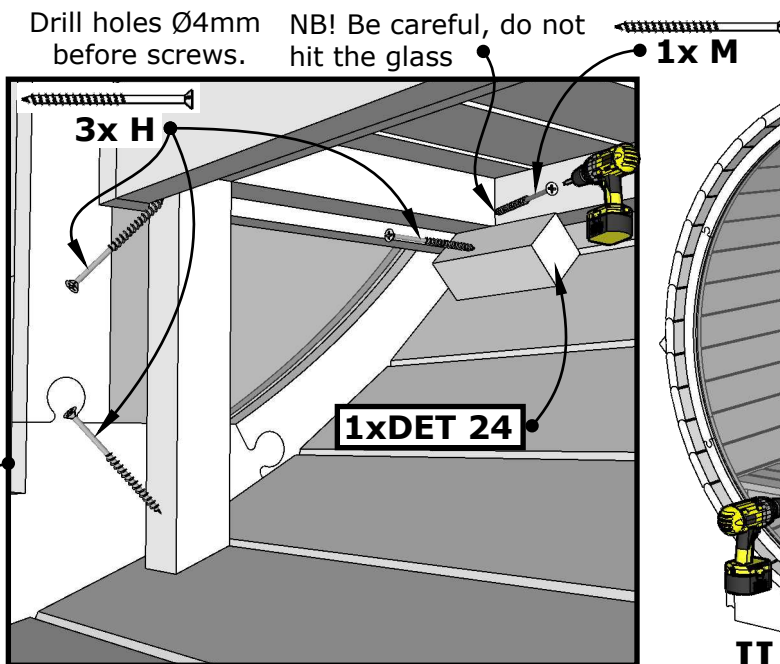


NB! Check Your el.heater user manual to find correct measurements!

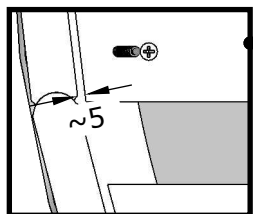

III

1x DET 25c
If Your sauna heater BC 45 or bigger.

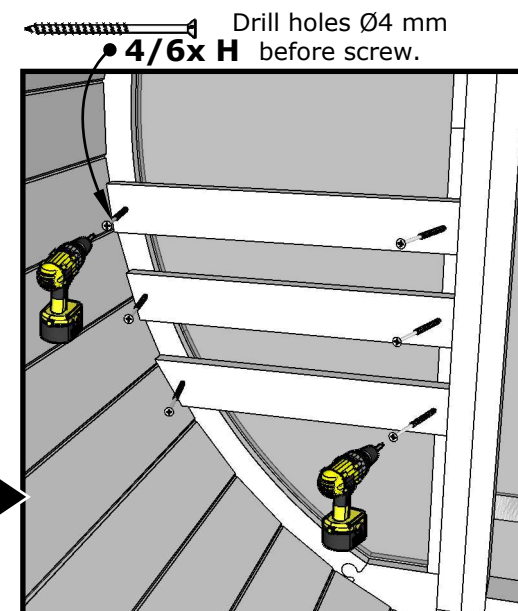

IV NB! Be careful, do not hit the glass!

Proceed with main installation manual!

