
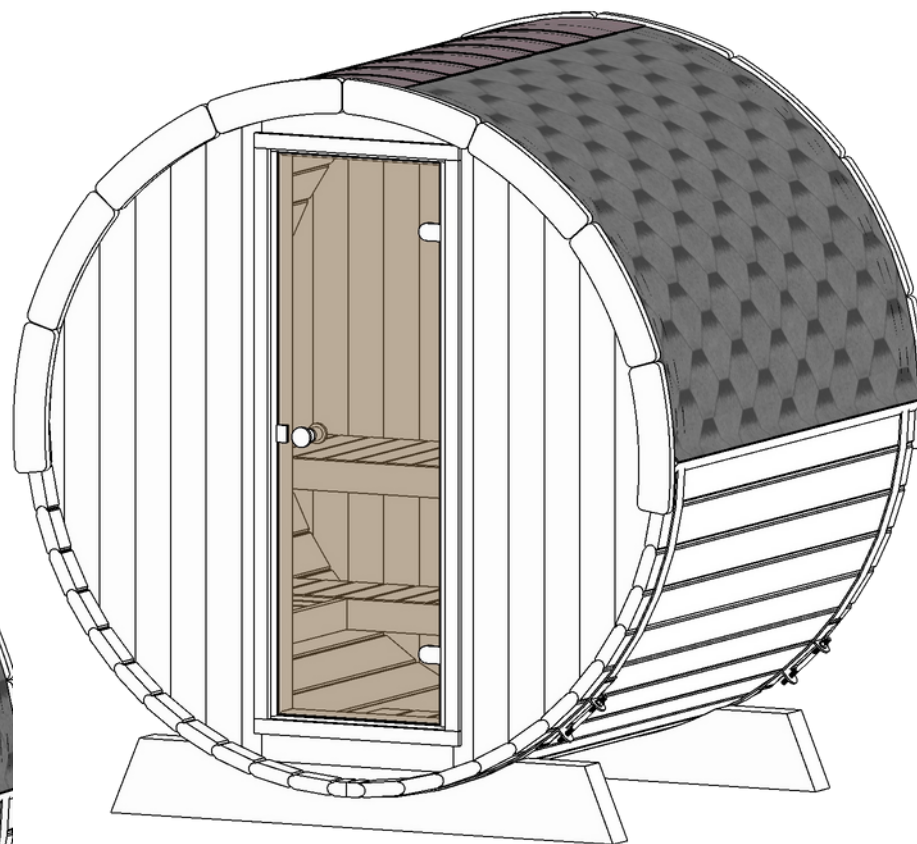



Sauna Edda 160, Ø200

NB! Please read whole manual
before start.


All given measurements
are in millimeters!

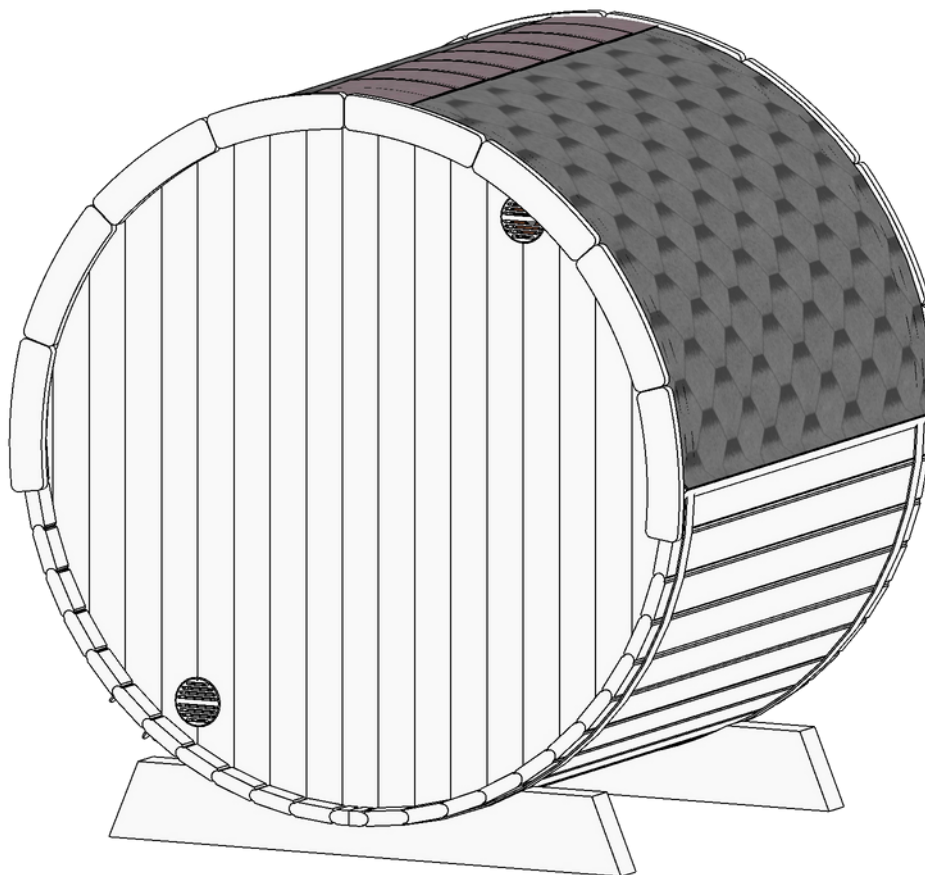


(PES)

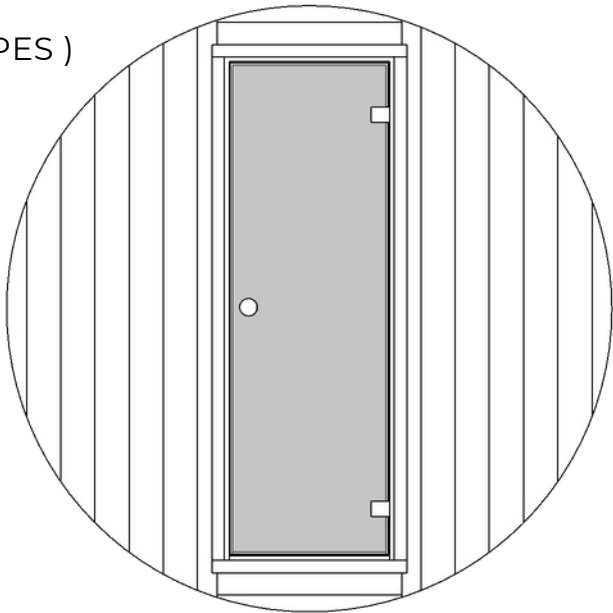


(TKE)

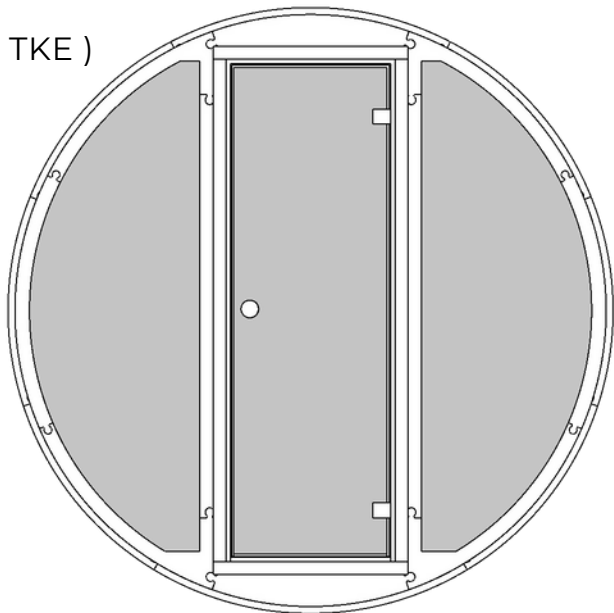

(PTS)




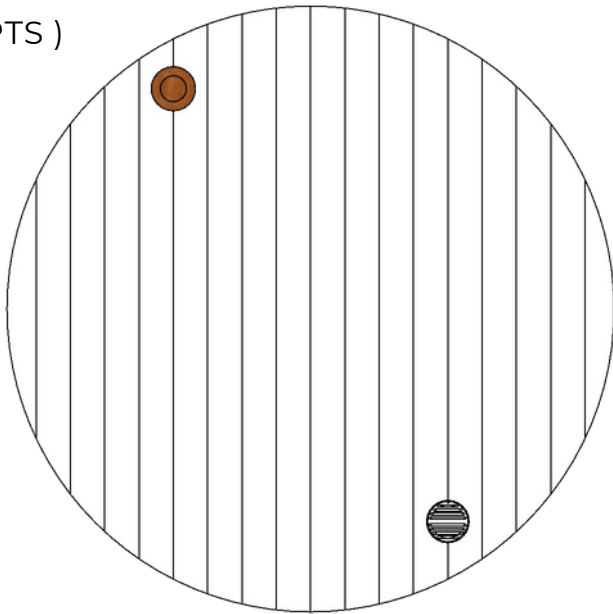


(PK)

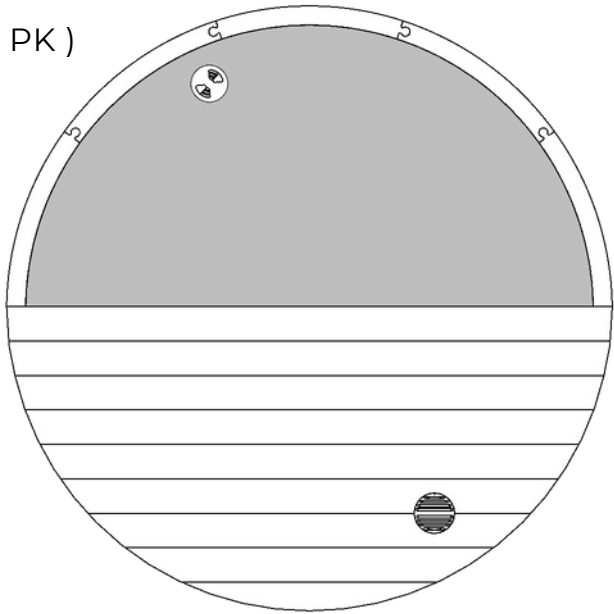


Wooden front wall assembly

Details

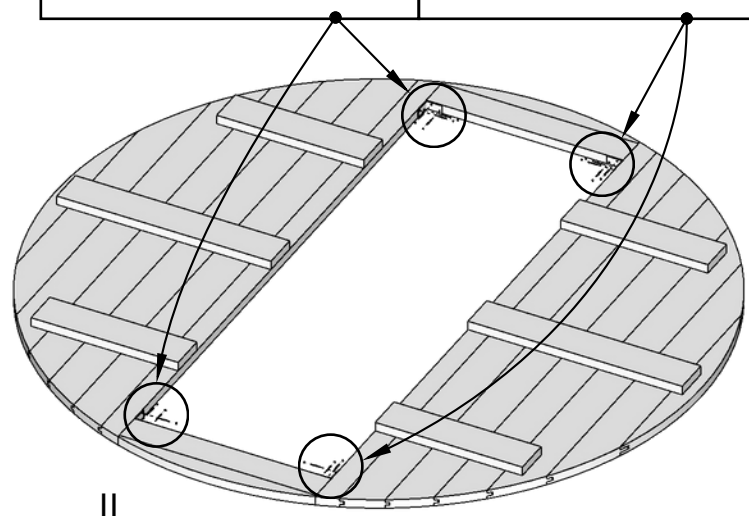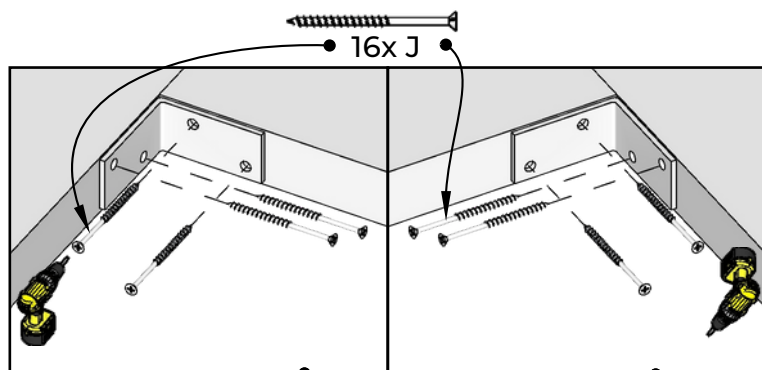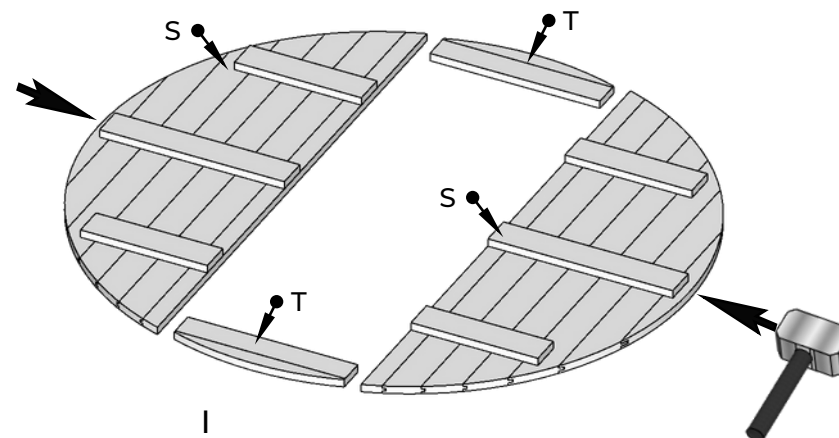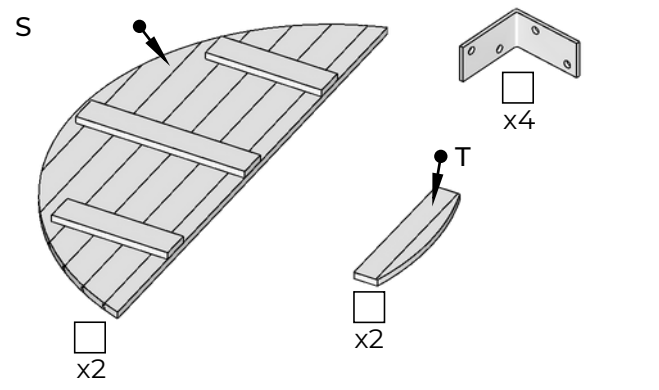


Cut board from pallet L≈1900mm.
Fix it diagonally to make wall
more rigid during the installation.


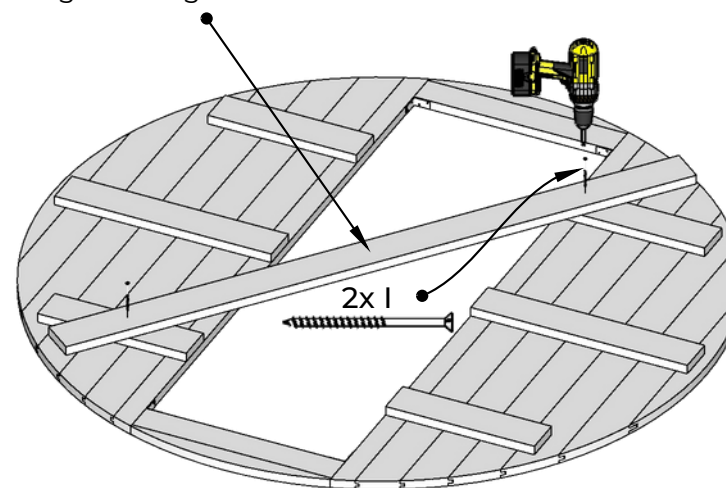


III

Wooden back wall assembly

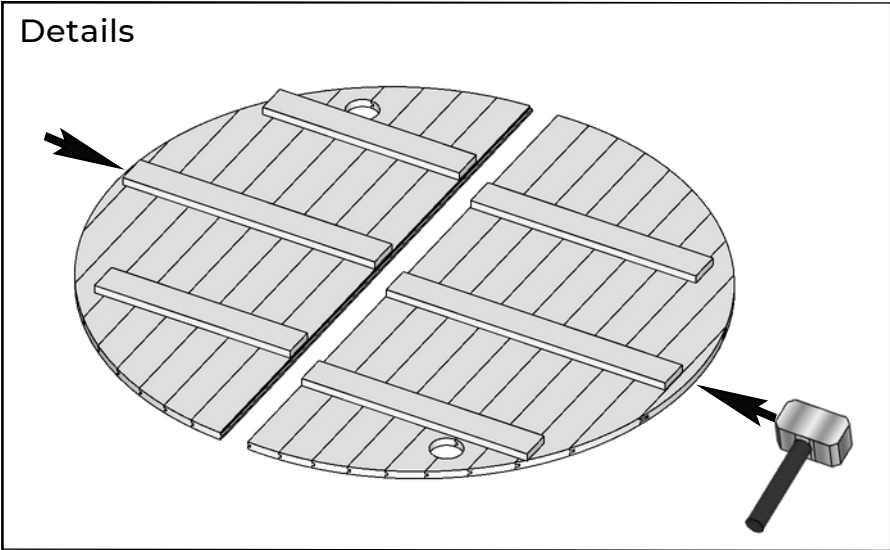


Cut board from pallet
L~1900 mm.

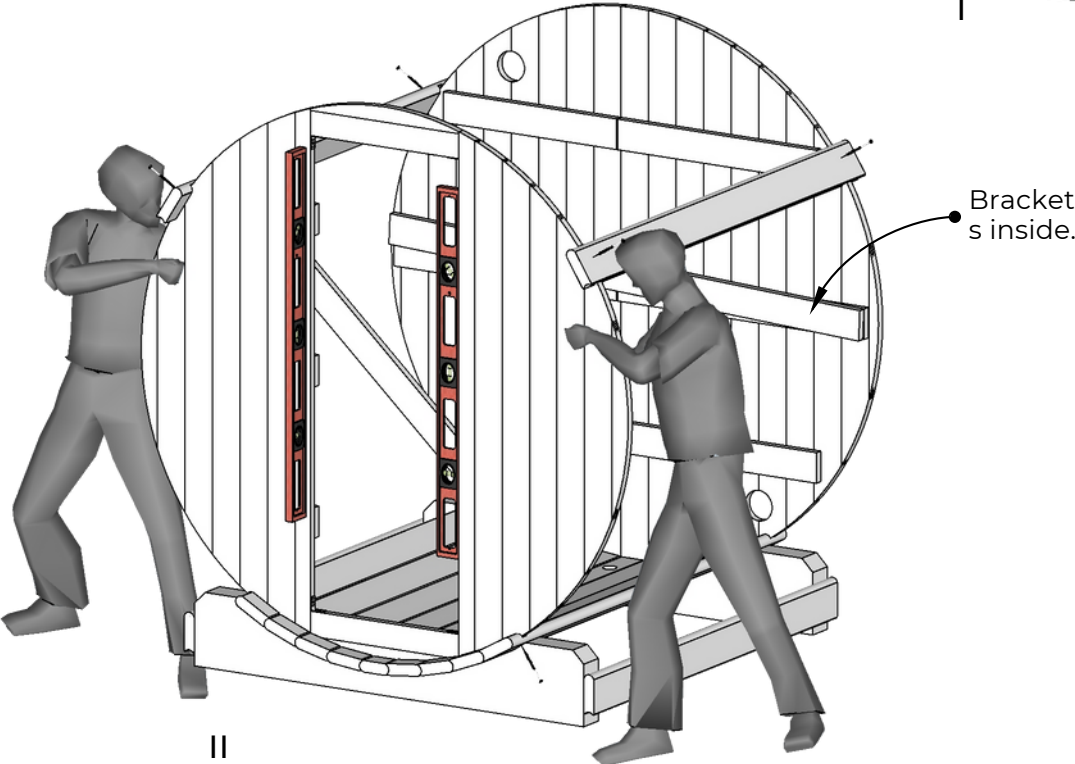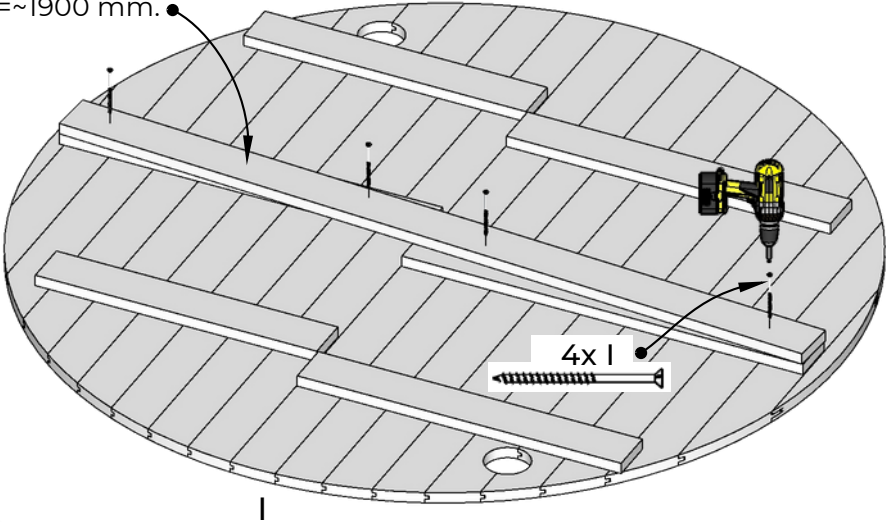


Sauna 160, Ø200






Details list.

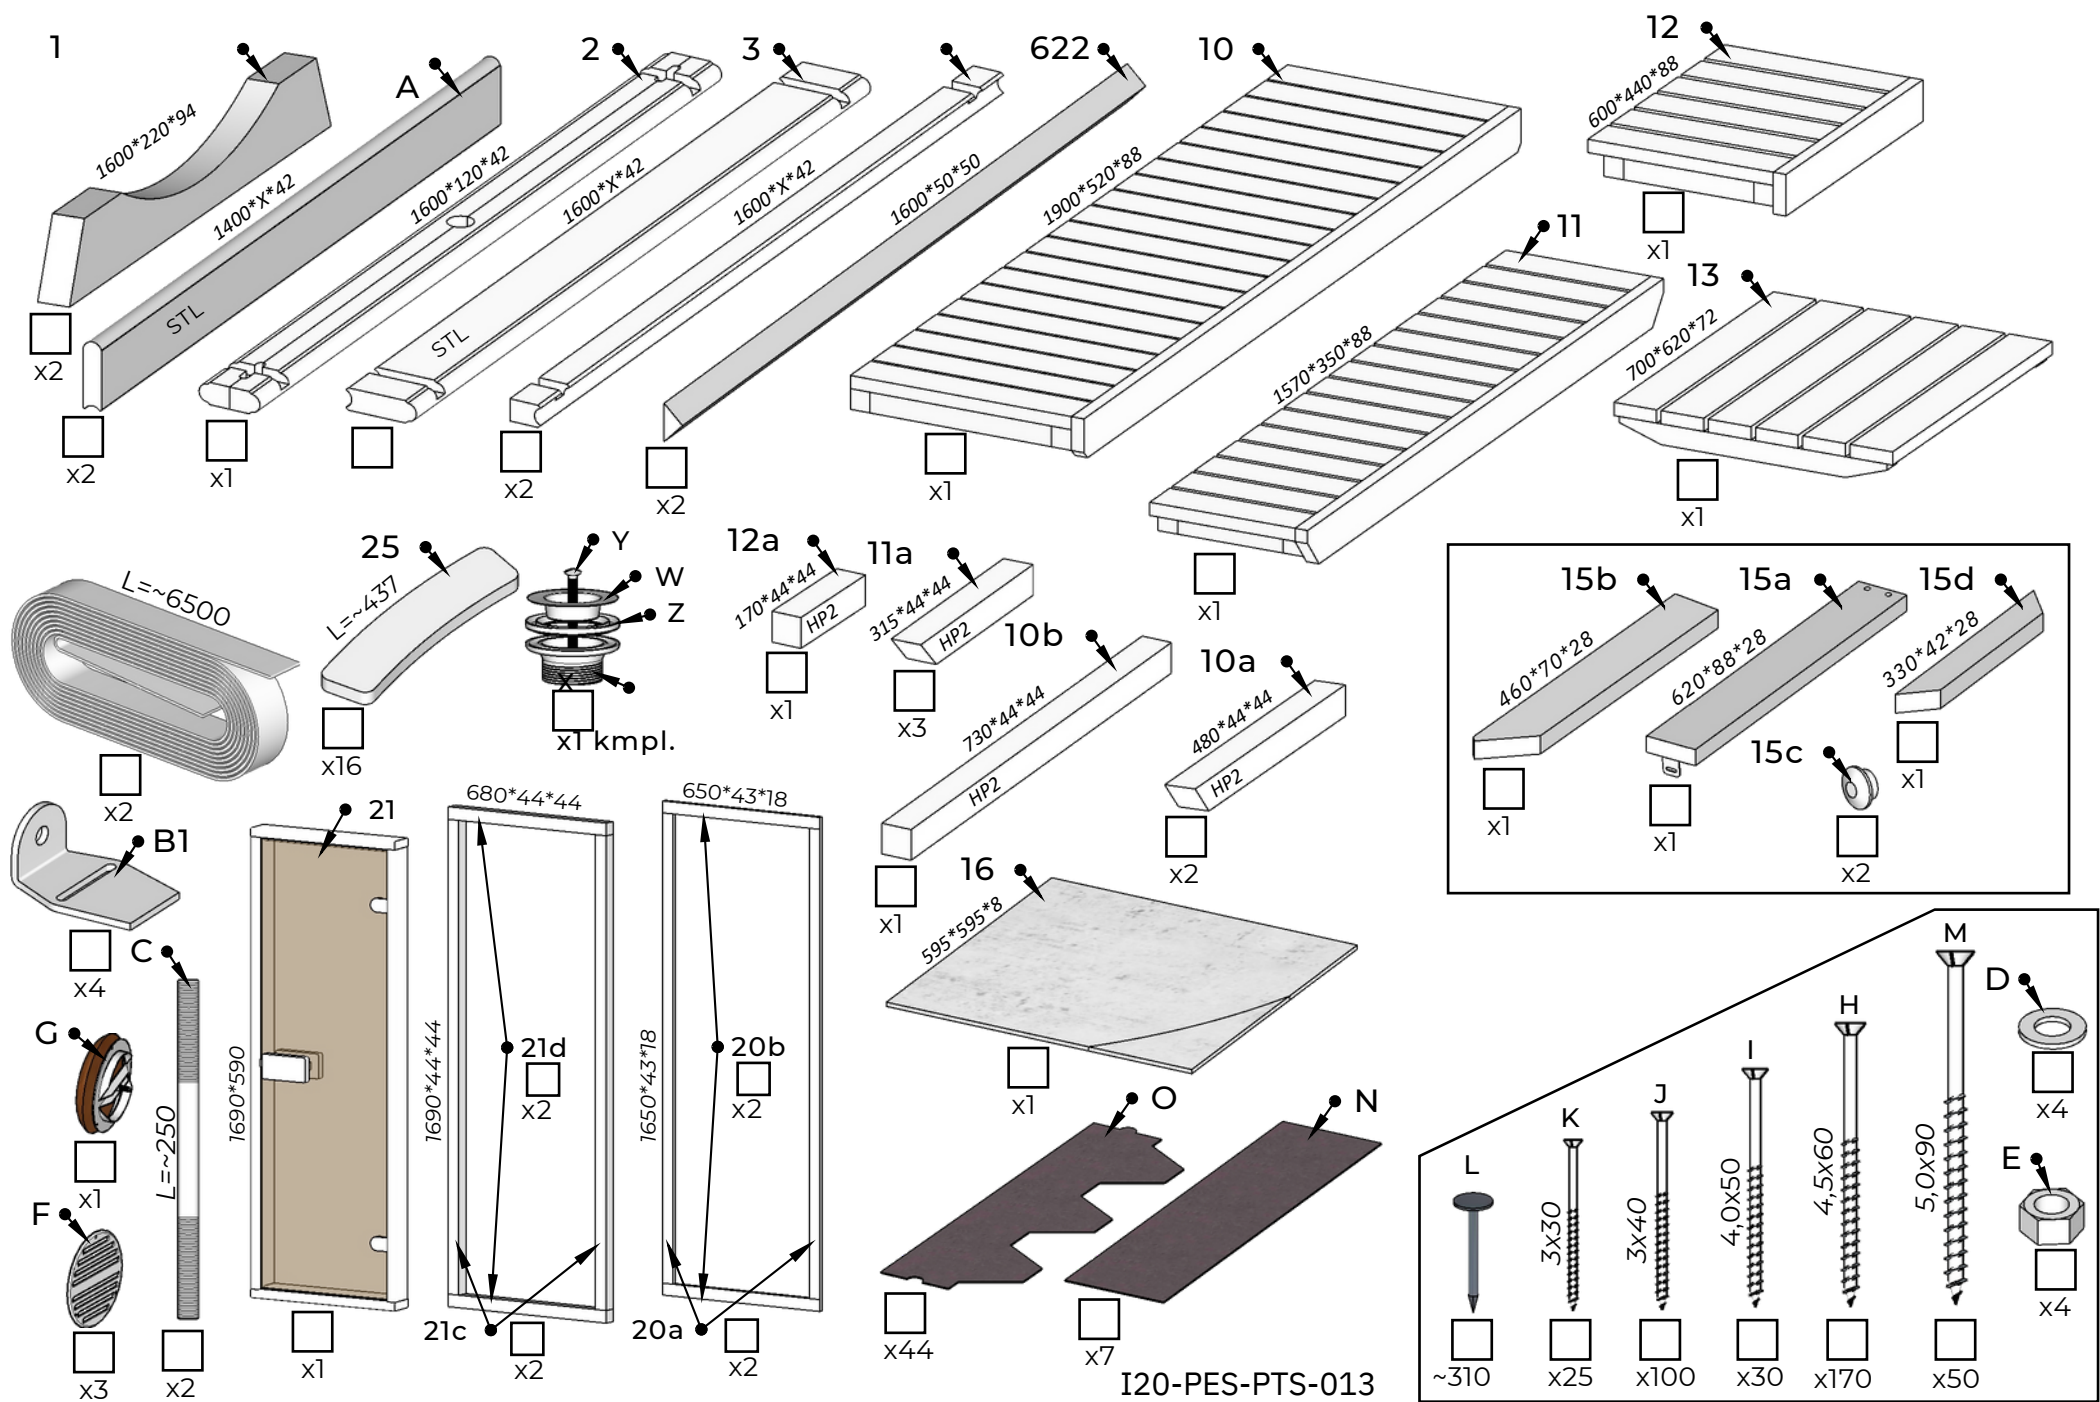


I20-PES-PTS-013

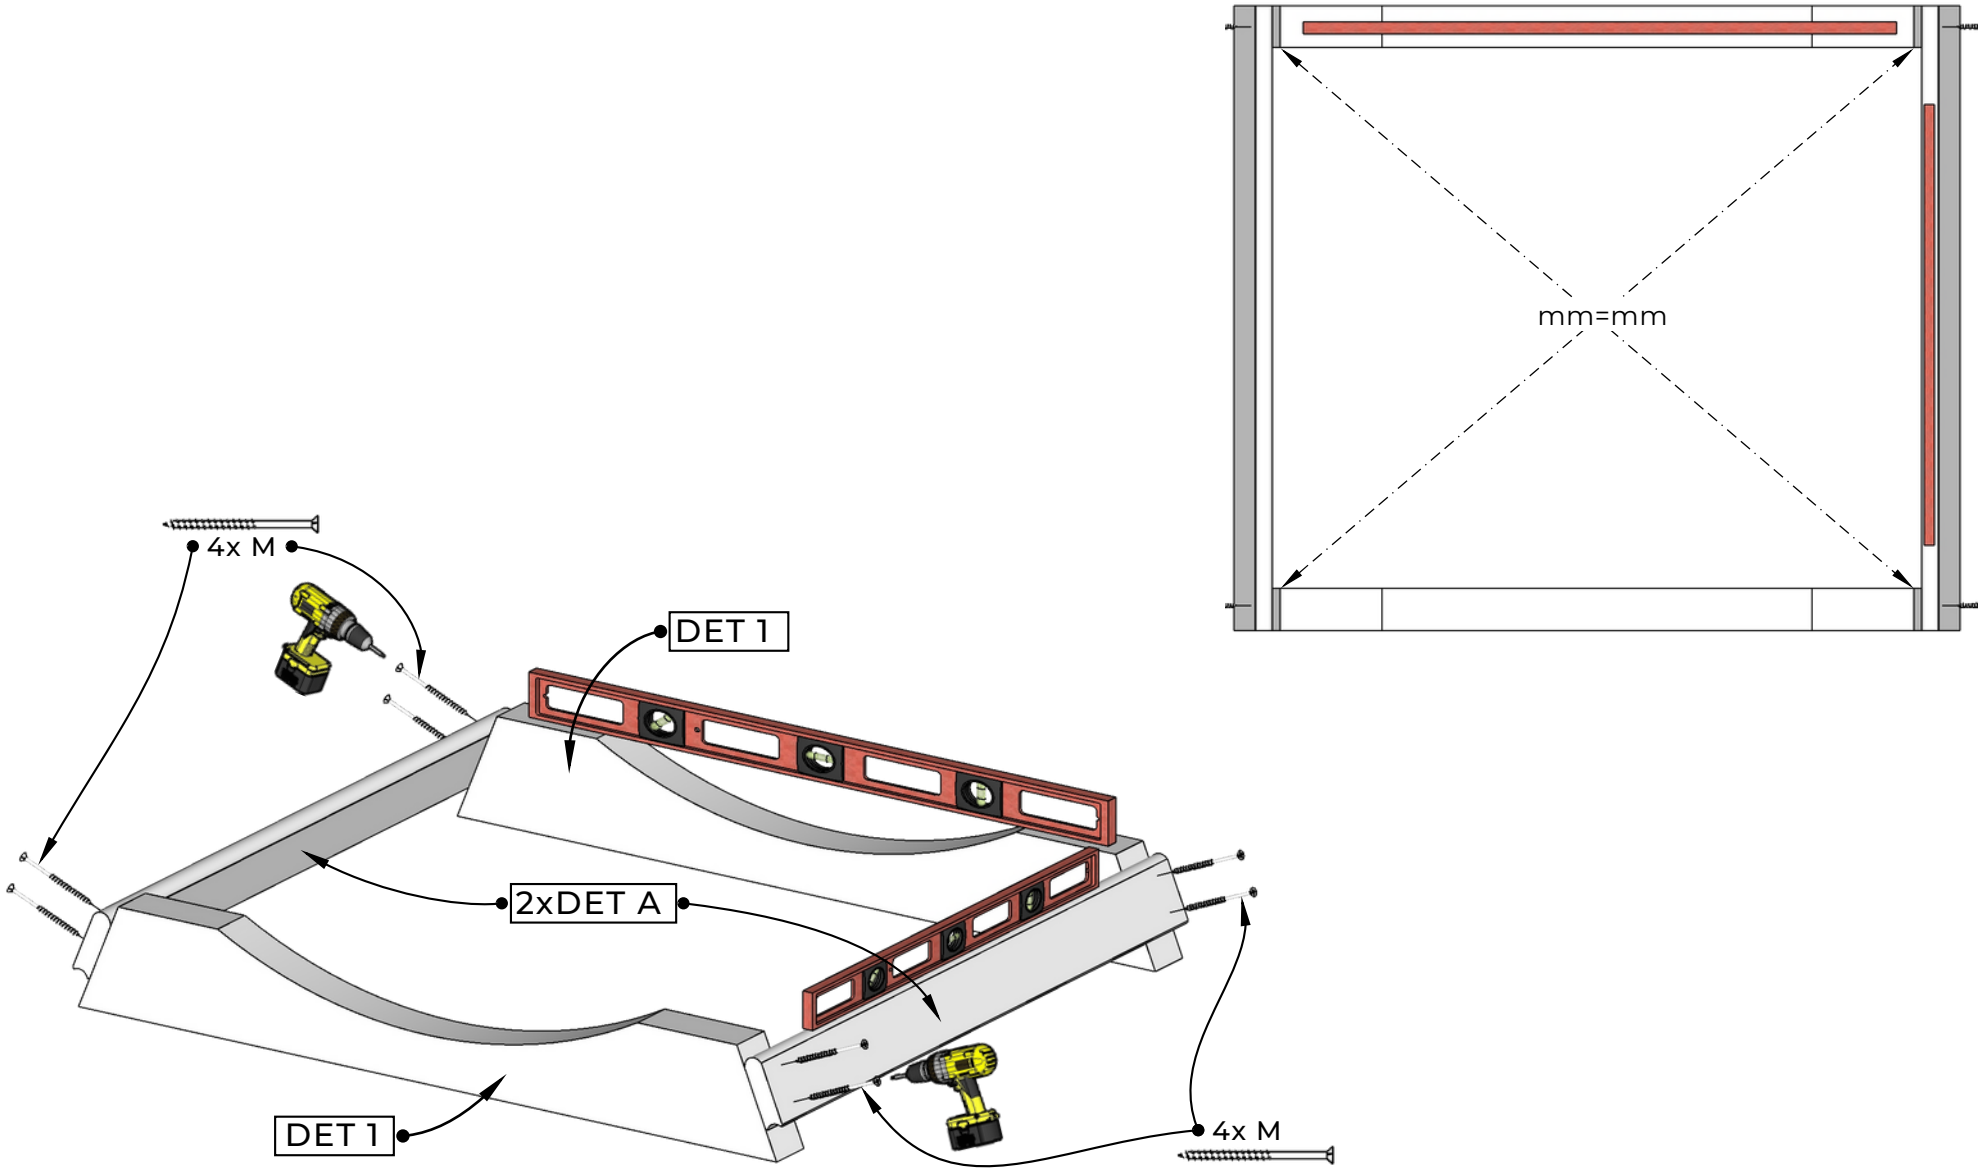


Sauna 160, Ø200

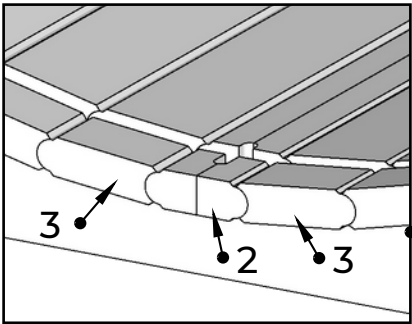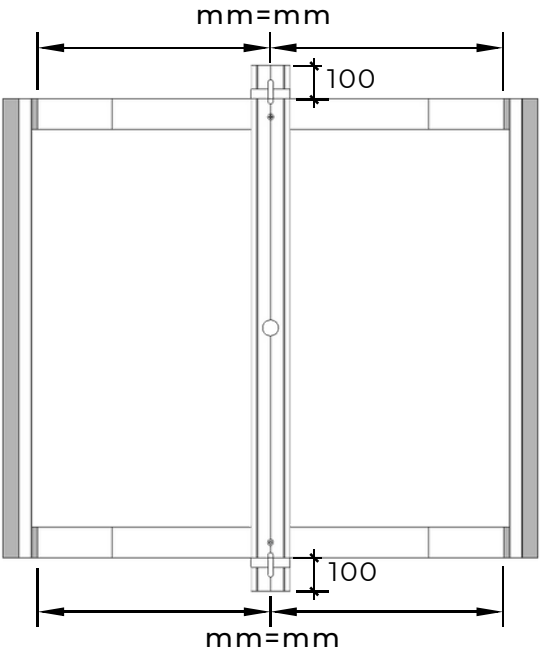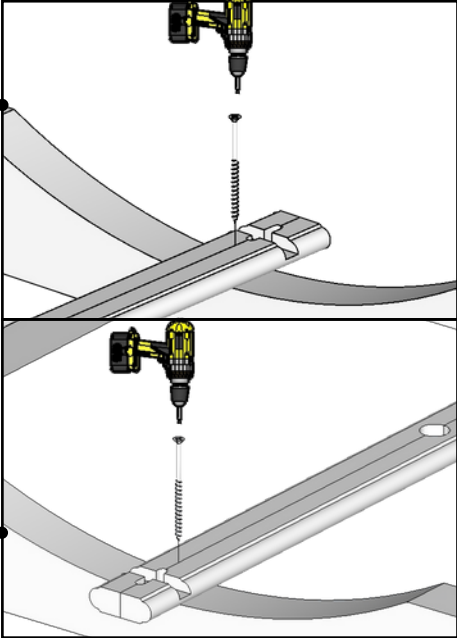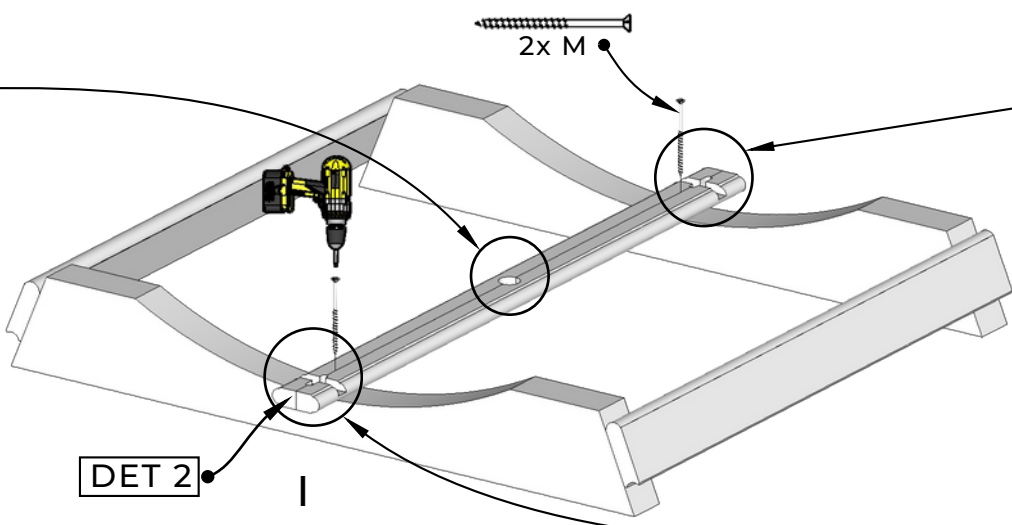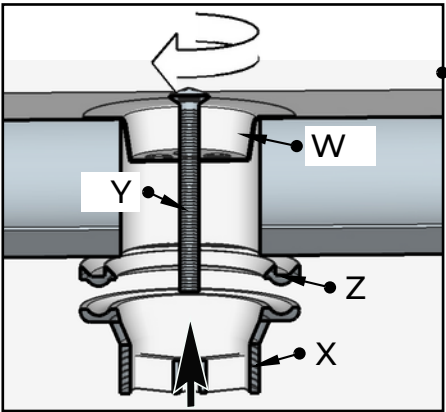

DET 3

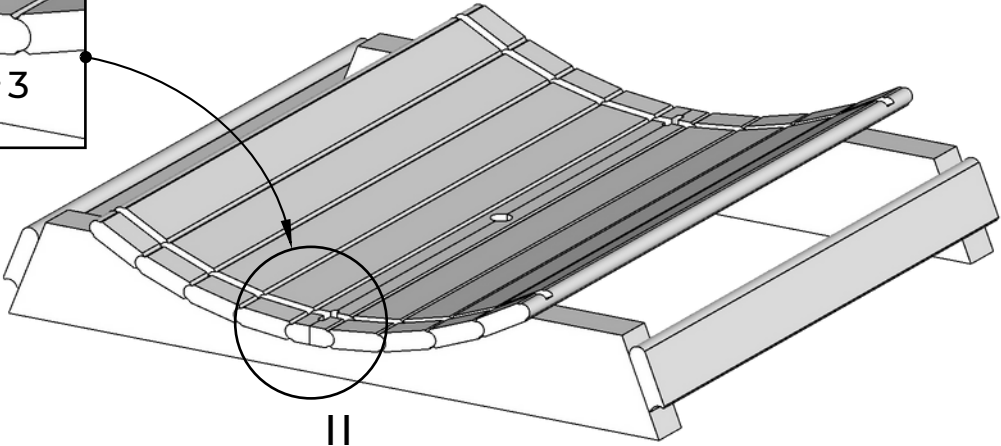

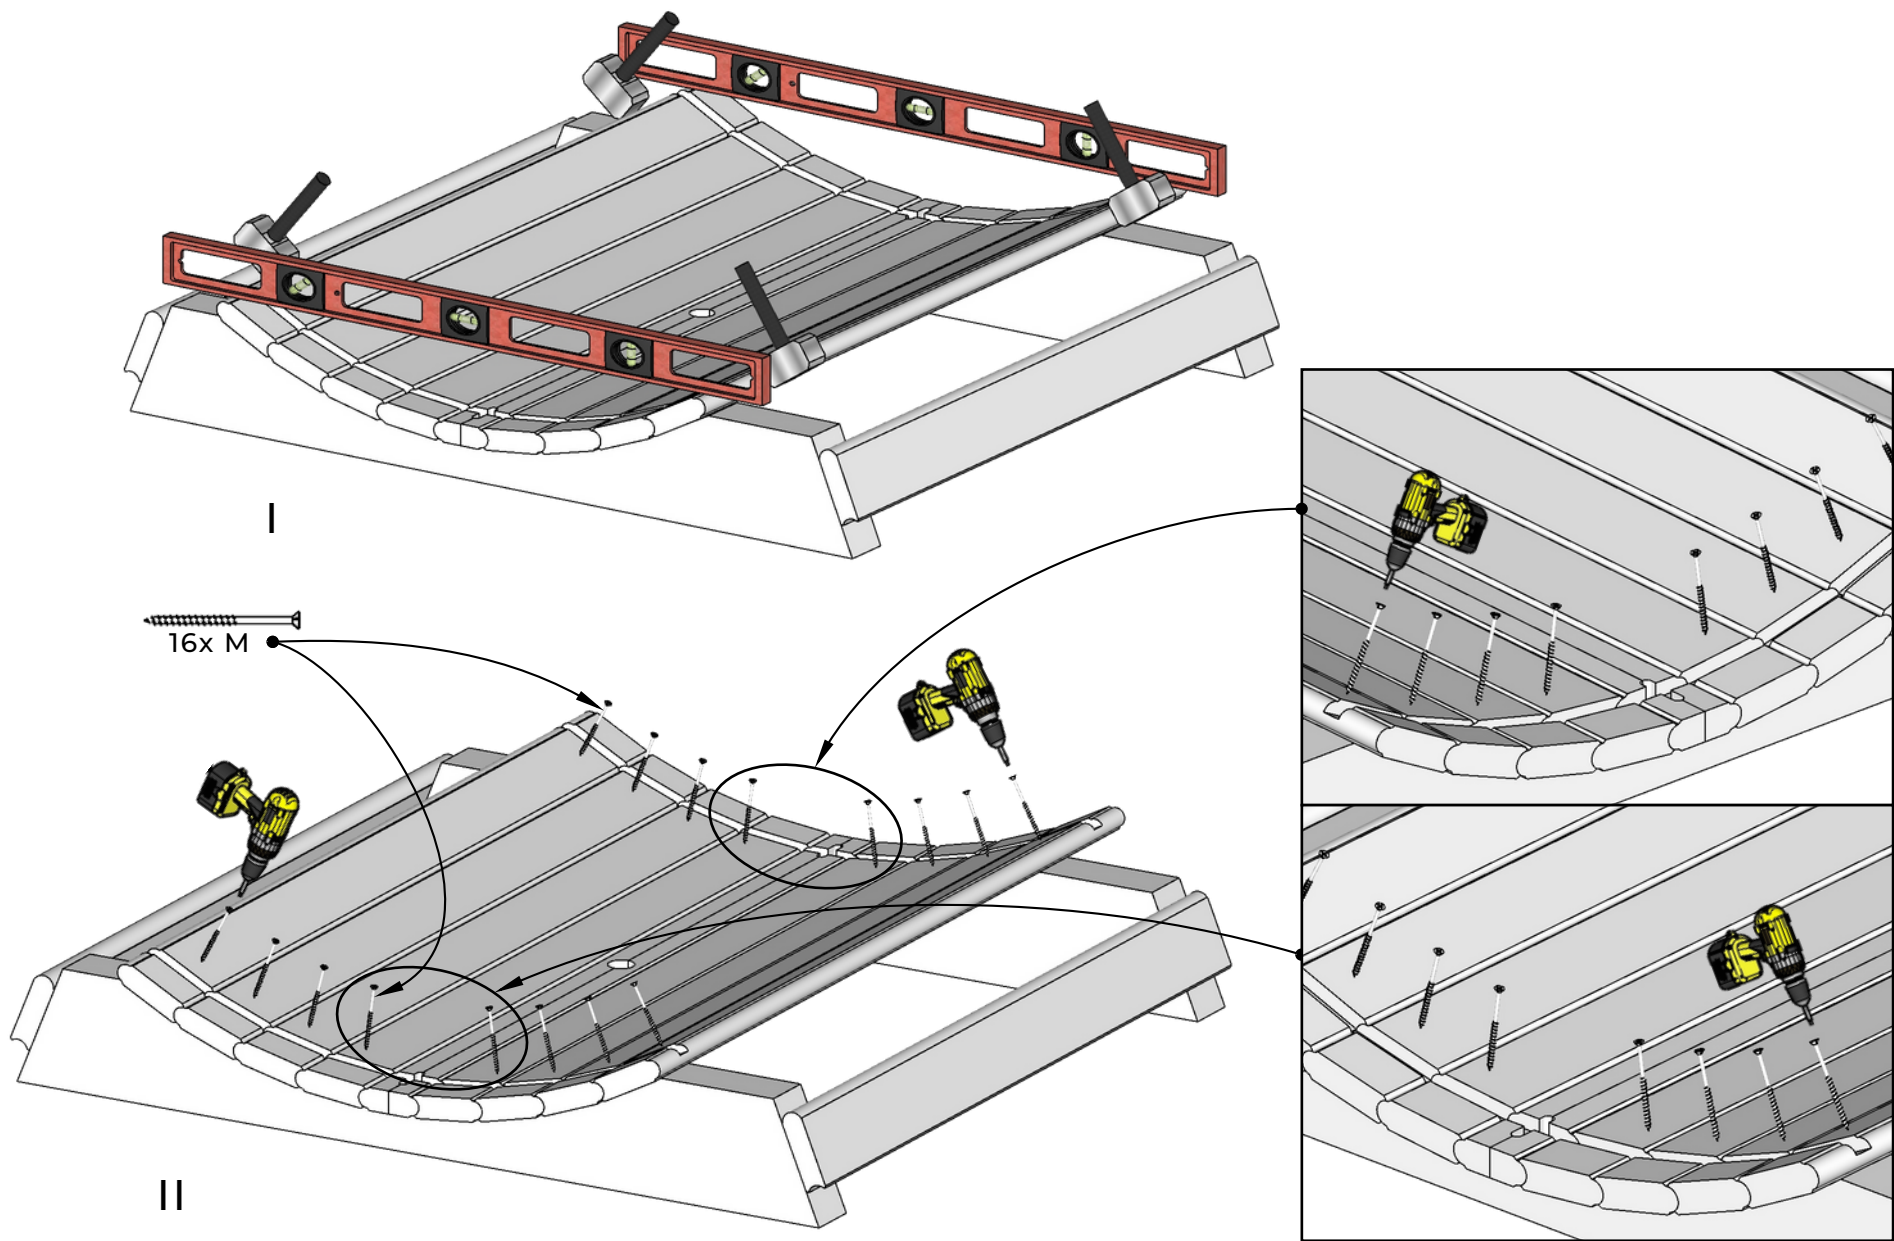

Sauna 160, Ø200

Use waterlevel




Check walls installation
manual on extra pages!



Sauna wall configuration
depends on Your model!

DET 3


Fix temporarily
to support
walls.


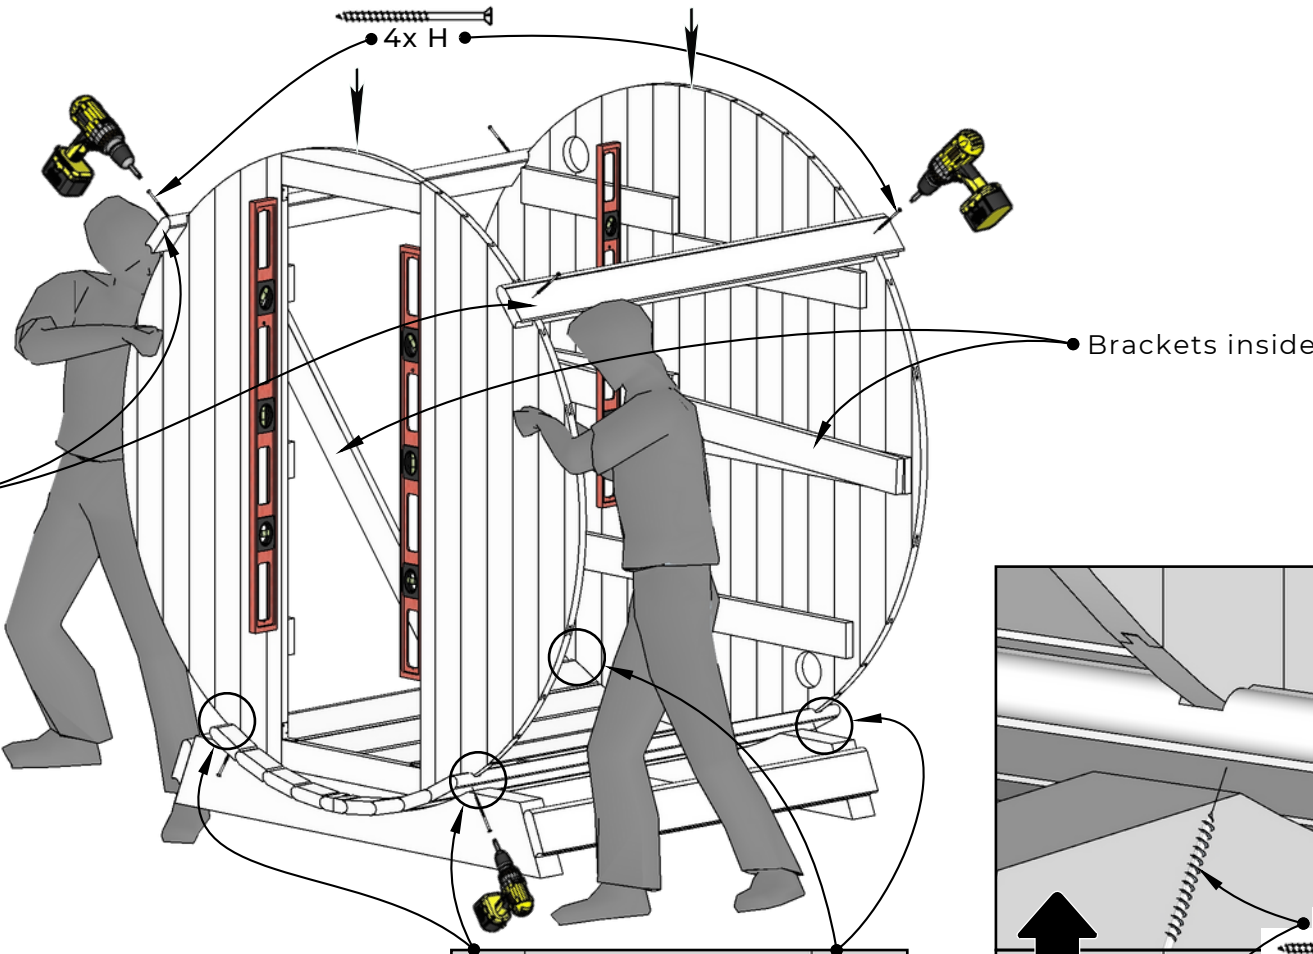


Important! Leave
the gap ~7 mm.


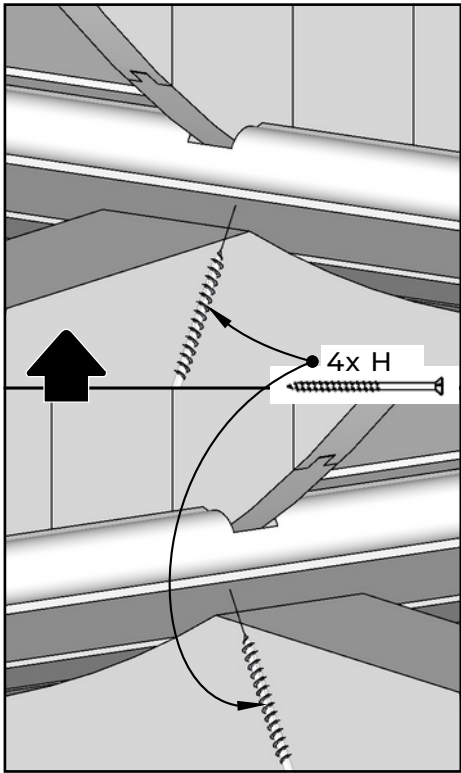
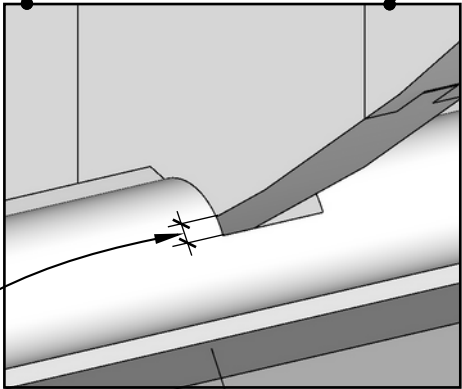


Sauna 160, Ø200

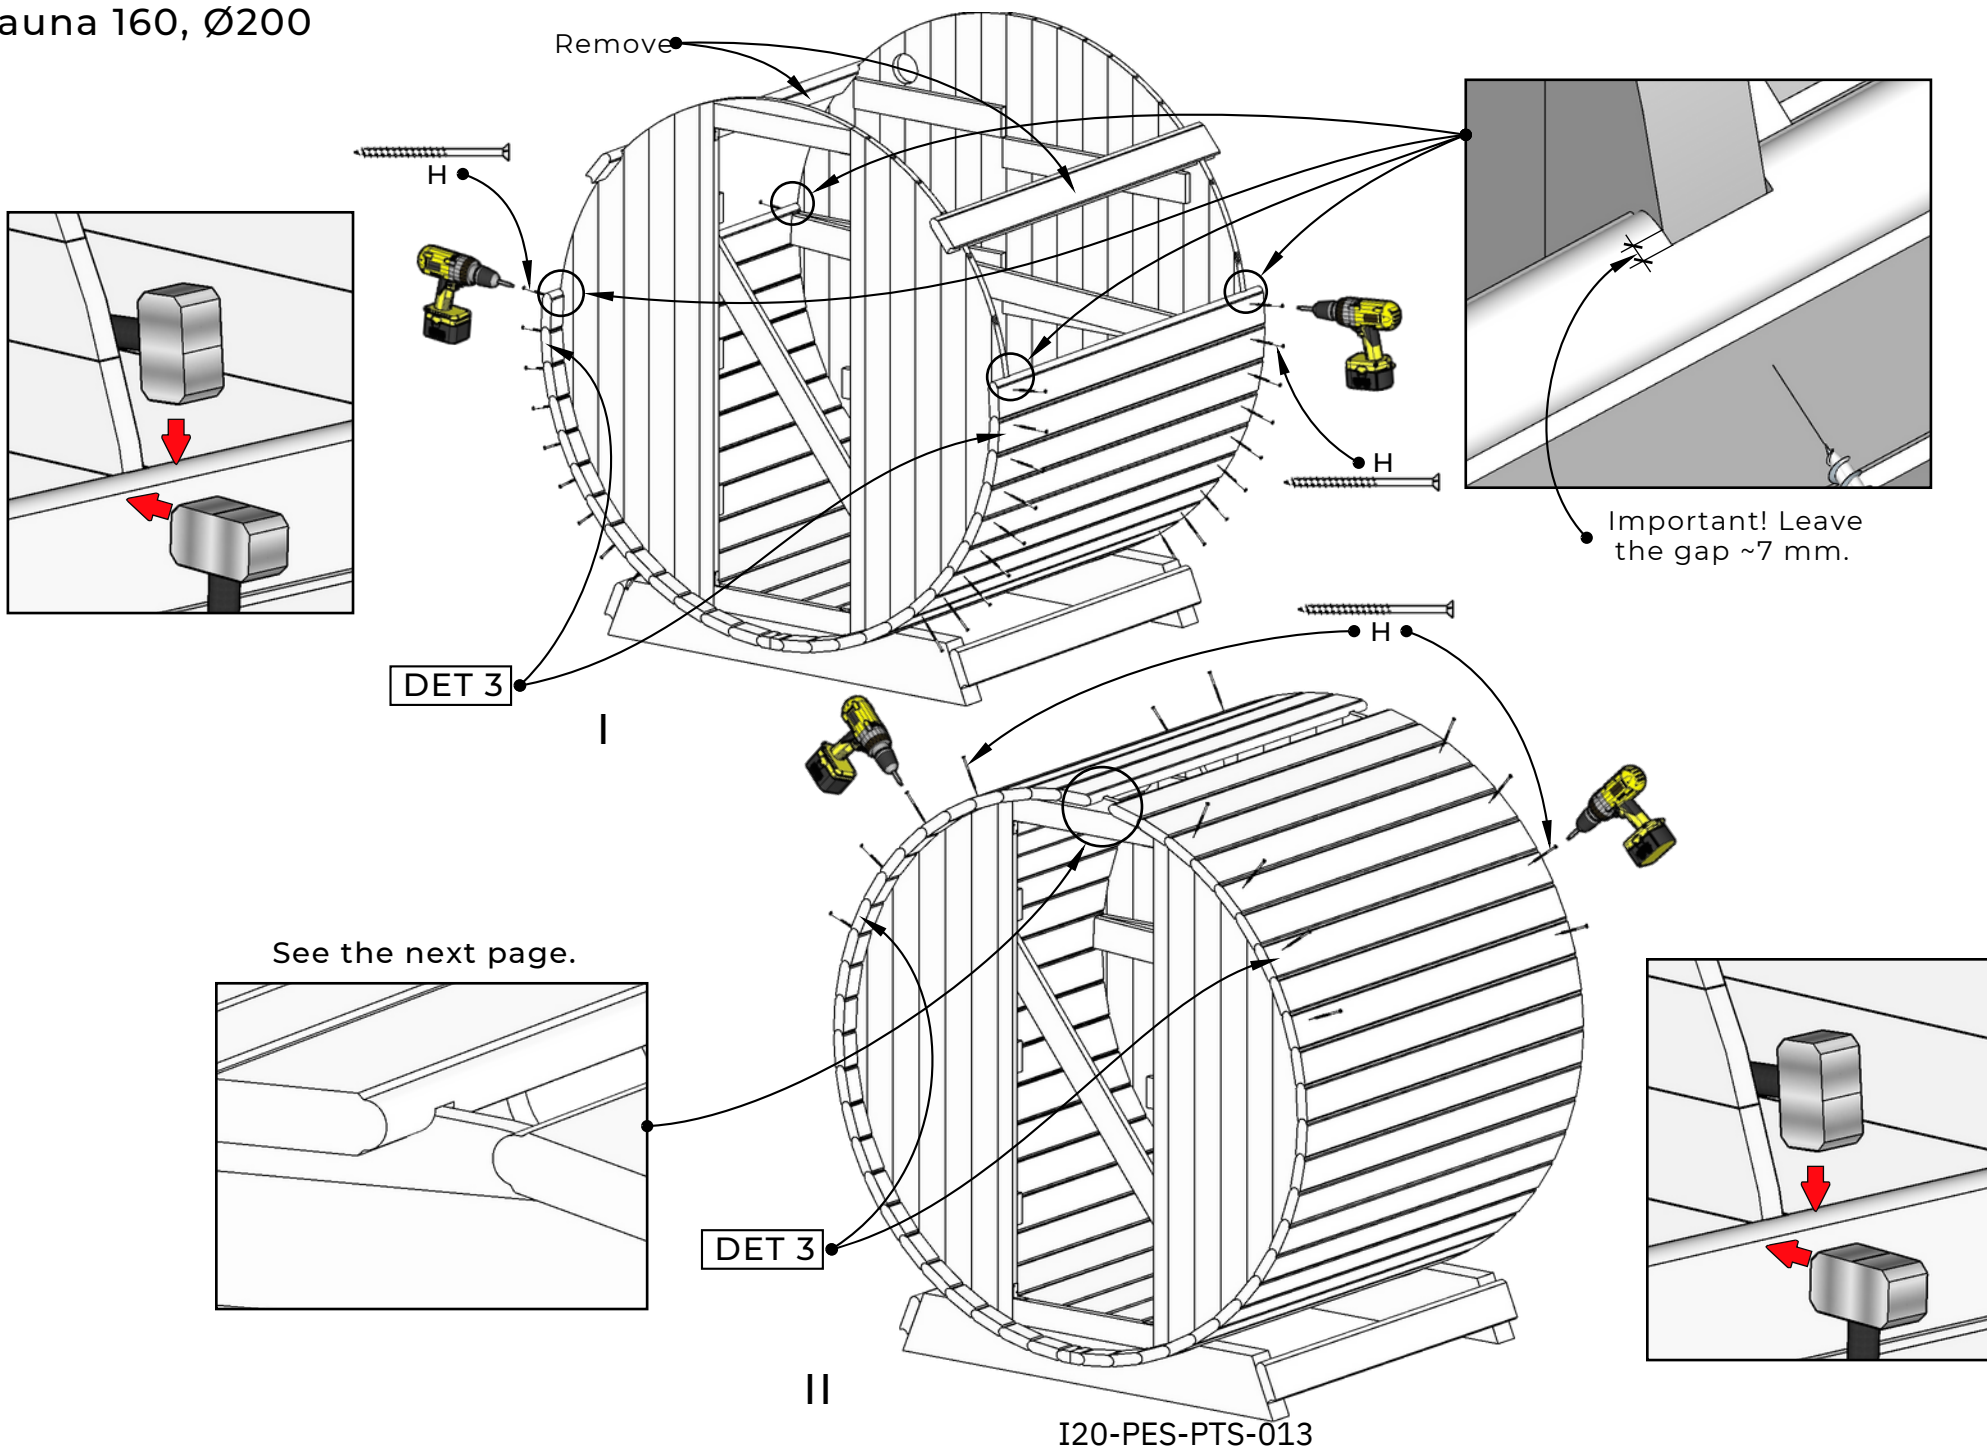

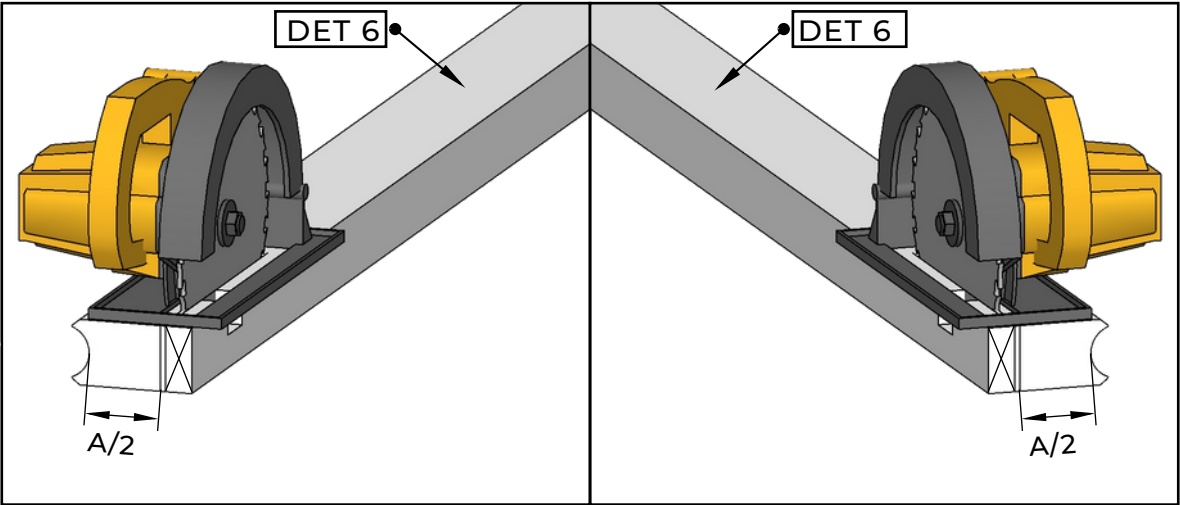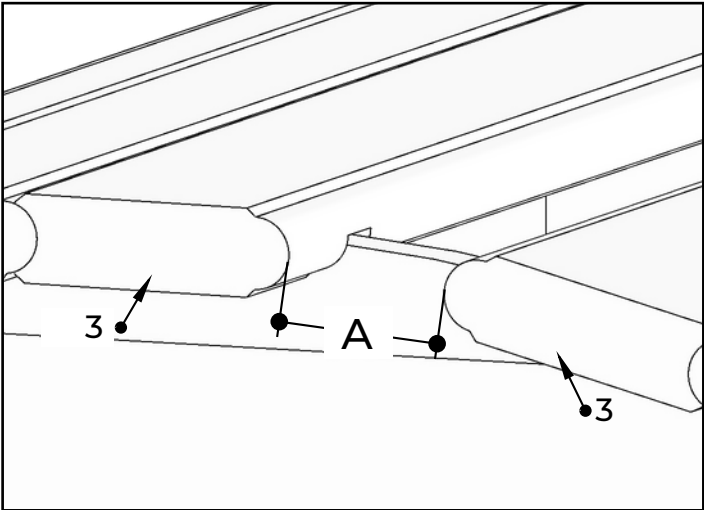


I

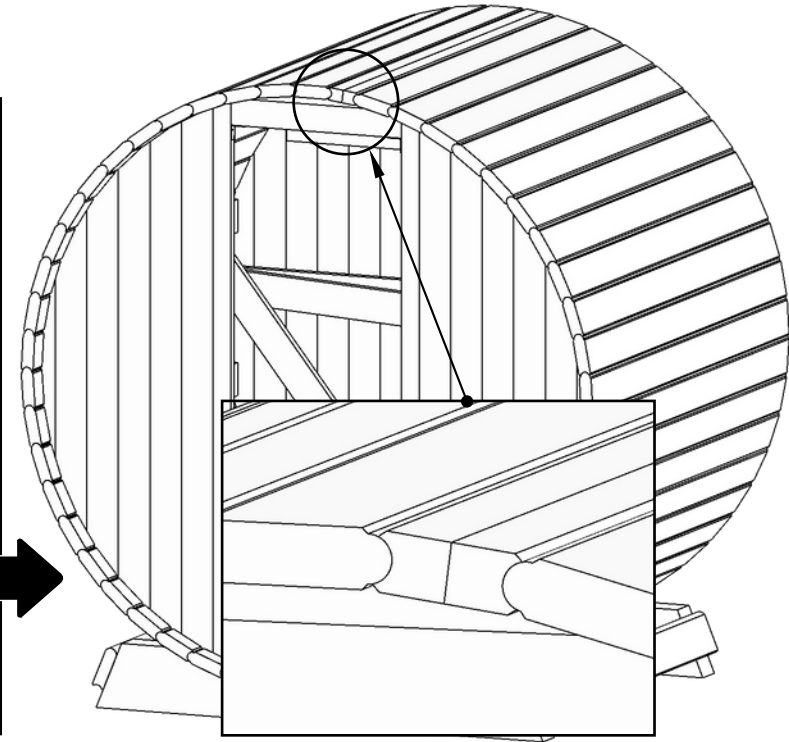
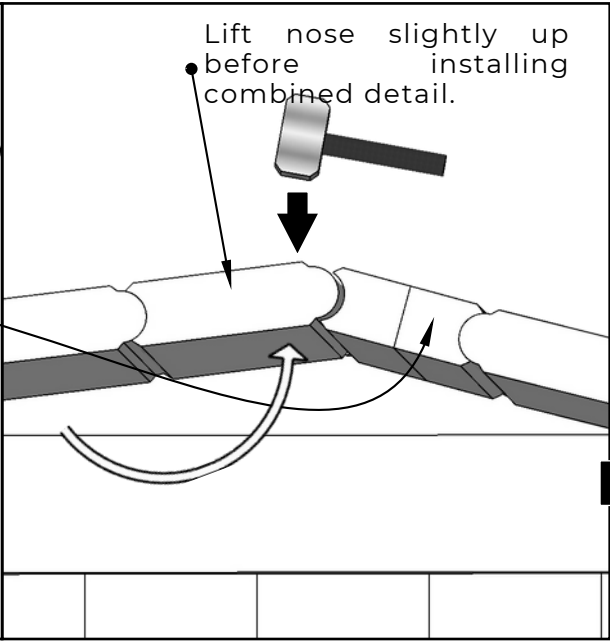
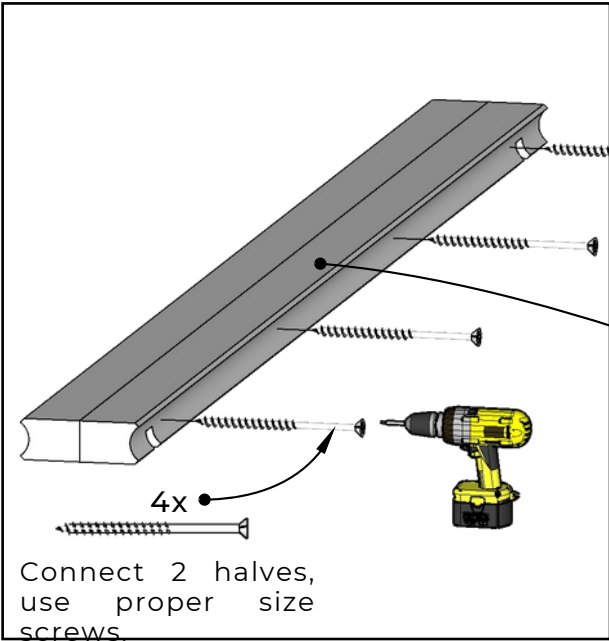


II


Sauna 160, Ø200

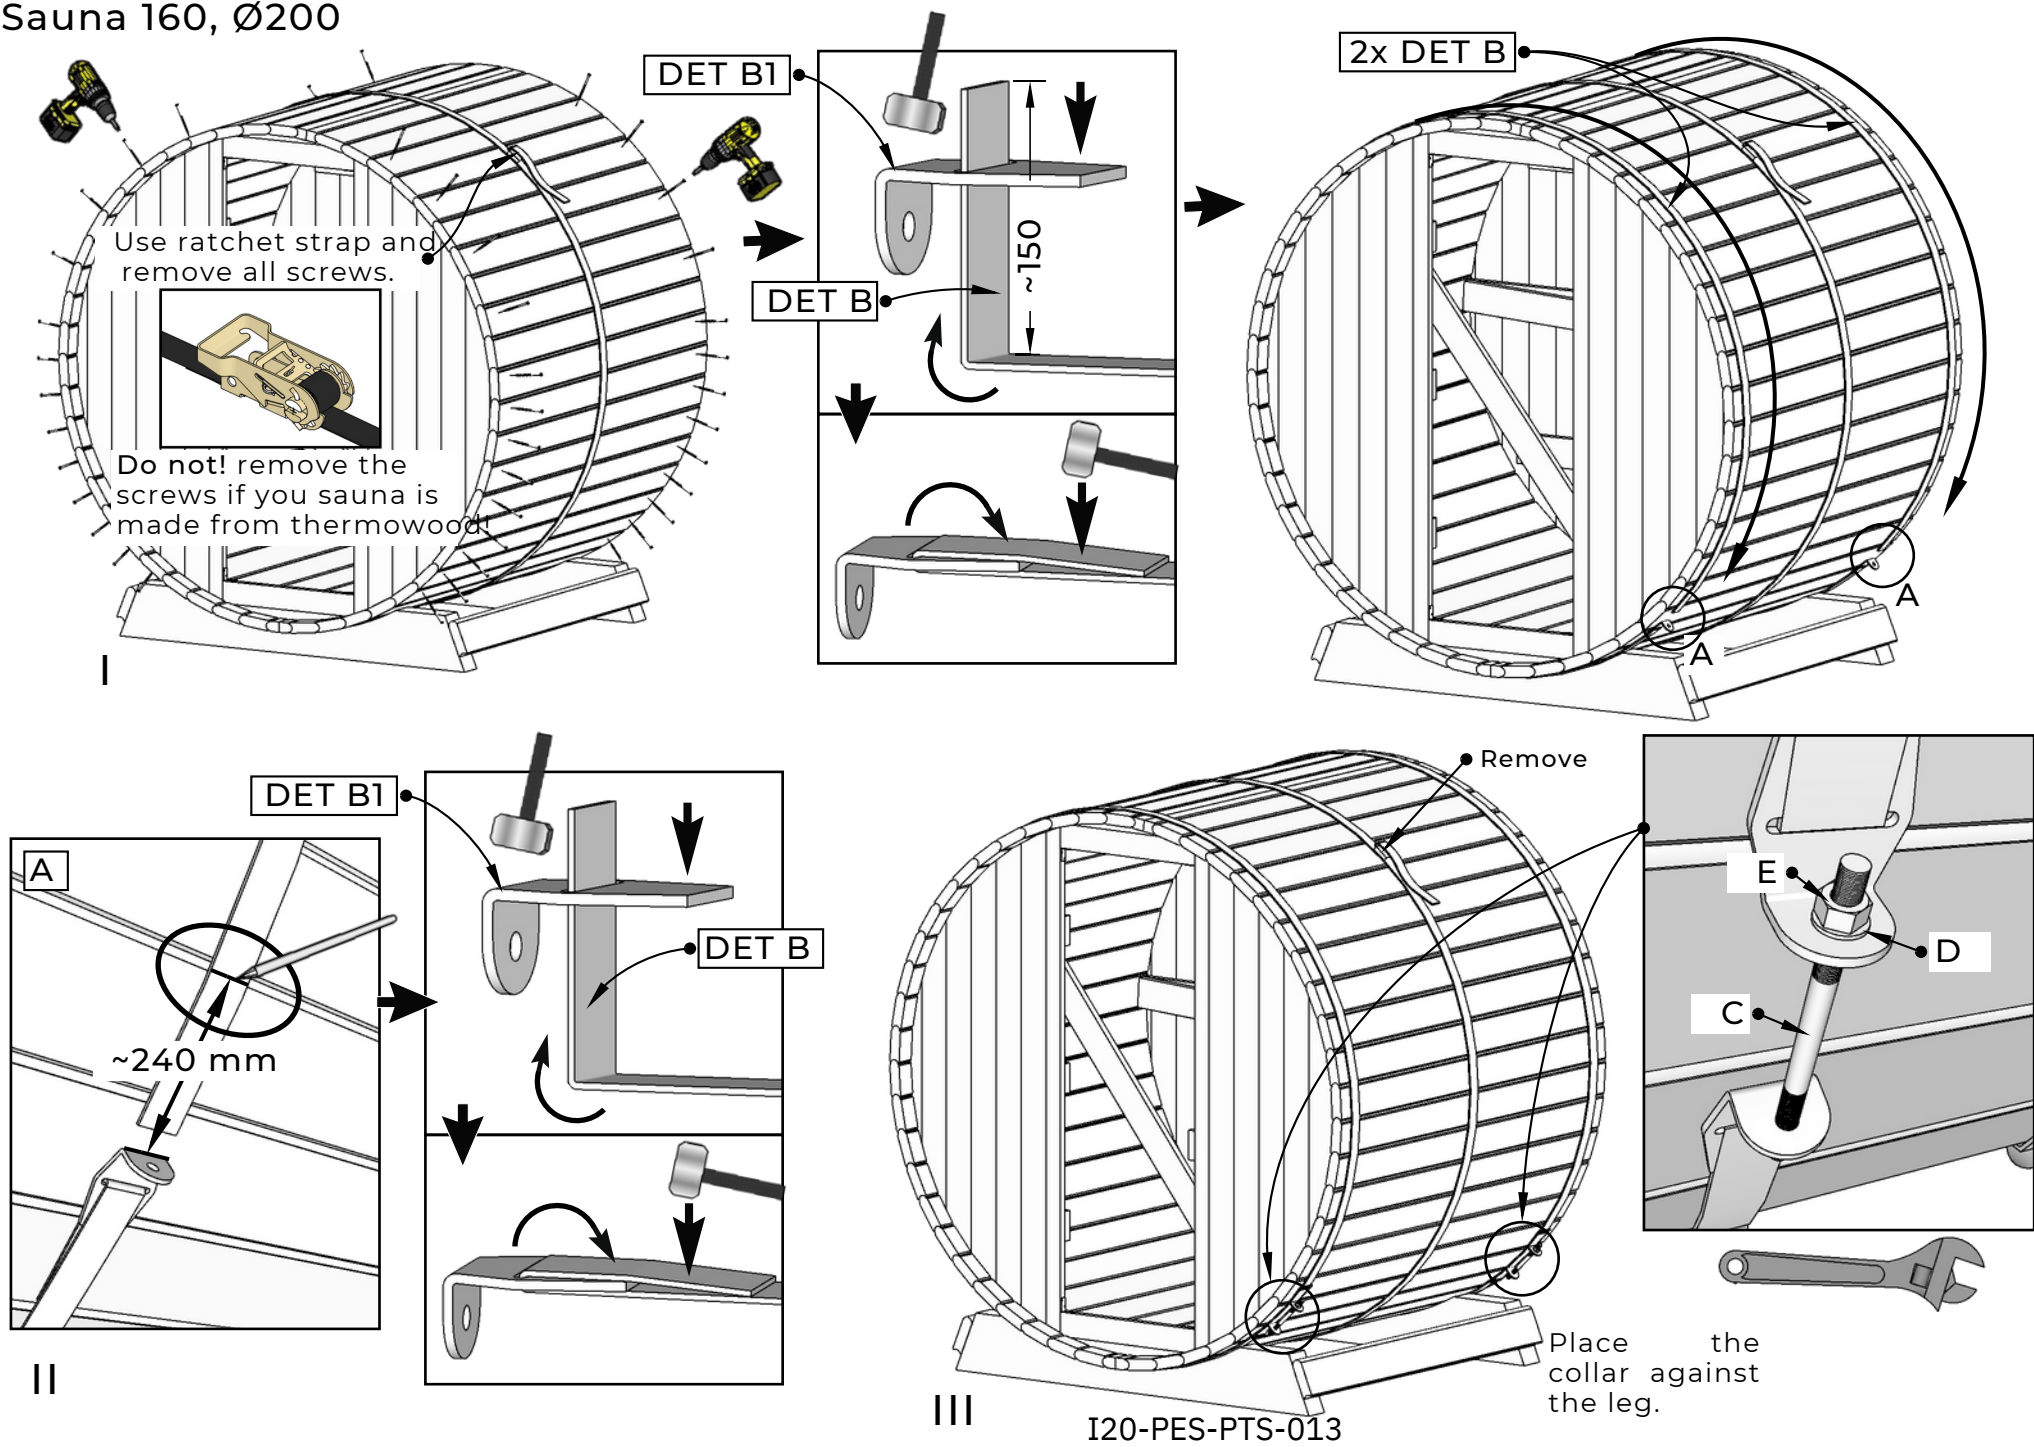




Sauna 160, Ø200

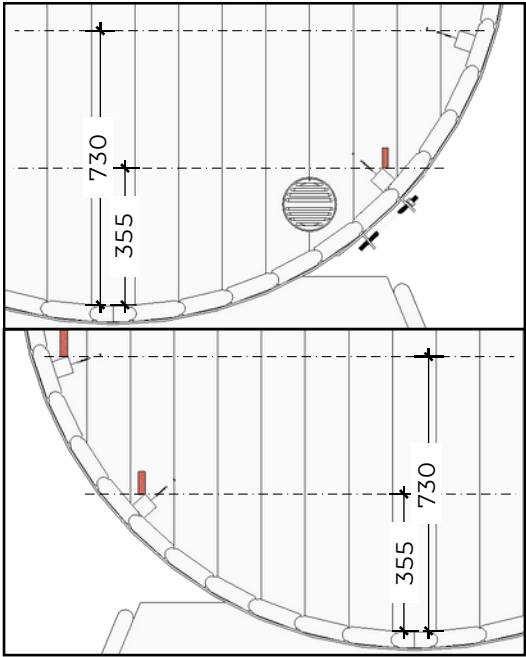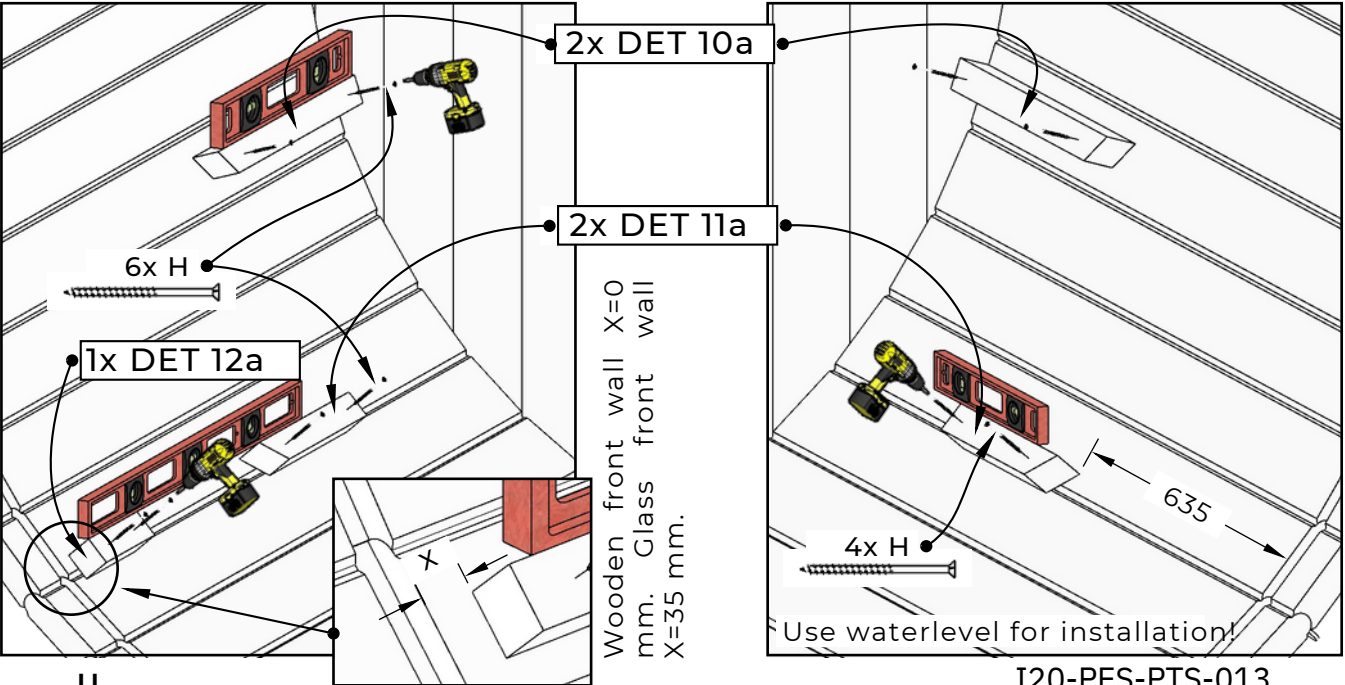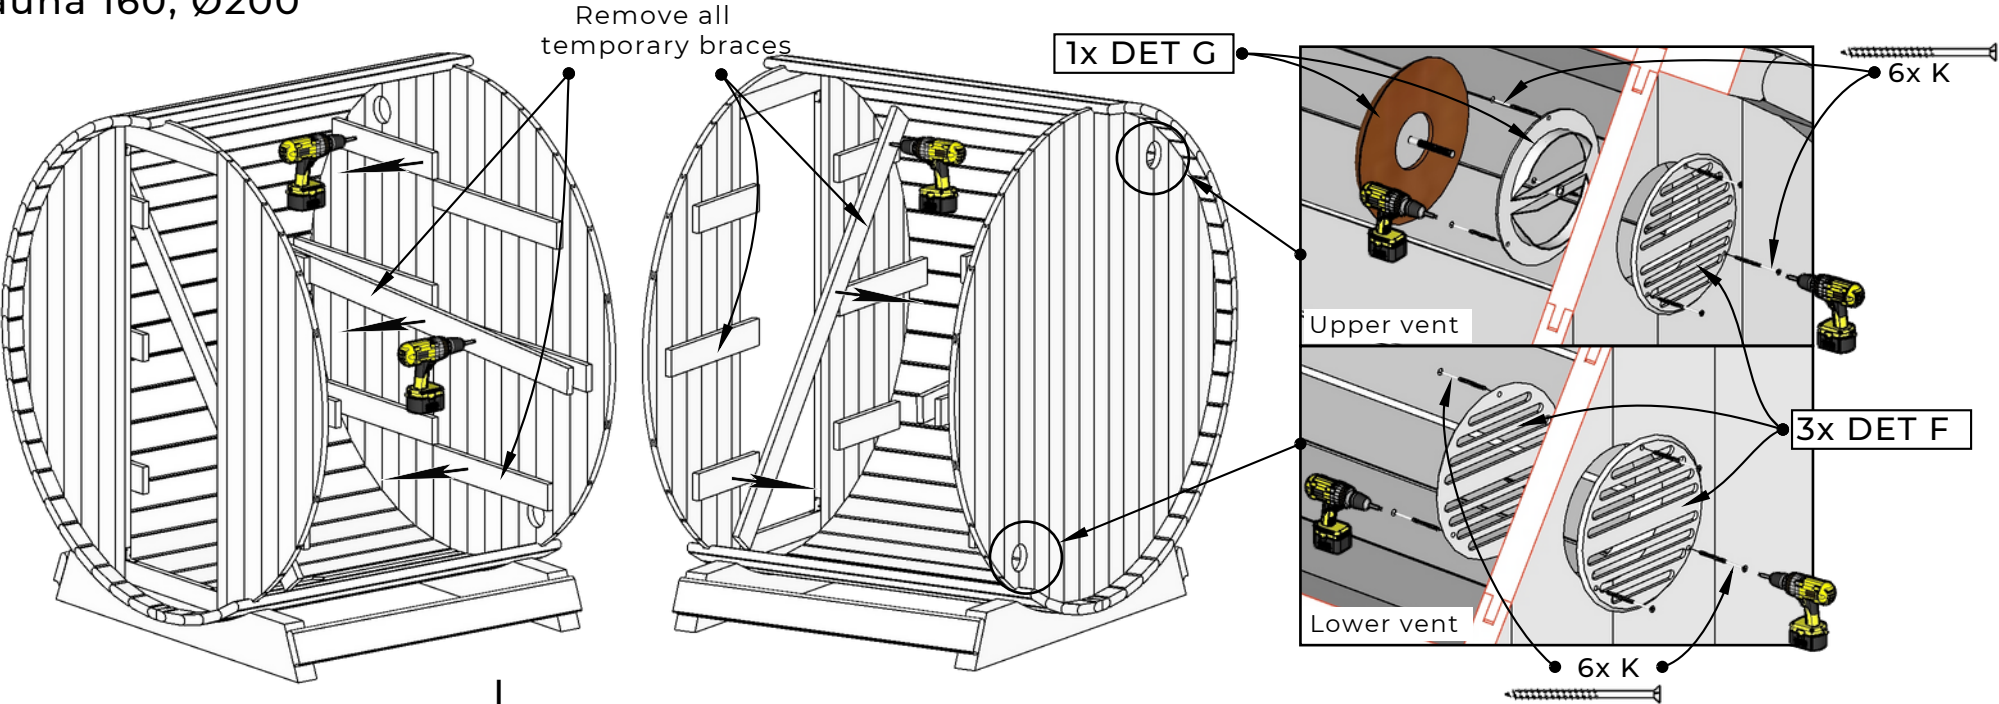


Use waterlevel for installation!

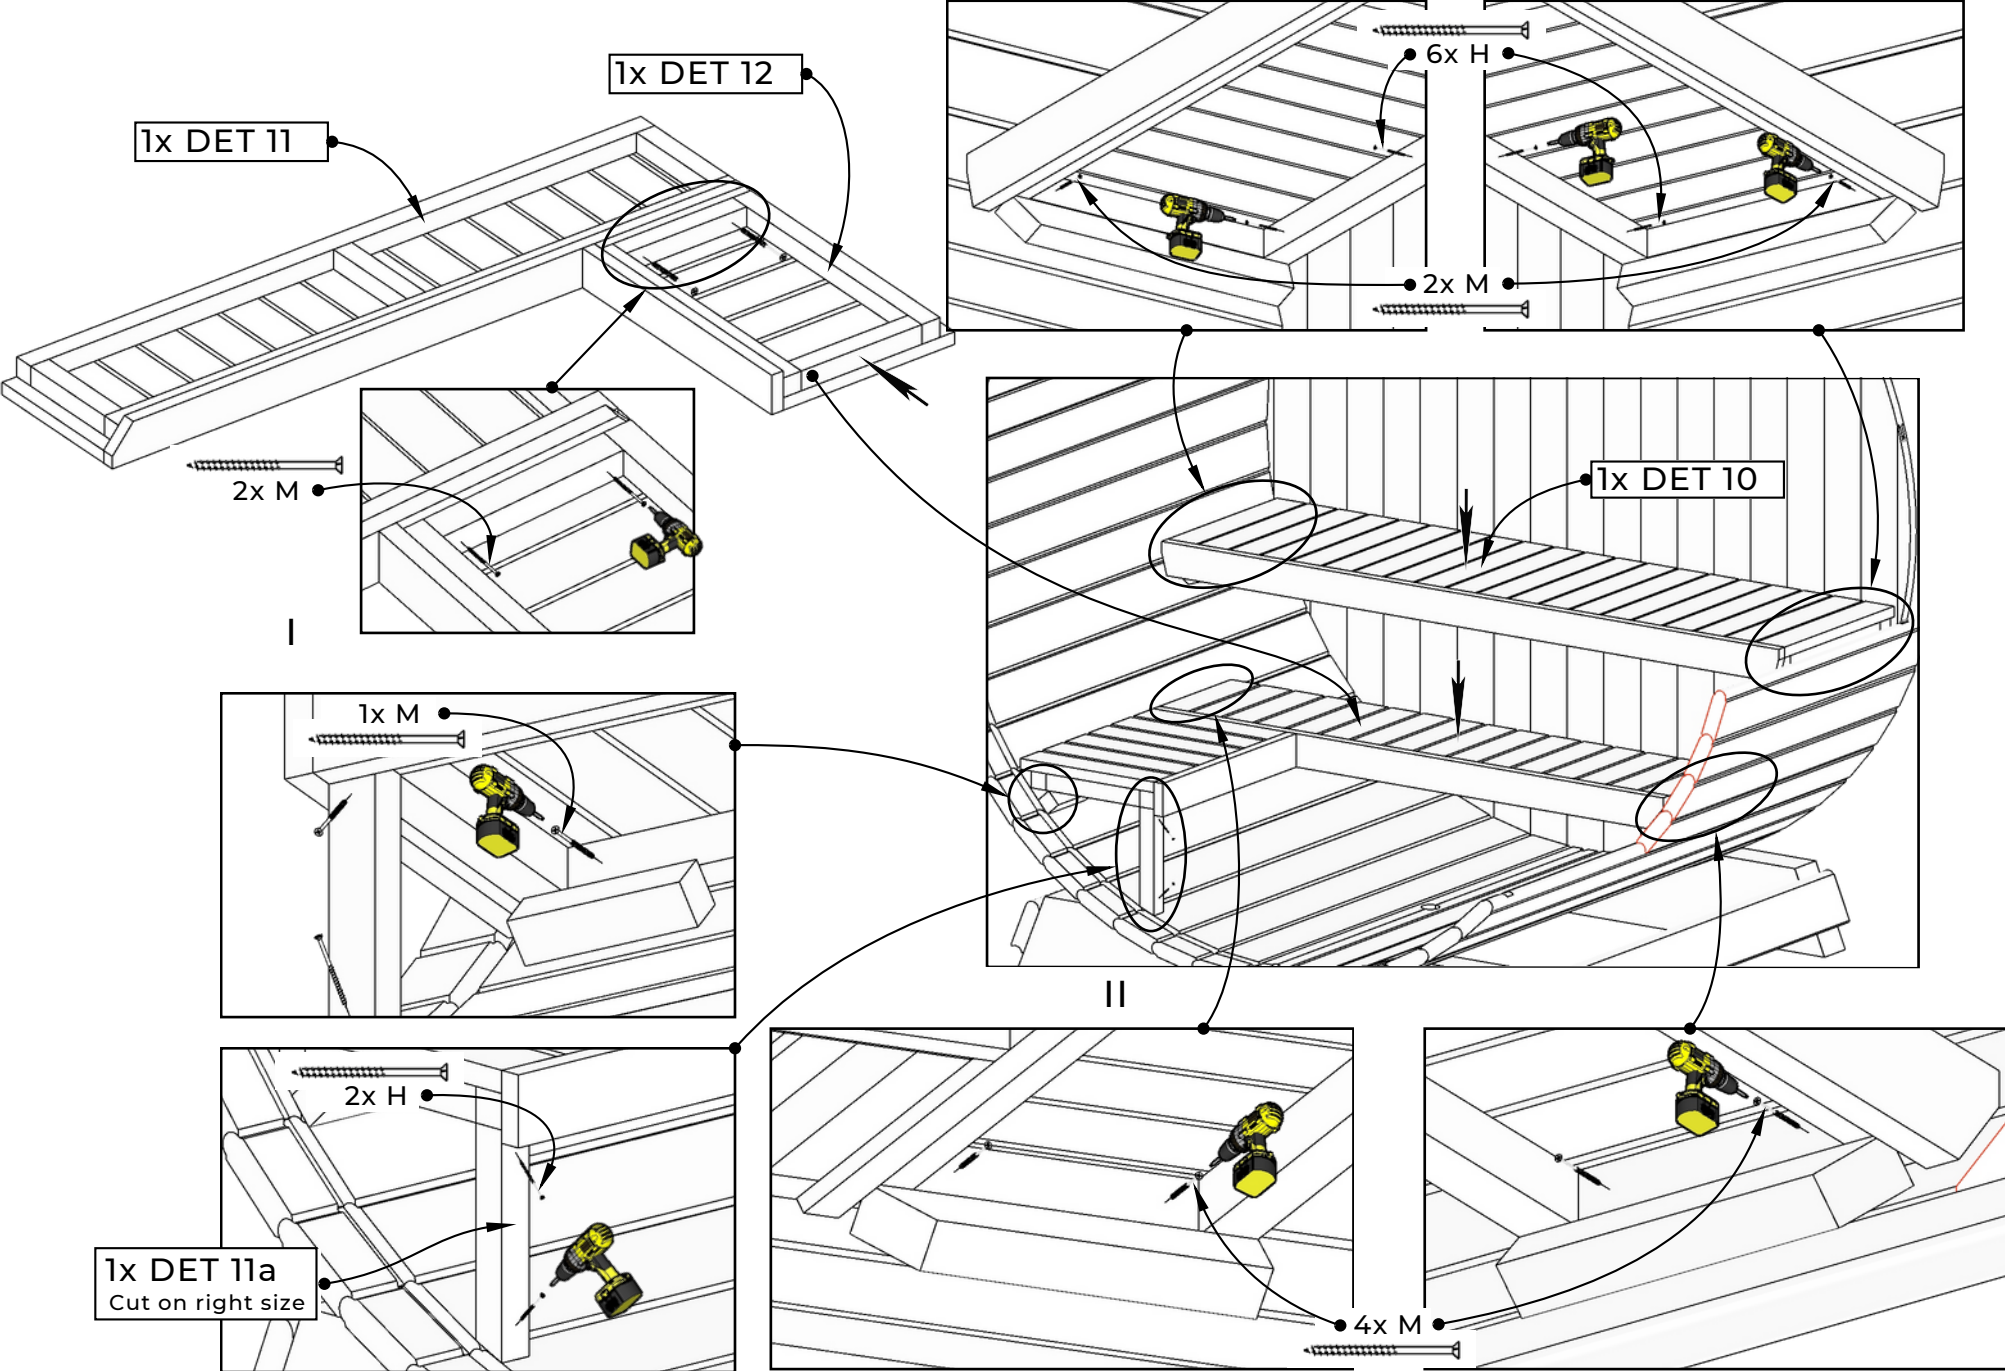

Sauna 160, Ø200

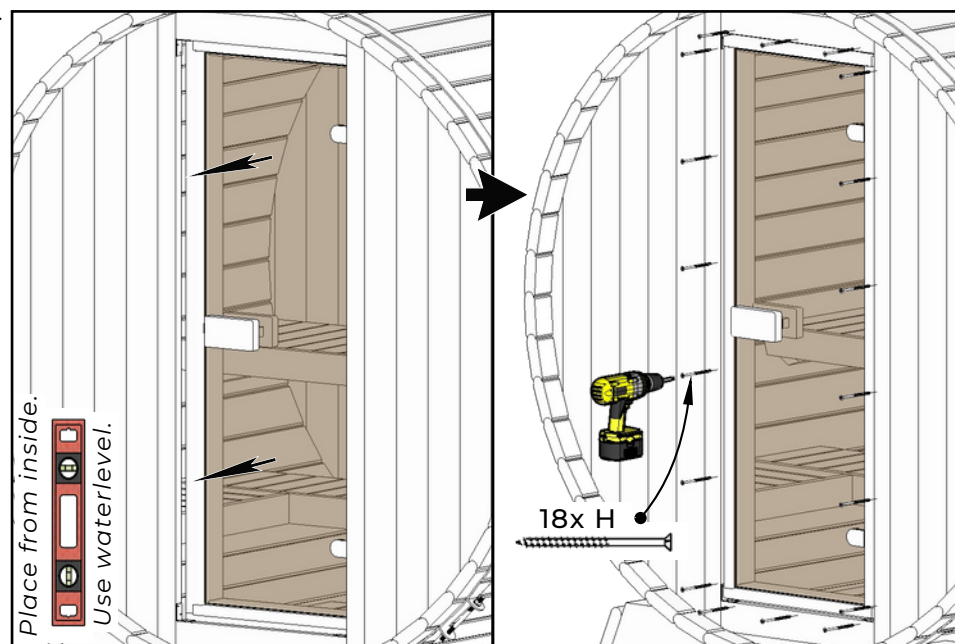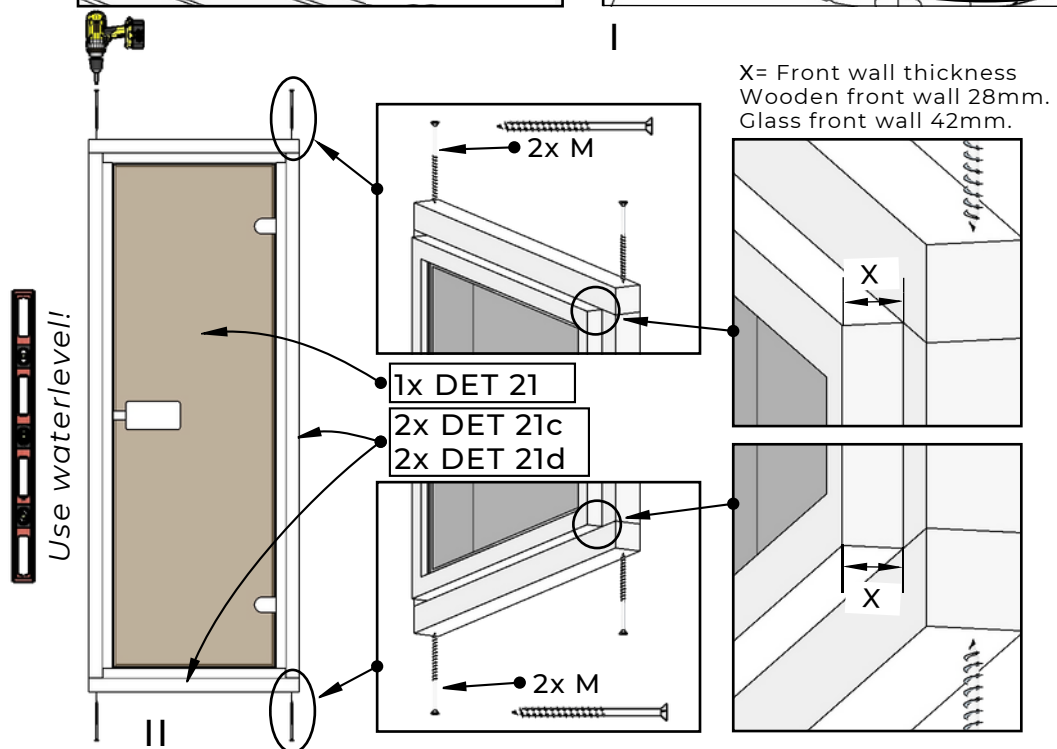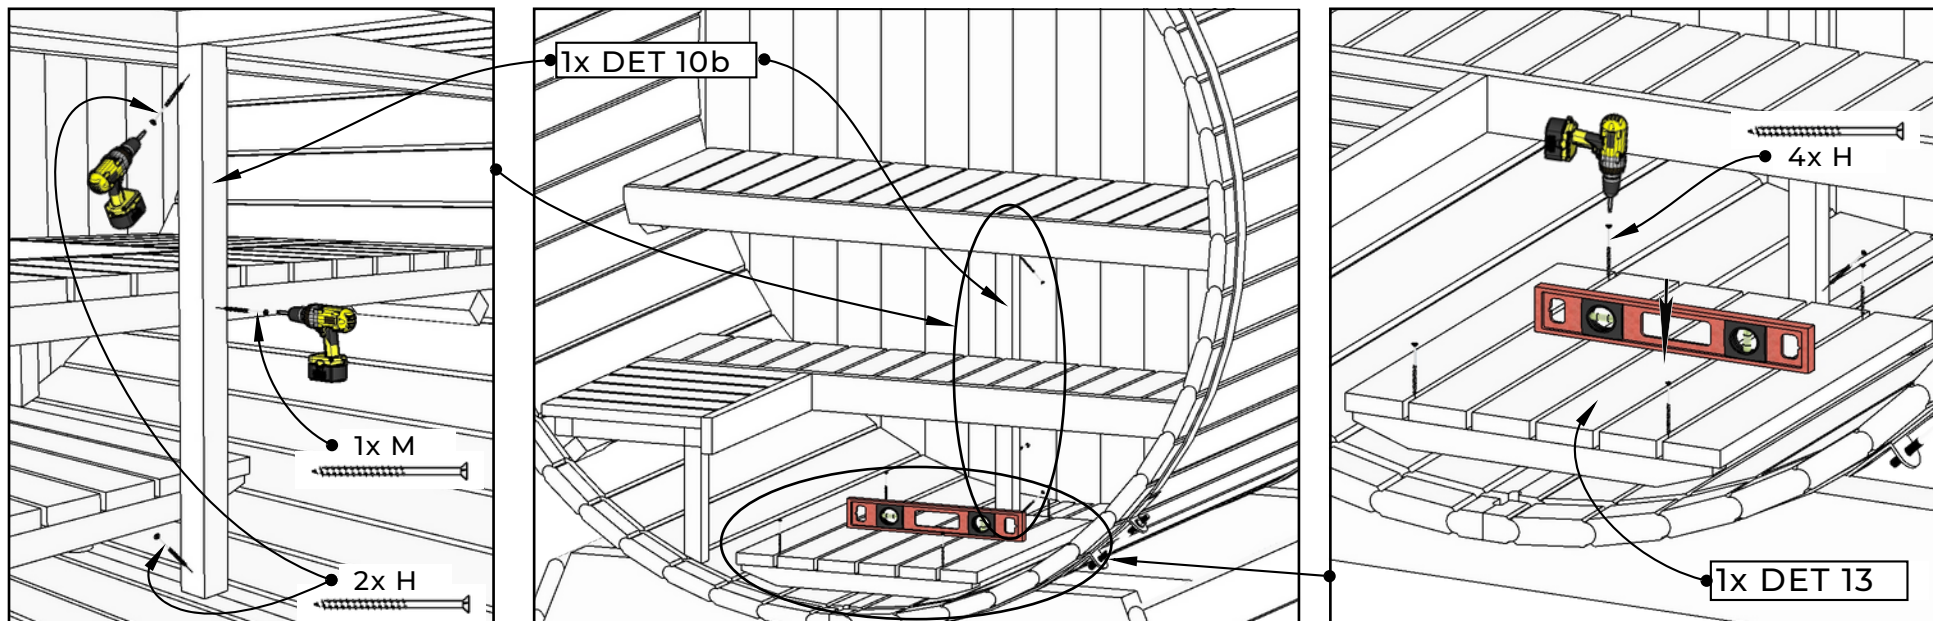


Sauna 160, Ø200

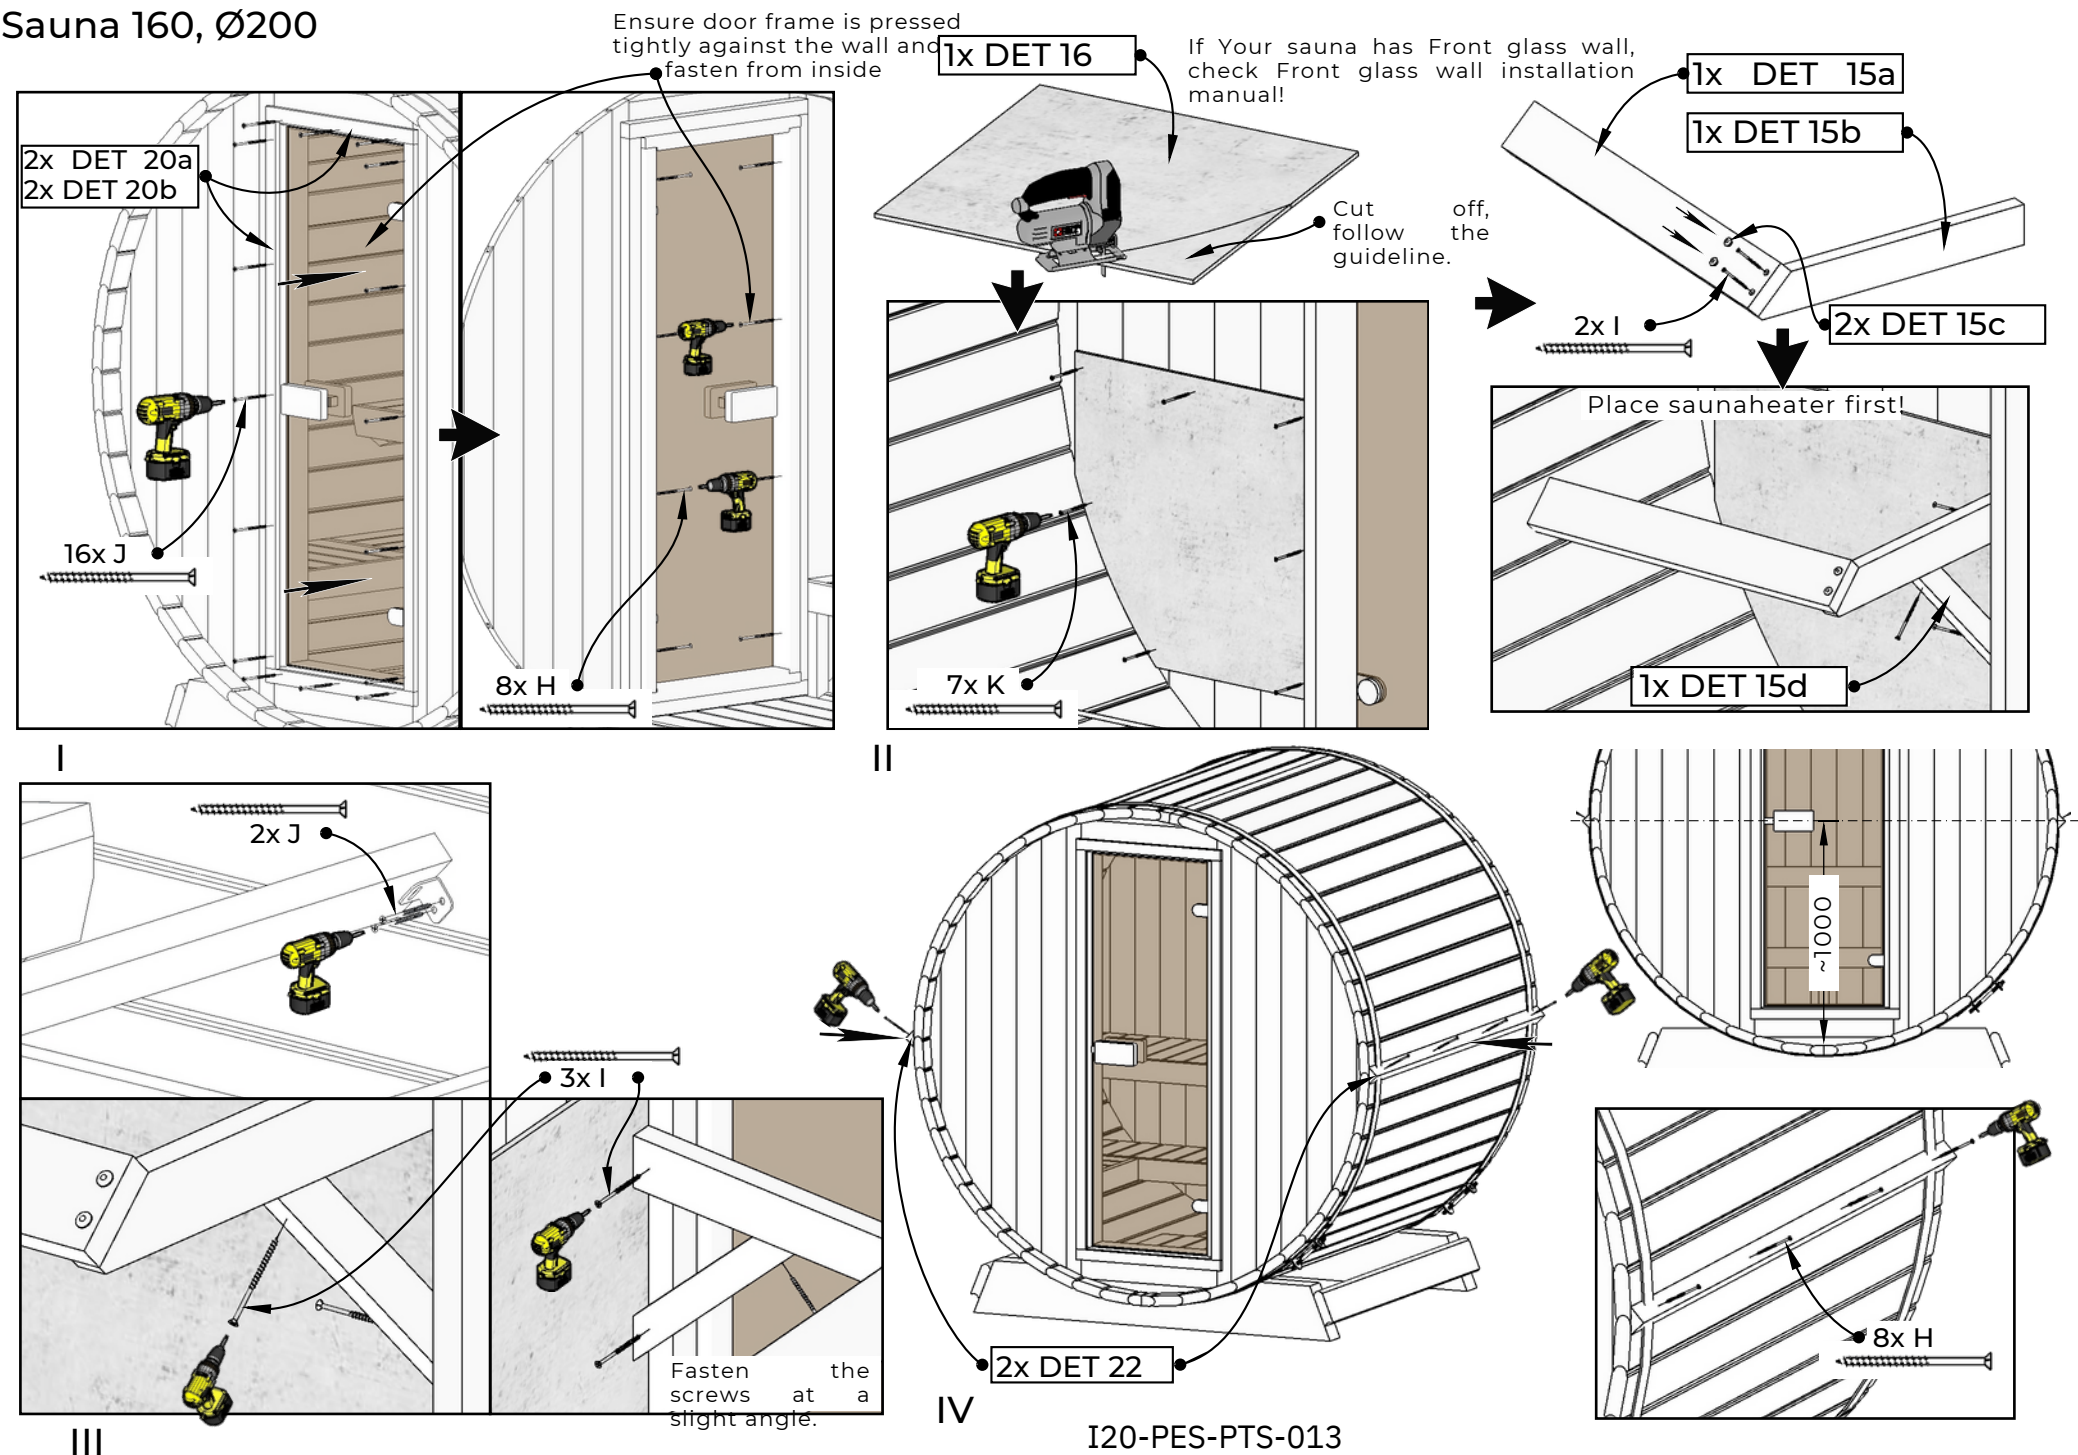


Sauna 160, Ø200

NB! Check also shingles installation manual inside shingles package.

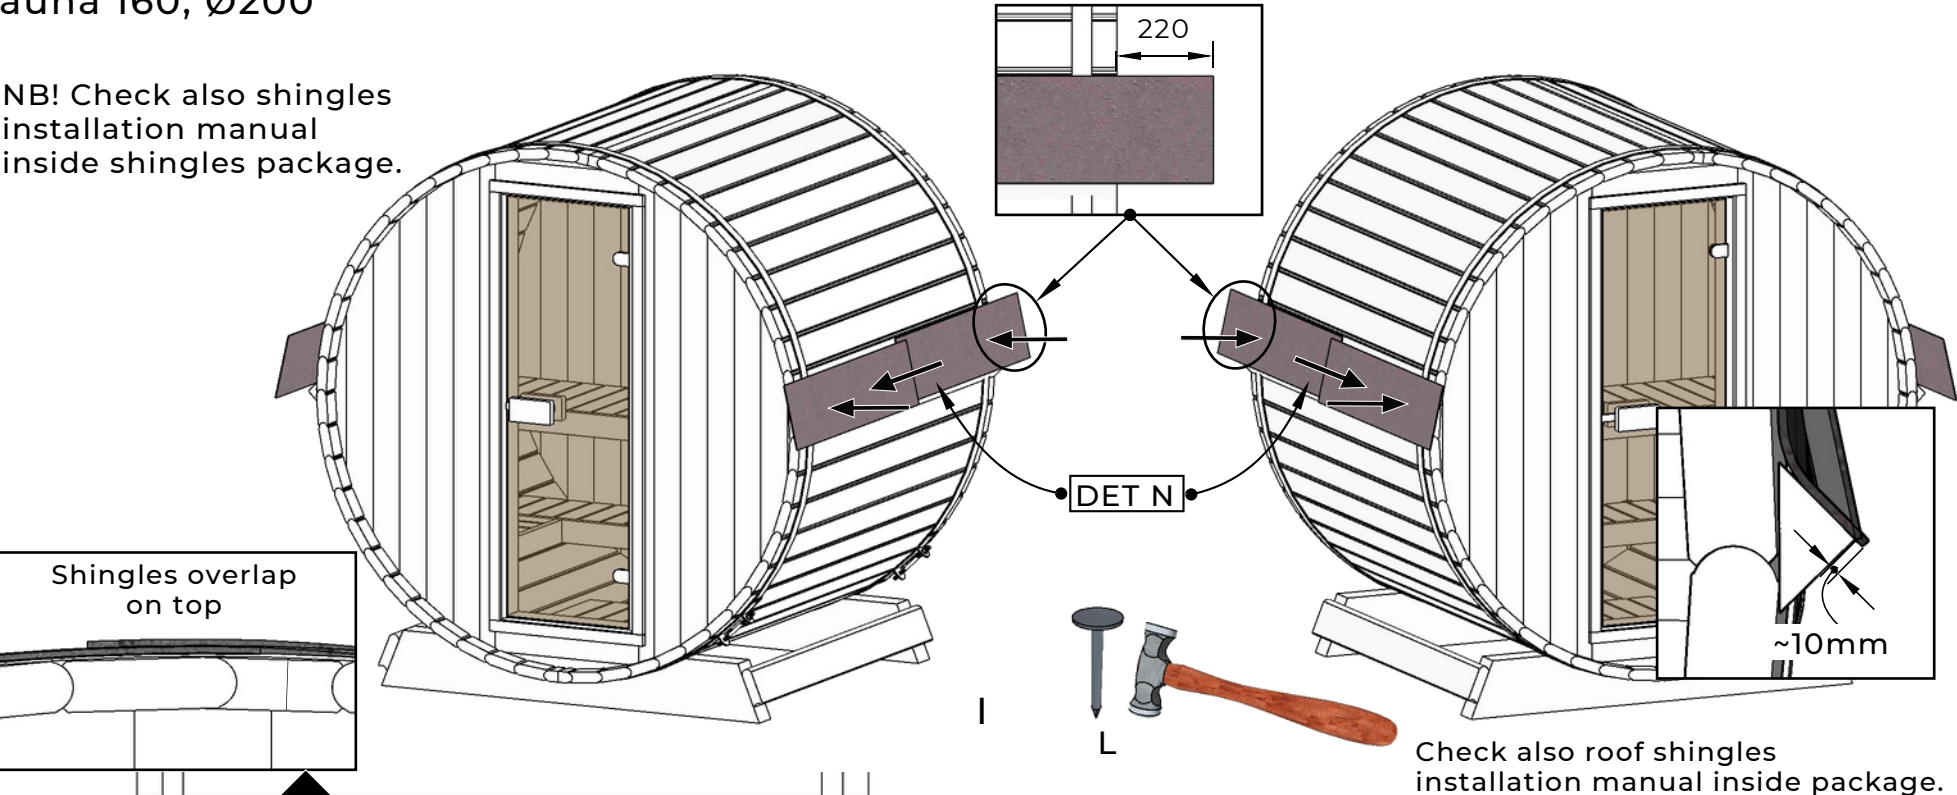

Check also roof shingles installation manual inside package.

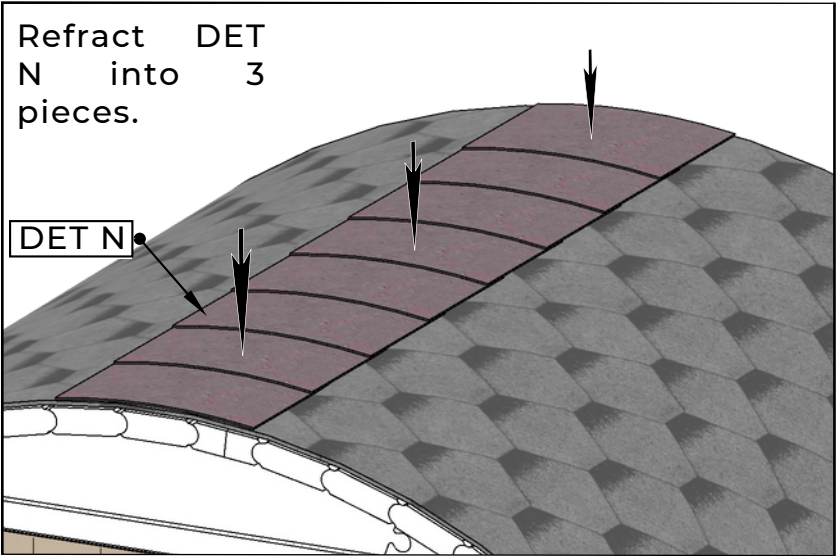

Sauna 160, Ø200

