



CDesign Basin & Cabinet

Installation
Care & Maintenance
Warranty



CDesign Basin & Cabinet Warranty

CDesign basins are covered by a 5 YEAR WARRANTY – DOMESTIC USE

This warranty covers faults in the product construction, material and assembly. Products, which are within 5 years from the date of purchase, found upon inspection by an authorized representative, to be defective in construction, material or assembly, will be replaced or exchanged with an equivalent product free of charge.

CDesign cabinets are covered by a 5 YEAR WARRANTY – DOMESTIC USE

This warranty covers faults in the product construction, material and assembly. Products, which are within 5 years from the date of purchase, found upon inspection by an authorized representative, to be defective in construction, material or assembly, will be replaced or exchanged with an equivalent product free of charge.

LABOUR AND SPARE PARTS

A 12 month warranty over spare parts and labour will cover spare parts which are within 1 year from the date of purchase and found upon inspection by an authorised representative to be defective in construction, material or assembly, will be replaced free of charge.

WARRANTY CONDITIONS

This warranty will apply only under all of the following conditions:

- The item has been installed by a licensed plumber
- The item has been installed for and subjected to domestic residential use only
- Failure is due to a fault in the manufacture of the product
- Proof of purchase (including date of purchase) is provided
- The installation of the product is on accordance with the instructions provided

Door and drawer alignment is NOT considered a warranty issue.

This warranty does not include faults caused by:

- Unsuitable or improper use
- Incorrect installation or installation not in accordance with the instructions provided
- Installation or part installation by the purchaser or any person other than a LICENSED PLUMBER
- Normal wear and tear
- Inadequate or complete lack of maintenance

- Chemical, electrochemical or electrical influences
- Harsh detergents or abrasive cleaners used on product finishes
- Failure of stone material. Stone is a natural material and as such Omvivo will not warrant against the failure of the natural stone

PLEASE NOTE: The manufacturer will not be liable for the cost of installation or removal of any unit and the warranty will be voided if damage occurred during or after installation or a damaged or incorrect unit has been installed.

1 YEAR WARRANTY - COMMERCIAL USE

“Commercial” use is all use other than for normal domestic residential purposes, including use in non-business places as in public buildings, schools, sports centres and in establishments that contain private bathrooms with high frequency of use by many individuals such as hotels, motels, retirement villages and hospitals.

The commercial warranty covers this product against manufacturing faults in the construction, material and assembly of both the finished product and any spare parts for a period of 1 year from the date of purchase. Products and spare parts, which are found upon inspection by an authorized representative to be defective in construction, material or assembly will be repaired or exchanged free of charge. The warranty conditions and exclusions, which apply to the domestic use warranty, also apply to this commercial warranty.

EXCLUSIONS

To the fullest extent permitted by law, the manufacturer excludes all liability for damage or injury to any person, damage to any property and any indirect consequential or other loss or damage.

CLAIM PROCEDURE

For all warranty queries, customers are to contact the branch where the product was purchased. These details can be found on your purchase invoice.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure.

Please inspect items upon delivery.

If you believe there is a fault, damage or the item is incorrect contact the place of purchase immediately, DO NOT PROCEED WITH INSTALLATION.

ONCE INSTALLED NO CLAIMS OF DAMAGE WILL BE ACCEPTED

Omvivo allow 7 days from receipt of goods for notification of any discrepancies in goods received.

CDESIGN BASIN ASSEMBLY LIST

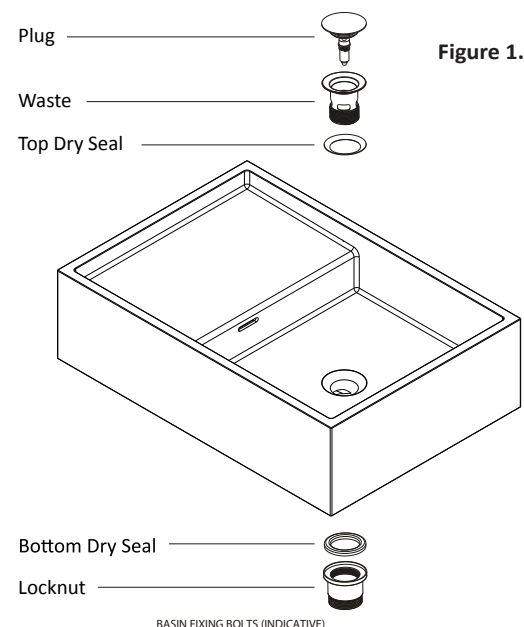


Figure 1.




Figure 2.

Installer to determine appropriate fixing bolts on installation of basin to wall surface

Note:

CDesign micro 485 and 620 = 1 x set of fixing bolts
CDesign 1330 double and 1620 double = 3 x sets of fixing bolts

MOUNTING CDESIGN BASIN TO WALL INSTALLATION HEIGHTS

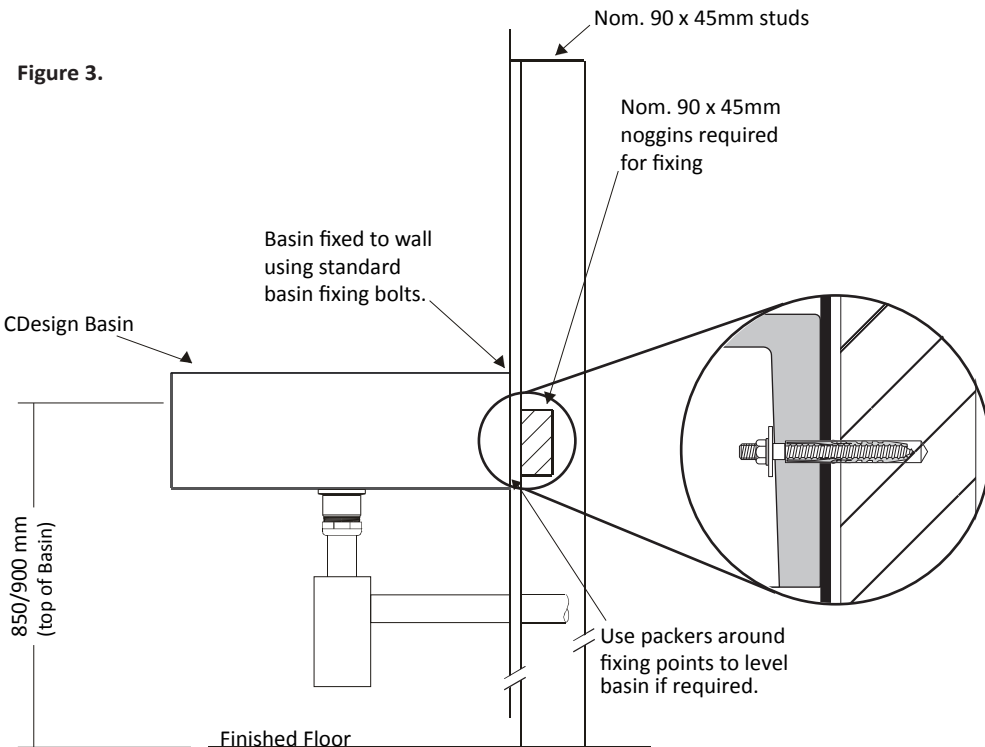

1. Mark out bolt positions ensuring they are level and at the correct height.
2. Installer to determine appropriate fixings, ensure wall is suitable and studs, noggins etc are in appropriate locations.
3. Once appropriate fixings are in the wall, place basin over bolts and tighten. See figure 3.
4. Once basin is attached to wall, connect trap and other hardware as necessary.

Note: Bottle trap is not included with basin

CDesign Basin & Cabinet Care & Maintenance

Always start your cleaning routine with the basic clean and move to a deep clean if necessary.

Basic Clean: Spills should be cleaned promptly. Clean with a mild detergent or soapy water and a soft cloth, sponge or non-scratch scourer *¹.

Deep Clean: For a deep clean and to remove cosmetics, ink and other colour agents that may leave marks on the surface use a diluted very mild abrasive cleaner* with a soft cloth in light circular motions. For stubborn marks or staining a light buff in circular motion using diluted very mild abrasive* cleaner with a non-scratch scourer *¹ will generally restore the finish.

Intense clean /repair: For extreme marks and light scratches a very light buff in circular motions using the fine grade sand/glass paper 1 will restore the surface. A heavier grade of sandpaper will scratch the surface, which can be removed by then using a light sand paper.

Furniture Basic Clean: Never allow water or liquids to sit on your timber or thermofoil cabinetry. Water can penetrate cabinetry where joints are not completely sealed by the installer which can damage your cabinet.

Always clean spills and water immediately. Clean with a mild, non acidic, non- abrasive detergent and soft cloth. Finish by cleaning off detergents with a soft damp cloth and towel dry.

Softskin Basic Clean: Clean with warm soapy water or non acidic, non-abrasive, mild detergent and a soft cloth. Finish by cleaning off detergents with a soft wet cloth and towel dry.

Important notes:

For best results finish by wiping surface clean of all detergents and dry with a soft clean cloth. Regular cleaning will assist to keep your solid surface looking fantastic and reduce wear and dirt build up.

For a consistent appearance, it is best to give the entire surface of the product the same clean/sand. Avoid applying excessive pressure or clean/rub the same area for a prolonged period of time, unless repairing a scratch or damage.


Never use sharp products such as steel wool or aggressive, commercial grade / strong cleaners or chemicals (e.g. acetone, Trichloroethylene, acids, and caustic soda) as these may damage and scratch the surface).

Only use your CDesign basin and cabinet cleaning instructions on your CDesign basin and cabinet as these cleaning methods may cause damage to other products, materials and finishes which will not be covered by your warranty.

* Always test 'non scratch' and 'mild abrasive' products in a non-conspicuous area first to ensure suitability as brands can differ.

¹ Your basin has been supplied with a white non scratch scourer and a fine grade sanding pad.


Figure 7. Adjusting drawer front

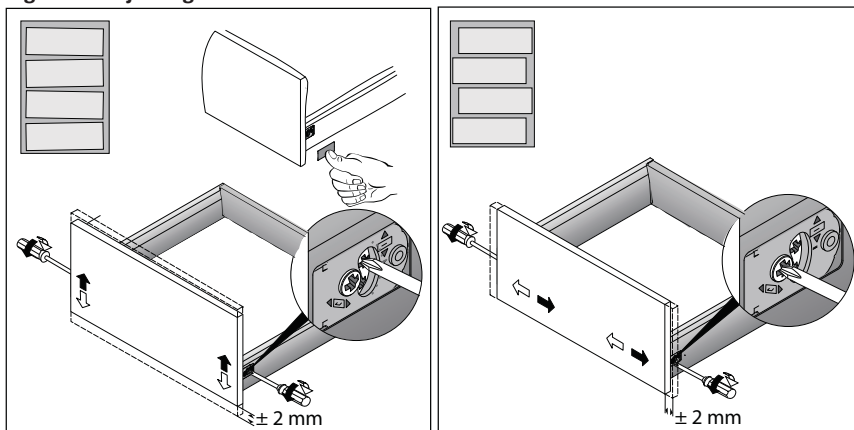

Drawer front height is adjustable at both left & right by maximum ± 2 mm
Rotate click wheel with screwdriver firmly located in place

Drawer front sideways location adjusts left & right by maximum ± 2 mm
Use screwdriver on adjustment screws at left & right. Adjust as required

Figure 8. Replacing drawer front

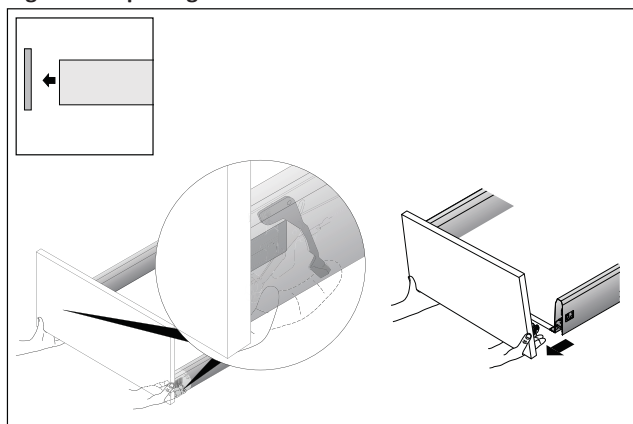


If front panel requires replacing it is easily removed & reinstalled
Disengage front drawer panel by actuating left and right levers
Remove panel and replace


FIXING POINTS

Ensure appropriate framing is positioned to secure CDesign basins


CDESIGN 485 MICRO
LEFT HAND, RIGHT HAND OR FRONT BOWL
WASTE LOCATION

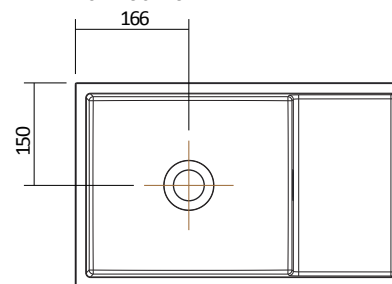


LEFT HAND OR RIGHT HAND BOWL
FIXING LOCATION

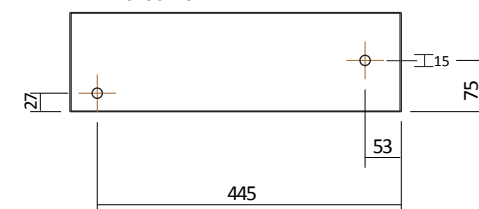


FRONT BOWL
FIXING LOCATION

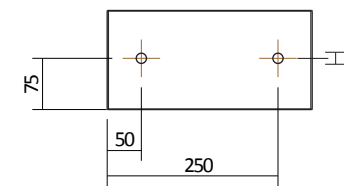

CDESIGN 620
LEFT HAND OR RIGHT HAND BOWL
WASTE LOCATION

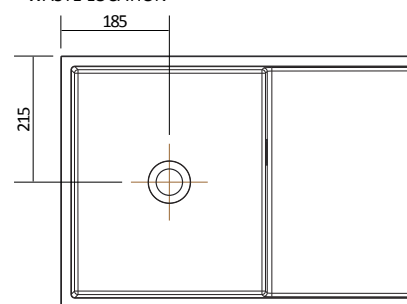

LEFT HAND OR RIGHT HAND BOWL
FIXING LOCATION

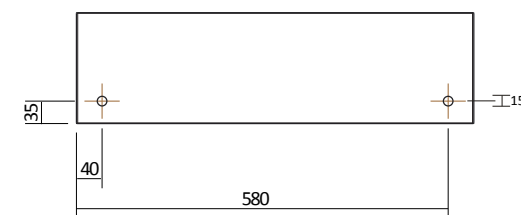


DRAWER ADJUSTMENTS

IMPORTANT:


DRAWER ADJUSTMENT IS THE RESPONSIBILITY OF THE LICENSED INSTALLER

Figure 5. Removing drawer

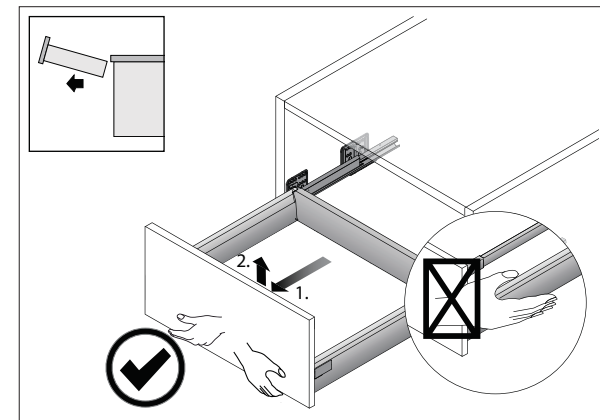

Remove drawer by pulling fully out & then pull upward, holding the underside front

Figure 6. Replacing drawer

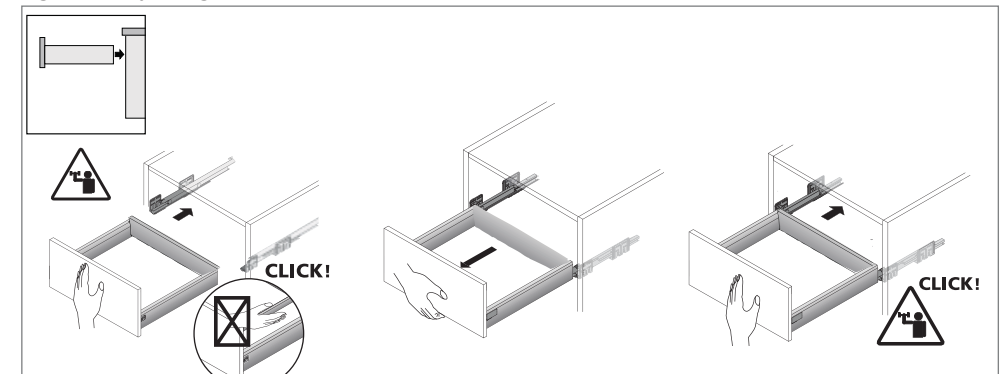

Drawer is inserted by simply locating it on the runners and pushing it in. Ensure runners 'click' into location. Test operation by opening & closing.


CDESIGN CABINET INSTALLATION

1. Remove drawer and align cabinet directly under the already installed CDesign basin. See figure 4.


NOTE: Often cabinets are made slightly smaller than the vanities so the basin can overhang the cabinet sides. Ensure your basin is centred over the cabinet when installing.

2. Cabinet fixing bolts and brackets not supplied. Installer to determine appropriate fixings and provide adequate wall framing (studs/noggins) to ensure secure mounting of cabinet.
3. If the wall is not level/square, packers must be used to prevent cabinet twisting/malfunction.
4. As a minimum, use fixings at all corners and top and bottom centres. Use additional fixings if required. All fixings must be secured to wall framing (studs/noggins).
5. Insert the drawer by simply locating the runners and pushing it in. Ensure runners 'click' into location. Test operation by opening and closing ensuring it's secure to the cabinet. See figure 6.


CDESIGN 1330 DOUBLE
WASTE LOCATION

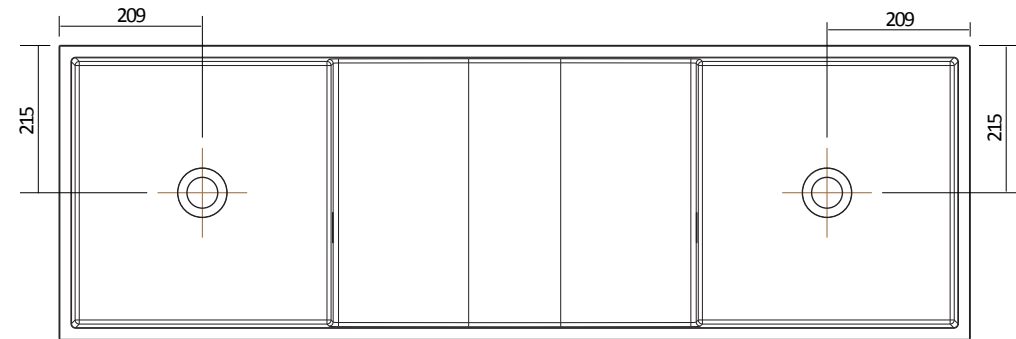


FIXING LOCATION

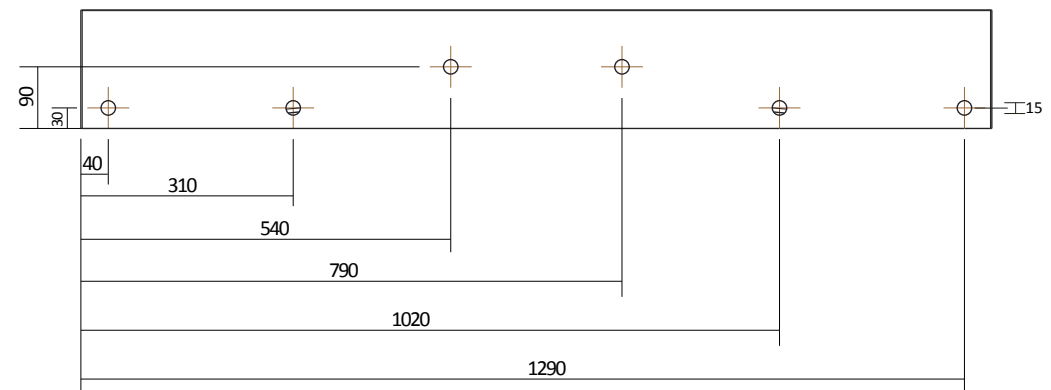

CDESIGN 1620 DOUBLE WASTE LOCATION

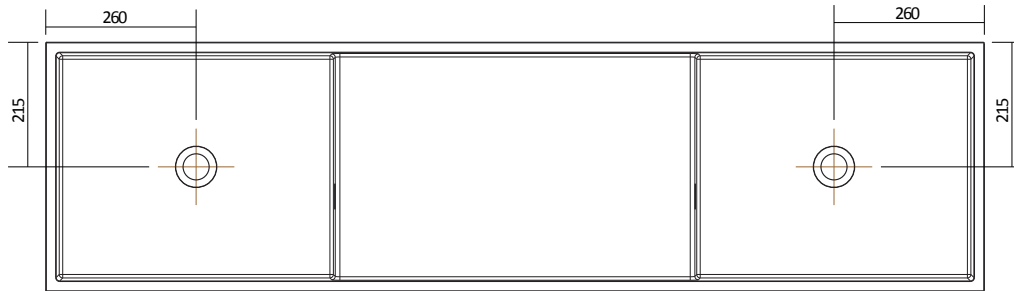

FIXING LOCATION

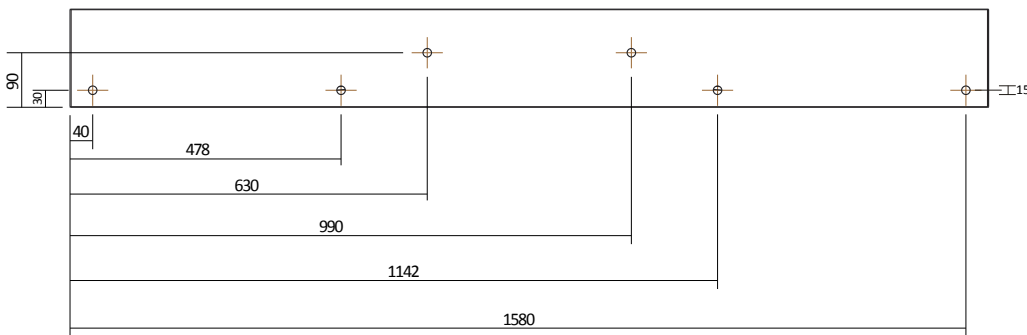

WALL MOUNT CDESIGN CABINET INSTALLATION HEIGHTS

Figure 4.

