


1968-72 Chevy Nova Rear Seat Install Instructions




PARTS:




Molded Sport Rear Seat



Hex Bolts

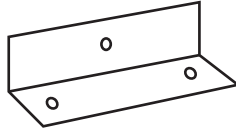


Bracket

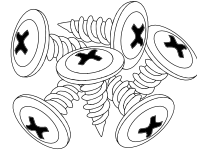


Metal
Screws (6pcs.)

TOOLS NEEDED FOR INSTALL:


1. Socket Wrench
2. Tape
3. Drill
4. Sharpie

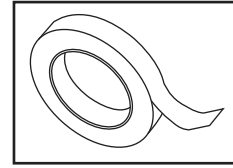


TAPE

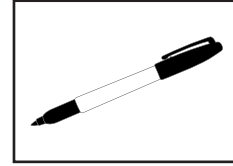

SHARPIE

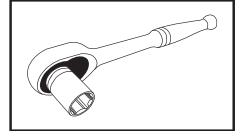



SOCKET

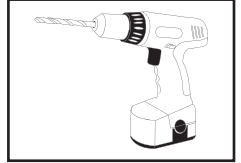

DRILL



STEP 1: Align the rear seat back and slide the top of the seat into the factory steel bracket.

STEP 2: Using the supplied bolts, mount the seat to the steel next to the factory steel holes.

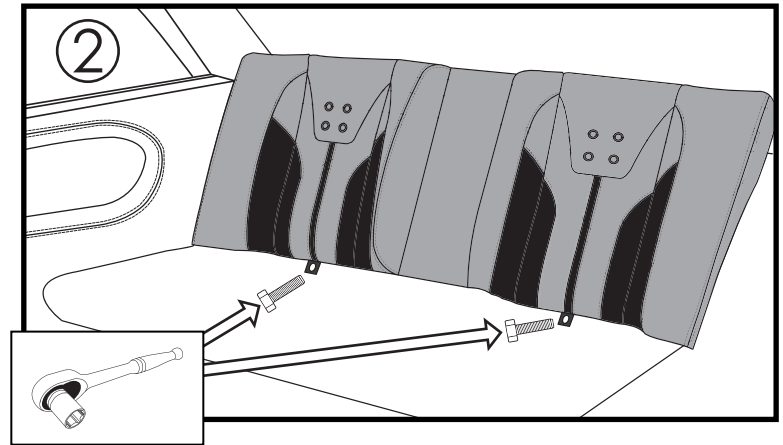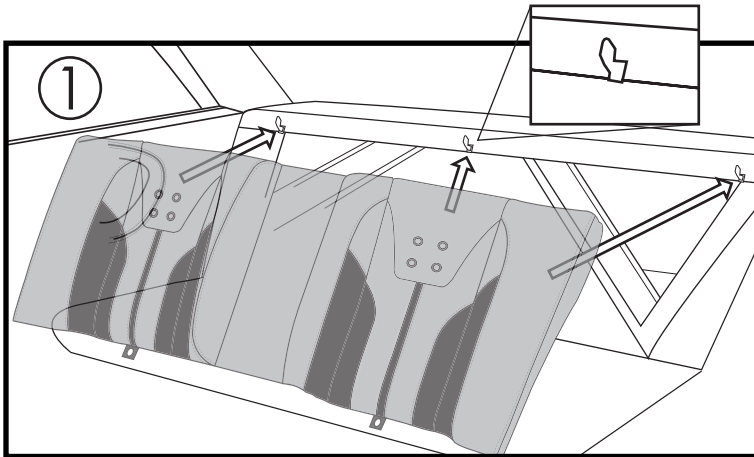

STEP 3: Dry fit the rear seat bottom making sure it is pushed as far back and outline the front edge with tape.



STEP 4: Remove the seat bottom. Place the angle bracket in front of the tape and leave a 3/4" gap from the front of the bracket.

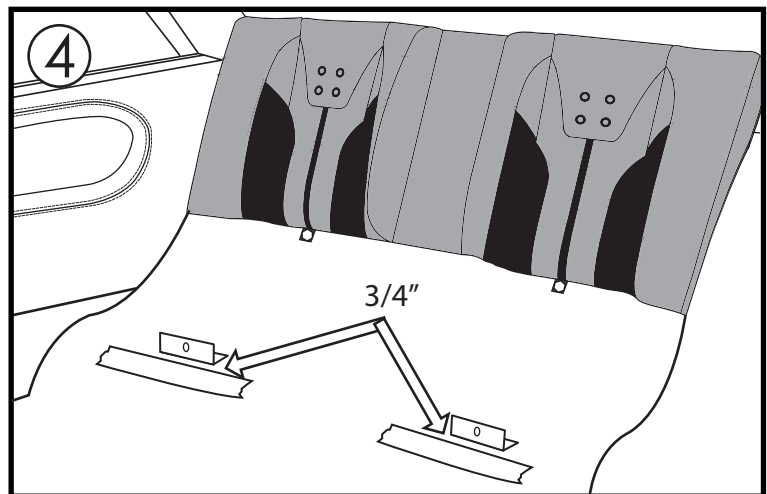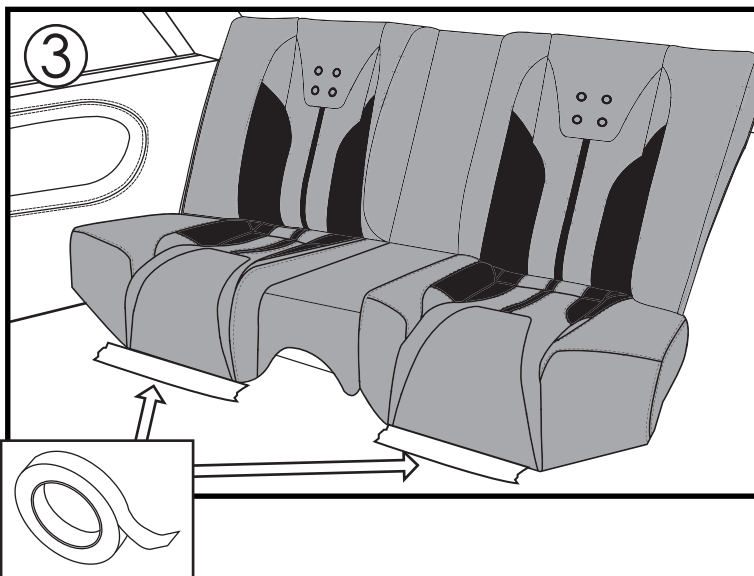

STEP 5: Drill and mount the angle bracket to the floor pan.

NOTE: Look under vehicle and make sure there are no wires or lines in this area before drilling

STEP 6: Mark the tape even with the edges of the bracket to help guide you on mounting the seat to the angle bracket.

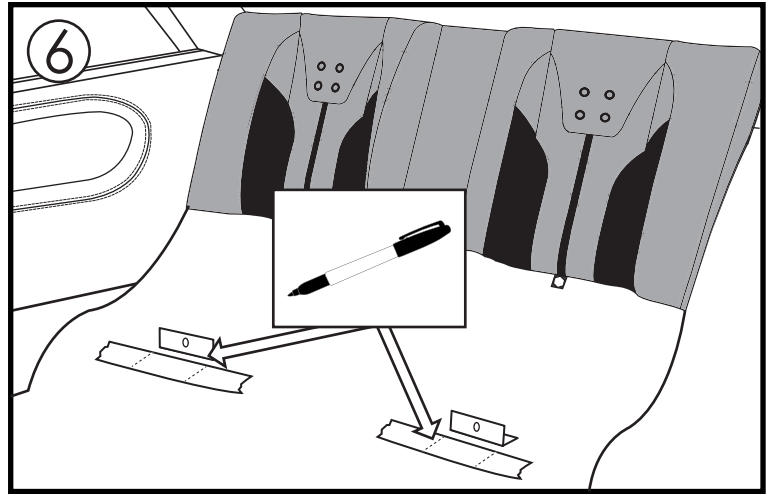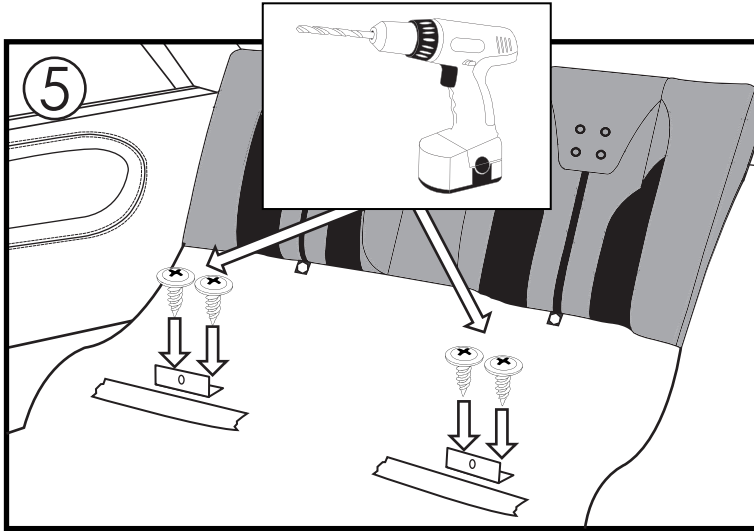

STEP 7: Place the bottom seat back into the vehicle. Mount the seat to the angle bracket using the tape as your guide with the supplied screws. Install Complete.

