


HardTop Molded Quarter Panels


A professional is recomened for all TMI Products installs



Tools needed:

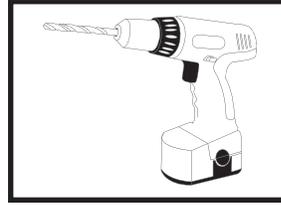


DRILL

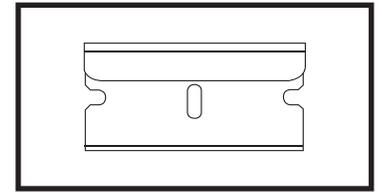

RAZOR BLADE


Step 1:

Remove the Window crank, original quarter panel, and quarter window trim piece. Please save all these pieces as some will be used for later.

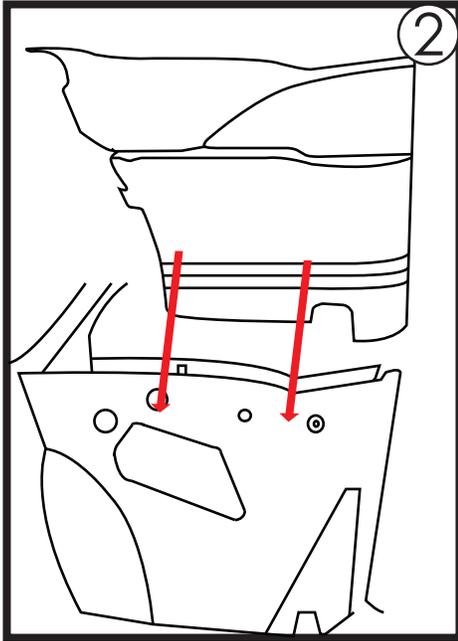

Step 2:

The top of the Quarter panel will sit into the rear quarter window recess. It will hang up on the tab like factory panel did. You will notice on the bottom of the rear quarter panel there is a notch cut to fit over the cross brace on the floor.

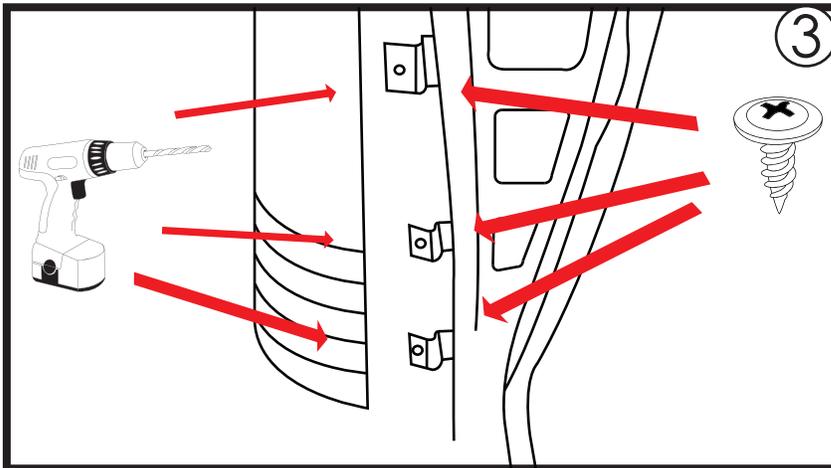

Step 3:

Some drilling through the fiber glass and vinly will be required at the points where the screws will go for fastening the quarter panel. The panel fastens down at the front same as factory. There are three tabs next to the door jam area that you will use to fasten the panel. ****NOTE: Use masking tape over the vinyl where you drill to keep the vinly from pulling up off the panel****

Step 4:

For the window crank shaft you will notice it is causing a bulge onthe quarter panel vinyl. You will cut a small "X" directly on the center of the bulge. Then push the vinly over the Window crank shaft. Once the shaft is exposed you can install the window crank. ****NOTE: The "X" should be kept as small as possible to avoid it showing behind the crank****

Step 5:

Repeat steps 1-4 to the other side of the car.