




67-72 C10 / 69-72 Blazer Air Dam Installation




Parts:

**TOOLS NEEDED FOR INSTALL:**


1. 7/16" Socket Wrench
2. Drill

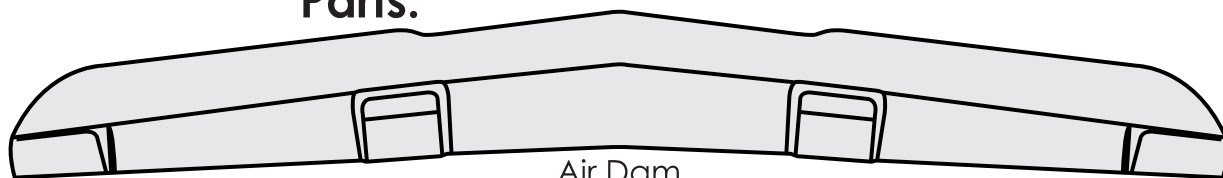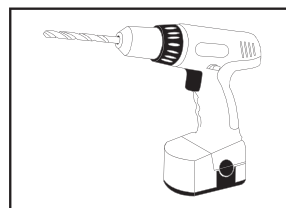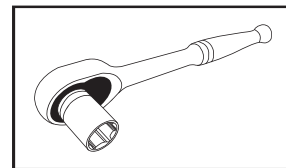

Air Dam

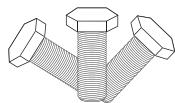

(4pcs.) 1/4-20x.75"  
Hex Head Bolt

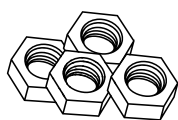

(4pcs.) 1/4-20  
Hex Nut



(6pcs.) 0.5"  
OD Washer



(2pcs.) 1.25"  
OD Washer

STEP 1: Place Air Dam in designated location. Be sure the Air Dam is centered. Clamp down and mark drill locations. Drill holes, and mount as shown below. Install complete.

