


1969-72 Chevy Blazer Bed Rail Cap Install Instructions





PARTS:

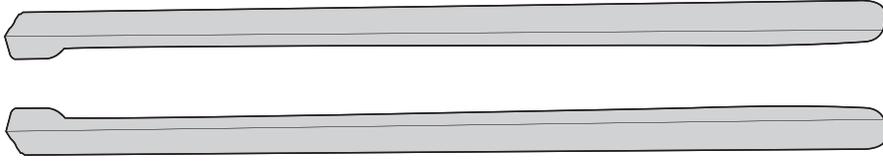


Left and Right Bed Rail Covers

TOOLS NEEDED FOR INSTALL:

- 1. Socket Wrench

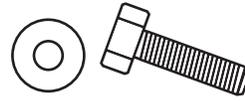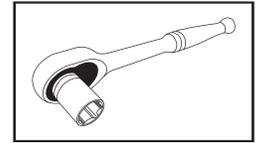

- (12) 1/4 x 20 + 3/4 Bolts
- (12) 1/4 Washers

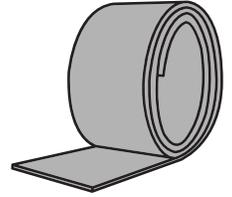

Foam Tape
36" x 4" x 1/8"

NOTE *PRE-FIT BEFORE PAINTING*

STEP 1: Place Bed Rail Cap in designated location as shown below.

STEP 2: Cut 2" strips of Foam Tape and place on underside of each Bed Rail. Space accordingly.

STEP 3: Utilizing existing roof top holes, use Bolts and Washers to fasten Bed Rail Cap from underneath. (6 on each side) Repeat on opposite side. Install Complete.

