


1969-72 Chevy Blazer Windshield Cap Install Instructions




PARTS:







TOOLS NEEDED FOR ASSEMBLY:

1. Allen Wrench
2. Socket Wrench
3. Drill
4. Marker

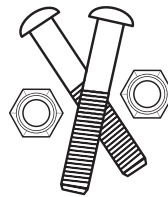

(2) 5/16 x 18 x 2 Bolts
(2) 5/16 Nuts

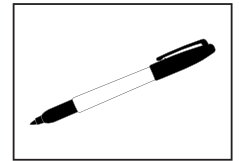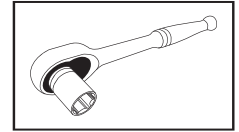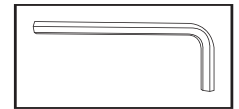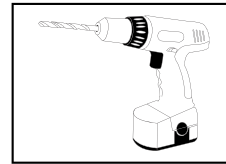

NOTE *PRE-FIT BEFORE PAINTING*

STEP 1: Place Windshield Cap on designated location. Place front of Windshield Cap on windshield gutter to catch lip of Windshield Cap. Press down back of Windshield Cap to set in place.

STEP 2: Use existing holes near visors as a guide, use a Marker to mark drill holes.

STEP 3: Remove Windshield Cap and drill holes in marked locations from the bottom up.

STEP 4: Reapply Windshield Cap. Place Bolts in drill holes and add Nuts underneath and fasten with Allen Wrench and Socket Wrench. Installation Complete.

You can also use double sided tape to mount Windshield Cap for smoother finish.

