

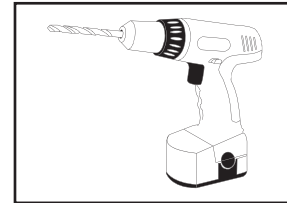


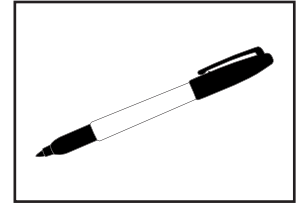

## TOOLS NEEDED FOR INSTALL:

1. Tape
2. Marker
3. Power Drill

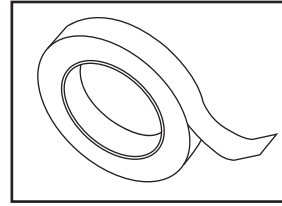

STEP 1: Use Template given for panel placement. Place template on door using tape to determine center and correct placement.

STEP 2: Using Template, mark drill holes with marker. Remove template and clean area to prepare for drilling.

STEP 3: Drill holes using a 19/64" drill bit.

STEP 4: Place panel in place and secure with snap clips provided with panel.

STEP 5: For Opposite side, Flip Template and repeat steps 1 - 4.

