


1973-87 Chevy C10 Dash Installation Instructions





PARTS:

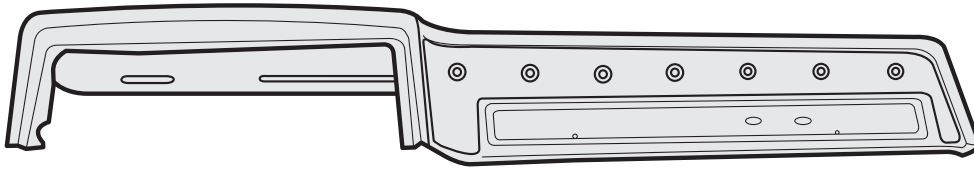


Dash Pad

TOOLS NEEDED FOR ASSEMBLY:

- 1. Phillips Screw Driver

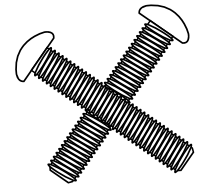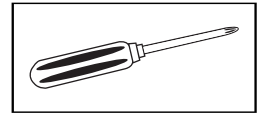

Buttonhead Screw

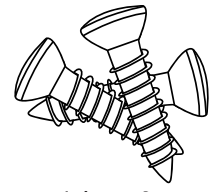

Machine Screw

STEP 1: Remove bezel and vents from old Dash and install onto new Dash Pad.

STEP 2: Mount Dash Pad as shown below. Remove bezel of odometer and speedometer, etc. before placing Dash Pad in place.

STEP 3: Use Machine Screws to fasten passenger side of Dash Pad. (4 Machine Screws)

STEP 4: Placing odometer and speedometer bezel back in place. Place in from right side of Steering wheel. Use Machine Screws (7) and Buttonhead Screws (2) to fasten Dash Pad. Install Complete.

