



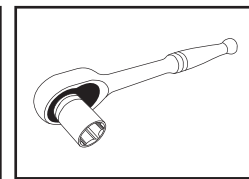


TOOLS NEEDED FOR INSTALL:

1. Allen Wrench
2. Socket Wrench

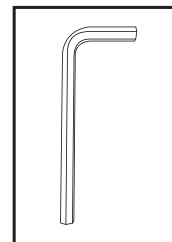

STEP 1: Fasten Sliders to Bracket using bolts provided.
Use Hex Key to fasten Bolts. Make sure wire is placed correctly on sliders or sliders will not function properly.

STEP 2: Remove black plastic plugs from sliders. Turn seat over and line up bolts from sliders to pre-drilled holes in Bracket. Place nuts and washers on bolts using socket wrench - Fasten.

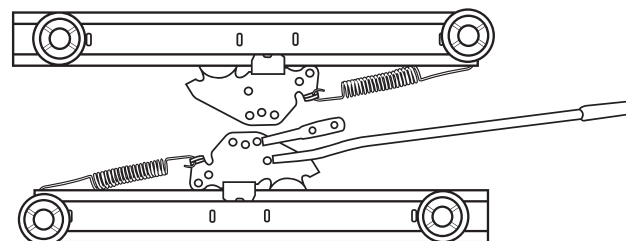

Sliders

STEP 3: Repeat on opposite side for seat #2. Place Console in between seats. Use velcro strap underneath Console and strap to front of Bracket frame tightly.

STEP 4: Once seats and console is fasten, set complete bracket with seats and console inside truck to designated area.




Nuts & Washers



Bolts

STEP 5: Fasten Bracket to truck using Socket wrench.
Install complete.

Wire

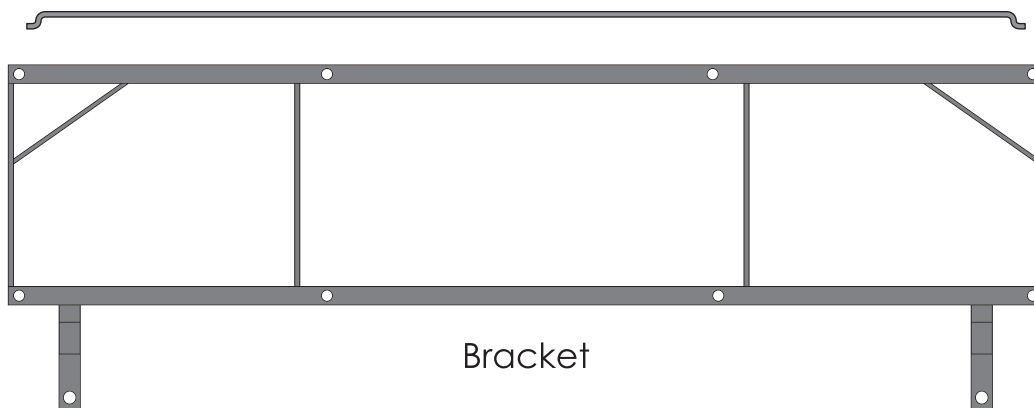

Bracket

