
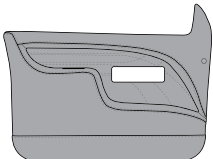



Chevy Truck • 1988-94 Molded Door Panel Installation Guide




**Parts:**




Molded Door Panel




4 Screws




4 Snap Clips

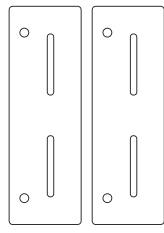

2 Door Panel Brackets





Door Panel Clips




Door Cup Handle


**TOOLS NEEDED FOR INSTALL:**

1. Phillips Screwdriver
2. Prying Bar

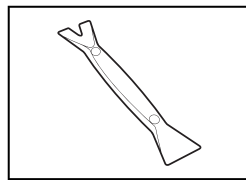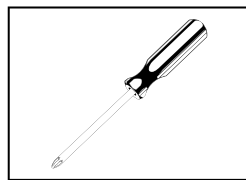


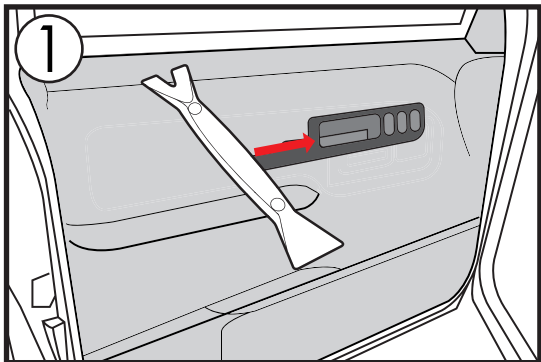


**STEP 1:** To remove factory switch, use a prying tool to pry the switch trim off the door. Note: No need to unplug any power mechanisms. Use prying tool to remove door panel.

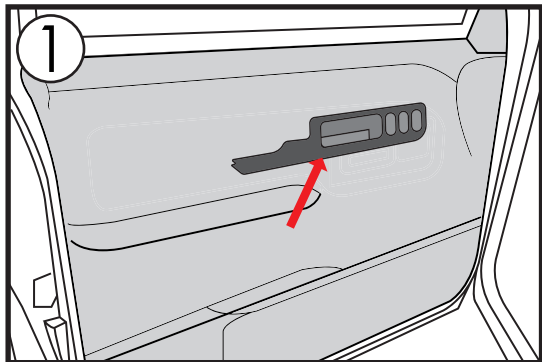


**STEP 2:** Snap window switch trim back into place.

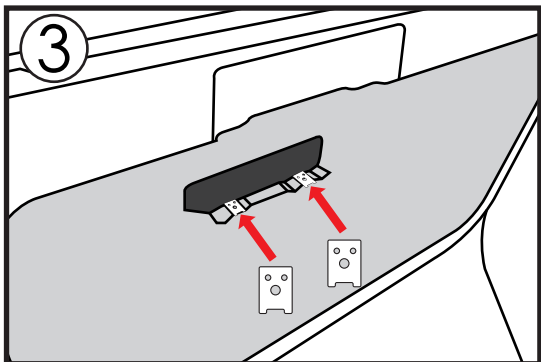


**STEP 3:** Install snap clips to existing door cup holes.

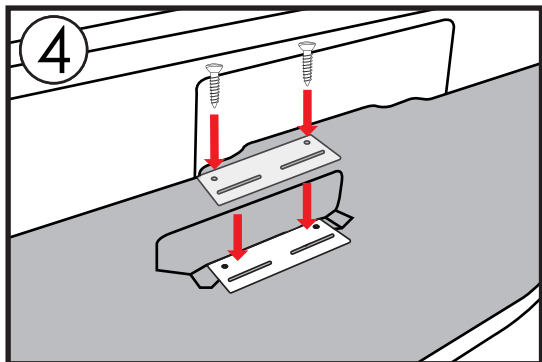

**STEP 4:** Use provided screws to screw in door panel bracket.

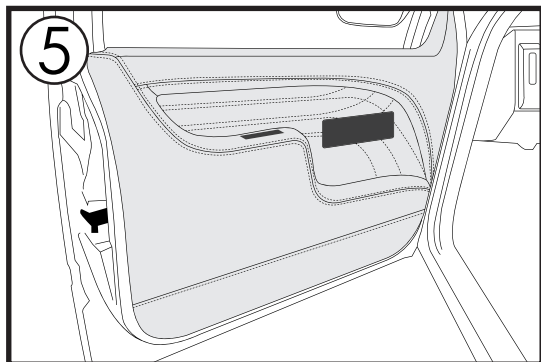

**STEP 5:** Fit door panel using supplied clips with lower factory holes.

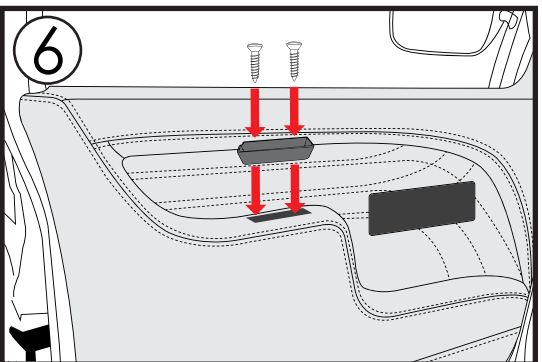

**STEP 6:** Install door cup kit using supplied screws. Install complete.