

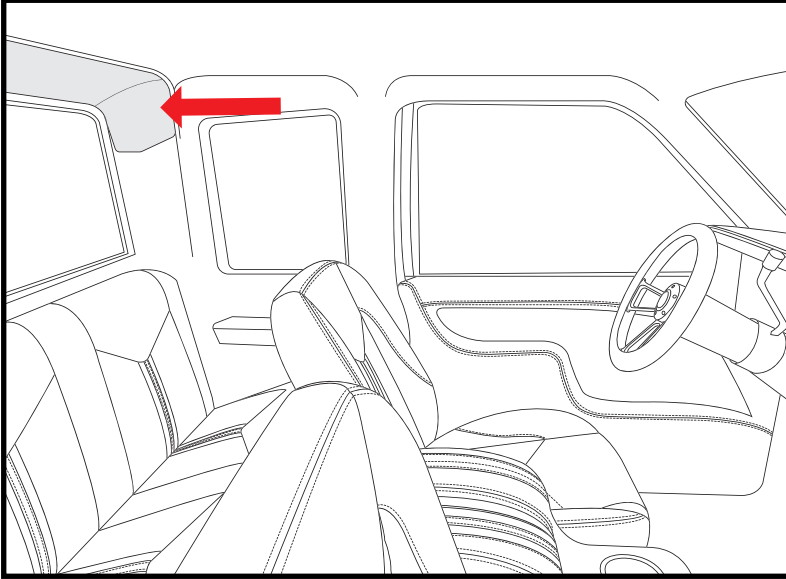


Headliner Installation

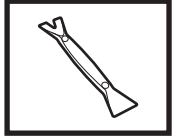


TOOLS NEEDED FOR INSTALL:


1. T50 Torque Wrench
2. Phillips Screwdriver
3. Prying Tool

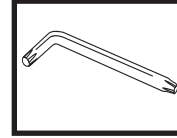


STEP 1: By hand, remove upper window trim. Note: be mindful of the clips on the back of the trim.

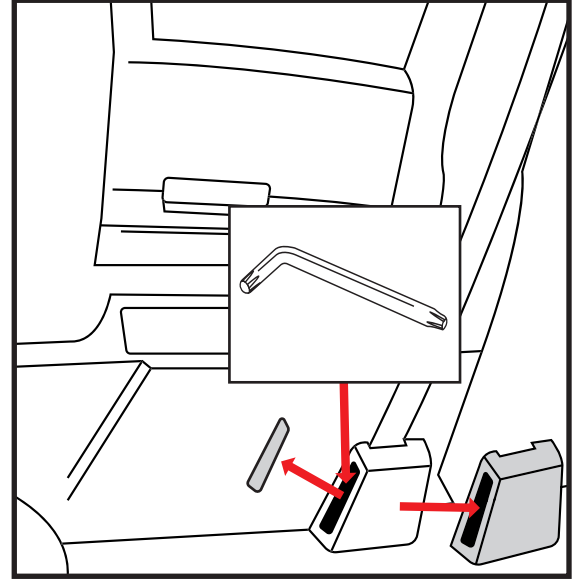


STEP 2: Use screwdriver to remove access tab and remove seat belt cover with torque wrench.

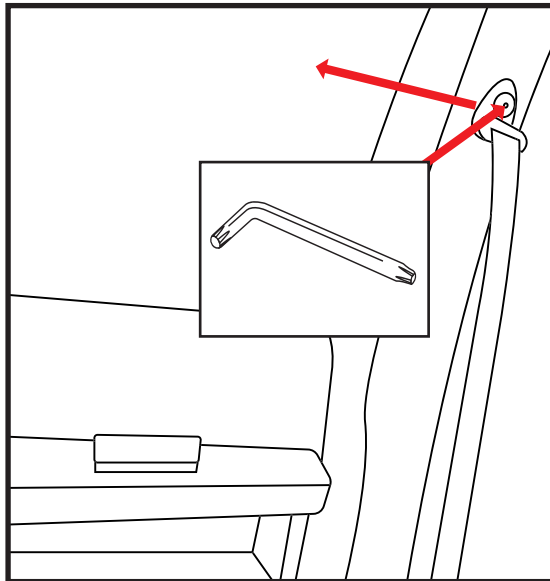


STEP 3: Use torque wrench to remove bit from the top of the seat belt.

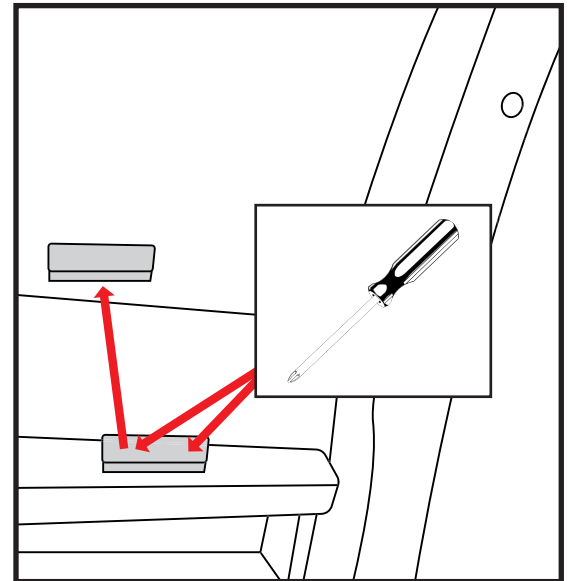


STEP 4: Remove ash tray from armrest. Use Phillips screwdriver to remove the two screws in the ash tray compartment.

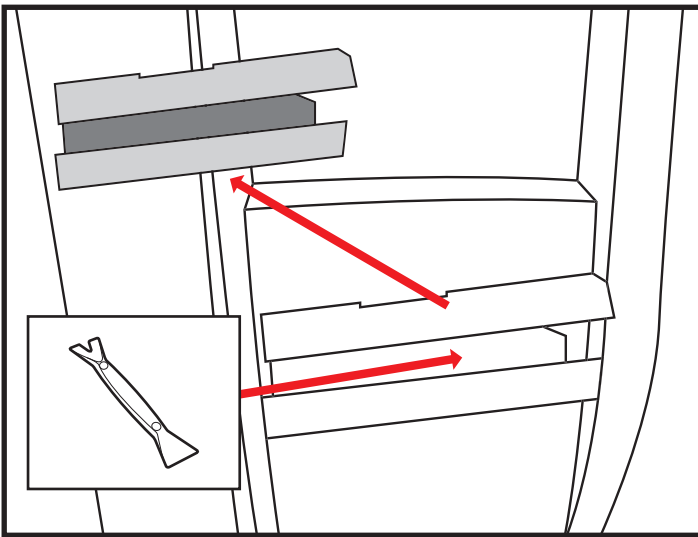


STEP 5: Use pry tool to pry off the top part of the arm rest. Note: Be mindful of the clips underneath.

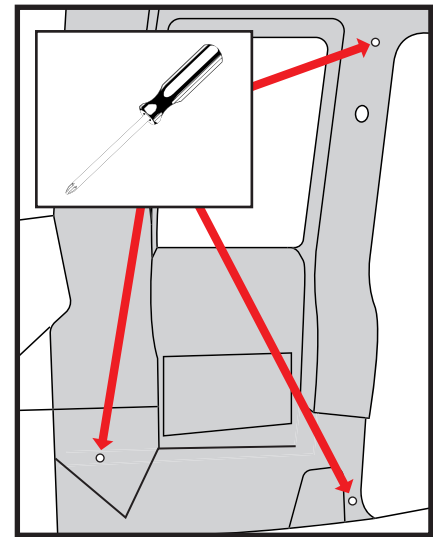


STEP 6: Use a Phillips screwdriver to unscrew and remove the side panels.

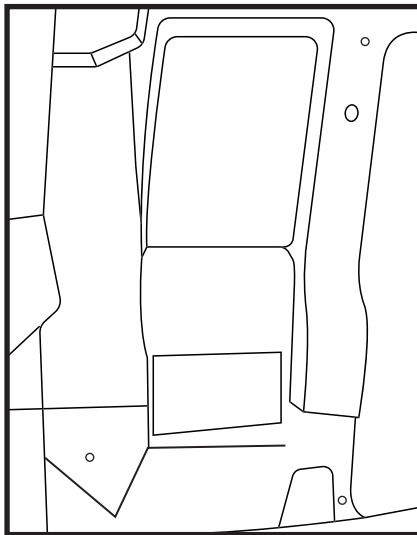

STEP 7: By hand, remove top trim. Note: Be mindful of the clips on back of trim.

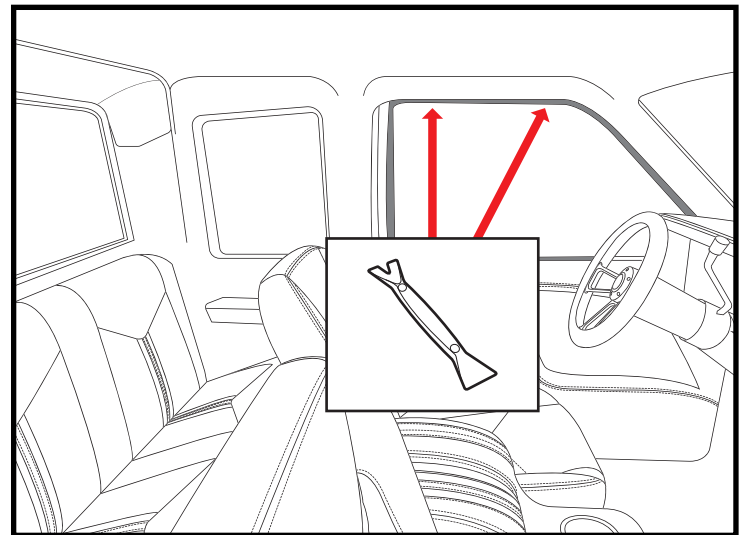

STEP 8: Use pry tool to remove A pillar. Be mindful of the clips on the backside. Use pry tool in a twisting motion.

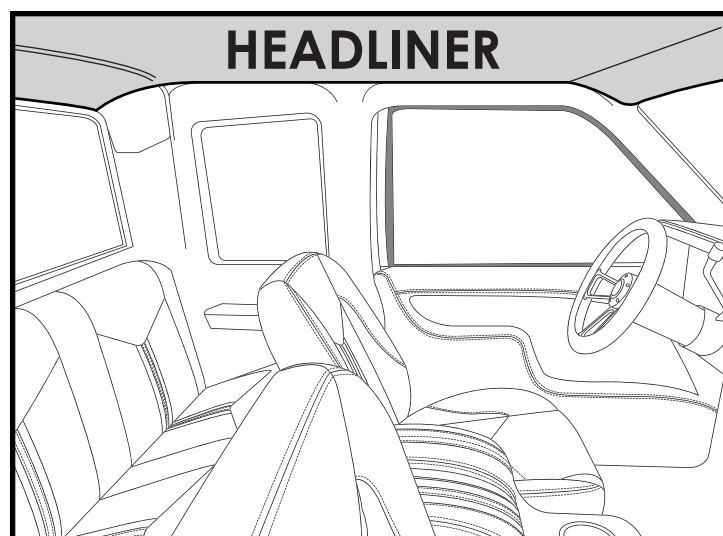

STEP 9: Install TMI Headliner. Note: You may need assistance holding the Headliner as you reinstall factory trim and pillars.