



Visor Installation Guide

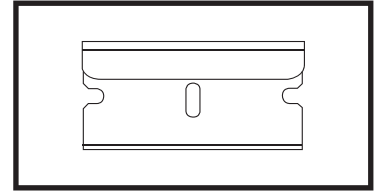

TOOLS NEEDED FOR INSTALL:


1. Phillips Screwdriver
2. Razor Blade

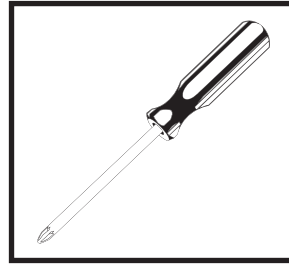


Parts:




Sun Visor

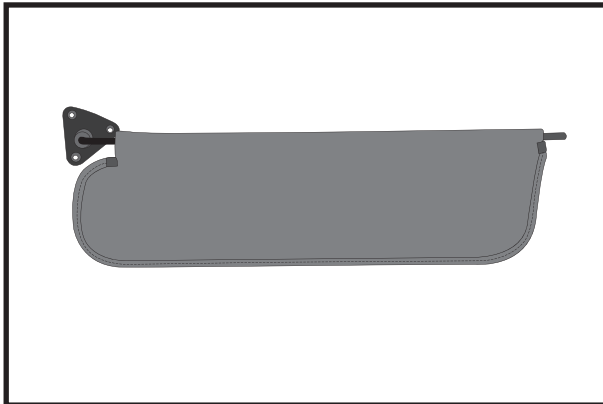

Step 1: Remove factory Sun visors; be sure to keep factory screws and retaining bracket as they'll be used with your TMI Sun Visors. Twist off retaining bracket along with the rod from factory sun visors and install them into TMI sun visors. ***Note:** It's going to be a tight fit and will require a firm push.

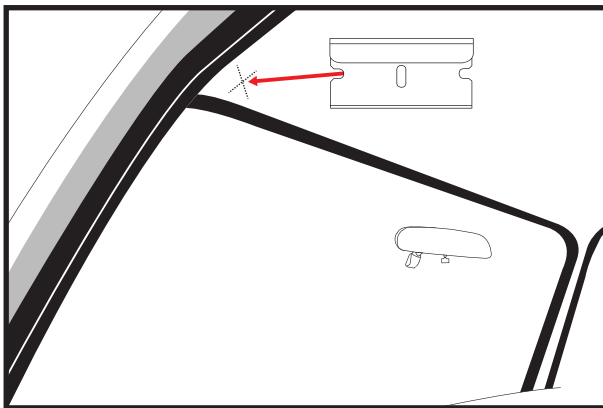

Step 2: If you're using a new headliner, you would need to use a straight razor to cut a single "X" into the headliner material to locate the hole for the Sun visor retaining bracket.

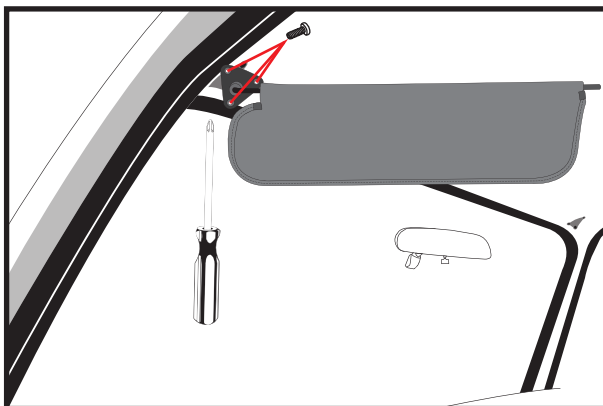

Step 3: Use a Phillips Screwdriver to screw Sun visor into place.

Step 4: Repeat on opposite side.