

Ford Truck 1980-86 Door Panel Installation Instructions





Included Parts:

Drill Template
Door Panels
Mounting Hardware


Tools Required for Installation:

Masking Tape
Marker
Scissors
Drill with Phillips Head

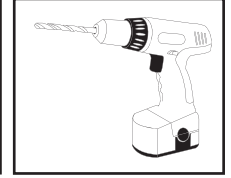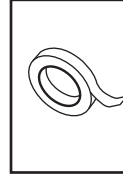


Step 1. Remove the factory door panels including all the hardware.

NOTE: Some existing hardware will be used in the installation process.

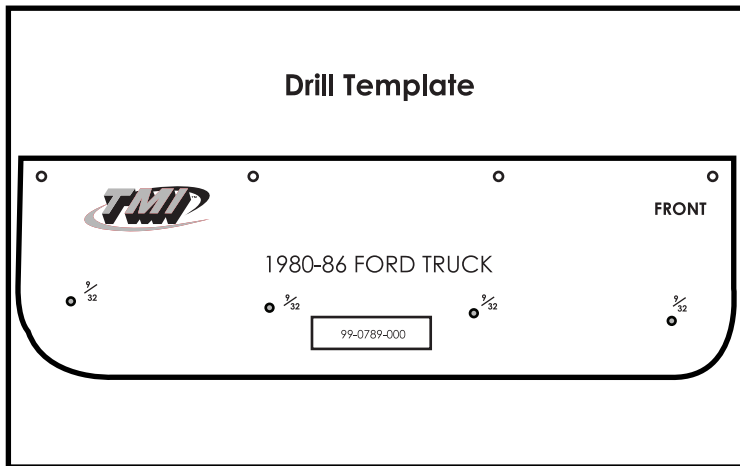


Step 2. Cut out the provided template following the scissors as well as all the labeled holes/openings.

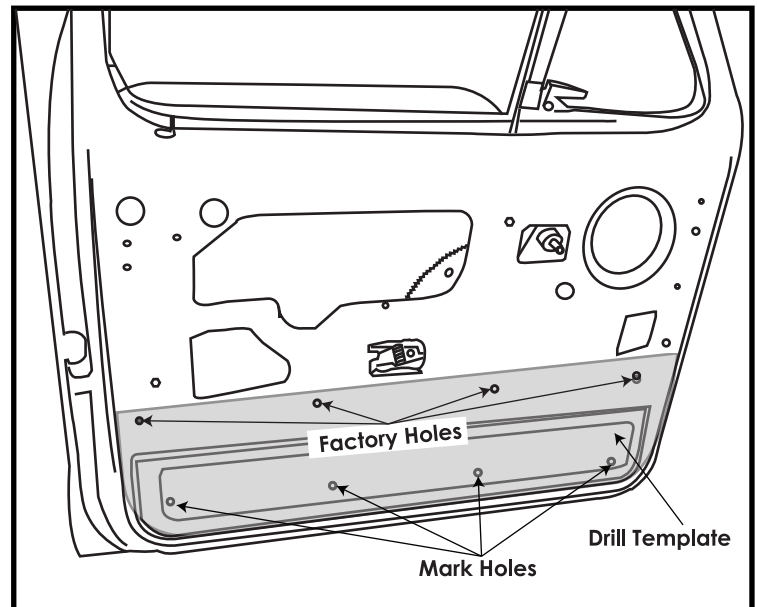


Step 3. Align the template to the factory holes.

Step 4. Tape the template in place.

Step 5. Using the template, mark any new holes that will have to be drilled out.

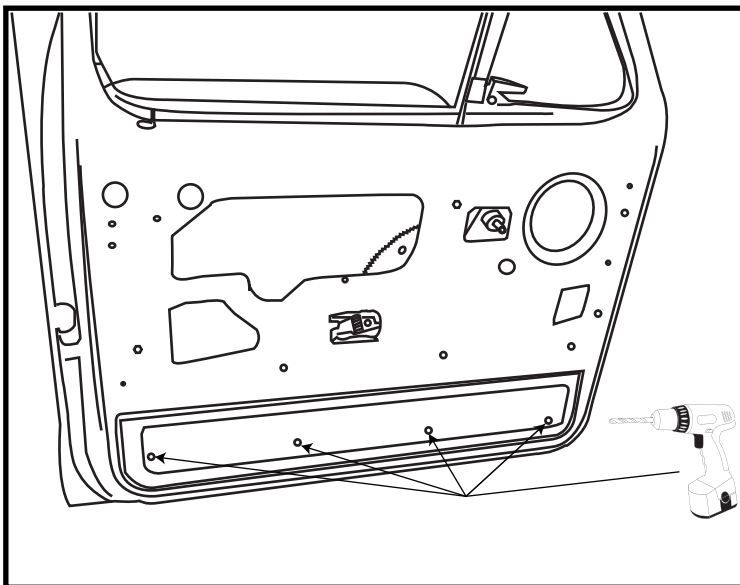

Step 6. Drill out the marked holes using the sizes indicated on the drill template.

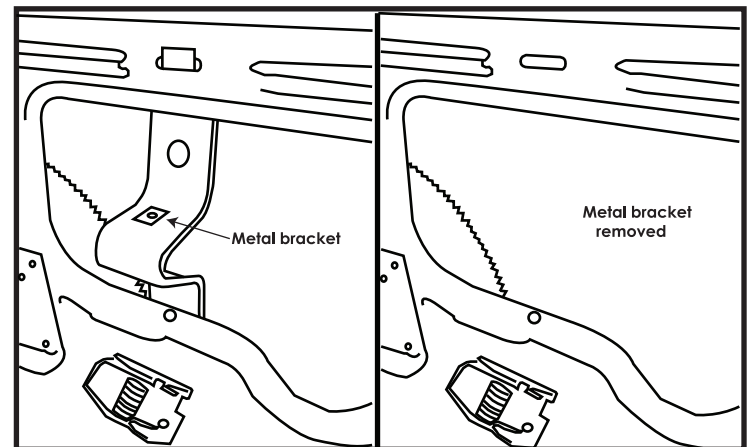

Step 7. Remove the metal door mount bracket.

Ford Truck 1980-86 Door Panel Installation Instructions






Included Parts:

Drill Template
Door Panels
Mounting Hardware


Tools Required for Installation:

Masking Tape
Marker
Scissors
Drill with Phillips Head

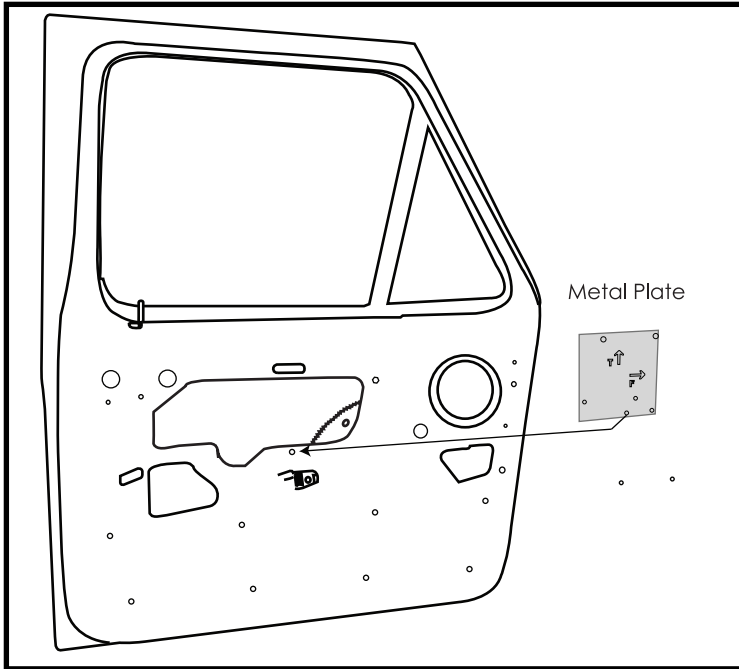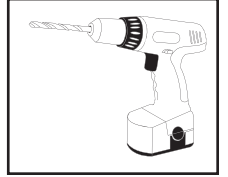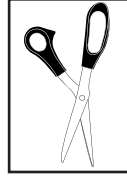


Step 8. Use the hole that held the metal bracket to line up the metal plates bottom screw hole. Mount the metal plate with the provided screws.

NOTE: *F on the metal plate should face the front of the vehicle and T should be on top.*

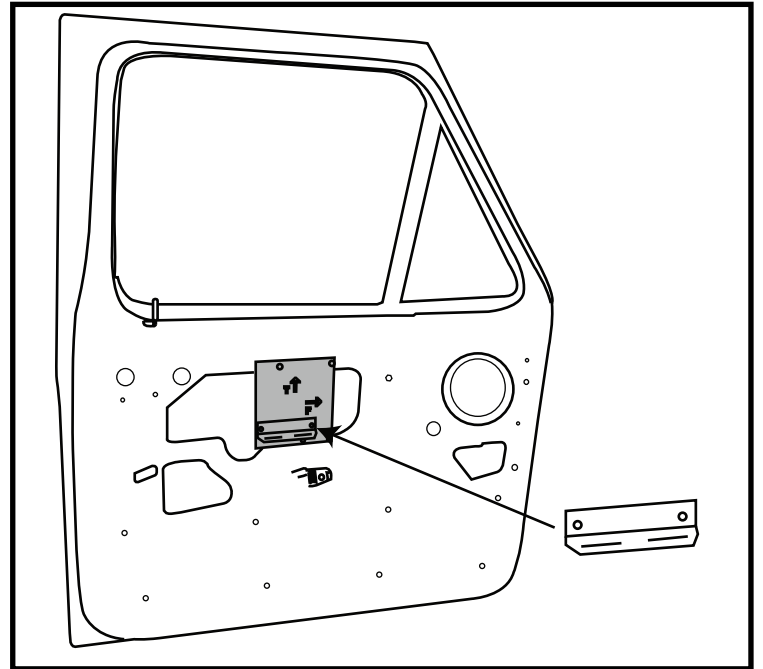


Step 9. Mount the door panel cup kit bracket to the metal plate using the screws provided.

NOTE: *Bending the bracket to properly fit the door panel may be needed.*

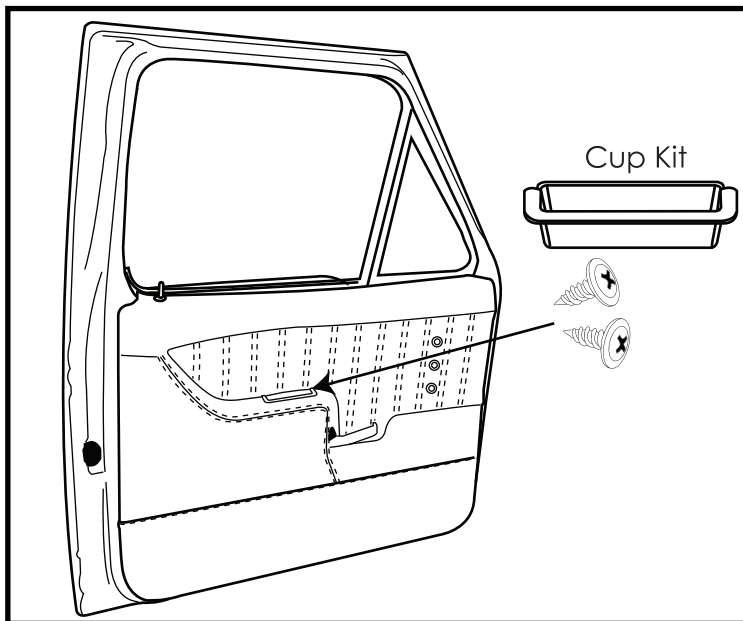

Step 10. Slide the door panel into the window track. Snap the bottom clips into the 9/32 in drilled holes. Use the 2 provided screws and mount the cup kit.

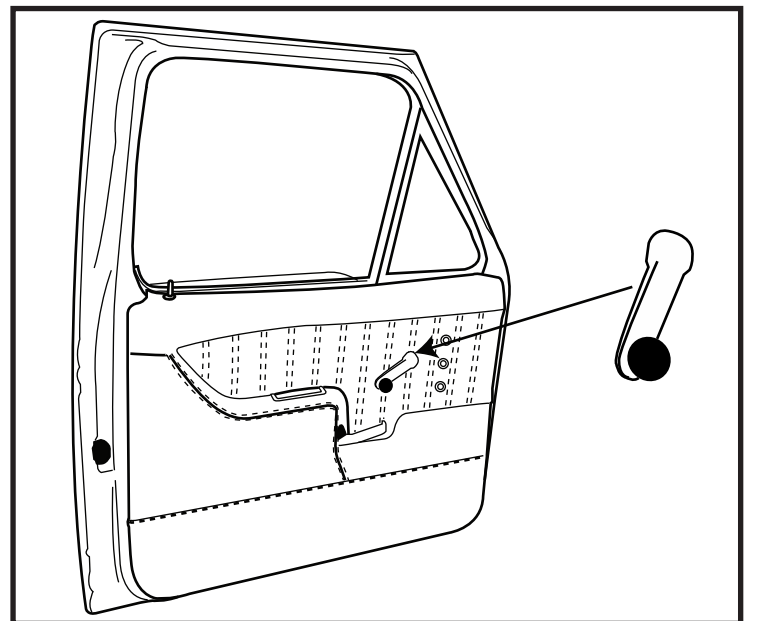

Step 11. Mount the window crank handle.

Step 12. Unpeel the felt and insert into the cup kit.