
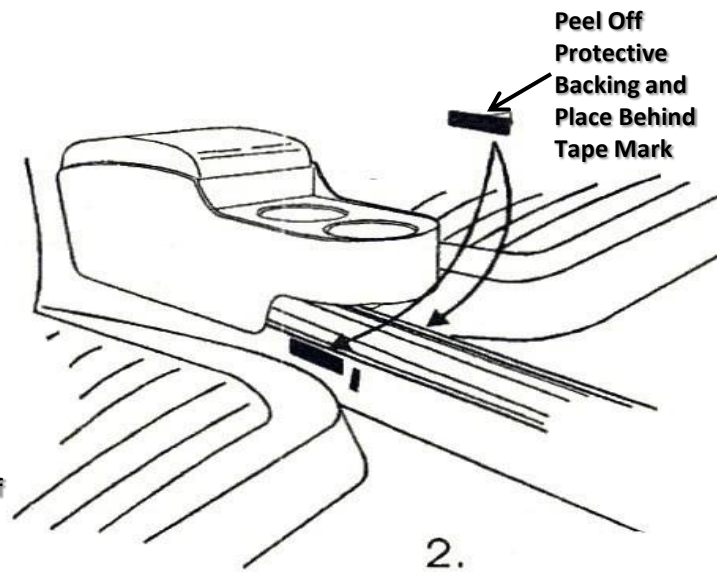


1. Carefully place and push the Console Caddy onto the stock console from the rear. Determine the location which is most comfortable for you. Mark this location on the stock console with a piece of tape.
2. Remove the protective strip from the back of each self adhesive velcro strip and attach the strips approximately in the positions shown but not beyond the tape marks you made in step one. Place the Console Caddy on the stock console and be sure the velcro strip hooks engage the carpet on the underside of the Console Caddy.

99-9142-000

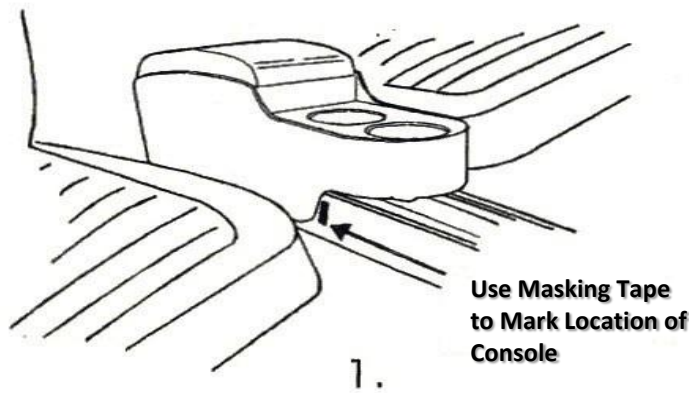

1. Carefully place and push the Console Caddy onto the stock console from the rear. Determine the location which is most comfortable for you. Mark this location on the stock console with a piece of tape.
2. Remove the protective strip from the back of each self adhesive velcro strip and attach the strips approximately in the positions shown but not beyond the tape marks you made in step one. Place the Console Caddy on the stock console and be sure the velcro strip hooks engage the carpet on the underside of the Console Caddy.

99-9142-000