


1964-72 Chevelle Rear Seat Install Instructions




**PARTS:**



Molded Sport Rear Seat

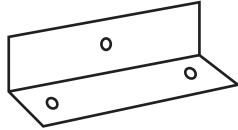


Bracket

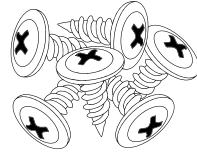


Metal  
Screws (6pcs.)

**TOOLS NEEDED FOR INSTALL:**


1. Socket Wrench
2. Tape
3. Drill
4. Marker

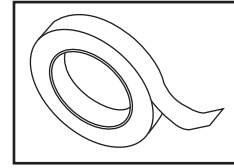


TAPE

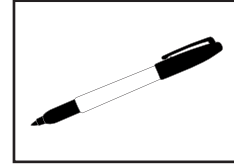

MARKER

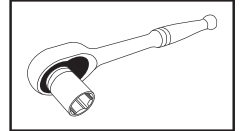



SOCKET

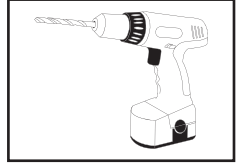

DRILL




STEP 1: Align the rear seat back and slide the top of the seat into the factory steel bracket.

STEP 2: Using the factory bolts and washers, mount the seat back to the factory steel holes.

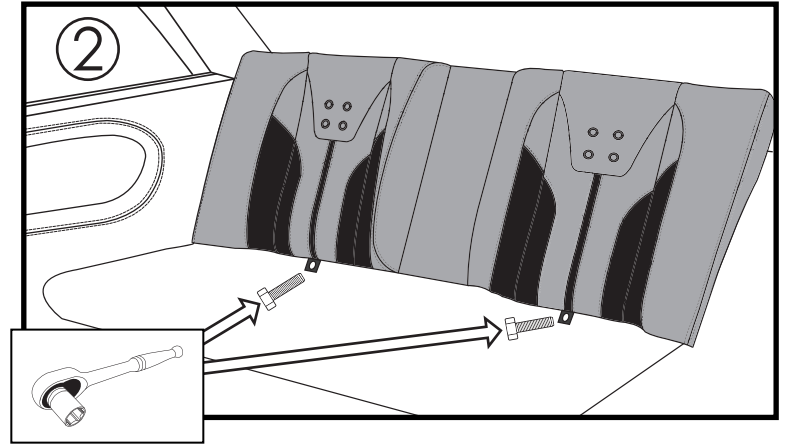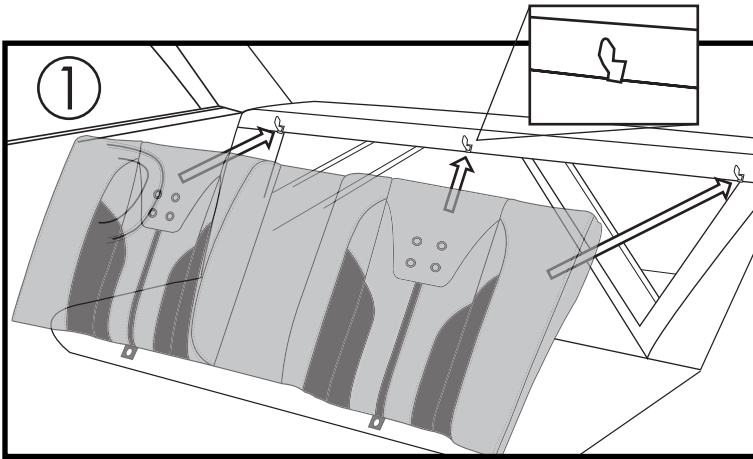

STEP 3: Dry fit the rear seat bottom making sure it is pushed as far back and outline the front edge with tape.



STEP 4: Remove the seat bottom. Place the angle bracket in front of the tape and leave a 3/4" gap from the front of the bracket.

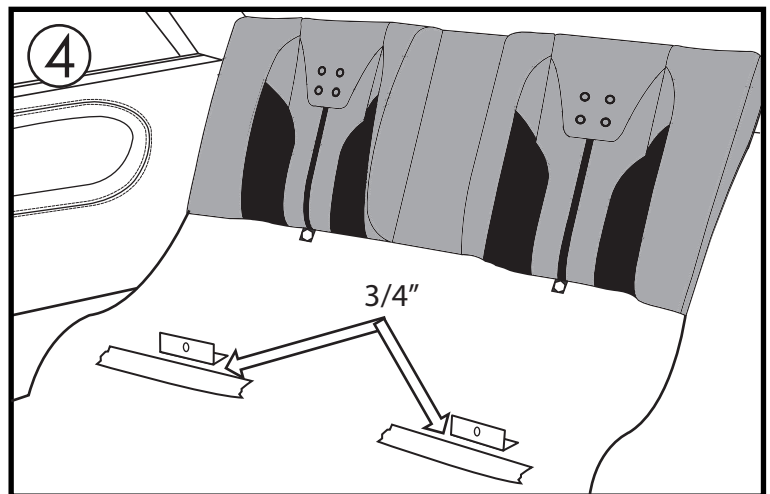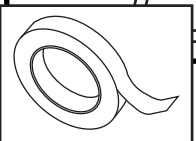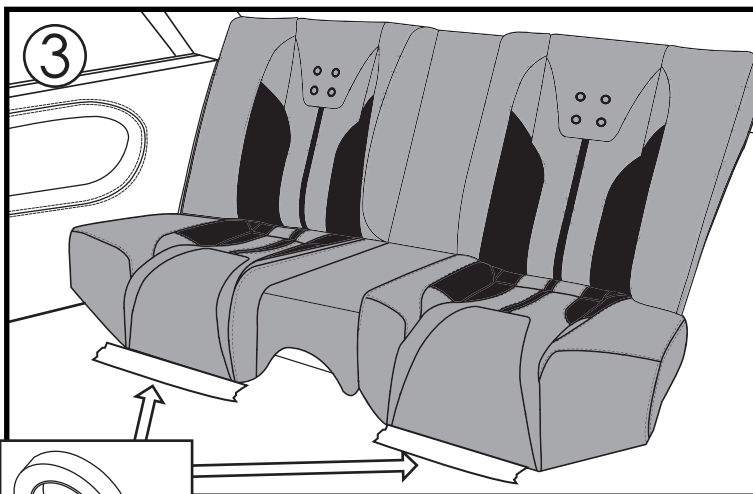



STEP 5: Drill and mount the angle bracket to the floor pan.

NOTE: Look under vehicle and make sure there are no wires or lines in this area before drilling

STEP 6: Mark the tape even with the edges of the bracket to help guide you on mounting the seat to the angle bracket.

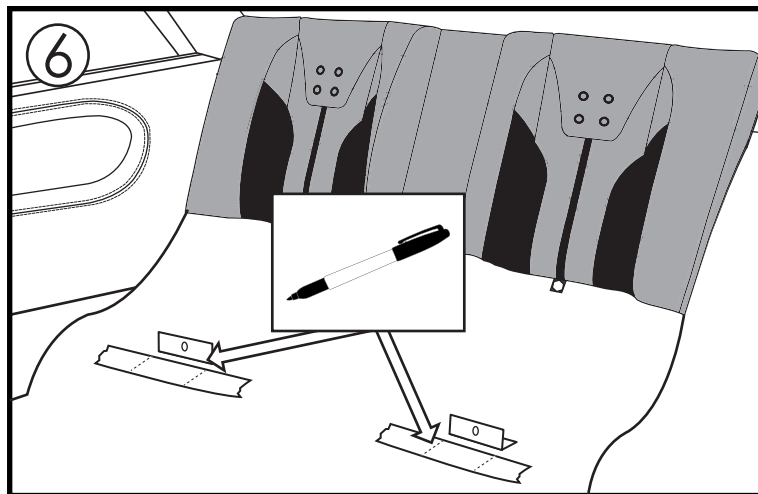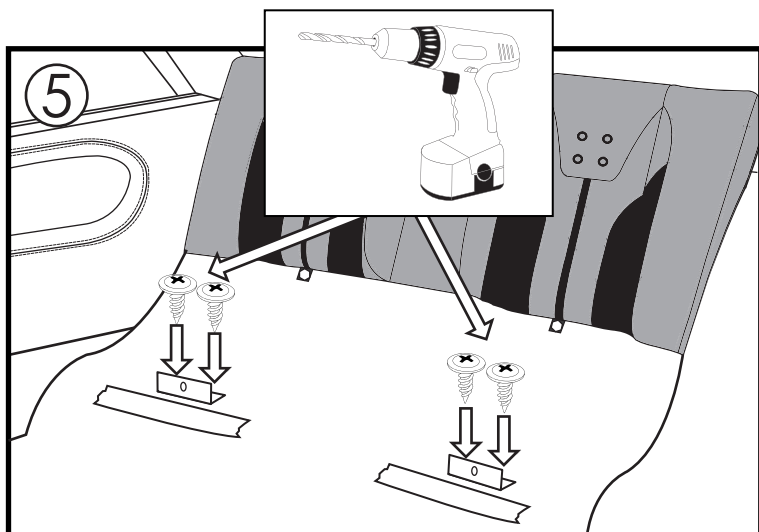

STEP 7: Place the bottom seat back into the vehicle. Mount the seat to the angle bracket using the tape as your guide with the supplied screws. Install Complete.

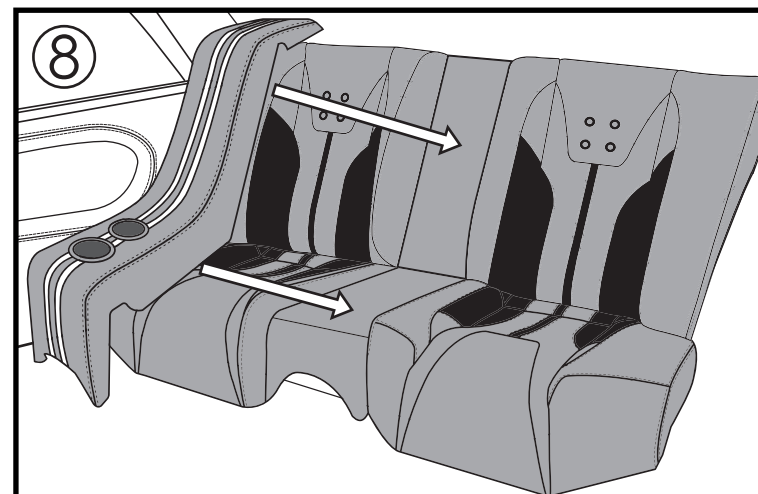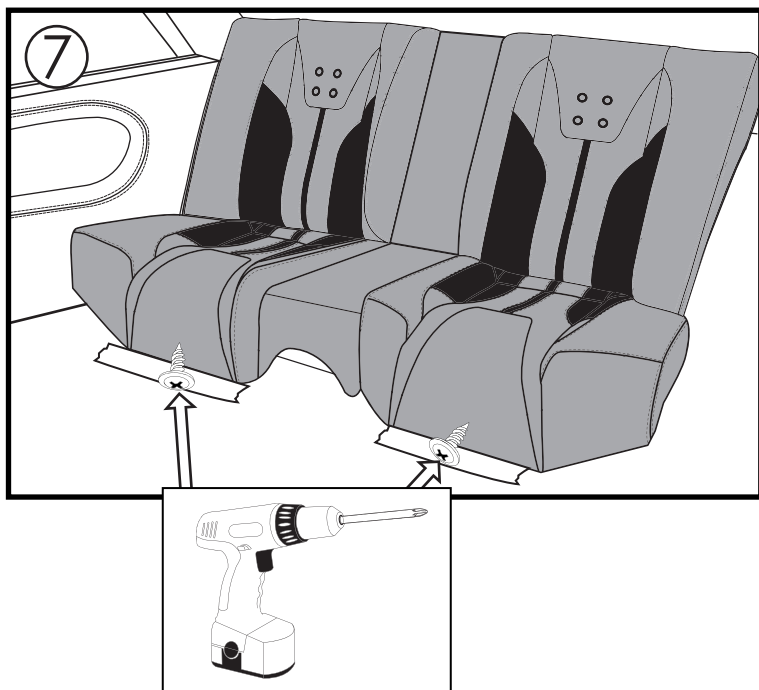

STEP 8: If purchased with Console, place in between seats. No tools required.