

## CHEVELLE HEADLINER INSTALLATION INSTRUCTIONS



### PARTS:



### TOOLS NEEDED FOR INSTALL:




STEP 1. Begin By removing all factory headliner hardware from vehicle. Make sure you save these parts since they will be reinstalled later, except for the sail pan trim.



STEP 2. Replace all factory screws before headliner is installed to make identifying screw hole location easier. Place headliner in the vehicle through passenger side making sure to go over the steering wheel.



STEP 3. Once headliner is in, make the necessary adjustments and hold in place with spring clamps. One on each corner or as many necessary to prevent the headliner from moving.

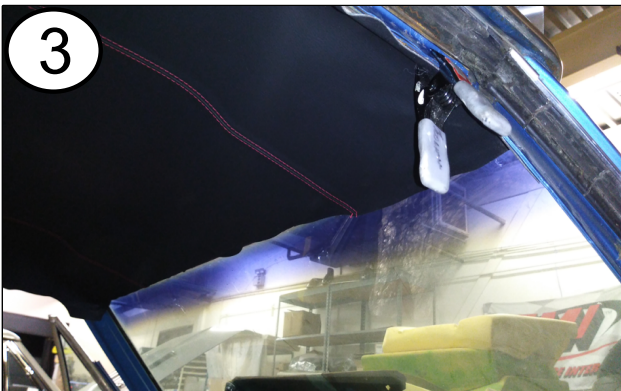

STEP 4. For better fitment, drilling a 1/2" self tapping screw in the sail pan support area is highly recommended as shown in the picture. Make sure not to drill through the outer sheet metal of the vehicle.



STEP 5. The headliner material is left long on all sides, when trimming leave material long enough to be glued to the metal edges of the vehicle. Make sure to apply glue to the material and the metal, then roll the material o



STEP 6. Once material is glued on to the front metal edge, you may now install the front factory window trim. If trim is not available, pinch welt can also be used in its place.



## CHEVELLE HEADLINER INSTALLATION INSTRUCTIONS



### PARTS:



HEADLINER

### TOOLS NEEDED FOR INSTALL:



4 CLAMPS



SCREW GUN



PANEL POPPER



RUBBER Mallet

STEP 7. When installing the factory parts, feel around for the screws previously installed. Once you have located each one make a small slit with a razor blade so the screw pocks through. Remove the screws and reinstall parts



STEP 8. Repeat process from step 7 for all parts when reinstalling.



STEP 9. Install the package tray, this step must be done prior the installation of the sail panels



Step 10. Fit the sail panel to the side, making sure the metal clips align with the factory holes. Once aligned push panel in until clips lock in place.



STEP 11. Finish installation by replacing the chrome side headliner and rear window trim pieces.

