

1966-67 CHEVY CHEVELLE

CHEVELLE CARPET INSTALLATION INSTRUCTIONS



TOOLS NEEDED FOR INSTALL:




CONTACT CEMENT
ADHESIVE



UTILITY KNIFE



RUBBER MALLET

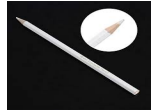

CHALK PENCIL

BEFORE YOU BEGIN:

Dry-fit the carpet pieces in the vehicle to confirm fitment, at this point make any necessary adjustments to the carpet kit. Mark any holes or additional cutouts on the carpet with chalk. Make sure your markings are correct once carpet is cut IT CANNOT BE RETURNED. For a permanent bond use contact cement or spray adhesive for Semi-bond.

NOTE: The use of soundproofing and heat shield padding insulation is highly recommended.

STEPS:

Numbers indicate the placement order of each carpet piece. Start with the rear pieces for better fitment.

- 1.Rear Trans. Tunnel Carpet
- 2.Drivers Side Rear Carpet
- 3.Pass. side Rear Carpet
- 4.Front Trans. Tunnel Carpet
- 5.Driver Front Carpet
- 6.Pass. Front Carpet



PART # 99-82111-000