

## BRONCO DOOR PANEL INSTALLATION INSTRUCTIONS



### TOOLS NEEDED FOR INSTALL:




1. Begin by removing armrest, door handle cup and window crank handle from the door using the necessary tools. Use a panel popper tool to remove factory door panel.



2. Your new TMI panel will have the factory holes pre-cut to install factory hardware. If arm rest and door handle cup will not be used, do not cut the upholstery material.



3. Install new panel using the provided drill templete to mark and drill out the holes to acomadate the christmas tree style clips on new door panel.

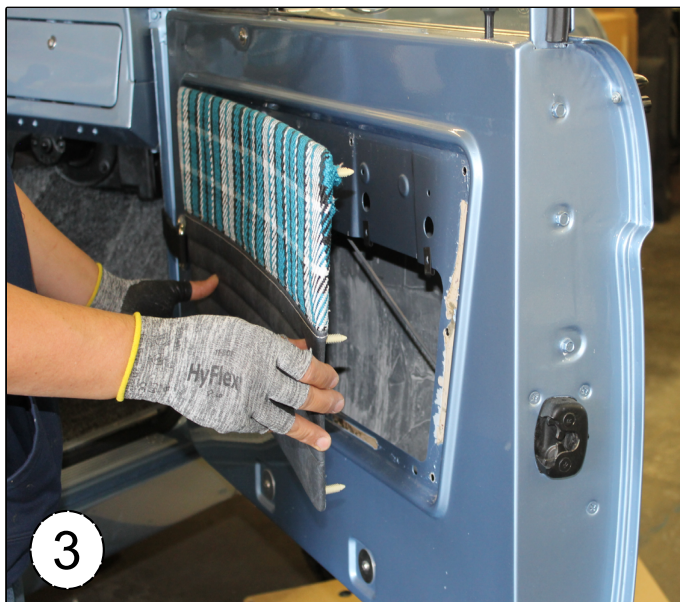

4. Once panel is in place, cut a slit for the cranks. At this piont you may now install all factory hardware being used. **INSTALL NOW COMPLETE**

