

LED Full Cutoff Wall Pack Instructions

APPLICATION

Available in industrial lighting, landscape lighting, courtyard, building, hotel, building exterior, etc.

CAUTION

- 1. Can not use an electric generator to test the LED lamp.
- 2. Please abide by related country, regional and local law and regulations when to install the fixture.
- 3. Please do not install the fixture when raining to lower the risk of electric shock and avoid failure.

NOTE

- 1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electrical knowledge.
- 2. Wear gloves to avoid injury during installation.
- 3. If any smoke or spark of the wire occurs, please turn off the power immediately and notify relevant personnel.

INSTALLATION I

1. Take out the light, loosen the screws on the cover and take apart the fixture with a screwdriver. Pull off the quick connect terminal (Figure 1-1A & 1-1B)



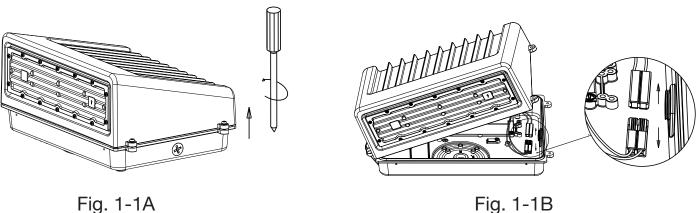


Fig. 1-1B


2. Drill installation holes at the bottom of the fixture, paste the EVA mat. (Figure 1-2A & 1-2B)



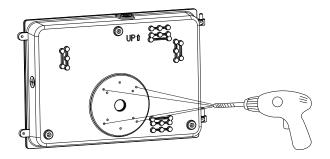


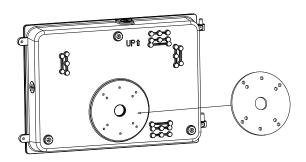


3. Loosen the plug on the bottom plate, then put the wiring through the hole, screw the bottom cover with the junction box on the wall. Fig. 1-3A & 1-3B

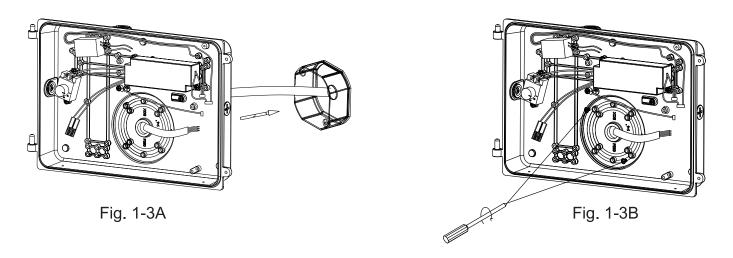


4. Make wire connections per "Electrical Connections" section and make sure the wire is protected (Fig. 1-4)

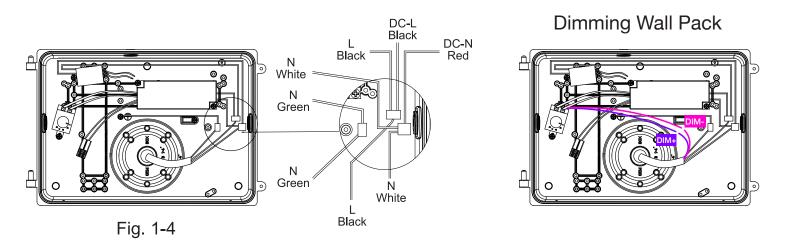

5. Connect the quick connect terminal, then screw the fixture with bottom plate. (Fig. 1-5A & 1-5B)

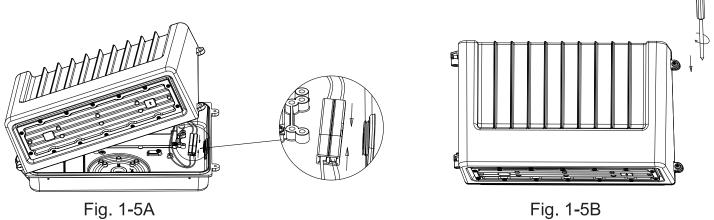


INSTALLATION II

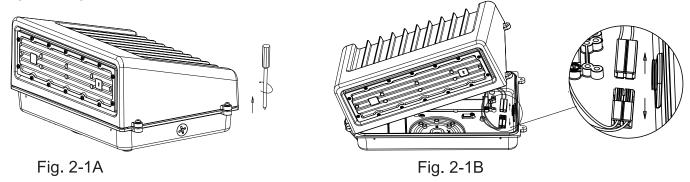


2. Rotate the three mounting kits to the proper angle. Put the fixture on the wall. Make 3 marks according to the 3 mounting kits, then drill three holes. (Fig. 2-2A)

Get rubber plugs into the holes, match the 3 mounting kits to the rubber plugs, then place the fixture on the wall by screws with the spring washers and cushion (Fig. 2-2B & 2-2C)

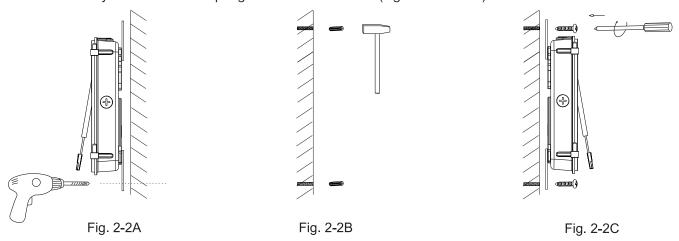

3. Make wiring connection from side and go through isolation treatment; Tighten the pipe on the lumaire (Fig. 2-3A & 2-3B)

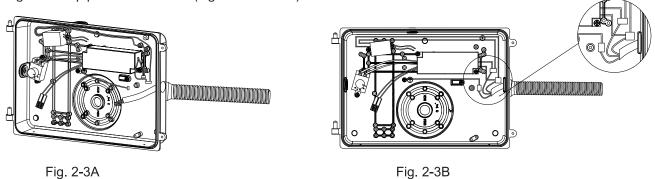

4. Connect the quick connect terminal, then screw the fixture with bottom plate. (Fig. 2-4A & 2-4B)

