



SLDSK-7-6CLIP Installation Instructions

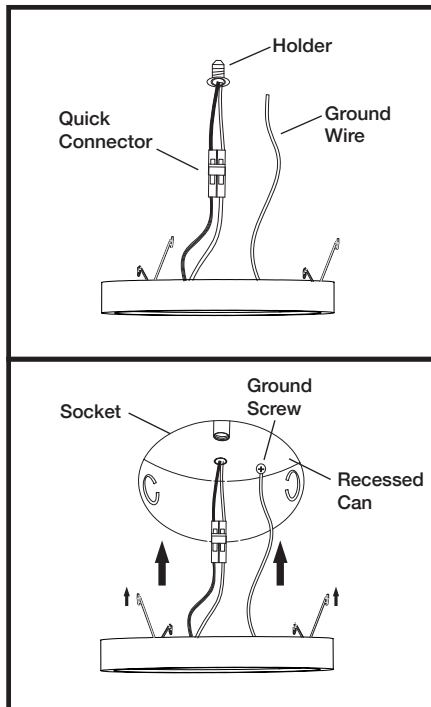

Insert wires into quick connector. Black to black and white to white. Attach ground wire to ground screw in recessed can.

Turn E26 lamp holder into socket base.

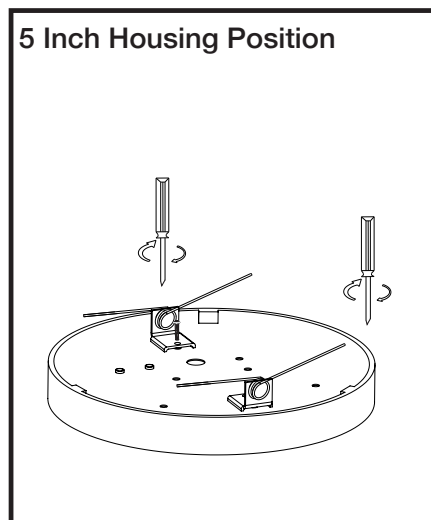

Connect Quick Connectors
Tuck all wires into recessed can.
Squeeze springs and push up into recessed can.

