



## **Recessed Trim Installation Instructions**


## **Dimensions**







## **Easy Installation without tools**


1. Choose the corresponding interchangeable trim according to the size of downlight.

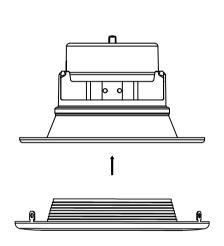

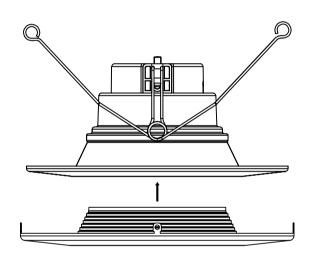

2. Cover the interchangeable trim on the downlight.

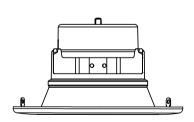

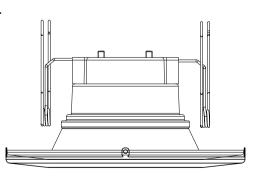

3. Flatten each protruding part that fixed on the downlight.

