

Frosted Window Film


Step 1: Clean the Glass

Thoroughly clean the glass, removing all dust, paint and grime.



Step 2: Measure and Cut

Measure the window and cut the film, leaving an extra 1-2 cm on each side for trimming.

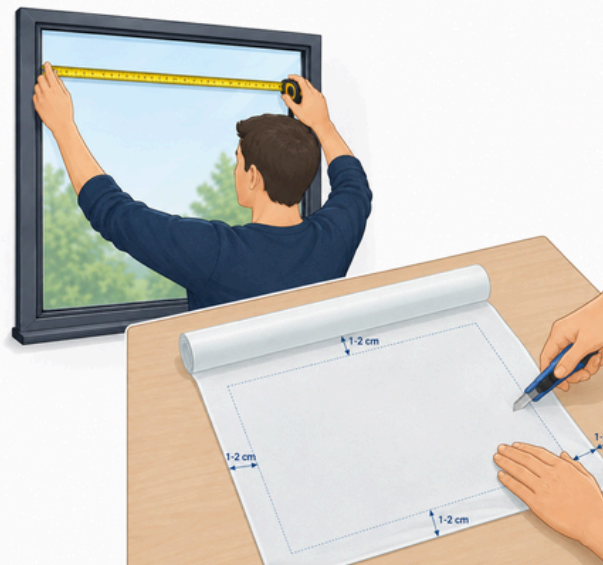

Step 3: Prepare the Surface

Liberalily spray the glass with the soapy water solution.



Step 4: Remove the Backing

Peel away the backing liner, spraying the adhesive side with soapy water as you go.



Step 5: Apply the Film

Place the wet adhesive side onto the wet glass and slide it into position.



Step 6: Squeegee Water and Bubbles

Spray the front of the film, then squeegee water and air bubbles from the centre to the edges.



Step 7: Trim the Edges

Trim the excess film and leave a small 1-2 mm gap around the edge.



Step 8: Final Dry

Squeegee the edges again and wipe away any remaining water with a cloth.

