Audi Q8 2020-

1


2


3

ABÂX

- Location Triplog
- Surplus Cable
- +12V connection (red)
- Ground connection (black)
- Cable Routing




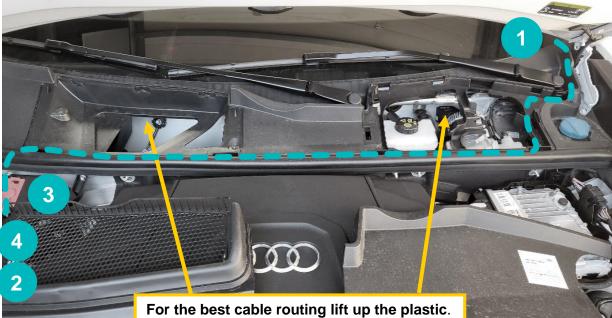

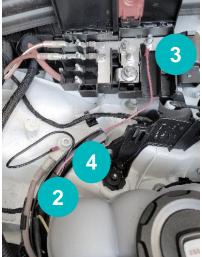





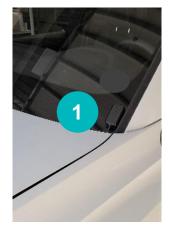

Remarks: Make sure that the plastic covers are put back correctly.