


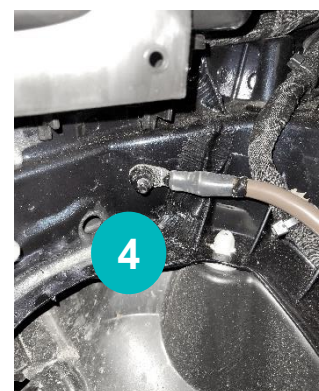
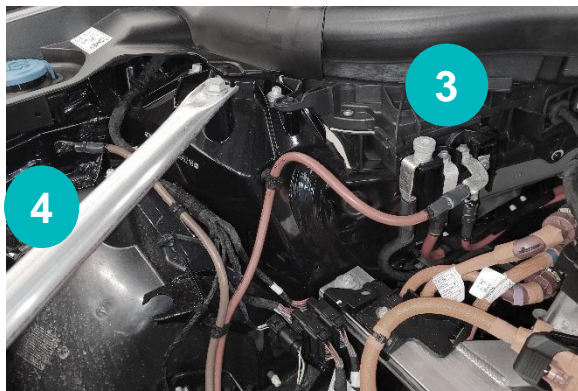
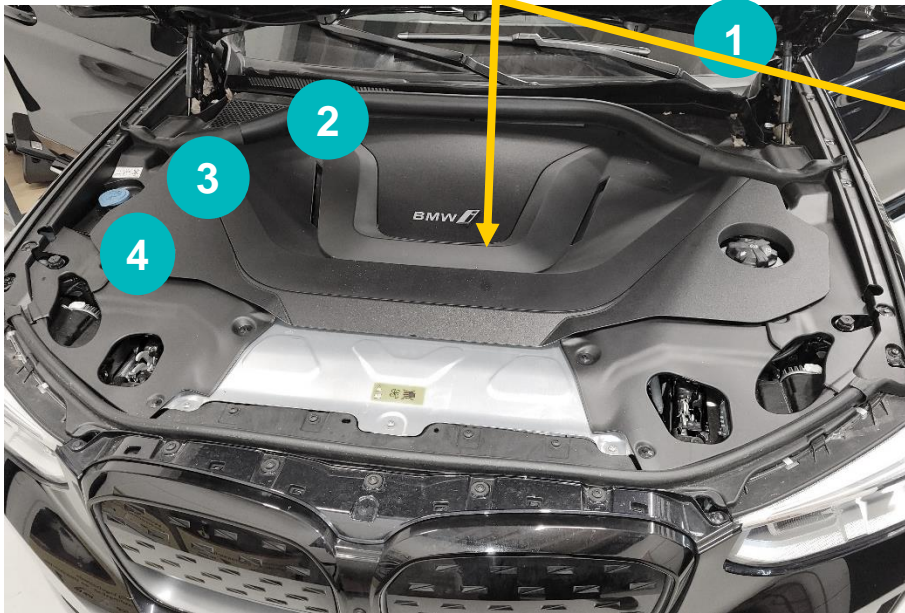


BMW IX3 2021-

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



To access the positive and negative connection, remove the large plastic cover by lifting it up.



For the best cable routing lift up the rubber.

Remarks: Skill level 3/5.

Tools needed: Plastic spatula, socket wrench 10 and 13mm.