
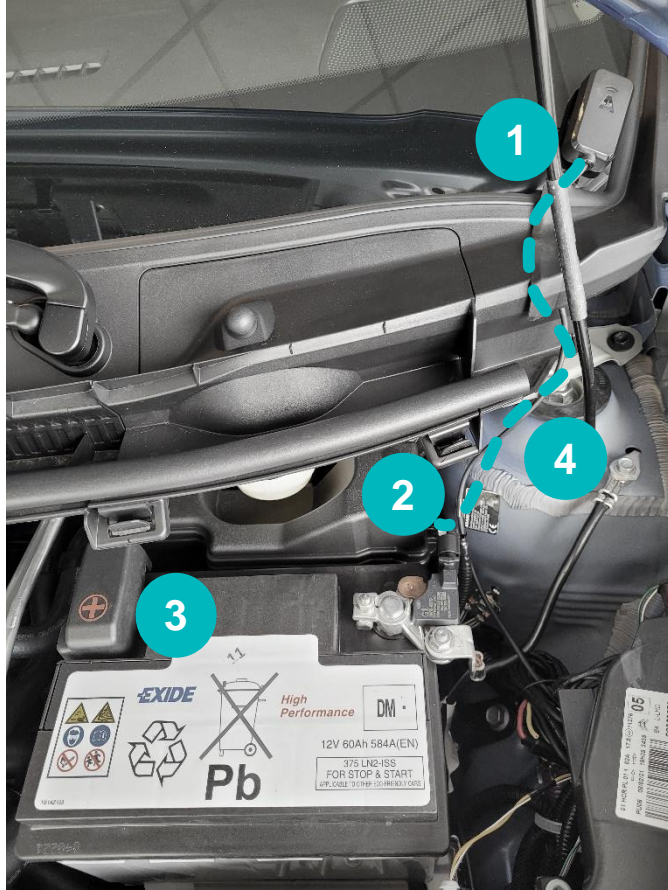





Citroën C1 2019-

- 1 Location Triplog
 - 2 Surplus Cable
 - 3 +12V connection (red)
 - 4 Ground connection (black)
-  Cable Routing



Make sure that the cable goes under the plastic.

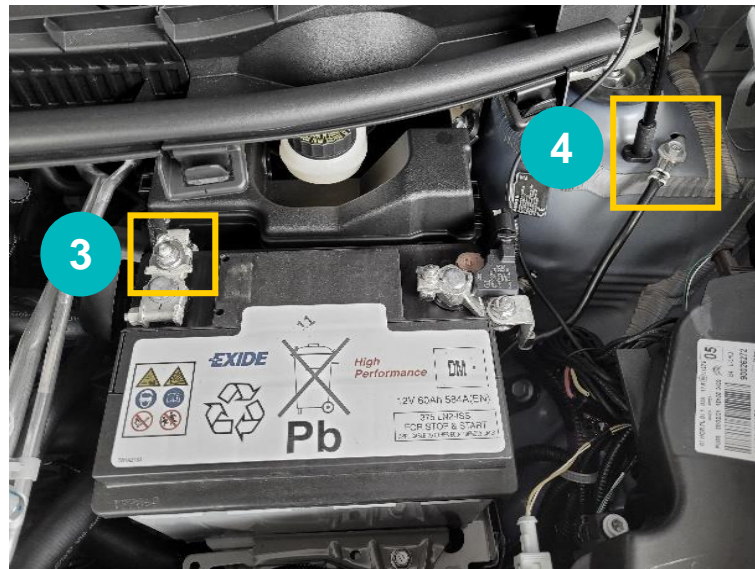

Remarks: The positive connection can be reached by removing the black plastic cover.