
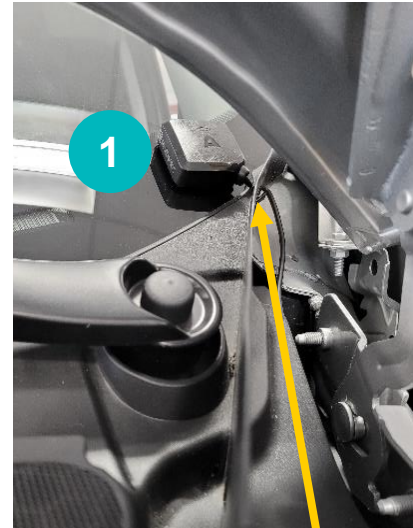
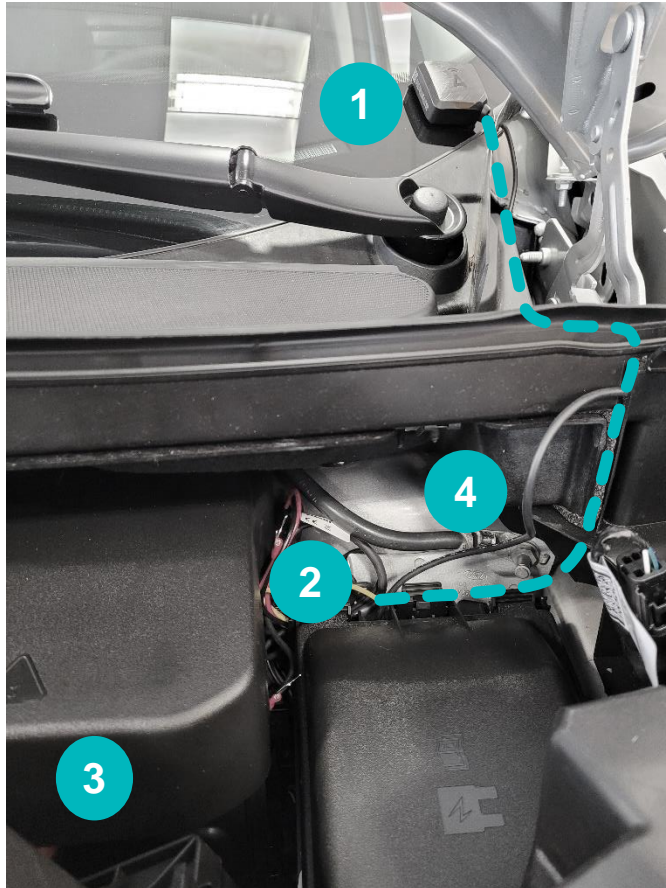





### Ford Transit Connect 2019-

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



**Make sure that the cable goes between the soft material.**

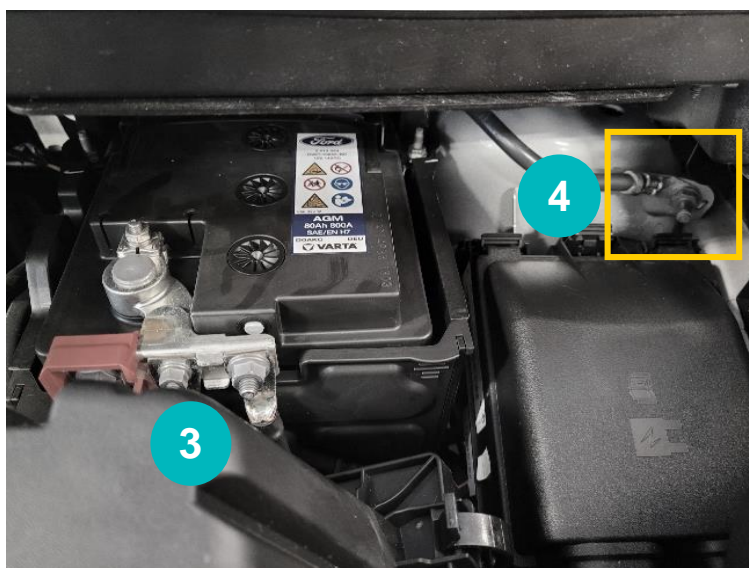

Remarks: The positive connection can be reached by removing the black plastic cover over the battery. Make sure that the cap is replaced correctly.