


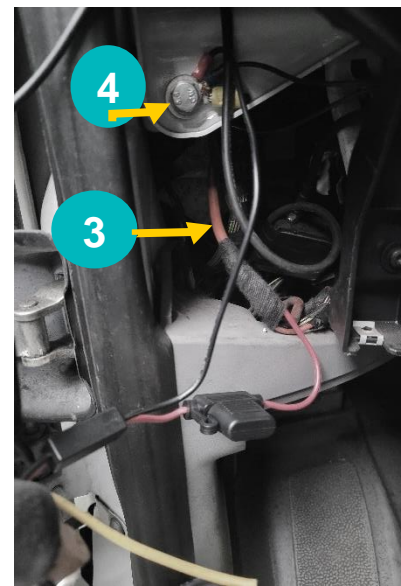
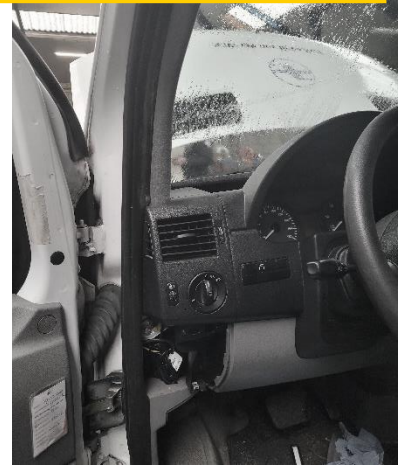
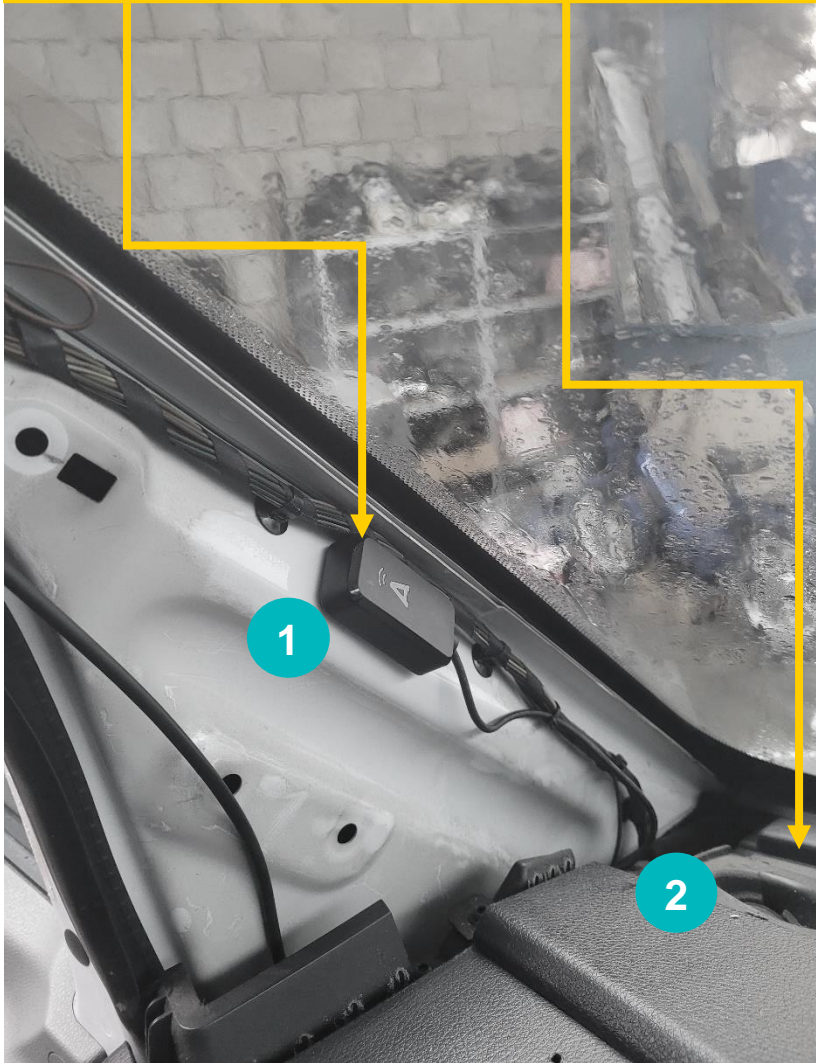


Mercedes-Benz Sprinter 2012-2020

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



Only position the unit where it must be completely out of sight. First choice is on the dashboard directly against the windscreen.



Remarks: To connect to the positive connection, make a neat solder connection on the thick red wire directly behind the cap. Isolate everything correctly