
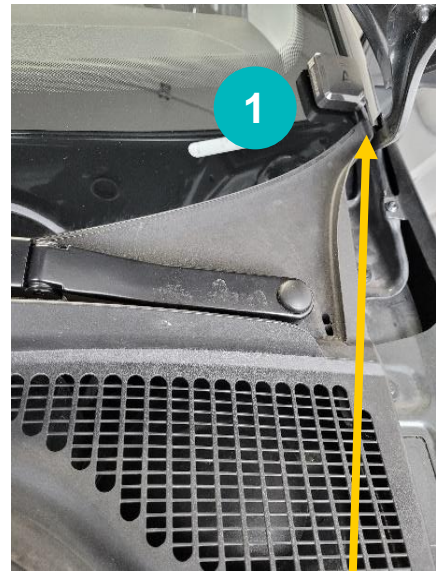
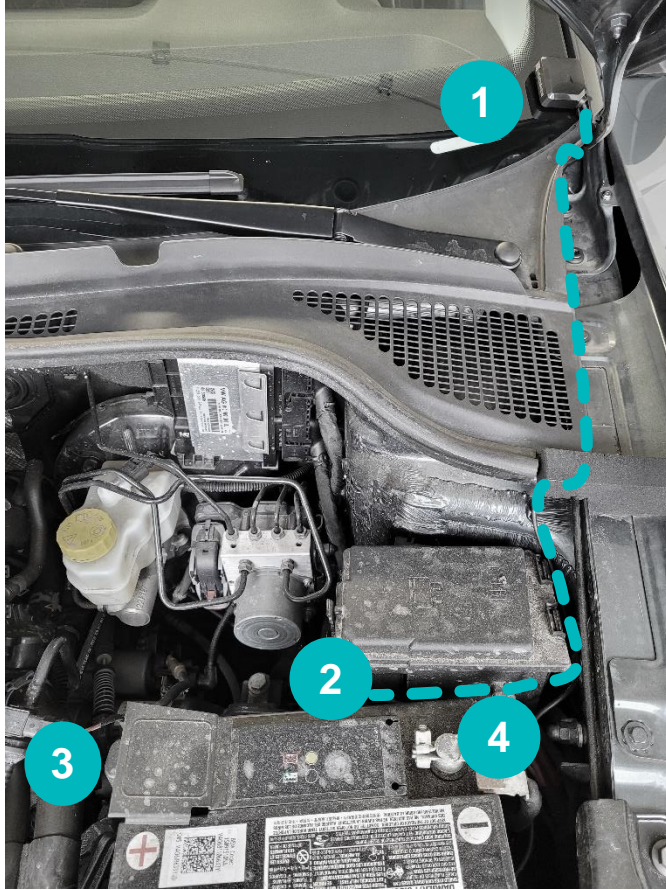






**Skoda Fabia 2015-**

- ① Location Triplog
- ② Surplus Cable
- ③ +12V connection (red)
- ④ Ground connection (black)
-  Cable Routing



**Make sure that the cable goes under the plastic.**

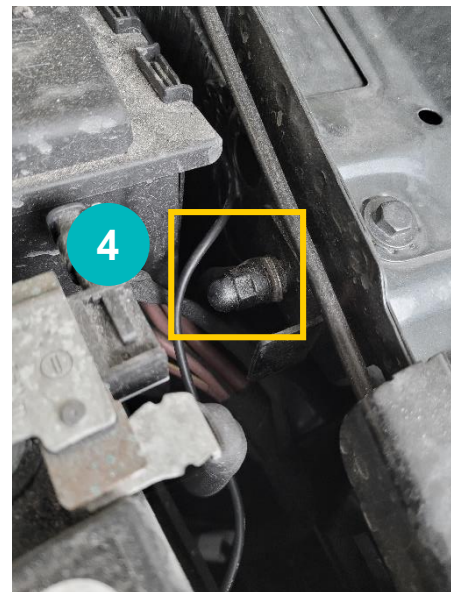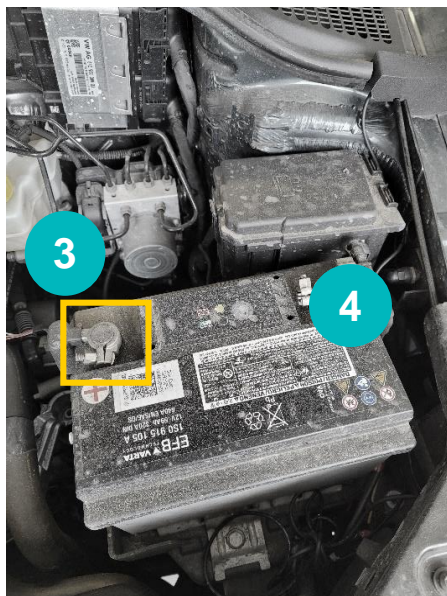

Remarks: