


Skoda Superb 2020-

- Location Triplog
- Surplus Cable
- 3 +12V connection (red)
- Ground connection (black)
- Cable Routing

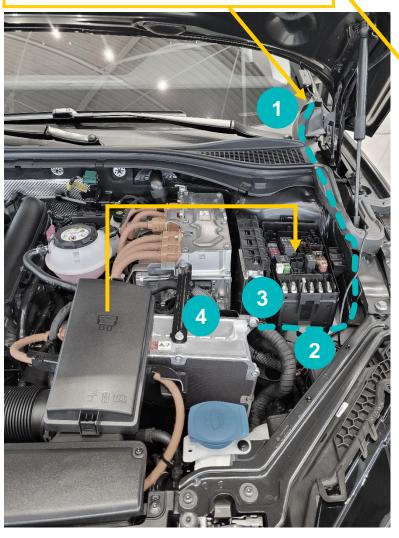

For the best cable routing lift up the rubber.







Remarks: To access the +12V connection, remove the black plastic cover. Make sure that the plastic cover is put back correctly.

Use the ground connection directly on the chassis right next to the fusebox.