


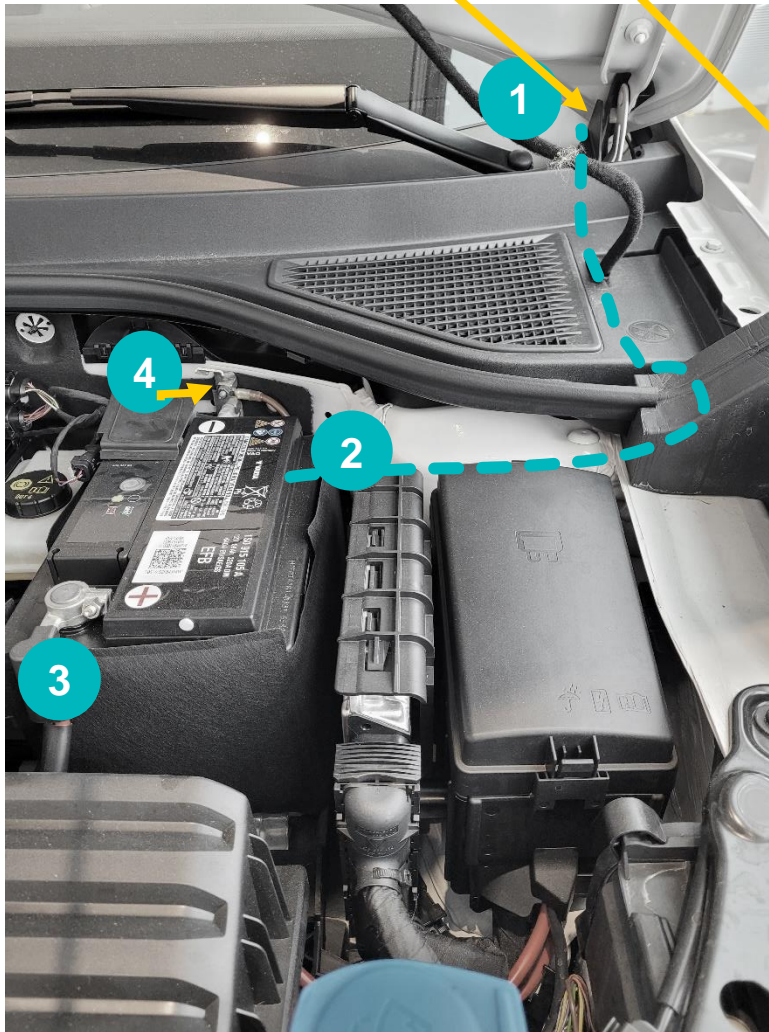


Volkswagen T-Roc 2020-

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



For the best cable routing lift up the rubber.



Remarks: To access the +12V connection, remove the small black plastic cover. Make sure that the plastic cover is put back correctly.

Use the ground connection directly on the chassis right next to the battery.