

WEIGH PLATFORM



OCTOBER 2025

1-877-275-6075
cs@arrowquip.com
arrowquip.com



WARNING

PLEASE FOLLOW ALL SAFETY INSTRUCTIONS PROVIDED IN THIS MANUAL BEFORE OPERATION.

ARROWQUIP DOES NOT ACCEPT RESPONSIBILITY FOR ANY ACCIDENTS OR INJURY WHEN THIS SAFETY MANUAL HAS NOT BEEN READ IN FULL AND KEPT WITH THE PRODUCT AT ALL TIMES.

OPERATORS OF THIS PRODUCT TAKE AND ACCEPT RESPONSIBILITY FOR ANY HARM OR INJURY TO THE ANIMAL OR OPERATOR WHEN IT PERTAINS TO HOW THE EQUIPMENT IS USED AND MAINTAINED.

Please keep this manual for frequent reference and to pass on to new users or owners.

CONTENTS

SAFETY PRECAUTIONS.....	6
SAFETY GUARANTEE.....	7
PORTABLE WEIGH PLATFORM INSTALLATION.....	8
LOAD BAR COMPATIBILITY.....	8
PORTABLE SCALE PLATFORM INSTALLATION.....	9
STATIONARY WEIGH PLATFORM INSTALLATION.....	12
USER ASSEMBLY PARTS LIST.....	12
COMPATIBILITY.....	12
STATIONARY SCALE PLATFORM INSTALLATION.....	13
WARRANTY.....	16

SAFETY PRECAUTIONS

PLEASE FOLLOW ALL SAFETY INSTRUCTIONS PROVIDED IN THIS MANUAL BEFORE OPERATION. ARROWQUIP DOES NOT ACCEPT RESPONSIBILITY FOR ANY ACCIDENTS OR INJURY WHEN THIS SAFETY MANUAL HAS NOT BEEN READ IN FULL AND KEPT WITH THE PRODUCT AT ALL TIMES. ANY HARM TO THE ANIMAL OR INJURY TO THE OPERATOR WHICH OCCURS DUE TO HOW THE PRODUCT IS OPERATED, OR RESULTING FROM A LACK OF SAFETY PRECAUTIONS ARE THE SOLE RESPONSIBILITY OF THE OPERATOR.

All farm machinery and equipment are potentially dangerous. Careless use of any Arrowquip livestock equipment may cause injury or damage to persons, cattle, or property. Arrowquip has taken precautions in the design and manufacturing of this product to ensure that it is safe and user-friendly. Therefore, the user must assume all responsibility and risk associated with the possession and use of the cattle squeeze chute.

SAFETY GUARANTEE

Arrowquip is committed to creating safe cattle management experiences. With this commitment to safety, in the event any purchaser of Arrowquip equipment is **physically injured while operating the equipment AND requires medical treatment**, Arrowquip will provide a full refund of the equipment purchase price and the purchaser will be allowed to keep the equipment. Equipment must be warranty-registered, and the purchaser must read and practice the contents and recommended maintenance and procedures outlined herein to be eligible.

Arrowquip also commits to repair or replace any part of the equipment that is defective, malfunctions or otherwise falls under normal use and inside the equipment's warranty terms. If the equipment requires replacement, it shall be replaced with an identical model or a newer model of the equipment. For further details, visit arrowquip.com/promise.



WARNING:

Read below before operation

Ensure the operator understands the contents of this manual before using the cattle squeeze chute.

1. Ensure the operator understands the contents of this manual before using the equipment.
2. **DO NOT** wear loose-fitted clothing.
3. Ensure the equipment is on a firm, level, dry surface that is free of rocks and other trip hazards.
4. **DO NOT ALLOW CHILDREN UNDER THE AGE OF 18 NEAR AN OPERATING MACHINE.**
5. Follow safe cattle handling procedures in other areas of the yard so that cattle are more docile.
6. **DO NOT** make any modifications to Arrowquip equipment. Non-factory modifications to the equipment can reduce the safety for the operator and livestock.

PORTABLE WEIGH PLATFORM INSTALLATION


BEFORE INSTALLING

- 2 people
- Assemble on level ground
- Lower the portable before beginning installation

Required Tools and User Assembly Parts

NOTE: Required tools and hardware vary depending on the brand and model of load bar used. As such, hardware is not included with weigh platforms.

LOAD BAR COMPATIBILITY


	8818-BF	8818-CROWDING	
Load Bars	Requires Scale Plates: 750-2WTP (2026791)	Requires Scale Plates: 88-2WTPG (2026660)	Requires Scale Plates: 88-2WTPT (2029361)
			
Gallagher 2500KG Wireless (600mm)	•	•	
Gallagher 2500KG Wired (600mm)	•	•	
Tru-Test MP600	•		•
Shear Weigh SW600	•		•

Arrowquip does not sell load bars direct. Please contact your nearest cattle scale dealer for more information.


PORTABLE SCALE PLATFORM INSTALLATION

1. Mount Portable Weigh Platform to load bar and scale plates.

NOTE: Hardware and load bars not provided. Scale Plates sold separately.

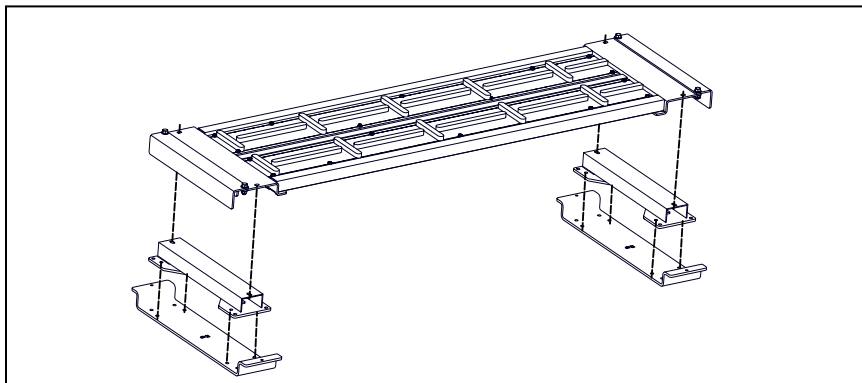

2. Adjust the alley width to the narrowest setting.

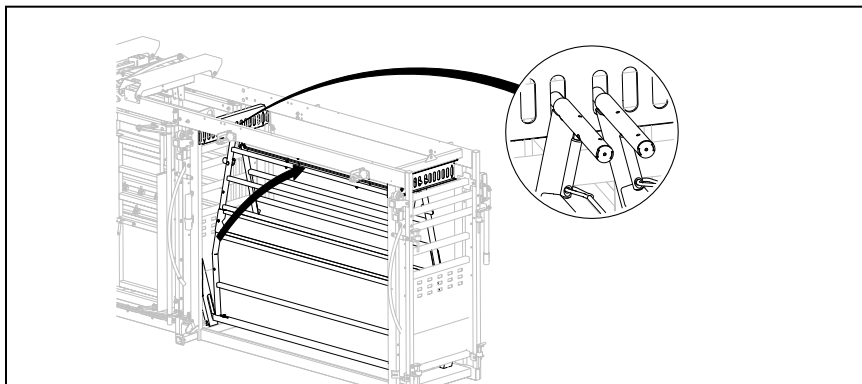


3. Lift the side panel and set the latch above the alley bow. Repeat step for the other side panel.




WARNING:


THE PANELS ARE VERY HEAVY. YOU WILL NEED AT LEAST 2 PEOPLE TO LIFT EACH PANEL.

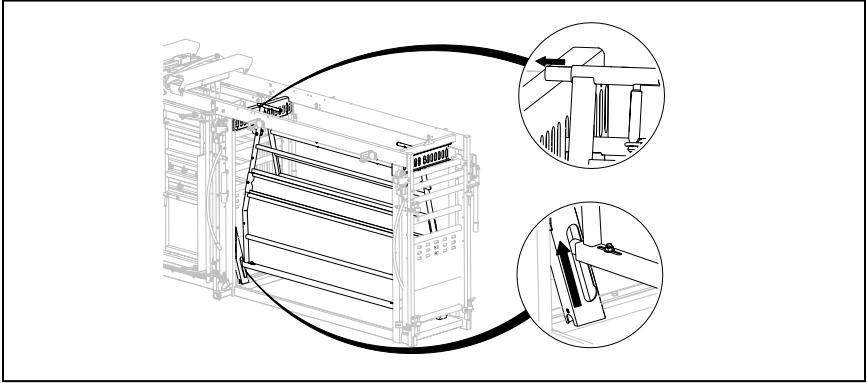


4. Slide Scale Platform underneath.

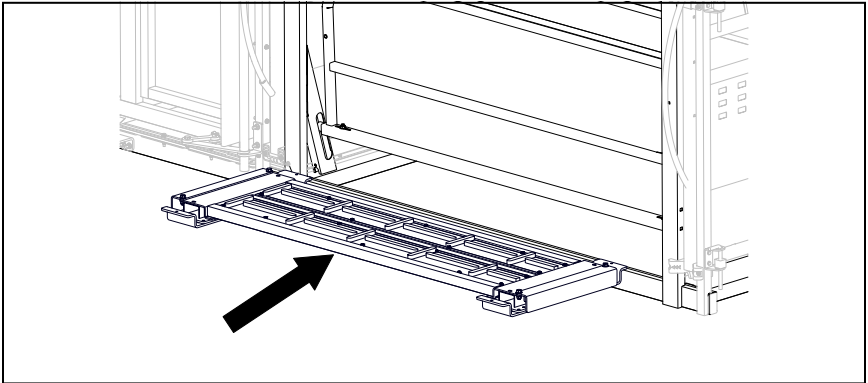

5. Holes are provided in scale plates to fasten the scale assembly to the frame rails. There are 4 total. Tek screws not included.

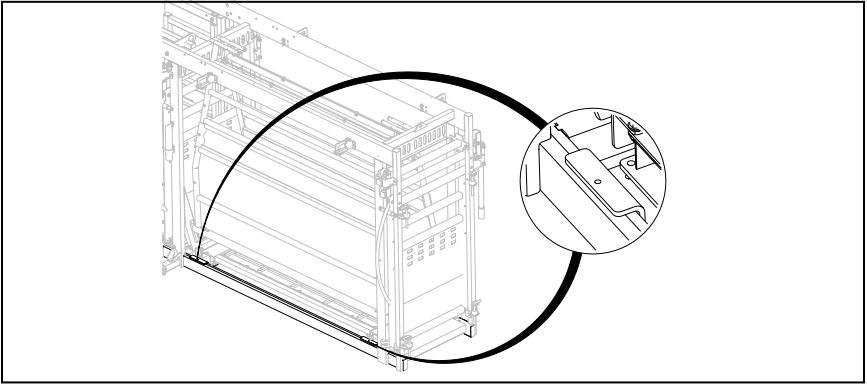

6. Lower the side panels back to working position.

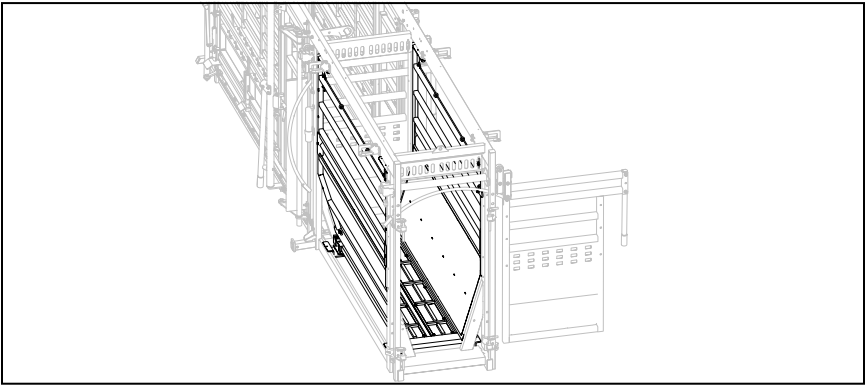






YOUR WEIGH PLATFORM IS INSTALLED.

STATIONARY WEIGH PLATFORM INSTALLATION

Required Tools

- 3/4" Wrench
- 3/4" Socket
- Ratchet
- Loader with 1000lb lifting capacity and minimum 36" forks

USER ASSEMBLY PARTS LIST

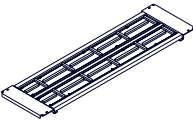2032590	PLATFORM	2032599	BASE FRAME	2032609	ALLEY STRAP
	x1		x1		x4
7003177	1/2" FLANGE NYLOC NUT	7003049	1/2" X 3" FLANGE BOLT		
	x4		x4		

COMPATIBILITY

Weigh Platform is compatible with Arrowquip Original, Elite and Pro 8ft EF Alleys.


LOAD BAR COMPATIBILITY

- Gallagher 1500KG (600mm)
- Gallagher 2500KG Wireless (600mm)
- Gallagher 2500KG Wired (600mm)
- Tru-Test MP600
- Shear Weigh SW600


Arrowquip does not sell load bars direct. Please contact your nearest cattle scale dealer for more information.

STATIONARY SCALE PLATFORM INSTALLATION


1. Remove shipping hardware and discard.

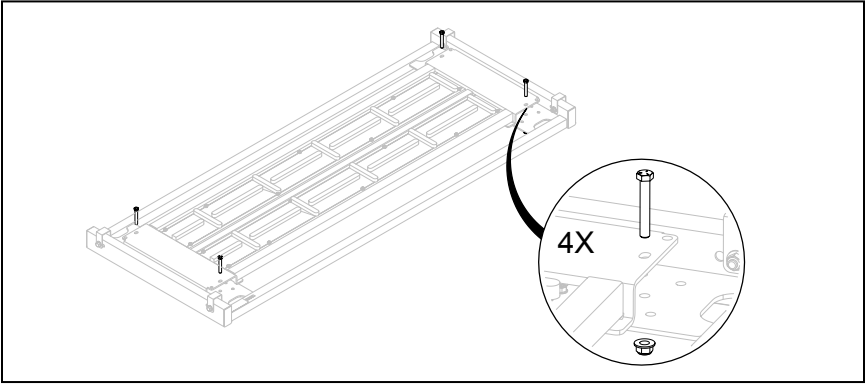

2. First bolt load bars to base frame then bolt platform on top of load bars.
 - a. Mounting hardware and load bars not provided.

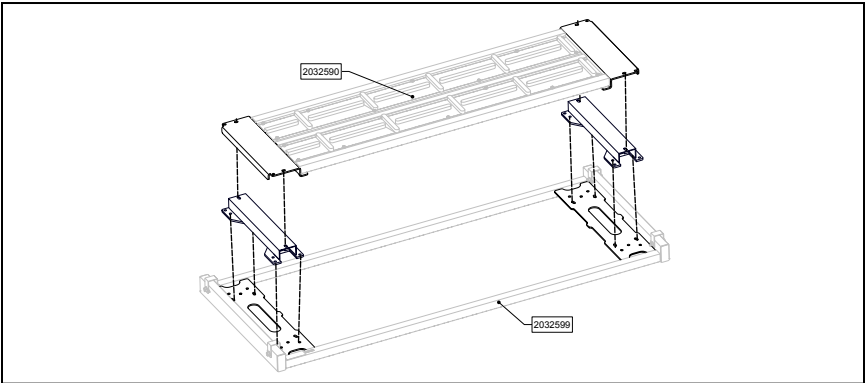


3. Remove alley straps. Set aside strap and hardware.

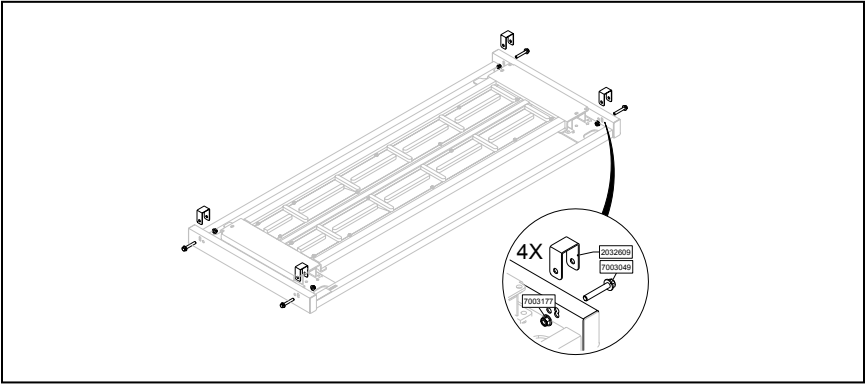


4. Use loader to place EF Alley on top of base frame ensuring the alley is centered and the ends are flush. Minimum 36" forks required to lift alley.


NOTE: Arrowquip Elite EF Alley shown below.

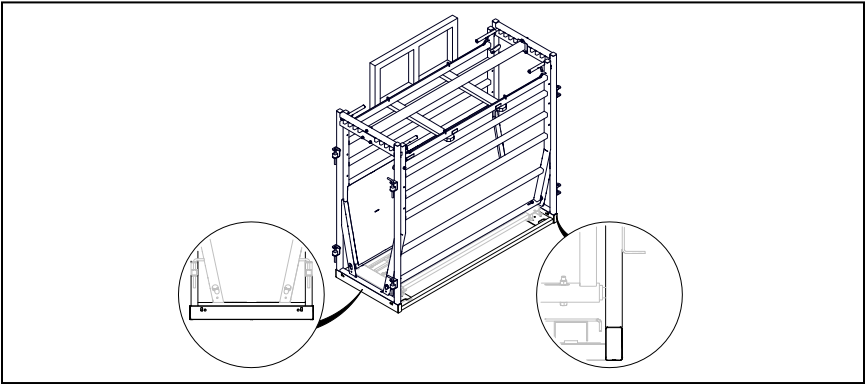

5. Reinstall all four alley straps using four 1/2" x 3" flange bolts. The holes used will depend on the type of EF Alley you have.

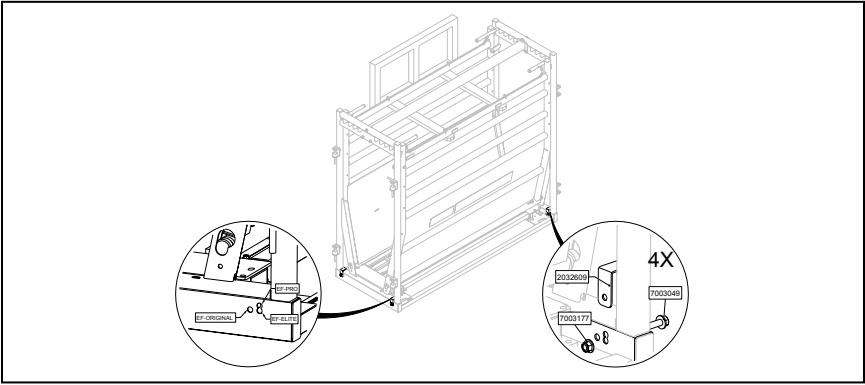

6. With the alley secure, loader can now be safely removed.

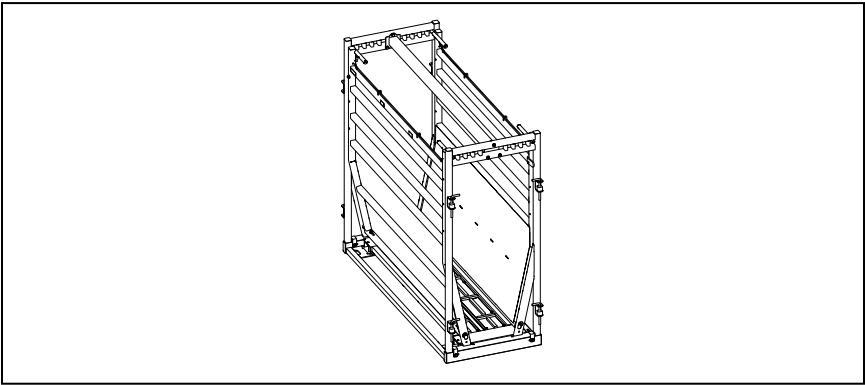

YOUR WEIGH PLATFORM IS INSTALLED.

WARRANTY

Your product must be registered to claim warranty, and to ensure that Arrowquip has the required information to contact you in the event of a product or part recall. Any owner who fails to register their product warranty with Arrowquip through their Authorized Arrowquip Dealer voluntarily voids their warranty. Arrowquip will repair or replace products or parts of a product that prove defective due to manufacturer defect during the Warranty Period, at their sole discretion. This excludes defects resulting from normal wear and tear or product misuse. Warranty does not cover corrosion.

NOTE: Any modification, in any fashion, to any Arrowquip equipment immediately voids the product warranty. This includes the parts contained therein.

E.g. If a modification is made to the squeeze mechanism in a squeeze chute, and the sternum bar is bent afterwards, warranty for the damaged part, the sternum bar, contained in the modified equipment, the squeeze chute, is void. In addition, any remaining warranty for the squeeze chute and other parts contained therein, including, but not limited to, the head gate, locking system, Arrowlock or Powerlock system, and rollers, is null and void.

REGISTER FOR WARRANTY NOW:

ONLINE: arrowquip.com/product-registration

PHONE: 1-877-275-6075 | **EMAIL:** cs@arrowquip.com



If you have any questions regarding your product or require assistance, please contact Arrowquip's Client Care Team at **1-877-275-6075** or by email at **cs@arrowquip.com**

arrowquip.com

